

**MODEL 3800 AND 3800 SDS  
FORWARD FOLDING PLANTER**  
(EdgeVac® Seed Metering W/Hydraulic Drive)

**OPERATOR & PARTS  
MANUAL**

**PRELIMINARY M0220                      1/09**

This manual is applicable to:    Model: 3800 And 3800 SDS Forward Folding Planters  
Serial Number: 755299 And On

Record the model number and serial number of your planter along with date purchased:

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

|  |
|--|
| Monitor Serial Number _____                                  |
| Measured Pulses Per Mile/Km (Radar Distance Sensor) _____    |
| Measured Pulses Per Mile/Km (Magnetic Distance Sensor) _____ |

**SERIAL NUMBER**

The serial number plate is located on the center portion of the planter frame to be readily available. It is suggested that your serial number and purchase date also be recorded above.

The serial number provides important information about your planter and may be required to obtain the correct replacement part. Always provide the model number and serial number to your KINZE® Dealer when ordering parts or anytime correspondence is made with KINZE Manufacturing, Inc.

D01050701



**3800 Planter With Conventional Seed Hoppers  
Shown**

*KINZE®, the KINZE® logo, Interplant® and EdgeVac® are registered trademarks of KINZE Manufacturing, Inc.*



# PREDELIVERY/DELIVERY CHECKLIST

## TO THE DEALER

Predelivery service includes assembly, lubrication, adjustment and test. This service helps to ensure that the planter will be delivered to the customer ready for field use.

## PREDELIVERY CHECKLIST

After the planter has been completely assembled, use the following checklist and inspect the planter. Check off each item as it is found satisfactory or after proper adjustment is made.

- Recheck to be sure row units are properly spaced and optional attachments are correctly assembled.
- The closing wheels have been installed. See "Row Unit Assembly And Installation Instructions".
- Row markers are set at the correct length (If Applicable). See "Row Marker Length Adjustment" in the Machine Operation section of the Operator & Parts Manual.
- Be sure all grease fittings are in place and lubricated.
- Check planter and make sure all working parts are moving freely, bolts are tight and cotter pins are spread.
- Check all drive chains for proper tension and alignment.
- Check for oil leaks and proper hydraulic operation.
- Check to be sure hydraulic hoses are routed correctly to prevent damage.
- Inflate tires to specified PSI air pressure. Tighten wheel lug bolts and lug nuts to specified torques.
- Check to be sure all safety decals and SMV sign are correctly located and legible. Replace if damaged.
- Check to be sure safety/warning lights are installed correctly and working properly.
- Check to be sure the reflective decals are correctly located and visible when the planter is in transport position.
- Paint all parts scratched in shipment or assembly.
- Be sure all safety lockup devices are on the planter and correctly located.
- Vacuum fan PTO drive pump is attached correctly to the tractor. Reservoir is filled to capacity and system is inspected for leaks.
- PTO shaft meets specifications for tractor being used with planer.

***This planter has been thoroughly checked and to the best of my knowledge is ready for delivery to the customer.***

\_\_\_\_\_  
(Signature Of Set-Up Person/Dealer Name/Date)

## OWNER REGISTER

Name \_\_\_\_\_ Delivery Date \_\_\_\_\_  
Street Address \_\_\_\_\_ Model No. 3800 Serial No. \_\_\_\_\_  
City, State/Province \_\_\_\_\_ Dealer Name \_\_\_\_\_  
ZIP/Postal Code \_\_\_\_\_ Dealer No. \_\_\_\_\_

## DELIVERY CHECKLIST

At the time the planter is delivered, the following checklist is to be used as a reminder of very important information which should be conveyed to the customer. Check off each item as it is fully explained to the customer.

- Check for proper operation of vacuum fan, PTO driven pump and PTO assembly with tractor to be used with planter.
- Advise the customer that the life expectancy of this or any other machine is dependent on regular lubrication as directed in the Operator & Parts Manual.
- Tell the customer about all applicable safety precautions.
- Along with the customer, check to be sure the reflective decals and SMV sign are clearly visible with the planter in transport position and attached to the tractor. Check to be sure safety/warning lights are in working condition. Tell the customer to check federal, state/provincial and local regulations before towing or transporting on a road or highway.
- Give the Operator & Parts Manual to the customer and explain all operating adjustments.
- Read warranty to customer.
- Complete Warranty And Delivery Report form.

***To the best of my knowledge this machine has been delivered ready for field use and customer has been fully informed as to proper care and operation.***

---

(Signature Of Delivery Person/Dealer Name/Date)

## AFTER DELIVERY CHECKLIST

The following is a list of items we suggest to check during the first season of use of the equipment.

- Check with the customer as to the performance of the planter.
- Check with the customer as to the performance of the EdgeVac® Seed Metering System.
- Review with the customer the importance of proper maintenance and adherence with all safety precautions.
- Check for parts that may need to be adjusted or replaced.
- Check to be sure all safety warning signs (decals), SMV sign and reflective decals are correctly located and that decals are legible. Replace if damaged or missing.
- Check to be sure safety/warning lights are working properly.

---

(Signature Of Follow-Up Person/Dealer Name/Date)

**RETURN THIS COMPLETED FORM TO KINZE® IMMEDIATELY along with Warranty And Delivery Report.  
Retain photocopy of this form at dealership for After Delivery Check.**

# TABLE OF CONTENTS

---

|   |      |
|---|------|
| <b>TO THE OWNER</b> .....   | 1-1  |
| <b>WARRANTY</b> .....   | 1-2  |
| <b>INTRODUCTION</b> .....   | 2-1  |
| <b>SPECIFICATIONS</b> .....   | 3-1  |
| <b>SAFETY PRECAUTIONS</b> .....   | 4-1  |
| <b>SAFETY WARNING SIGNS</b> .....   | 5-1  |
| <b>MACHINE OPERATION</b>  |      |
| Analog Vacuum Gauges .....  | 6-12 |
| Checking Granular Chemical Application Rate .....                               | 6-32 |
| Checking Seed Population .....  | 6-31 |
| Depth Gauge Wheel Attachment For Notched Single Disc Fertilizer<br>Opener ..... | 6-25 |
| Digital Vacuum Gauge Operation .....  | 6-12 |
| Electronic Seed Monitor System  |      |
| KINZE Cobalt™ .....   | 6-22 |
| KINZE Vision® .....   | 6-22 |
| Planter Monitor Module (PMM) .....  | 6-22 |
| Field Operation .....   | 6-16 |
| Field Test .....  | 6-30 |
| Field To Transport Sequence .....   | 6-17 |
| Hydraulic/Electric Operation .....  | 6-11 |
| Initial Preparation Of The Planter .....  | 6-2  |
| Leveling The Planter .....  | 6-8  |
| Liquid Fertilizer Attachment .....  | 6-26 |
| Liquid Fertilizer Rate Charts .....   | 6-28 |
| Metric Conversion Table .....   | 6-30 |
| Notched Single Disc Fertilizer Opener .....                                     | 6-23 |
| Planting Speed .....  | 6-30 |
| Rear Trailer Hitch .....  | 6-29 |
| Row Marker Length Adjustment .....  | 6-21 |
| Row Marker Operation .....  | 6-20 |
| Row Marker Speed Adjustment .....   | 6-21 |
| Tire Pressure .....   | 6-9  |
| Tractor Preparation And Hookup .....  | 6-3  |
| Tractor Requirements .....  | 6-2  |
| Transport Lockup, 24 Row 30" Only .....   | 6-1  |
| Transport To Field Sequence .....   | 6-13 |
| Transporting The Planter .....  | 6-30 |
| U-Joint Shaft Assemblies .....  | 6-10 |
| Vacuum Fan Motor Valve Block .....  | 6-12 |
| Wing Latch Hook Safety Pin(s) .....   | 6-1  |

# TABLE OF CONTENTS

---

## SEED METER OPERATION/MAINTENANCE

### Field Adjustments

|   |      |
|---|------|
| General Planting Rate Information .....                       | 7-1  |
| Planting And Application Rate Charts .....                    | 7-7  |
| Seed Meter Singulator Brush And Vacuum Level Adjustment ..... | 7-10 |
| Seed Meter .....  | 7-2  |
| Seed Meter Cleanout .....                                     | 7-5  |
| Seed Meter Drive Release .....                                | 7-12 |
| Seed Meter Maintenance.....                                   | 7-13 |
| Seed Metering System Troubleshooting .....                    | 7-14 |
| Vacuum Manifold Maintenance.....                              | 7-13 |

## SDS SEED DELIVERY SYSTEM OPERATION

|  |     |
|--|-----|
| Adjustment Of Limit (Safety) Switches And Proximity Switches ..... | 8-2 |
| Introduction .....   | 8-1 |
| Mini-Hopper Latch .....  | 8-3 |
| Operation .....  | 8-1 |
| SDS Troubleshooting .....  | 8-4 |
| Seed Lubrication.....  | 8-4 |

## ROW UNIT OPERATION

|  |      |
|--|------|
| Closing Wheel Shield.....                                | 9-2  |
| Coulter Mounted Residue Wheels .....                     | 9-15 |
| Covering Discs/Single Press Wheel Adjustment .....       | 9-2  |
| Drag Closing Attachment.....                             | 9-3  |
| Frame Mounted Coulter .....                              | 9-10 |
| Granular Chemical Bander Shield .....                    | 9-17 |
| Granular Chemical Banding Options .....                  | 9-16 |
| Granular Chemical Hopper And Drive .....                 | 9-16 |
| Planting Depth .....                                     | 9-1  |
| Pneumatic Down Pressure Package .....                    | 9-8  |
| Quick Adjustable Down Force Springs .....                | 9-6  |
| Residue Wheels (For Use With Frame Mounted Coulter)..... | 9-11 |
| Row Unit Chain Routing .....                             | 9-5  |
| Row Unit Extension Brackets.....                         | 9-4  |
| Row Unit Mounted Disc Furrower .....                     | 9-12 |
| Row Unit Mounted No Till Coulter.....                    | 9-14 |
| Row Unit Mounted Residue Wheel.....                      | 9-12 |
| Seed Hopper (Conventional Seed Hoppers) .....            | 9-4  |
| Spring Tooth Incorporator .....                          | 9-17 |
| “V” Closing Wheel Adjustment (Rubber And Cast Iron)..... | 9-1  |

# TABLE OF CONTENTS

---

## LUBRICATION

|   |      |
|---|------|
| Air Clutches .....                                      | 10-1 |
| Bushings .....  | 10-3 |
| Drive Chains .....                                      | 10-2 |
| Grease Fittings .....                                   | 10-5 |
| Hitch Slide Assembly .....                              | 10-4 |
| Liquid Fertilizer Piston Pump Crankcase Oil Level ..... | 10-5 |
| Lubrication Symbols .....                               | 10-1 |
| PTO Pump Shaft Assembly .....                           | 10-4 |
| Sealed Bearings .....                                   | 10-1 |
| Wheel Bearings .....                                    | 10-4 |

## MAINTENANCE

|   |       |
|---|-------|
| 15" Seed Opener Disc Blade/Bearing Assembly .....                             | 11-6  |
| Airline Schematic .....   | 11-34 |
| Coulter Mounted Residue Wheels .....  | 11-10 |
| Counter Balance Valve Inspection<br>(Located At Center Of Rear H-Frame) ..... | 11-12 |
| Drag Closing Attachment .....   | 11-4  |
| Electrical Control Console Schematic (Planter Functions) .....                | 11-22 |
| Electrical Light Harness Schematics .....                                     | 11-20 |
| Electrical Wiring Diagram For 7-Terminal Light Connector .....                | 11-19 |
| Electrical Wiring Harness Schematic (On Tractor) .....                        | 11-23 |
| Electrical Wiring Harness Schematics (On Planter) .....                       | 11-24 |
| Electrical Wiring Harness Schematic (Vacuum Fan Gauges) .....                 | 11-27 |
| Electrical Wiring Schematic (SDS) .....                                       | 11-26 |
| Flow Control Valve Inspection .....   | 11-12 |
| Frame Mounted Coulter .....   | 11-8  |
| Gauge Wheel Adjustment .....  | 11-4  |
| Gauge Wheel Arm Bushing And/Or Seal Replacement .....                         | 11-5  |
| Gauge Wheel Arm Pivot Spindle Replacement .....                               | 11-5  |
| Granular Chemical Attachment .....  | 11-11 |
| Hydraulic System Schematics .....   | 11-28 |
| Hydraulic Schematics (SDS) .....  | 11-36 |
| Lift/Ground Drive Wheel Bearing Lubrication Or Replacement .....              | 11-15 |
| Mounting Bolts And Hardware .....   | 11-1  |
| Piston Pump Storage .....   | 11-17 |
| Preparation For Storage .....   | 11-18 |
| Pressure Relief Valve Inspection<br>(Located On Center Of Rear H-Frame) ..... | 11-12 |
| PTO Pumps And Oil Coolers .....   | 11-3  |
| Residue Wheels (For Use With Frame Mounted Coulter) .....                     | 11-8  |
| Row Marker Bearing Lubrication Or Replacement .....                           | 11-15 |
| Row Unit Mounted Disc Furrower .....  | 11-9  |
| Row Unit Mounted No Till Coulter .....  | 11-10 |
| Row Unit Mounted Residue Wheel .....  | 11-9  |
| Seed Tube Guard/Inner Scraper .....   | 11-7  |
| Solenoid Valve .....  | 11-12 |
| Spring Tooth Incorporator .....   | 11-11 |

(Continued On Following Page)

# TABLE OF CONTENTS

---

## **MAINTENANCE (Continued)**

Tire Pressure ..... 11-2

Torque Values Charts ..... 11-1

Transport Wheel Bearing Replacement ..... 11-16

### **Troubleshooting**

Closing Wheel Troubleshooting ..... 11-4

Lift/Fold Circuit Troubleshooting..... 11-13

Piston Pump Troubleshooting ..... 11-17

PTO Pumps And Oil Coolers Troubleshooting..... 11-3

Row Marker Circuit Troubleshooting ..... 11-14

Solenoid Valve Troubleshooting ..... 11-13

**PARTS LIST INDEX** .....P1

**PARTS SECTION NUMERICAL INDEX** .....P146




# TO THE OWNER

---

KINZE Manufacturing, Inc. would like to thank you for your patronage. We appreciate your confidence in KINZE® farm machinery. Your KINZE® planter has been carefully designed to provide dependable operation in return for your investment.

**This manual has been prepared to aid you in the operation and maintenance of the planter. It should be considered a permanent part of the machine and remain with the machine when you sell it.**

It is the responsibility of the user to read and understand the Operator & Parts Manual in regards to safety, operation, lubrication and maintenance before operation of this equipment. It is the user's responsibility to inspect and service the machine routinely as directed in the Operator & Parts Manual. We have attempted to cover all areas of safety, operation, lubrication and maintenance; however, there may be times when special care must be taken to fit your conditions.

Throughout this manual the symbol  and/or the words **NOTE, IMPORTANT, CAUTION, WARNING** or **DANGER** are used to call your attention to important information. The definition of each of these terms follows:

**NOTE:** Indicates a special point of information or addresses a machine adjustment.

**IMPORTANT:** Indicates an operation or maintenance condition which, if not corrected, could result in damage to the machine, property, crops or the environment.



**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury.



**WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious personal injury.



**DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious personal injury.



**WARNING:** Some photos in this manual may show safety covers, shields or lockup devices removed for visual clarity. **NEVER OPERATE** the machine without all safety covers, shields and lockup devices in place.

**NOTE:** Some photos in this manual may have been taken of prototype machines or similar models and vary slightly in appearance.

**NOTE:** Some photos and illustrations in this manual show optional attachments installed. Contact your KINZE® Dealer for purchase of optional attachments.

# WARRANTY

---

The KINZE® Limited Warranty for your new machine is stated on the back of the retail purchaser's copy of the Warranty And Delivery Report form. Additional copies of the Limited Warranty can be obtained through your KINZE® Dealer.

Warranty, within the warranty period, is provided as part of KINZE's support program for registered KINZE® products which have been operated and maintained as described in this manual. Evidence of equipment abuse or modification beyond original factory specifications will void the warranty. Normal maintenance, service and repair is not covered by KINZE® warranty.

To register your KINZE® product for warranty, a Warranty And Delivery Report form must be completed by the KINZE® Dealer and signed by the retail purchaser, with copies to the Dealer, to the retail purchaser and to KINZE Manufacturing, Inc. Registration must be completed and sent to KINZE Manufacturing, Inc. within 30 days of delivery of the KINZE® product to the retail purchaser. KINZE Manufacturing, Inc. reserves the right to refuse warranty on serial numbered products which have not been properly registered.

If service or replacement of failed parts which are covered by the Limited Warranty are required, it is the user's responsibility to deliver the machine along with the retail purchaser's copy of the Warranty And Delivery Report to the KINZE® Dealer for service. KINZE® warranty does not include cost of travel time, mileage, hauling or labor. Any prior arrangement made between the Dealer and the retail purchaser in which the Dealer agrees to absorb all or part of this expense should be considered a courtesy to the retail purchaser.

*KINZE® warranty does not include cost of travel time, mileage, hauling or labor.*

# INTRODUCTION

---


Model 3800 Forward Folding Planters are available in multiple size configurations with bulk seed delivery system (SDS) or conventional seed hoppers. The design permits installation of liquid fertilizer application equipment and various row unit attachments.

## GENERAL INFORMATION

The information used in this manual was current at the time of printing. However, due to KINZE's ongoing product improvement, production changes may cause your machine to appear slightly different in detail. KINZE Manufacturing, Inc. reserves the right to change specifications or design without notice and without incurring obligation to install the same on machines previously manufactured.


Right hand (R.H.) and left hand (L.H.), as used throughout this manual, are determined by facing in the direction the machine will travel when in use unless otherwise stated.

(FWD173)

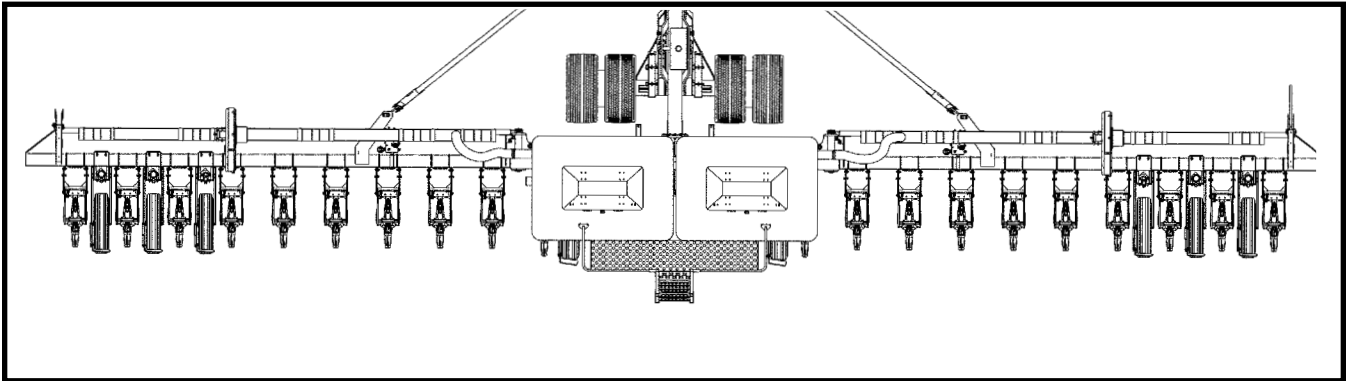

**Model 3800 SDS EdgeVac® 24 Row 30" Planter**

(FWD174)

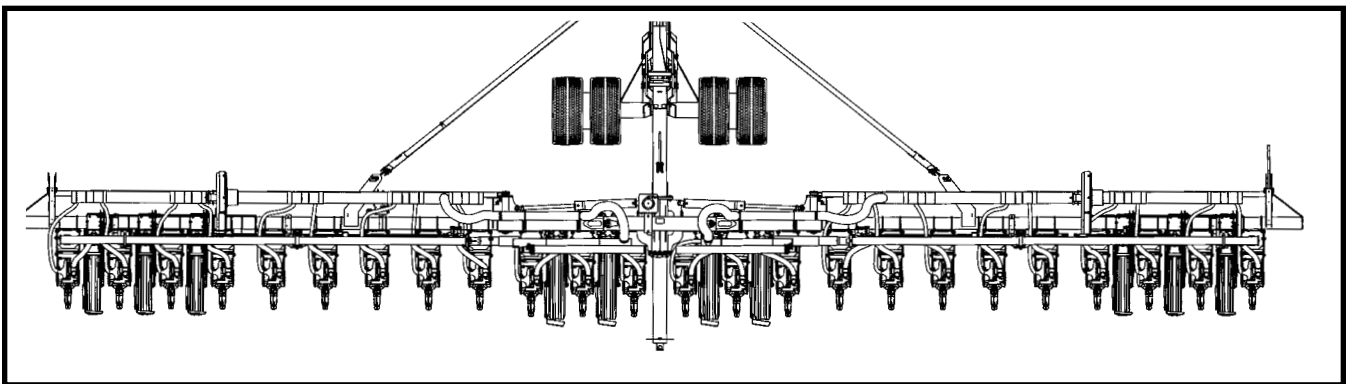

**Model 3800 Conventional EdgeVac® 24 Row 30" Planter**

# INTRODUCTION

---

# SPECIFICATIONS

---

**BASE MACHINE TYPE** - Semi-Mounted/Pull Type - Forward Folding Toolbar - Hydraulic Operation

**SEED METER TYPE** - EdgeVac® Seed Metering System

**EDGEVAC® SEED METERING SYSTEM INCLUDES -**

EdgeVac® Seed Meters (Less Seed Discs), Meter Drive Clutches, No. 41 Chains, Two 20" Diameter Vacuum Fans With Mounting Components, Hydraulic Motors, Oil Filters And Coolers, 1000 RPM 1 3/4"-20 Spline PTO 2-Section Gear Pump (Planter Mounted), 8 Gallon Capacity Oil Reservoir, Hoses And Fittings, 4" Diameter Vacuum Feed Hoses, Manifolds With Mounting Brackets And Hardware, 2" Diameter Meter Vacuum Hoses With Connectors, Analog Vacuum Gauges And EdgeVac® Control Console

**PLANTING UNIT TYPES** - Pull Row Units  
- SDS Bulk Seed Delivery System Or Conventional Seed Hoppers

**ROW SPACING** - 24 Row Narrow - 30" Rows (Six Rows On Center Section, Nine Rows On Outer Wings)

**DRIVE SYSTEM** - Spring-Loaded Contact Drive System  
- Six 4.80" x 8" Contact Drive Tires  
- No. 40 Roller Chain And Spring-Loaded Idlers  
- Two Transmissions (One Per Half)  
- Point Row Clutches Standard (Four Clutches)  
- 7/8" Hex Drill/Drive Shafts With Spring-Loaded Hardened Couplers And U-Joint Shafts At Wing Hinges

**FIELD OPERATION TIRES** - Center Section - Four 41 x 11R 22.5 Radial Load Range H  
- Wings - 7.50 x 20", 8 Ply Custom Rib Implement Adjustable Height Wheels  
Three Per Wing (Six On 24 Row 30")

**TRANSPORT TIRES** - 445-50R 22.5R Radial Load Range H (Two On 24 Row 30")

**ROW MARKERS (OPTIONAL)** - Depth Band On Marker Blade  
- 24 Row 30" - Three-Fold

**HYDRAULICS** - Three SCV For Independent Operation Of Field Lift, Fold Functions And Optional Row Marker Functions With 12 VDC Control Console  
- Master/Slave Lift  
- Four 4" x 8" Master Cylinders, Four 3 3/4" x 8" Slave Cylinders And Two 2 1/2" x 8" Lift Assist Cylinders  
- Four 4" x 8" Master Cylinders, Four 3 3/4" x 8" Slave Cylinders, Four 3 1/2" x 8" Slave Cylinders  
- Wing Fold - Two Cylinders On 24 Row 30"  
- Latch Cylinders - One Slide Latch Cylinder And One Tongue Latch Cylinder

**HITCH** - Category 3N, 3 Or 4N

# SPECIFICATIONS

---

## MACHINE OPTIONS

- Electronic Seed Monitor
  - KINZE Vision® Display
  - KINZE Cobalt™ Display
  - Planter Monitor Module (PMM)
- Liquid Fertilizer Package
- Piston Pump Mount And Drive Package
- Notched Single Disc Fertilizer Openers
- Low Rate Check Valve Packages
- Rear Trailer Hitch
- Dual Transport Tire Option (Conventional 24 Row 30" Only)

## ROW UNIT OPTIONS/ATTACHMENTS

- Seed Meter Discs
- Closing Wheel Options
  - Rubber "V" Closing Wheels
  - Cast Iron "V" Closing Wheels
  - Covering Discs/Single Press Wheel
  - Drag Closing Attachment
- Down Pressure Options
  - Quick Adjustable Down Force Springs
  - Pneumatic Down Pressure Package
- Granular Chemical Application
- Hopper Panel Extension Package
- Spring Tooth Incorporator
- Row Unit Extension Brackets
- Row Unit Mounted No Till Coulter
- Coulter Mounted Residue Wheels
- Row Unit Mounted Disc Furrowers
- Row Unit Mounted Residue Wheel
- Frame Mounted Coulter
- Residue Wheels For Frame Mounted Coulter

# SPECIFICATIONS

---

## MODEL 3800 CONVENTIONAL DIMENSIONS/WEIGHTS

| PLANTER SIZE                     | 24 Row 30"  |
|----------------------------------|-------------|
| PLANTING WIDTH                   | 62' 6"      |
| PLANTING LENGTH                  | 24' 9"      |
| TRANSPORT WIDTH (See NOTE Below) | 14' 7"      |
| TRANSPORT LENGTH                 | 39' 0"      |
| TRANSPORT HEIGHT (With Markers)  | 13' 6"      |
| WEIGHT* (Base Machine)           | 25,159 Lbs. |

## MODEL 3800 SDS DIMENSIONS/WEIGHTS

| PLANTER SIZE                     | 24 Row 30"  |
|----------------------------------|-------------|
| PLANTING WIDTH                   | 62' 6"      |
| PLANTING LENGTH                  | 24' 9"      |
| TANK HEIGHT (Planting Position)  | 9' 4"       |
| TRANSPORT WIDTH (See NOTE Below) | 14' 7"      |
| TRANSPORT LENGTH                 | 39' 0"      |
| TRANSPORT HEIGHT (With Markers)  | 13' 6"      |
| WEIGHT* (Base Machine)           | 28,434 Lbs. |

\* Estimated base machine weights include planter frame, drive components, tires and wheels, hydraulic cylinders and hoses, 12VDC control console, KINZE® pull row units (closing wheel arms less closing wheels), seed hoppers and lids on conventional planters or bulk seed hoppers and seed delivery system on SDS planters, dual quick-adjustable down force springs and point row clutches.

NOTE: Truck shipping width is 13' 9". Transport widths with optional granular chemical attachments are 15' 9".

# SPECIFICATIONS


---




# SAFETY PRECAUTIONS


Safe and careful operation of the tractor and planter at all times will contribute significantly to the prevention of accidents.


Since a large portion of farm accidents occur as a result of fatigue or carelessness, safety practices should be of utmost concern. Read and understand the instructions provided in this manual and on the warning signs. Review these instructions frequently! Listed below are other safety suggestions that should become common practice.


 **Never allow the planter to be operated by anyone who is unfamiliar with the operation of all functions of the unit. All operators should read and thoroughly understand the instructions given in this manual prior to moving the unit.**


 **Never permit any persons other than the operator to ride on the tractor.**


 **Never ride on the planter or allow others to do so.**


 **Always make sure there are no persons near the planter when row marker assemblies are in operation or when folding the planter.**


 **Always keep hands, feet and clothing away from moving parts. Do not wear loose-fitting clothing which may catch in moving parts.**


 **Always wear protective clothing, substantial shoes and suitable hearing and eye sight protectors applicable for the situation.**

 **Do not allow anyone to stand between the tongue or hitch and the towing vehicle when backing up to the planter.**

 **Be aware of bystanders, particularly children! Always look around to make sure it is safe to start the engine of the towing vehicle or move the planter. This is particularly important with higher noise levels and quiet cabs, as you may not hear people shouting.**


 **Use a tractor equipped with a roll-over-protective-system and fasten your seat belt prior to starting the engine.**

 **Before operating the planter for the first time and periodically thereafter, check to be sure the lug bolts (and cap screws if applicable) on the transport wheels are torqued properly. This is especially important if the planter is to be transported for a long distance.**


 **Never work under the planter while in raised position without installing safety lockup devices.**


 **Watch for obstructions such as wires, tree limbs, etc. when folding row markers.**

 **To avoid serious injury or death, care must be taken when operating row markers around overhead power lines.**



















 **The seed and fertilizer metering systems of this planter are designed to be driven by ground tires. A PTO pump and hydraulic motors power the vacuum fans. Hydraulic motors power the bulk seed distribution system. The use of aftermarket hydraulic, electric or PTO drives may create serious safety hazards to you and the people nearby. If you install such drives you must follow all appropriate safety standards and practices to protect you and others near this planter from injury.**

 **This machine has been designed and built with your safety in mind. Do not make any alterations or changes to this machine. Any alteration to the design or construction may create safety hazards.**

 **Check to be sure all safety/warning lights are working properly before transporting the machine on public roads.**

 **Avoid transporting planter with hoppers loaded whenever possible. When it is necessary to transport the planter with the hoppers loaded, the added weight should be distributed evenly on the planter frame before folding the planter.**

# SAFETY PRECAUTIONS

-  Limit towing speed to 15 MPH.
-  Transport stability is critical. The gross weight of the tractor must be greater than the gross weight of the planter. Gross weight varies with planter attachments. Tow 24 Row 30" planters with 200 HP farm tractor (minimum HP). Tow 32 Row 30" or 36 Row 30" planters with 250 HP farm tractor (minimum HP).
-  Always make sure safety/warning lights, reflective decals and SMV sign are in place and visible prior to transporting the machine on public roads. In this regard, check federal, state/provincial and local regulations.
-  Allow for unit length when making turns.
-  Always drive at a safe speed relative to local conditions and ensure your speed is low enough for an emergency stop to be safe and secure. Keep speed to a minimum.
-  Reduce speed prior to turns to avoid the risk of overturning.
-  Always keep the tractor in gear to provide engine braking when going downhill. Do not coast.
-  Avoid sudden uphill turns on steep slopes.
-  Be a safe and courteous driver. Always yield to oncoming traffic in all situations, including narrow bridges, intersections, etc.
-  Agricultural chemicals used with this unit can be dangerous. Improper selection or use can seriously injure persons, animals, plants, soil and other property. **BE SAFE:** Select the right chemical for the job. Handle it with care. Follow the instructions on the container and of the equipment manufacturer.
-  Rim and tire servicing can be dangerous. Explosive separation of a tire and rim parts can cause serious injury or death.
-  Store the planter in an area away from human activity. **DO NOT** permit children to play on or around the stored unit.
-  Make sure the parked machine is on a hard, level surface. Wheel chocks may be needed to prevent unit from rolling.
-  Good maintenance is your responsibility. Poor maintenance is an invitation to trouble.
-  Never operate vacuum fans with cover removed.
-  Always wear ear protection when working around operating vacuum fans.
-  Planter hydraulic drive system can start at any time. Entanglement with driveline components can cause severe personal injury or death. Fully shut down tractor and neutralize hydraulic lines before adjusting or servicing planter hydraulic drive system.
-  Pressurized hydraulic fluid can penetrate body tissue and result in serious infection, injury, or death. Before applying pressure to the hydraulic system, make sure all connections are tight and that hoses and fittings have not been damaged. Leaks can be invisible. Keep away from suspected leaks. Relieve pressure in the hydraulic system before searching for leaks, disconnecting hoses, or performing any other work on the system. Fluid injected under the skin must be **IMMEDIATELY** removed by a surgeon familiar with this type of injury.

# SAFETY WARNING SIGNS

The “WARNING” signs illustrated on these pages are placed on the machine to warn of hazards. The warnings found on these signs are for your personal safety and the safety of those around you. OBSERVE THESE WARNINGS!

- Keep these signs clean so they can be readily observed. Wash with soap and water or cleaning solution as required.
- Replace “WARNING” signs should they become damaged, painted over or if they are missing.
- Check reflective decals and SMV sign periodically. Replace if they show loss of any of their reflective properties.
- When replacing decals, clean the machine surface thoroughly using soap and water or cleaning solution to remove all dirt and grease.

**NOTE:** Style and locations of SMV sign, reflective decals and safety/warning lights conform to ANSI/SAE S279.13 DEC2005 and ANSI/SAE S276.6 JAN2005.

D032404100



Part No. G7100-68 (Qty. 2 - Located On Forward Toolbars On Both Sides Of Planter)


D032404114



Part No. G7100-68 (Qty. 2 - Located On Stub Wings On Both Sides Of Planter)

# SAFETY WARNING SIGNS

(FWD162)

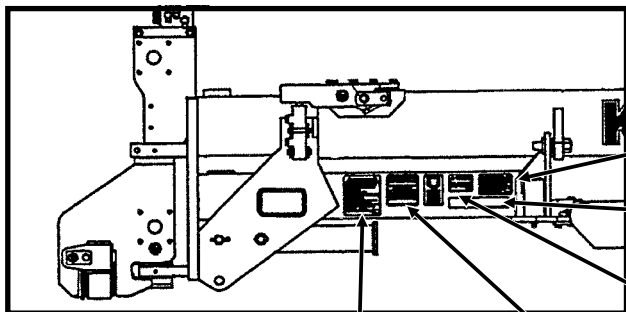

**WARNING**

THIS MACHINE HAS BEEN DESIGNED AND BUILT WITH YOUR SAFETY IN MIND. DO NOT MAKE ANY ALTERATIONS OR CHANGES TO THIS MACHINE. ANY ALTERATION TO THE DESIGN OR CONSTRUCTION MAY CREATE SAFETY HAZARDS.

7100-90

Part No. G7100-90 (Qty. 1)



Part No. G7100-259 Amber Reflective Decal (Qty. 2 - One Located On Each Side Of Hitch)

**WARNING**

1. Read and understand the Operator's Manual.
2. Stop the tractor engine before leaving the operator's platform.
3. Keep riders off the machine.
4. Make certain everyone is clear of the machine before starting the tractor engine and operating.
5. Keep all shields in place.
6. Never lubricate, adjust, unclog or service the machine with tractor engine running.
7. Wait for all movement to stop before servicing.
8. Keep hands, feet and clothing away from moving parts.
9. Use flashing warning lights when operating on highways except when prohibited by law.

7100-46

Part No. G7100-46 (Qty. 1 - Located On Planter Hitch)

**DANGER**

SERIOUS INJURY OR DEATH CAN RESULT FROM CONTACT WITH ELECTRICAL LINES. USE CARE TO AVOID CONTACT WITH ELECTRIC LINES WHEN MOVING OR OPERATING THIS MACHINE.

7100-117

Part No. G7100-117 (Qty. 1 - Located On Planter Hitch)

**WARNING**



**TOW ONLY WITH FARM TRACTOR**

7100-56

Part No. G7100-56 (Qty. 1 - Located On Planter Hitch)


# SAFETY WARNING SIGNS

D02270807

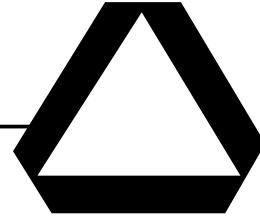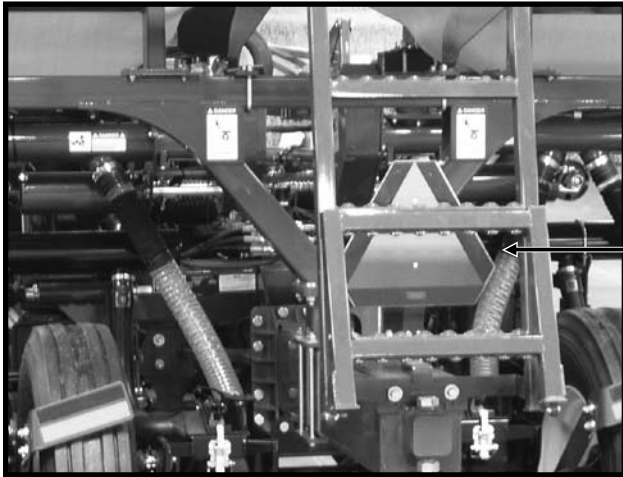


Part No. GD2199 (Qty. 1 - Located On Rear Center Section Of Planter)

D06039901

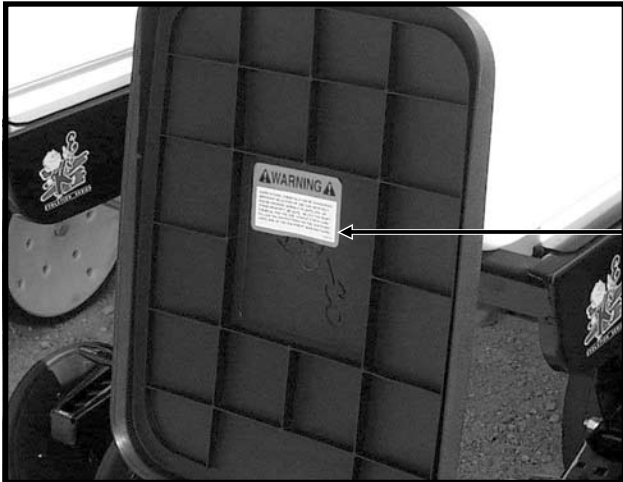

Part No. G7100-115 (Qty. 1 Per Row Unit - Located On Underside Of Each Optional Granular Chemical Hopper Lids)

D040204101

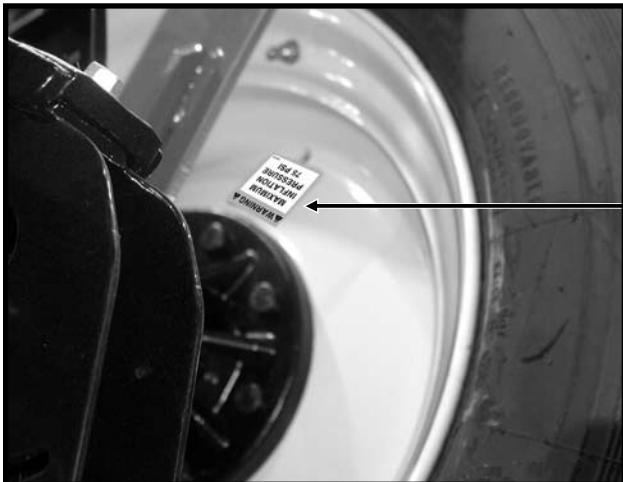


Part No. G7100-219 (Qty. 4 - One Per 41 x 11R22.5" Center Section Lift/Gauge Tire)

# SAFETY WARNING SIGNS


(FWD173)

## SDS Planter Shown

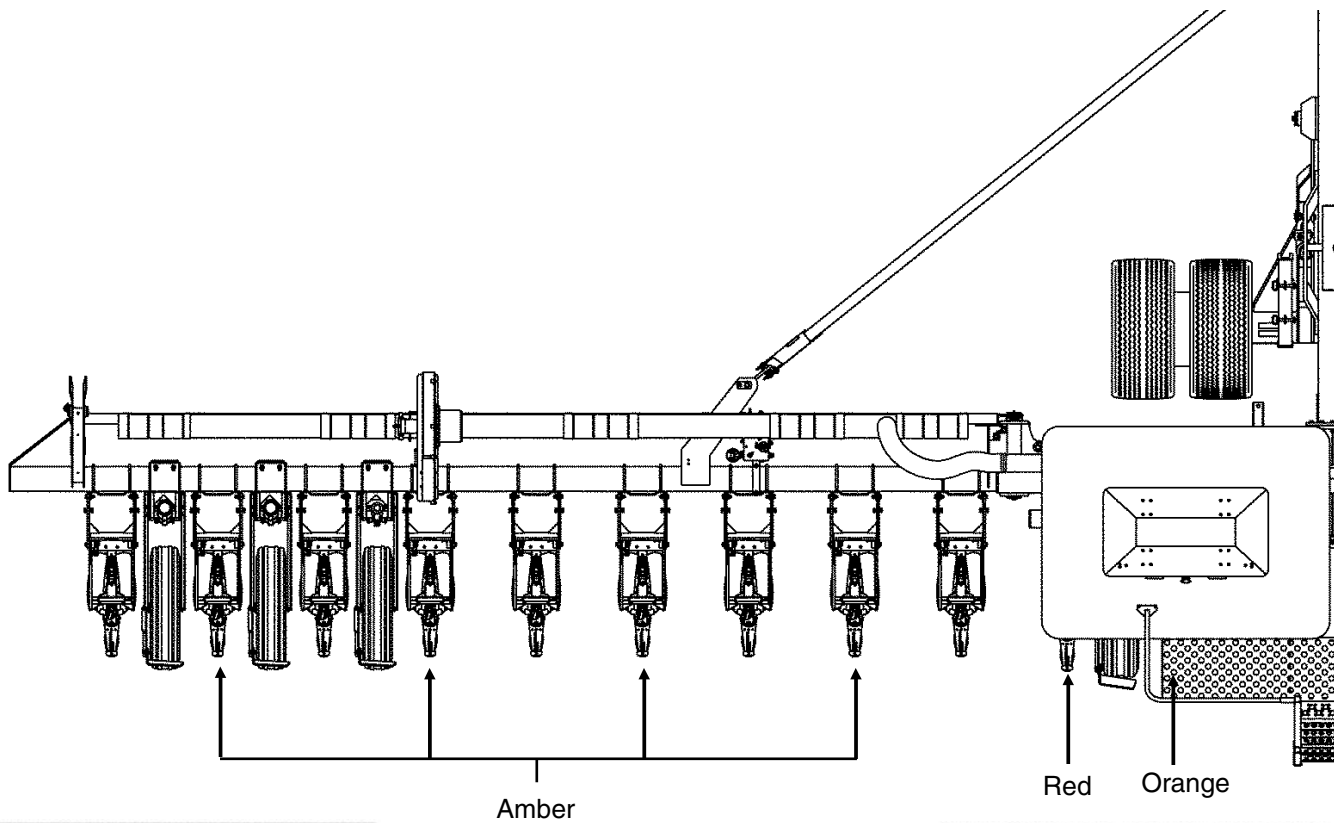

Part No. G7100-262 Amber Reflective Decal (Located On The Hopper Support On Every Other Row Unit Beginning On The 2nd Row Unit In On The L.H. End Of The Planter - Side-Facing In Transport Position) **(Standard)** (If Applicable)

D060800114

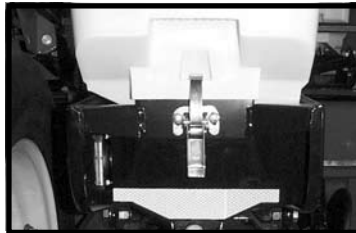


Part No. G7100-261 Red Reflective Decal  
Part No. G7100-260 Orange Reflective Decal (Located As Shown Above) **(Standard)** (If Applicable)



Part No. G7100-259 Amber Reflective Decal (Located On The Granular Chemical Hopper Panel Extension On Every Other Row Unit Beginning On The 2nd Row Unit In On The L.H. End Of The Planter - Side-Facing In Transport Position) **(With Optional Granular Chemical)** (If Applicable)


D062300102

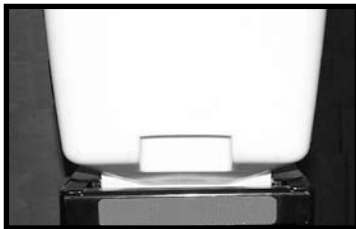

Part No. G7100-258 Red Reflective Decal  
Part No. G7100-260 Orange Reflective Decal (Located As Shown Above) **(With Optional Granular Chemical)** (If Applicable)

**NOTE: Eight decals used on 24 Row 30".**

# SAFETY WARNING SIGNS

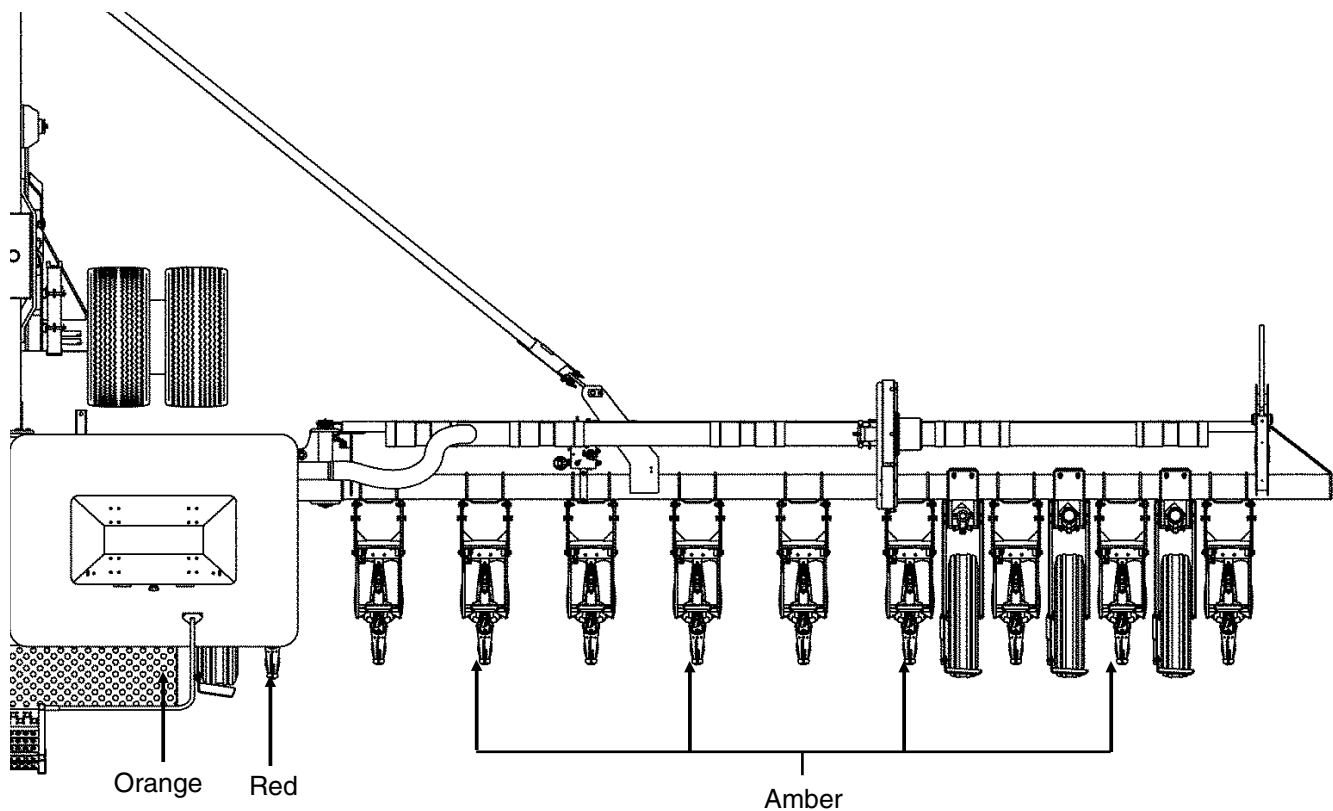

Part No. G7100-261 Red Reflective Decal  
 Part No. G7100-260 Orange Reflective Decal  
 (Located As Shown Above)  
**(Standard)** (If Applicable)




Part No. G7100-262 Amber Reflective Decal (Located On The Hopper Support On Every Other Row Unit Beginning On The 2nd Row Unit In On The R.H. End Of The Planter - Side-Facing In Transport Position)  
**(Standard)** (If Applicable)




Part No. G7100-258 Red Reflective Decal  
 Part No. G7100-260 Orange Reflective Decal  
 (Located As Shown Above)  
**(With Optional Granular Chemical)**  
 (If Applicable)

D060800114

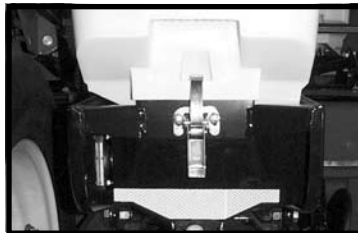



Part No. G7100-259 Amber Reflective Decal (Located On The Granular Chemical Hopper Panel Extension On Every Other Row Unit Beginning On The 2nd Row Unit In On The R.H. End Of The Planter - Side-Facing In Transport Position) **(With Optional Granular Chemical)**  
 (If Applicable)

D062300102

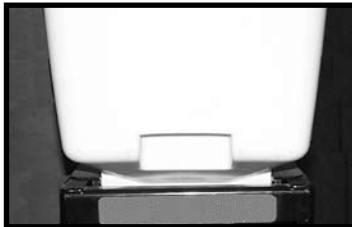


# SAFETY WARNING SIGNS

D040604130a

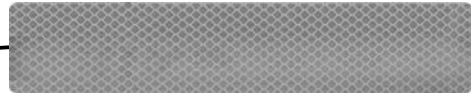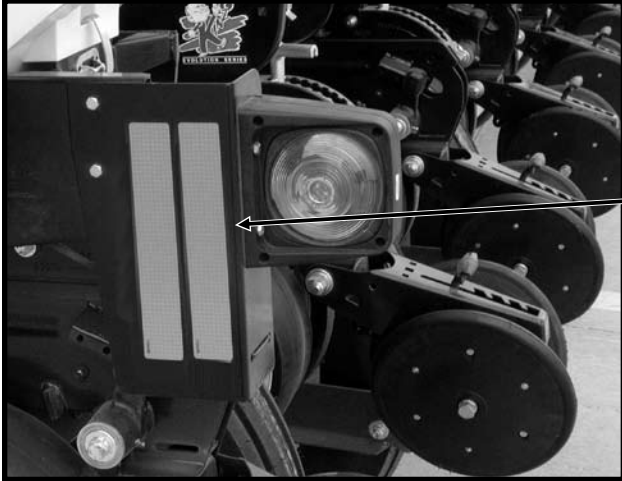



Part No. G7100-259 Amber Reflective Decal  
(Qty. 2 - Located On Each End Row Unit - Forward-Facing In Transport Position)

D081905111

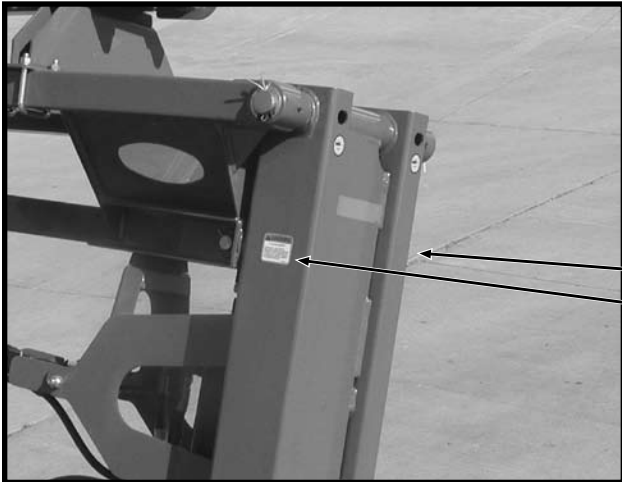

Part No. G7100-42 (Qty. 4 - Two Per Optional Row Marker)


FWD118

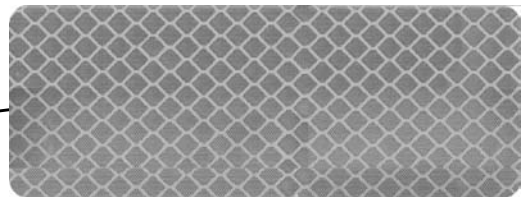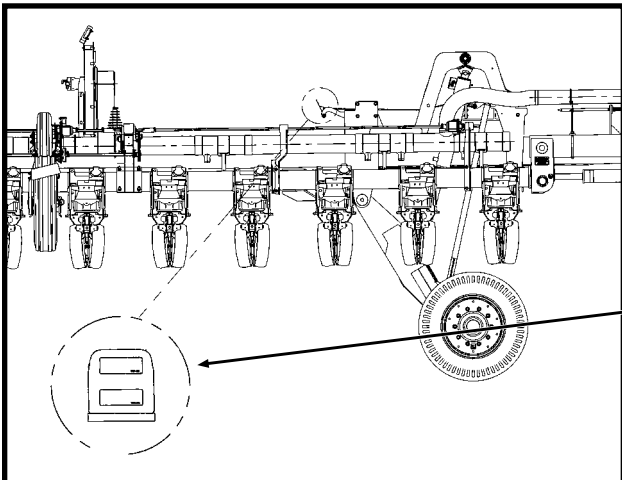

Part No. G7100-322 (Qty. 2 - Located On Slide Assembly Flap)




# SAFETY WARNING SIGNS

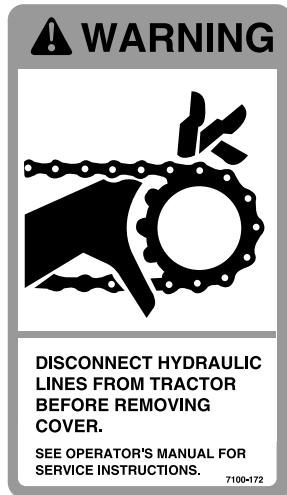


Part No. G7100-172 (Qty. 4)  
(SDS Planters Only)



D03060601

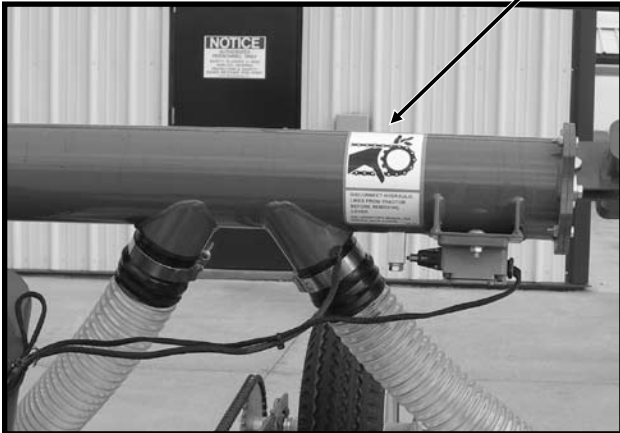

D01050731

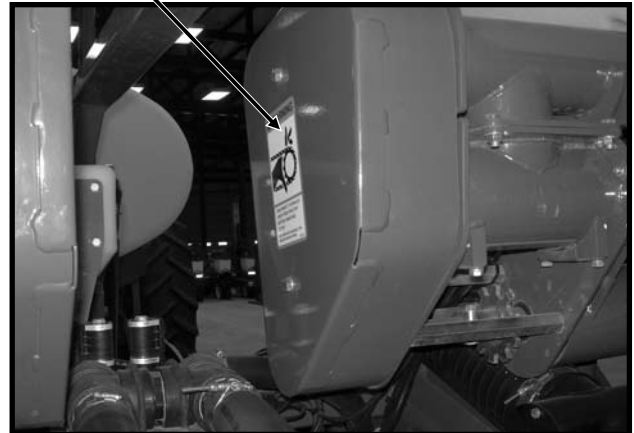


(FWD121)

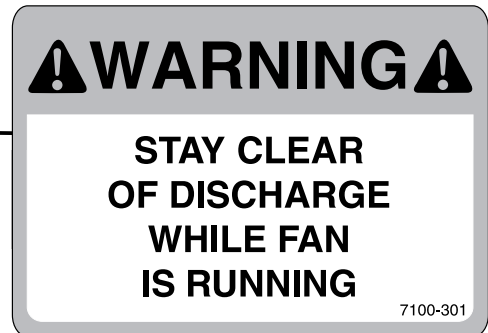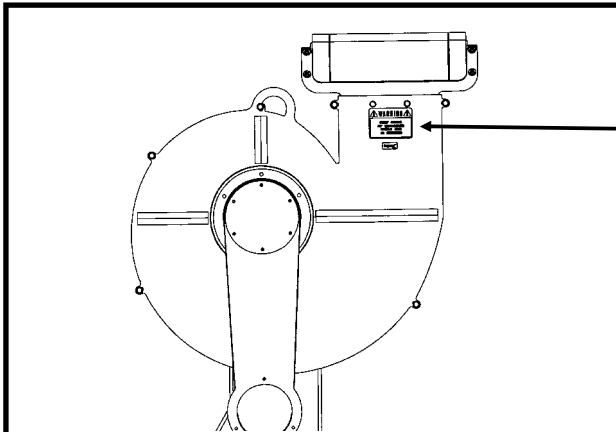


Part No. G7100-301 (Qty. 4 - One On Each Side Of Each Vacuum Fan)

# SAFETY WARNING SIGNS

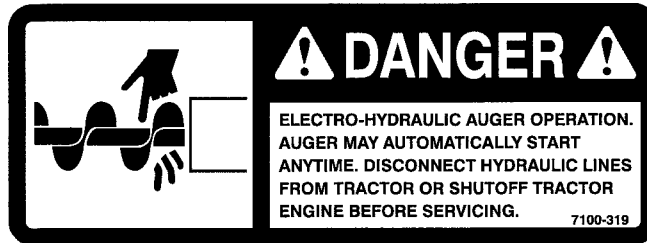

Part No. G7100-319 (Qty. 2) (SDS Planters Only)

(FWD104)

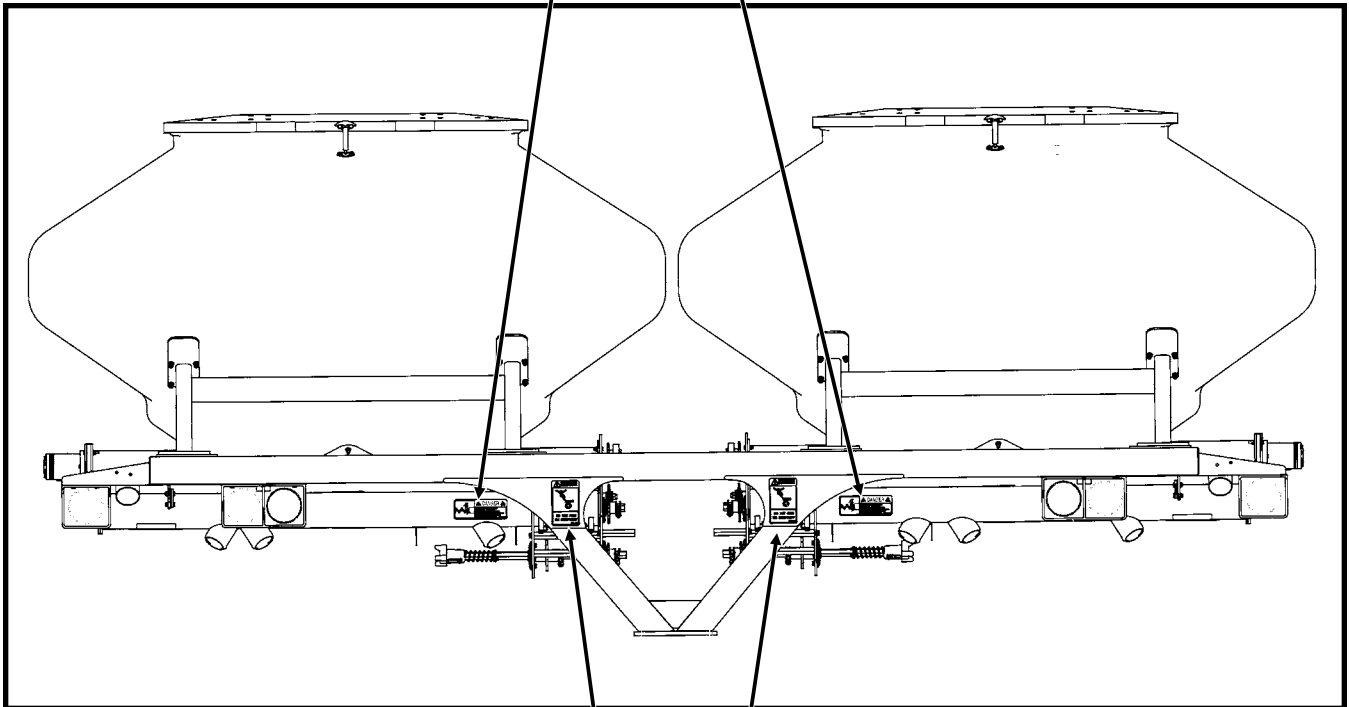


Part No. G7100-266 (Qty. 2) (SDS Planters Only)

# MACHINE OPERATION

The following information is general in nature and was written to aid the operator in preparation of the tractor and planter for use, and to provide general operating procedures. The operator's experience, familiarity with the machine and the following information should combine for efficient planter operation and good working habits.

**IMPORTANT: Always raise the planter out of the ground when making sharp turns or backing up.**


The KINZE EdgeVac® Seed Metering System includes seed meters, seed discs and an air system consisting of hydraulic driven vacuum fans which draw air through the manifolds and hoses and the seed meters on each row unit.

 **WARNING: Never operate vacuum fans with the cover removed.**

## WING LATCH HOOK SAFETY PIN(S)

The wing latch hook safety pin(s) when installed will prevent the latch bar from disengaging and allowing the planter frame to swing away. Never transport the planter without installing the wing latch hook safety pin(s). One wing latch hook safety pin is used on the 24 Row 30".

D081905131

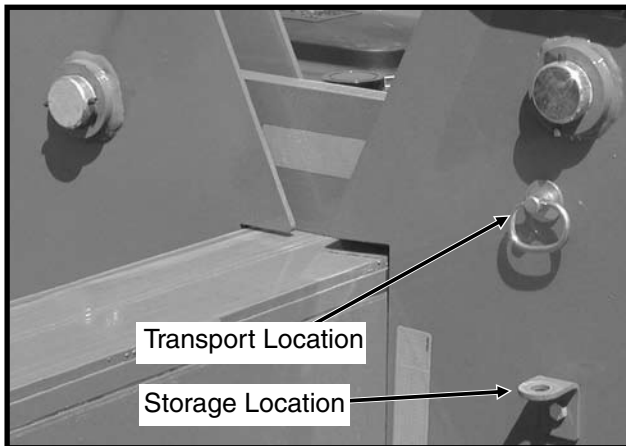


For field operation remove the wing latch hook safety pin(s) and store in the storage location(s) provided.

## TRANSPORT LOCKUP

Install transport lock when transporting or working around the planter. When lockups are not in use, store in the storage position provided on the transport axle assembly.

D02270802

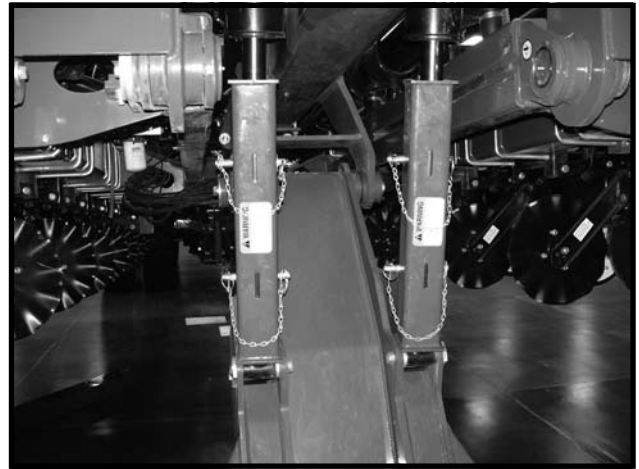

In Transport Position

D02070821



In Stored Field Operation Position


# MACHINE OPERATION

## INITIAL PREPARATION OF THE PLANTER


Lubricate the planter and row units per the lubrication information in this manual. Make sure all tires have been properly inflated. See "Tire Pressure". Check all drive chains for proper tension, alignment and lubrication.

The planter may be hitched to the tractor using a Category 3N, Category 3 or Category 4 hitch.

D081605102

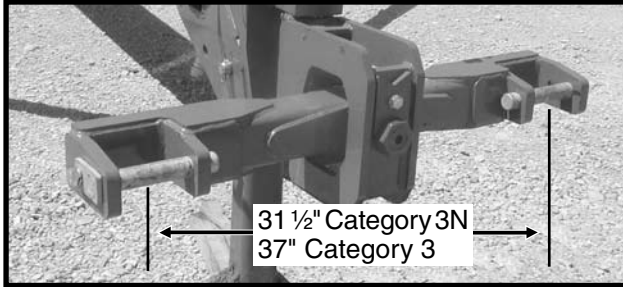

D01050714

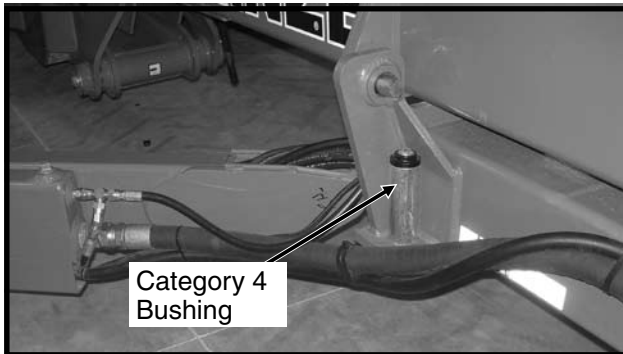

Install two 2" bushings, stored on the front inner hitch, onto the two hitch pins for Category 4 use.

## TRACTOR REQUIREMENTS

Consult your dealer for information on horsepower requirements and tractor compatibility. Requirements will vary with planter options, tillage and terrain. Three dual remote hydraulic outlets (SCV) are required on all sizes of conventional planters equipped with row markers. Four dual remote hydraulic outlets (SCV) are required on all sizes of SDS planters equipped with row markers. A 12 volt DC electrical system is required on all sizes.




**Transport stability is critical. The gross weight of the tractor must be greater than the gross weight of the planter. Gross weight varies with planter attachments. Tow 24 Row 30" planters with 200 HP farm tractor (minimum HP).**

**NOTE: A 3-point quick hitch adapter is required.**

A 1 3/4"-20 spline 1000 RPM PTO is required to operate the PTO-driven hydraulic pump. The pump is a two section pump capable of supplying 15 GPM to two hydraulic motors/vacuum fans. Other components of the dual fan system include two oil coolers, two replaceable cartridge-type filters, two motorized flow controls, pressure compensating valves, solenoid valves and relief valves. The entire EdgeVac® Seed Metering System operates from an 8 gallon capacity oil reservoir.

D03200631

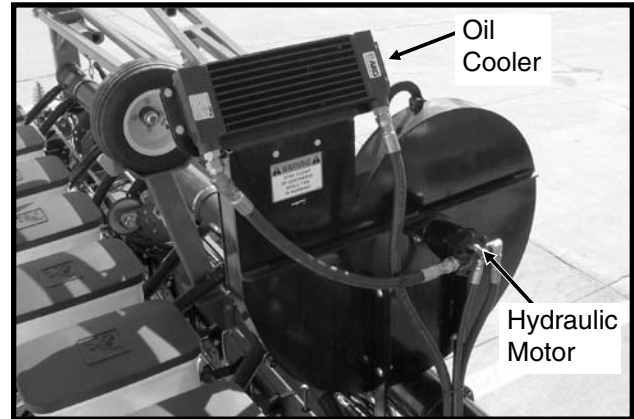

Vacuum Fan Assembly With Oil Cooler

A 12 volt battery connection is required to power the vacuum fan control console. Connect the "red" wire to the positive (+) battery terminal and the "black" wire to the negative (-) battery terminal.

**NOTE: The tractor's 3 point hitch must have a minimum lift capacity of 10,000 lbs. to raise the hitch weight of the machine, attachments, seed and dry chemicals.**

Tractor front end stability is necessary for safe, efficient operation. Therefore, it may be necessary to add front ballast to your tractor for satisfactory field operation, as well as adequate transport stability. Refer to your tractor operator's manual for front ballast recommendations.

**NOTE: Tractor drawbar may need to be removed to provide clearance for the planter.**

# MACHINE OPERATION

## TRACTOR PREPARATION AND HOOKUP

Correct adjustment and operation of the tractor's 3 point hitch is very important for peak performance of the planter.

A 3-point quick hitch adapter is required.

The tractor's 3 point hitch must be operated in POSITION mode, not DRAFT mode. Operation in DRAFT mode can cause the hitch to move up and down causing unlevel operation of the planter.

The tractor's 3 point hitch response sensitivity settings should be adjusted for the correct reaction speed for raising/controlling the hitch of the planter for the fold and unfold functions.

**IMPORTANT: Movement of the tractor's 3 point hitch (during field operation) is undesirable and may cause poor planter performance and/or damage to the planter. Consult your tractor dealer if necessary.**


1. Install planter control console, digital vacuum gauges control console and SDS control console (If Applicable) on tractor in convenient locations within reach of the operator and close to the hydraulic controls. Mount control consoles securely and route power cords to the power source.

D10060624



Planter Control Console

D10060618

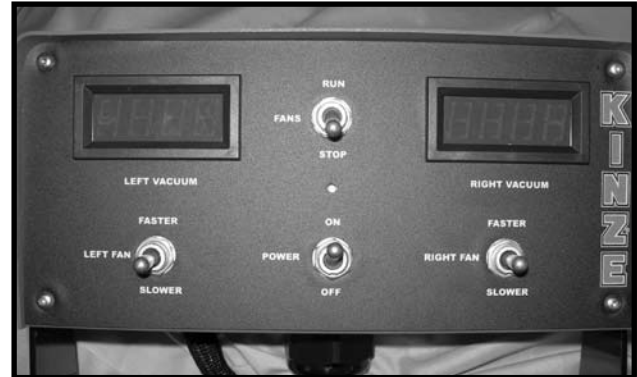

Digital Vacuum Gauges Control Console

D10060627



SDS Control Console (If Applicable)

The control consoles operate on 12 volt DC only. If two 12 volt batteries are connected in series, ALWAYS make power connection on the battery which is grounded to the tractor chassis.

2. Set tractor rear wheel spacing at 60" or double the planter row spacing. Dual tires should center on 120". Check tractor operator's manual for correct front and rear tire pressures. (If Applicable)
3. Adjust lower lift links on tractor so planter will lift level from side to side and raise high enough for planter transport clearance. Set the sway blocks on the tractor in position to prevent side sway.
4. Back tractor up to planter and connect planter.

# MACHINE OPERATION

5. Install applicable PTO shaft assembly between tractor PTO output shaft and hydraulic pump gearbox on planter.

**CAUTION:** A tractor model-specific PTO shaft assembly is required. The procedure described in the following steps **MUST** be followed every time a different tractor is attached to determine if the correct length PTO shaft assembly is being used. **FAILURE TO FOLLOW THESE GUIDELINES WILL RESULT IN SEVERE DAMAGE TO THE IMPLEMENT AND/OR THE TRACTOR.**


**IMPORTANT:** The tractor must be equipped with a 1 3/4"-20 spine PTO.

**NOTE:** A 3-point quick hitch adapter is required on all Model 3800 EdgeVac® Planters.


**IMPORTANT:** The tractor drawbar must be removed prior to attaching planter to tractor. Failure to remove drawbar will cause damage to planter and/or tractor.

A. To determine the correct length of PTO shaft to be used, dimension Z in the illustration below must be determined.

(FWD152)

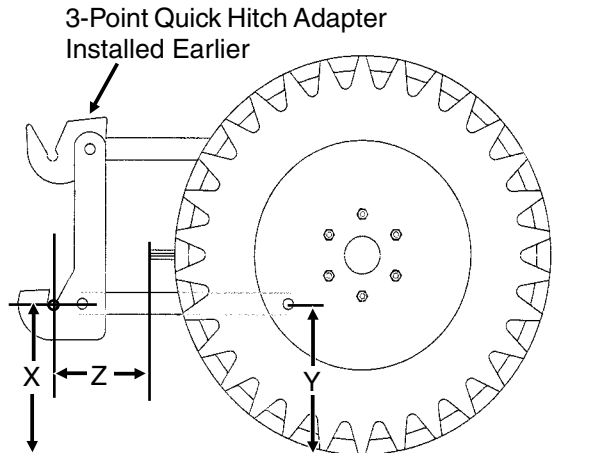

D01290829

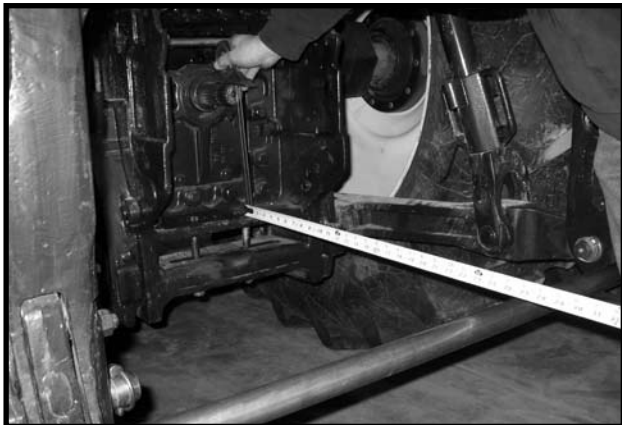

B. With tractor and planter on a level surface, raise or lower the hitch until X and Y are equal.

C. With a rod positioned across the lower lift links, measure the precise distance between the center of the lower lift point and the end of the tractor's PTO shaft to obtain dimension Z. As shown in photo, use a square on the PTO shaft to take an accurate measurement. Dimension Z must fall in one of the ranges for the PTO assemblies listed below.

### PTO Assembly Options (Select Using Dimension Z):


- 658-00688 - 24 1/2" to 27"
- 658-00689 - 31 1/2" to 34 1/2" (If measurement is between 27" and 31 1/2", shorten as needed.)
- 658-00690 - Over 34 1/2" (Trim to fit the application as needed.)

### PTO LENGTH ADJUSTMENT


**IMPORTANT:** Trim all guard tubes and inner/outer sliding profiles equally.

**NOTE:** For example: if dimension Z is 28", 658-00689 PTO should be used and 3 1/2" (31 1/2" - 28" = 3 1/2") must be trimmed off the tractor and planter ends of the PTO guards and tubes following the steps as follows:

(FWD151a)

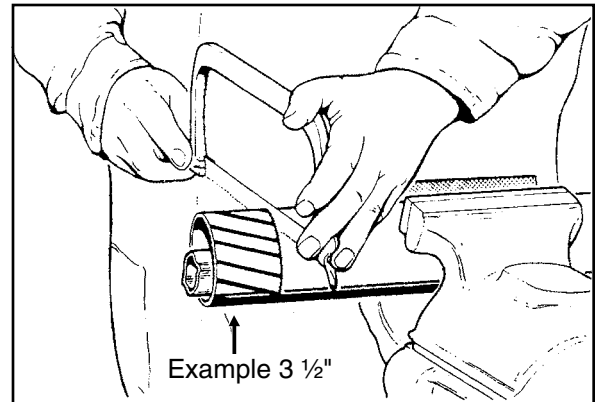

D01130801

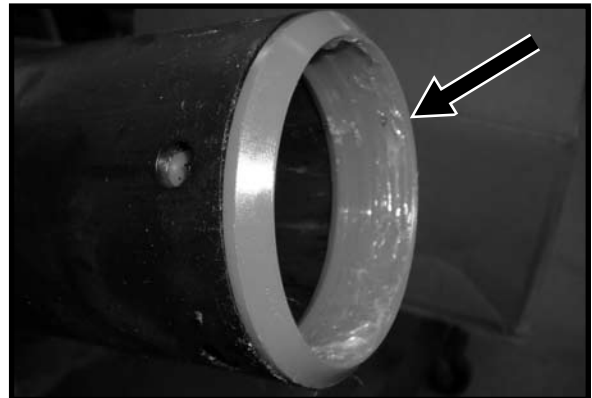


# MACHINE OPERATION

**STEP 1** - Shorten inner and outer plastic gaurd tubes by determined length.


The inner plastic guard tube has an insert that must be removed prior to trimming and inserted back into the tube after the tube is trimmed. See photo on preceeding page. Using trimmed portion of inner tube as a template, locate and drill  $\frac{5}{16}$ " holes in the guard tube to allow reinstallation of the insert.

(FWD151b)

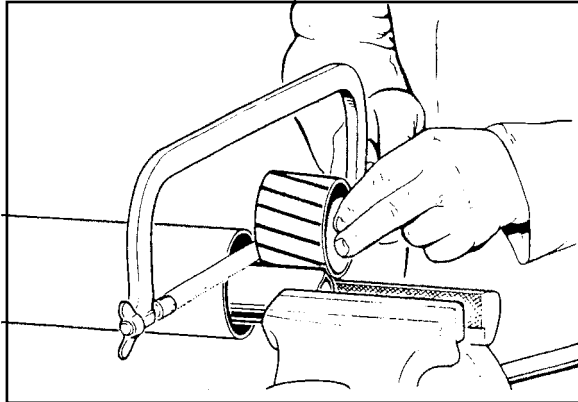

**STEP 2** - Using plastic tube as a template for length, shorten inner and outer metal liding profiles by the same length as the guard tubes. This will leave the inner profile to extend beyond the guard tube as before.

(FWD151c)

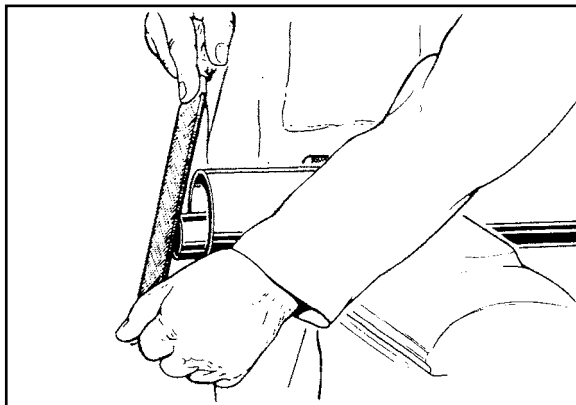


**STEP 3** - Round off all sharp edges and remove burrs. Grease sliding profiles. No other changes may be made to the PTO assembly.

If dimension X is over  $34 \frac{1}{2}$ ", use 658-00690 PTO assembly. With the 3-point arms completely raised, connect PTO to tractor and to planter with the sections disconnected. Hold the PTO halves side-by-side as shown below.

## 658-00690 PTO ASSEMBLY ONLY

(FWD151)

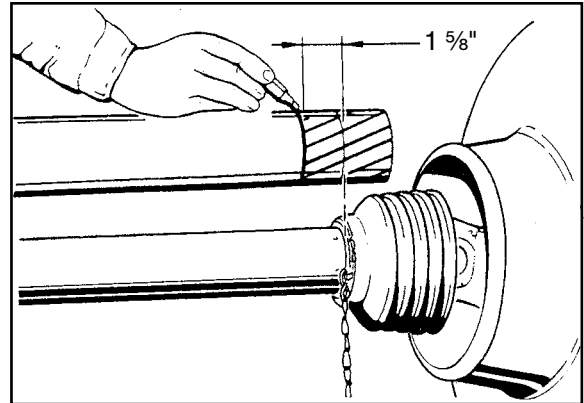

If dimension is not available, hold the half-shafts next to each other in the shortest working poistion (with the 3-point arms completely raised) and mark the location  $1 \frac{5}{8}$ " from where it would collide with the U-joint area of the PTO.

D01300803



Shown Properly Cut To Length With Plastic Guard Tubes In Place

# MACHINE OPERATION

---

**IMPORTANT:** The PTO shaft coupling should be cleaned and greased each time the pump is installed.

**IMPORTANT:** To extend life of shaft splines, apply a coating of high-speed industrial coupling grease, such as Chevron® Coupling Grease, that meets AGMA CG-1 and CG-2 Standards.

*(The Chevron® trademark is owned by Chevron Products Company. AGMA is the acronym for the American Gear Manufacturers Association)*

Fill reservoir with hydraulic fluid. A SAE 10W-20 multigrade wide temperature range transmission hydraulic fluid is recommended.

Start system. Allow to run with tractor at idle and the fans turned off for 1-2 minutes.

Allow to run with tractor at idle and the fans at full speed for 1-2 minutes.

Check fluid level in reservoir and fill as required.

To allow the fluid to expand, when heated, fluid level in each tank should be within 1"-2" from the top of the tank after the pump has run and hydraulic hoses have been primed.

Bring tractor to PTO speed and adjust flow control to the desired vacuum level using the switches on the vacuum fan control console.

6. Connect hydraulic hoses to tractor ports in a sequence which is both familiar and comfortable to the operator.

Before attaching hoses, move tractor control levers back and forth to relieve any pressure in the tractor hydraulic system.

The hydraulic hoses are color coded as follows:

Red AA - Field Raise Function (Return)  
Red BB - Field Raise Function (Pressure)

Blue AA - Fold/UnFold Functions (Return)  
Blue BB - Fold/UnFold Functions (Pressure)

Black AA - Row Marker Functions (Return)  
Black BB - Row Marker Functions (Pressure)

White AA - 5/8" Hose - Bulk Seed Delivery System (SDS) Functions (Return)

White BB - 1/2" Hose - Bulk Seed Delivery System (SDS) Functions (Pressure)



**DANGER:** Before applying pressure to the hydraulic system, make sure all connections are tight and hoses and fittings have not been damaged. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin, causing injury or infection.

**IMPORTANT:** Always wipe hose ends to remove any dirt before connecting couplers to tractor ports.



# MACHINE OPERATION

7. Connect cable on planter to planter control console cable on tractor. Connect cable on planter to vacuum fan control console and cable on planter to SDS control console (If Applicable). Connect ASAE Standards 7 terminal connector for safety/warning lights on planter to ASAE Standards receptacle on tractor. If your tractor is not equipped with an ASAE Standards receptacle, check with your tractor manufacturer for availability. Check to be sure safety/warning lights on planter are working in conjunction with warning lights on tractor.


Connect harness on planter to digital vacuum gauge console on tractor. Connect power lead to power source. A power lead adapter may be required.

8. Raise planter slowly and watch for any interference. Remove pin from jack stand and swing jack stand to the horizontal position. Install pin in storage position.


9. For proper operation of the planter and row units, it is important that the planter toolbars and row unit parallel arms be level side-to-side and front-to-rear. The toolbar should operate at 20"-22" height from planting surface. Tire pressure must be maintained at pressures specified and toolbar heights must be adjusted equally. Check to be sure planter toolbars are level and at correct operating heights. See "Leveling The Planter".

**NOTE: The transport axle cylinders are equipped with counter balance valves which hydraulically lock the cylinders when not in use.**

D040604101a

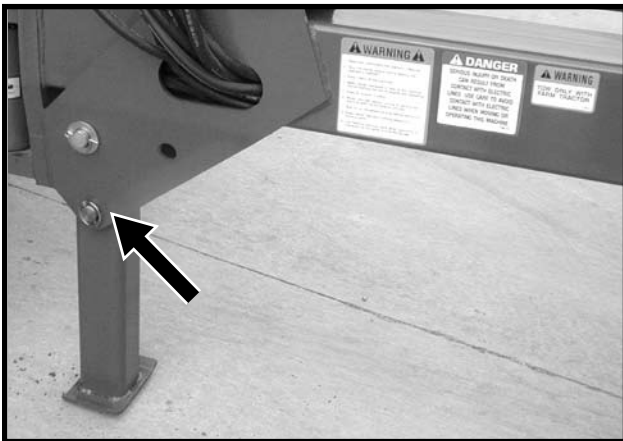

D040604100

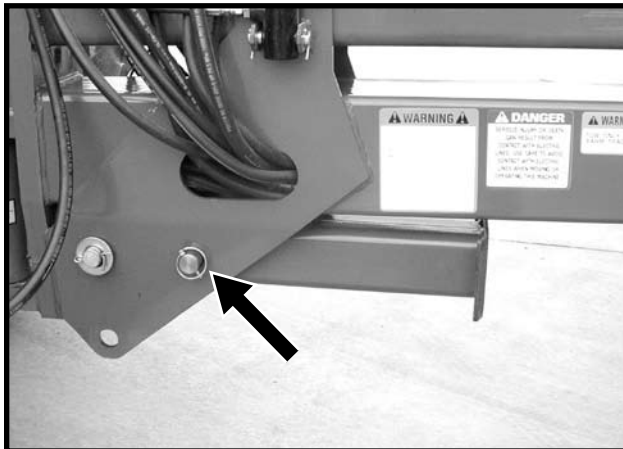


# MACHINE OPERATION

## LEVELING THE PLANTER

With the planter lowered to proper operating height, check to be sure the toolbars and row unit parallel arms are level fore and aft. Recheck when planter is in the field.


It is important for the planter to operate level laterally. Tire pressure must be maintained at pressures specified. See "Tire Pressure".

Field and actual planting conditions will dictate which of the wheel settings to use to ensure row unit parallel arms are approximately parallel with the planting surface.

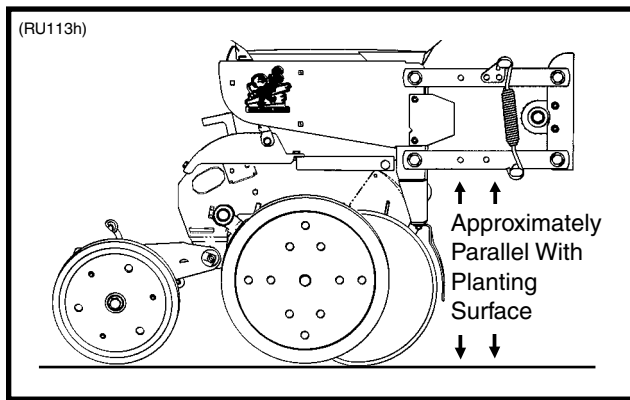


When the planter has been fully loaded with seed, granular chemicals, etc.; a field check should be made to be sure the wings are level with the center frame. If the wings are not level with the center frame, the lift/gauge wheels can be raised or lowered in the wheel arms to increase or decrease planter toolbar height. Hitch height should be positioned to ensure level operation.

D040604201

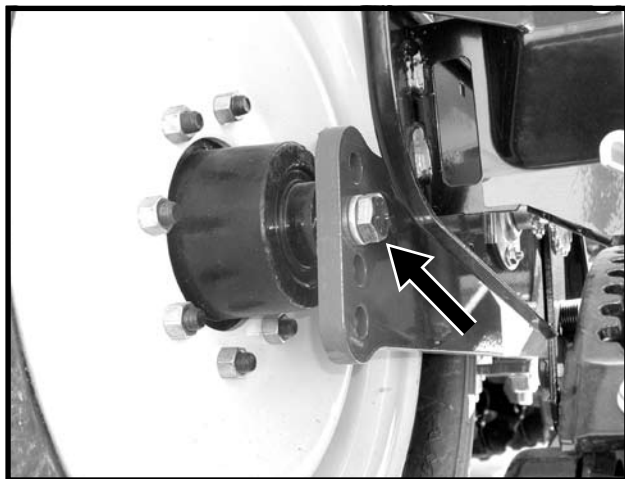

**Center Section Lift/Gauge Wheel (Rock Shaft Axle) - Initial Setting Shown**

D033104202

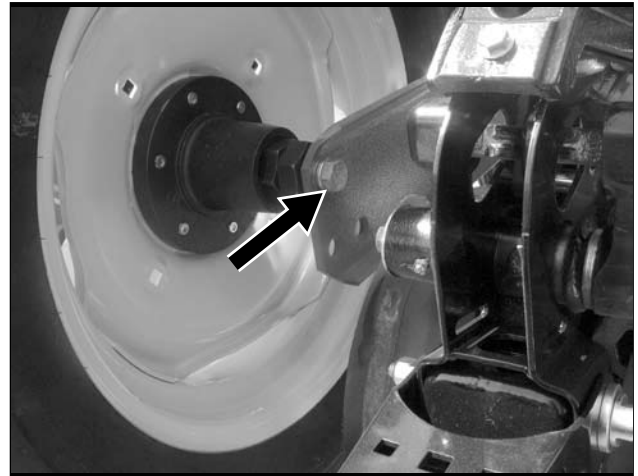


**Wing Lift/Gauge Wheel - Initial Setting Shown**

# MACHINE OPERATION


## TIRE PRESSURE

(FWD173)

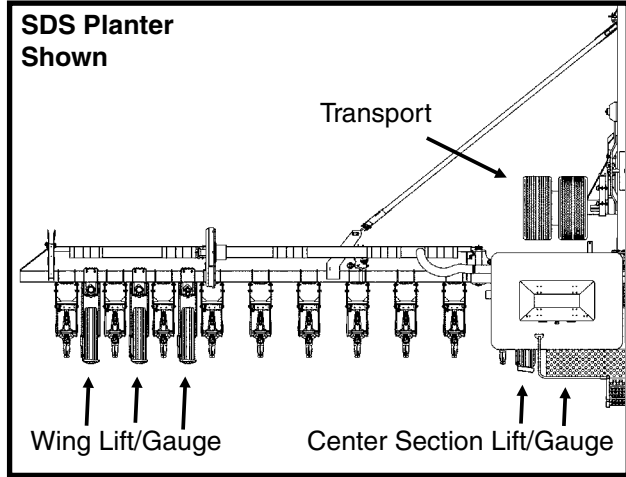

Tire pressure should be checked regularly and maintained as follows:

- (4) 41 x 11R22.5" Radial Load Range H  
(Center Section Lift/Gauge) ..... 75 PSI
- (6-12) 7.50" x 20" 8 Ply Custom Rib Implement  
(Wing Lift/Gauge) ..... 40 PSI
- (2-4) 445-50R22.5R Radial Load Range H  
(Transport) ..... 120 PSI
- (2) 20.5 x 8.0-10 (Marker) ..... 35 PSI
- (2) 7.60" x 15" Rib Implement  
(Liquid Fertilizer Piston Pump) ..... 40 PSI

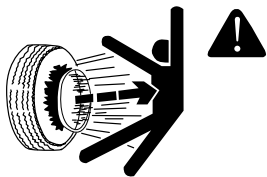

**DANGER: Rim and tire servicing can be dangerous. Explosive separation of tire and rim parts can cause serious injury or death.**

**Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. This should only be done by persons properly trained and equipped to do the job.**

**Always maintain the correct tire pressures. Do not inflate tires above the recommended pressures.**

**When inflating tires, use a clip-on air chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage to enclose the tire and rim assembly when inflating.**

**Inspect tires and wheels daily. Do not operate with low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.**


# MACHINE OPERATION

---

## U-JOINT SHAFT ASSEMBLIES

A U-joint shaft assembly is used between the center section of the planter and the wing assembly on each half of the planter to allow up and down wing movement.

D081905101

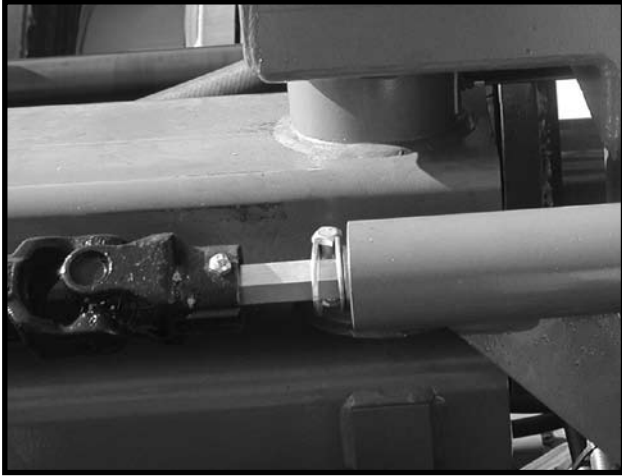

# MACHINE OPERATION

## HYDRAULIC/ELECTRIC OPERATION

D10060624



Planter Control Console

D10060627



SDS Control Console

The tractor's hydraulic system and switches on the planter control console located on the tractor are used to raise the planter to transport position, operate the fold functions and raise and lower the row markers. The SDS control console (If Applicable) monitors seed flow and controls auger speed.

**! DANGER:** To avoid serious injury or death, care must be taken when operating row markers around overhead power lines.

Model 3800 planters with conventional seed hoppers are equipped to operate from three dual remote hydraulic outlets (SCV), including one SCV for optional row markers. Model 3800 SDS planters are equipped to operate from four dual remote hydraulic outlets (SCV), including one SCV for optional row markers and one for the bulk seed delivery system (SDS).

Four point row clutches are standard equipment to allow four equal sections across the planter to be engaged/disengaged.

The marker and point row selector switches are an ON-OFF-ON type.

The transport axle and wing fold switches are MOMENTARY ON-OFF-MOMENTARY ON type and must be held in position while operating the tractor hydraulic control. Activating a fold function switch disables the marker circuit.

**! WARNING:** To ensure the safety of the operator and others nearby, the marker selector switch should be placed in its OFF (center) position when not in use. An indicator light on the control box panel is ON whenever the marker circuit or point row clutch circuit are energized.

The auxiliary switch is an ON-OFF type switch which is used in conjunction with the hydraulic row marker/folding functions control to operate optional attachments. All 3800 planters are shipped with the auxiliary switch installed in the control console. The auxiliary switch must be in the OFF position to enable other functions.

**NOTE:** Activating the auxiliary switch disables all control console switches except the point row clutch switches.

**NOTE:** The lift cylinders are (port type) rephasing cylinders. It is necessary for the cylinders to fully retract before they will rephase in the lowered position. Cylinder stops cannot be used.

**! WARNING:** Make sure all hydraulic hoses are properly connected before operating the planter. Never connect or disconnect hydraulic hoses without first stopping the tractor engine and moving the hydraulic operating controls in both directions to relieve any pressure in the system.

**! WARNING:** Never walk under or work on planter when it is raised without supporting the frames with additional supports.

# MACHINE OPERATION

## DIGITAL VACUUM GAUGE OPERATION

The digital vacuum gauge control console is equipped with a power toggle switch, run/stop (fans) toggle switch and two fan speed control toggle switches for the vacuum fans. The power switch provides power to the control console. The run/stop toggle switch will turn both fans on when the power switch is ON. The fan speed control switches allow fan speed adjustment on each fan (left or right).

**NOTE: The power switch should be left in OFF position when the planter is not in use. If left in ON position, the tractor battery will be drained.**

D10060618



The digital vacuum gauge is calibrated at the factory, however, vacuum will vary throughout the manifold system and it may be necessary to adjust the digital readout so it agrees with the actual vacuum at the meter. With the seed discs loaded with seed, compare the digital vacuum gauge readouts to the reading taken from the analog gauges or a hand held gauge at several meters along the length of the planter. The elbow connections located on the covers of the seed meters allow testing of meter vacuum levels without removing the vacuum hoses. If there is more difference than 1" or 2" (H<sub>2</sub>O), the digital gauge can be adjusted by inserting a small flat bladed screwdriver into the opening on the back of the digital gauge housing and turning the potentiometer until the digital gauge displays the vacuum that is present at the meter. Compare readings at 10" and 20" of vacuum.

## ANALOG VACUUM GAUGES

The analog vacuum gauge on each side of the planter connects directly to the manifold. Digital vacuum gauges should then be calibrated to match that reading. See "Digital Vacuum Gauge Operation".

D06260653



The only adjustment to the gauge is to "zero" the needle with no vacuum present. If there is a significant difference between this gauge and a reading taken at the meters, a different manifold location should be found to connect hose to the gauge.

## VACUUM FAN MOTOR VALVE BLOCK ASSEMBLY

A pressure relief valve in the hydraulic circuit on each side of the planter prevents build up of oil pressure over 35 PSI in the case drain line when the vacuum fan motor is in operation. This valve will vent oil to the outside of the valve block through a drain hole in the aluminum valve block. This can occur whenever the case drain is connected improperly or pressure in the motor circuit builds.

See "Hydraulic Diagram - Vacuum Fan Motor System" in Maintenance section.

The valve block also contains a check valve that serves two purposes. This valve (a) prevents the vacuum fan from operating in the wrong direction if pressure is applied to the return side of the motor and (b) allows the fan to coast to a stop when the tractor hydraulic control is returned to the neutral position.

**NOTE: If reverse pressure is applied the fan will turn at a reduced speed.**

# MACHINE OPERATION

---

## TRANSPORT TO FIELD SEQUENCE


Position the planter in a relatively flat open area. Try to avoid an area with furrows, etc.

### SUMMARIZED TRANSPORT TO FIELD SEQUENCE

- Remove wing latch hook safety pin(s) from transport (locked) positions and place in storage locations provided.
- Raise field tires/wheels and hold to rephase.
- Fully raise planter using transport axle.
- Lower field tires/wheels.
- Lower rear of planter using transport axle until field tires touch the ground.
- Partially lower tractor 3 point hitch to release wing latch hooks.
- Unfold planter to planting position.
- Fully raise transport axle tires/wheels.
- Lower 3 point to level hitch position.


**NOTE: Read the following information for more detailed instructions.**

D012507128

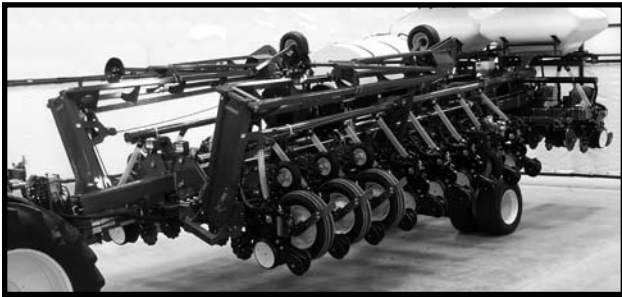

1. Remove wing latch hook safety pin(s) from transport positions and place in storage locations provided.


D081905131

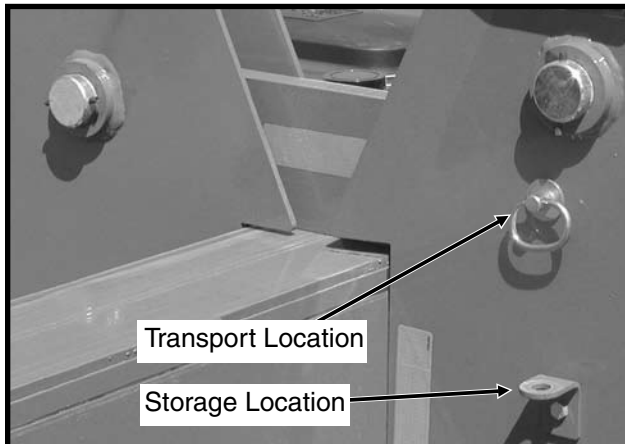

# MACHINE OPERATION

- Operate the field raise function hydraulic control to lower the field tires/wheels.


D012507125

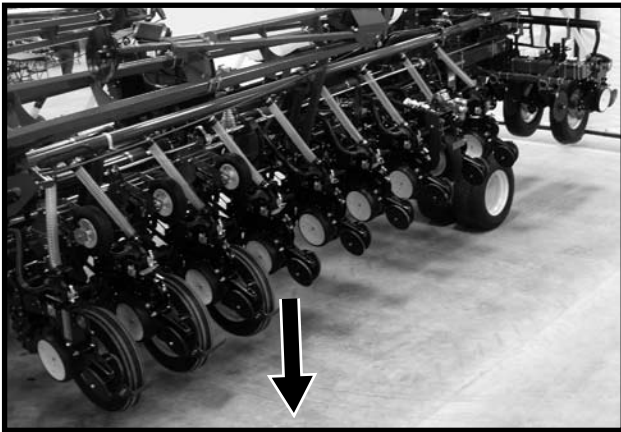

- Hold the control console switch labeled TRANSPORT AXLE in **RAISE/LOWER** and operate the fold/unfold functions hydraulic control to raise the transport axle, lowering the rear of the planter, until the field tires touch the ground.

**IMPORTANT: DO NOT retract the transport cylinders completely or damage will occur to the driveline and transport tires. The weight of the planter should be on the field tires, but the transport axle tires should remain on the ground during folding.**

(FWD30bb)

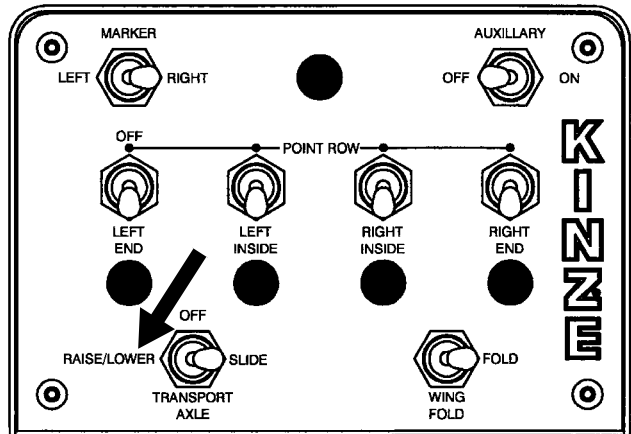

D012507123






# MACHINE OPERATION

- Partially lower the tractor 3 point hitch to release the wing latch hooks.


IMPORTANT: Only lower 3 point hitch until wing latch hooks release. DO NOT lower hitch further or damage will occur at the rear of the wing folding links.

D040604144/A10104a

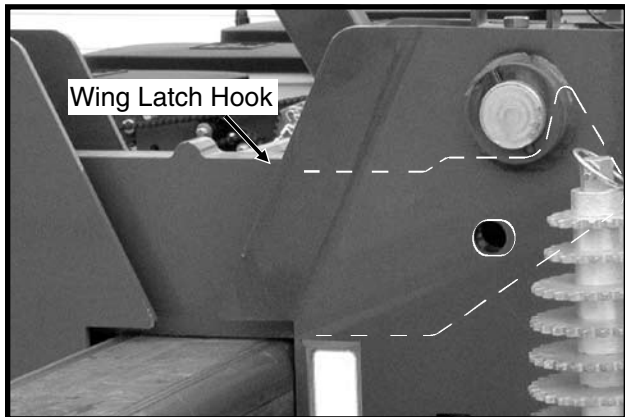

- Hold the control console switch labeled WING FOLD in **FOLD** and operate the fold/unfold functions hydraulic control to unfold the planter. The tongue will begin to retract and the wings, carried on the wing wheels, will begin to unfold. Place the tractor transmission in neutral or a low reverse gear. Allow the tractor to roll in reverse as the planter unfolds. The center axle tires should remain stationary and the wing tires should roll in a continuous arc with minimal side loading on the tires or their mounting structures.

(FWD30bb)

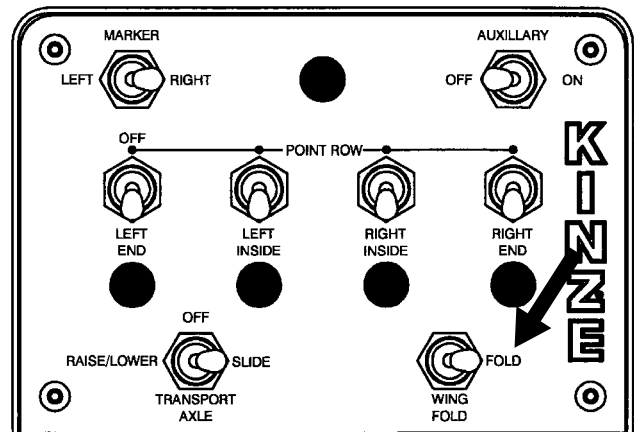


D012507119



# MACHINE OPERATION

6. Hold the control console switch labeled TRANSPORT AXLE in **RAISE/LOWER** and operate the fold/unfold functions hydraulic control to raise the transport axle wheels to the fully raised planting position.

(FWD30bb)

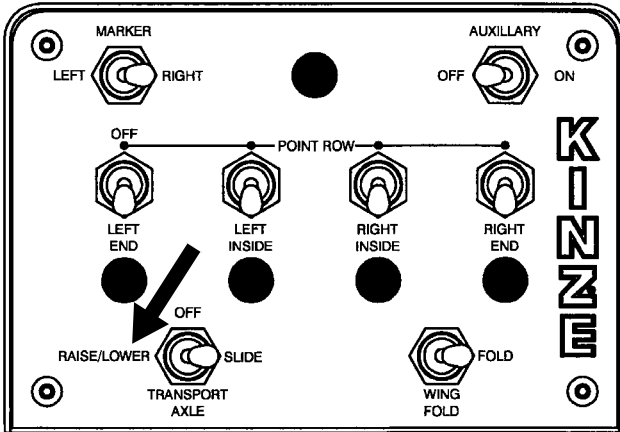

**WARNING: Never walk under or work on planter when it is raised without supporting the frames with additional supports.**


## FIELD OPERATION

Normal planting operation in the field requires the use of the tractor's hydraulic control to raise and lower the planter frame when making field turn arounds.

Operate row markers with the control console switch for that marker in the ON (LEFT or RIGHT) position and the tractor's hydraulic control. After markers are lowered to the ground, move the hydraulic control to operate markers in float position. Marker speed is controlled with flow control valves located in the valve block on the planter hitch. One valve controls the raise speed of both markers while the other valve controls the lower speed of both markers. See "Row Marker Speed Adjustment" and "Row Marker Operation".

**IMPORTANT: Operate row markers in float position to prevent damage to row markers.**

D012507111

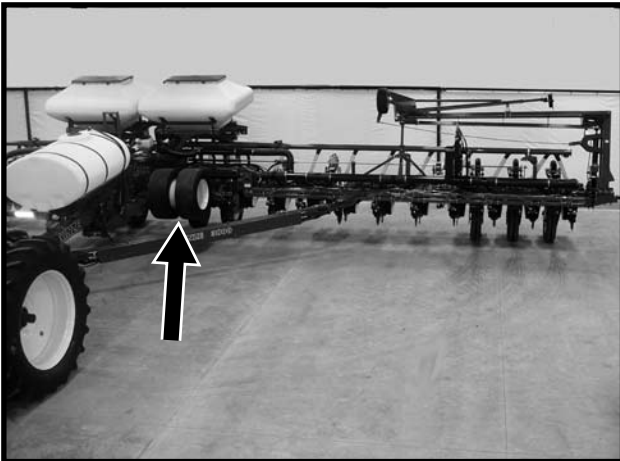


D012507111



7. Lower the 3 point to level hitch position.

D040604100

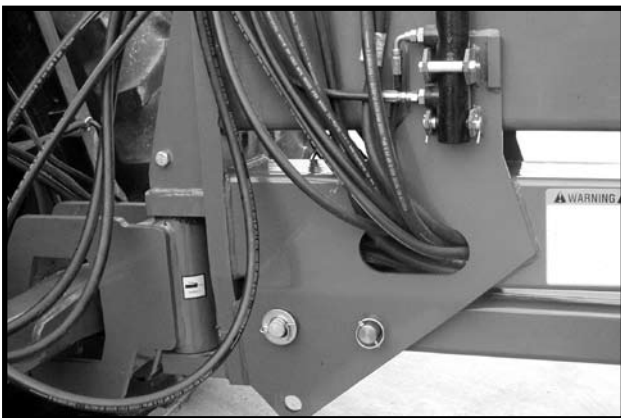

# MACHINE OPERATION

## FIELD TO TRANSPORT SEQUENCE

Position the planter in a relatively flat open area. Try to avoid an area with furrows, etc.

**SUMMARIZED FIELD TO TRANSPORT SEQUENCE**

- Raise planter to field turn height.
- Lower transport axle to the ground.
- Fold planter to transport position.
- Raise front of planter using tractor 3 point hitch.
- Raise rear of planter using transport axle.
- Raise field tires/wheels.
- Remove wing latch hook safety pin(s) from storage location(s) and install in locked position(s).

**NOTE: Read the following information for more detailed instructions.**

1. Operate the field raise function hydraulic control to raise the planter to raised field height.


D012507111




2. Hold the control console switch labeled TRANSPORT AXLE in **RAISE/LOWER** and operate the fold/unfold functions hydraulic control to lower the transport axle wheels until they touch the ground.

**IMPORTANT: Lower transport axle tires until weight begins to transfer onto transport axle tires. DO NOT carry the full weight of the planter on the transport axle tires during folding.**

(FWD30bb)

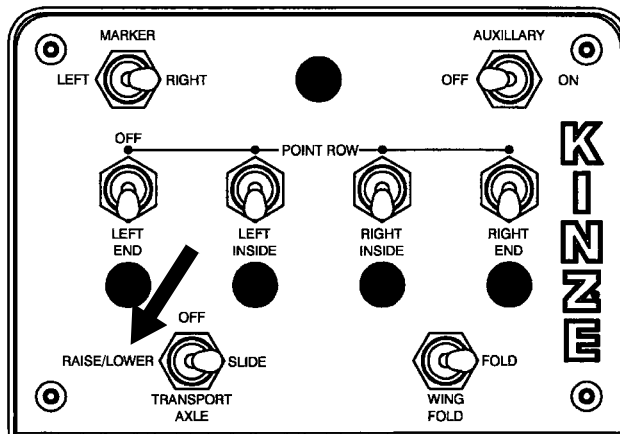

D012507113

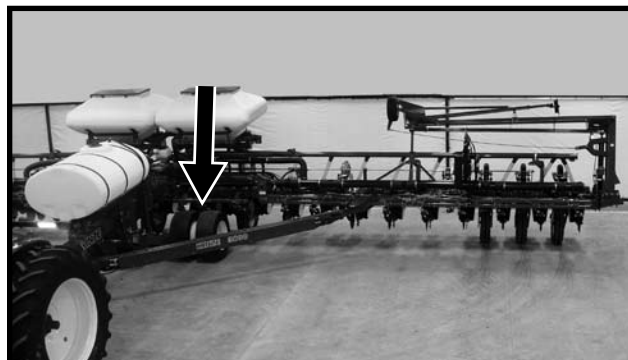

# MACHINE OPERATION


- Hold the control console switch labeled WING FOLD in **FOLD** and operate the fold/unfold functions hydraulic control to fold the planter to transport position. It is necessary to **slowly** idle the tractor forward as you fold the planter, allowing the center axle tires to remain stationary and the wing tires to roll in a continuous arc with minimal side loading on the tires or their mounting structures.

**IMPORTANT:** Use the tractor 3 point control to adjust the hitch height as necessary to make sure the wing latch hooks pass over the hitch and engage the latch pins.

**NOTE:** In soft soil conditions the wings may not fold completely into position against the tongue. If this occurs, retract the wing wheels slightly to allow the wings to fold into latching position.

- Raise the front of the planter using the tractor 3 point hitch.
- Hold the control console switch labeled TRANSPORT AXLE in **RAISE/LOWER** and operate the fold/unfold functions hydraulic control to fully lower the transport axle tires, raising the rear of the planter.


(FWD30bb)

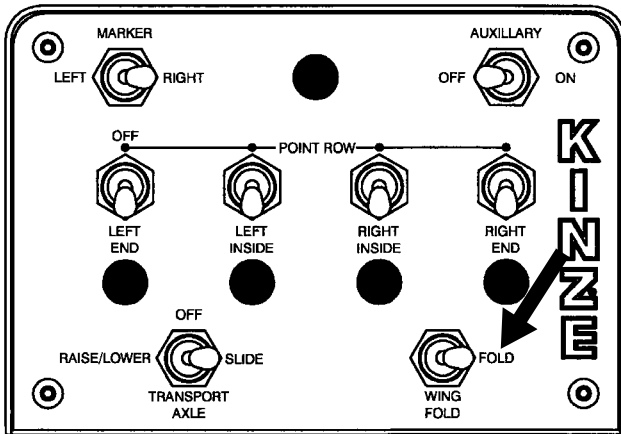

D012507119



(FWD30bb)

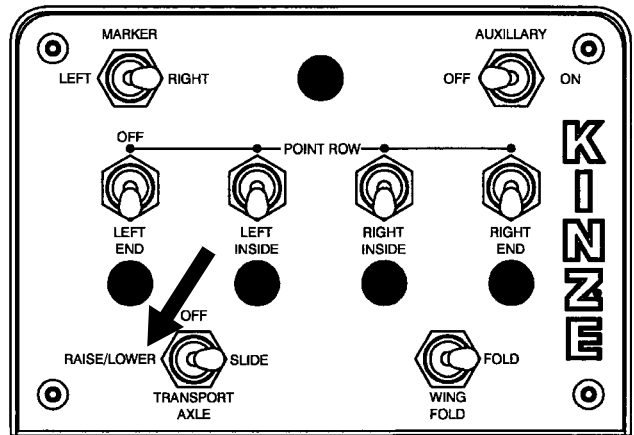

D012507123




**NOTE:** The transport axle cylinder circuit is equipped with counter balance valves which hydraulically lock the cylinders. The cylinders will not extend or retract until hydraulic pressure/flow is applied.

# MACHINE OPERATION

---


- 6. Operate the field raise function hydraulic control to raise the field tires/wheels.

D012507128

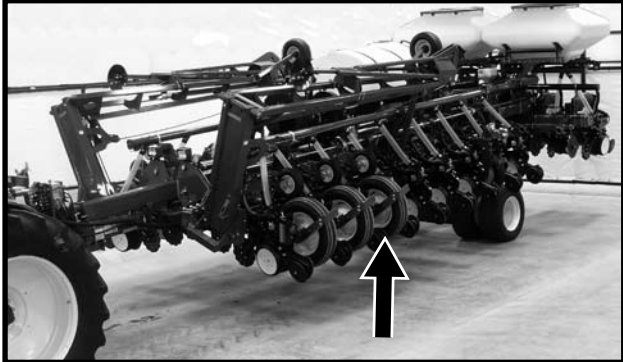

- 7. Remove wing latch hook safety pin(s) from their storage location(s) and install in locked position(s).


D081905131

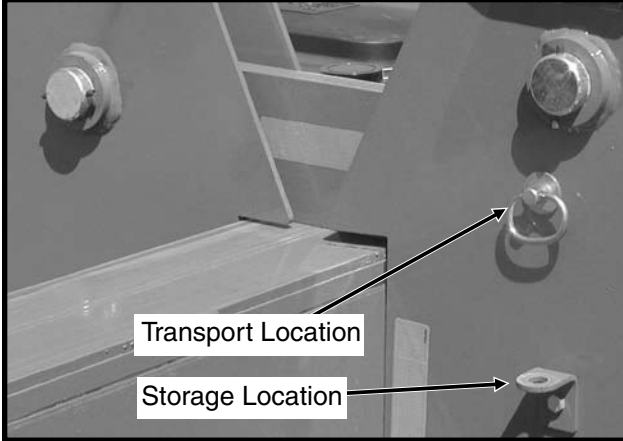

# MACHINE OPERATION

## ROW MARKER OPERATION

(FWD30bb)

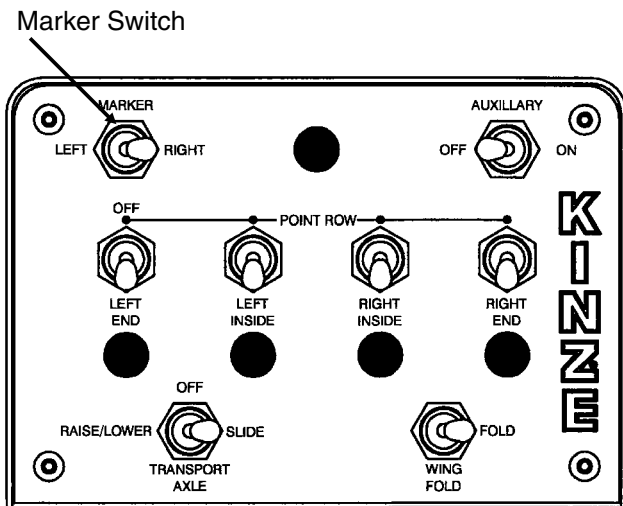

Three Position Selector Switch On Control Console

Two solenoid valves, located on the valve block at the front of the planter, along with a three position selector switch on the control console permit the operator to lower or raise the desired row marker.

See "Row Marker Speed Adjustment".

1. On the control console, select the row marker you want to lower.
2. Operate hydraulic control to lower marker.
3. If opposite marker is to be used next, change switch to the opposite position.
4. At end of field, using hydraulic control, raise the down marker.
5. After making the turn, using the hydraulic control, lower the pre-selected marker.
6. Continue to follow this procedure.

**NOTE:** Both row markers can be lowered by operating the switch in each position and operating the hydraulic control twice. The markers will raise simultaneously when the hydraulic control is moved to the raise position.

**NOTE:** Control console switch should be left in OFF position when planter is not in use. If left in ON position, it will discharge the tractor battery.

If the electrical system fails to operate properly:

- Check fuse.
- Check wiring connections.
- Check control switch.
- Check solenoid. SOLENOID HOUSING SHOULD BE MAGNETIZED WHEN ENERGIZED.

**! DANGER:** To avoid serious injury or death, care must be taken when operating row markers around overhead power lines.


**IMPORTANT:** Row markers **MUST** be operated with hydraulic circuit in float position to prevent damage to marker assemblies.

# MACHINE OPERATION

## ROW MARKER SPEED ADJUSTMENT

The row marker hydraulic system includes two flow control valves. One flow control valve sets the lowering speed of both markers and one sets the raising speed of both markers. To adjust marker speed, loosen the jam nut and turn the control(s) clockwise, or IN, to slow the travel speed and counterclockwise, or OUT, to increase the travel speed. The flow control(s) determine the amount of oil flow restriction through the valve(s), therefore varying travel speed of the markers. Tighten jam nut after adjustments are complete.

(FWD161)

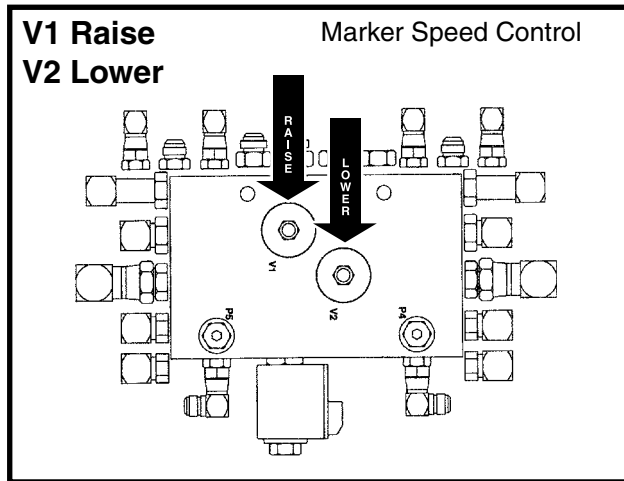

**IMPORTANT:** The flow controls should be properly adjusted before the marker assembly is first put into use. Excessive marker travel speed of the markers can damage the marker assembly.

**NOTE:** When oil is cold, hydraulics operate slowly. Make sure all adjustments are made with warm oil.

**NOTE:** On a tractor where the oil flow can not be controlled, the rate of flow of oil from the tractor may be greater than the rate at which the marker cylinder can accept the oil. The tractor hydraulic control will have to be held until the cylinder reaches the end of its stroke. This occurs most often on tractors with open center hydraulic systems.

On tractors equipped with flow control valves, row marker speed adjustment should be made with the tractor flow controls in maximum position. After marker speed is set, the tractor flow controls can be adjusted to allow the hydraulic control to stay in detent during the marker raise or lower cycle.



**DANGER:** To avoid serious injury or death, care must be taken when operating row markers around overhead power lines.


## ROW MARKER LENGTH ADJUSTMENT

To determine the correct length at which to set the row marker assemblies, multiply the number of rows by the average row spacing in inches. This provides the total planting width. Adjust the marker extension so the distance from the marker disc blade to the center line of the planter is equal to the total planting width previously obtained. Both the planter and row marker assembly should be lowered to the ground when measurements are being taken. The measurement should be taken from the point where the blade contacts the ground. Adjust right and left row marker assemblies equally and securely tighten clamping bolts. An example of marker length adjustment follows:

|         |           |                       |
|---------|-----------|-----------------------|
| Number  | Row       | Dimension Between     |
| Of Rows | x Spacing | Planter Center Line   |
|         | (Inches)  | And Marker Disc Blade |

|   |
|---|
| 24 Rows x 30" Spacing = 720" Marker Dimension |
|---|

60569-53

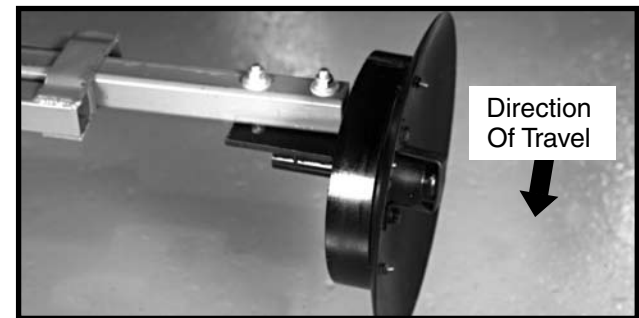

Row Marker Disc Blade Shown With Depth Band

The marker disc blade should be installed so the concave side of the blade faces outward to throw dirt away from the grease seals. The spindle assembly is slotted so the hub and blade can be angled to throw more or less dirt. To adjust the hub and spindle, loosen the 1/2" hardware and move the assembly as required. Tighten bolts to the specified torque.

**IMPORTANT:** A marker disc blade assembly that is set at a sharper angle than necessary will add unnecessary stress to the complete marker assembly and shorten the life of bearings and blades. Set the blade angle only as needed to leave a clear mark.

A field test is recommended to ensure the markers are properly adjusted. After the field test is made, make any minor adjustments as necessary.

Notched marker blades, for use in more severe no till conditions, are available from KINZE® Repair Parts through your KINZE® Dealer.

# MACHINE OPERATION

## KINZE COBALT™ SYSTEM

D09190804



The Cobalt electronic seed monitor system consists of a console, which is mounted on the tractor; seed tubes with computerized sensors, one of which is installed in each planter row unit; a primary harness, which connects the console to the planter harness; and a planter harness (junction Y-harness and/or harness extension where applicable), to which the individual seed tube sensors connect.

The Cobalt system allows manual control of air clutches and variable population control when planter is equipped with these options. It is not GPS compatible.

This system is compatible with all KINZE planters, and can be transferred between multiple vehicles to maximize the return on investment cost.

The Cobalt monitor has been built to withstand the harsh environment associated with today's agricultural industry. The weathertight enclosure is designed to seal out any dirt and moisture that is encountered during normal operating conditions

**NOTE: See operator manual supplied with KINZE Cobalt™ display for installation and programming.**

## KINZE VISION® SYSTEM

D012908205



The KINZE Vision display is a GPS-compatible universal monitor/controller for use in crop production and protection. It can easily be transferred between multiple vehicles through out the growing season to maximize your return on investment. The KINZE Vision display has its own internal memory for recording GPS and logging all information collected during various field activities. The KINZE Vision display has been built to with stand the harsh environment associated with today's agricultural industry. The weather tight enclosure is designed to seal out any dirt and moisture encountered during normal operating conditions.

**NOTE: See operator manual supplied with KINZE Vision® display for installation and programming.**

## PLANTER MONITOR MODULE (PMM)

The PMM Magnetic Distance Sensor Package includes a planter-mounted module enclosure with cover and mounting hardware, seed tubes w/sensors, planter harness, planter monitor cable, shaft rotation sensors and magnetic distance sensor components. A customer-supplied Ag Leader Insight display and associated cab harnesses are also required.

**NOTE: See information supplied with Ag Leader Insight display for installation and programming.**

D11200710a





# MACHINE OPERATION


## NOTCHED SINGLE DISC FERTILIZER OPENER

The notched single disc fertilizer opener is designed for use in minimum and no till planting conditions. Placement of fertilizer with the 16 3/4" diameter notched single disc fertilizer opener is recommended at 2 1/2" - 3" from the row. The opener is designed to hold the blade at a set-angle so the knife and drop tube operate in the shadow of the blade. **Never locate the opener to place fertilizer closer than 2".**

**WARNING: Spring under pressure. DO NOT disassemble.**

(B0297/A12422)


**Depth Adjustment Cap Screws - Recommended Maximum Operating Depth 4" (Middle Cap Screw Holds Blade Angle But Must Be Loosened To Adjust Depth And Tightened First To Set Blade Angle)**

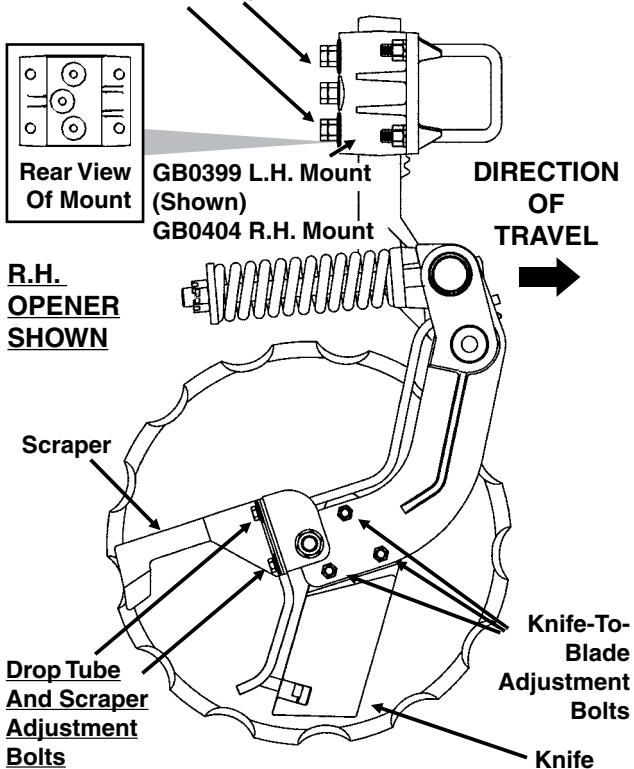

**Adjust knife-to-blade** contact on each fertilizer opener so blade will turn by hand with slight resistance, but will not coast or freewheel. In dry, loose soil the knife adjustment is critical. If adjustment is not maintained, soil or residue may wedge between knife and blade, resulting in the blade not turning. If the knife is adjusted too tight, the blade will not turn causing the blade to push soil and residue. **Knife adjustment is made using the three 3/8" mounting carriage bolts** and pivot pad on the knife. Because of blade runout, rotate blade one full revolution after adjustment. Readjust knife to the blade's tight spot as needed. **Never strike the knife with a heavy object or damage may occur.**

Using the slotted mounting holes in the drop tube mount, **adjust fertilizer drop tube** behind the knife so it is protected from soil contact and wear. The liquid drop tube should be adjusted 1/4"- 3/8" from the opener blade while keeping it behind the knife. Insert a flat bladed pry bar between the knife and drop tube just above the drop tube tab as shown below. Bend the tube inward toward the disc blade to obtain the desired 1/4"- 3/8" adjustment.

D01040702

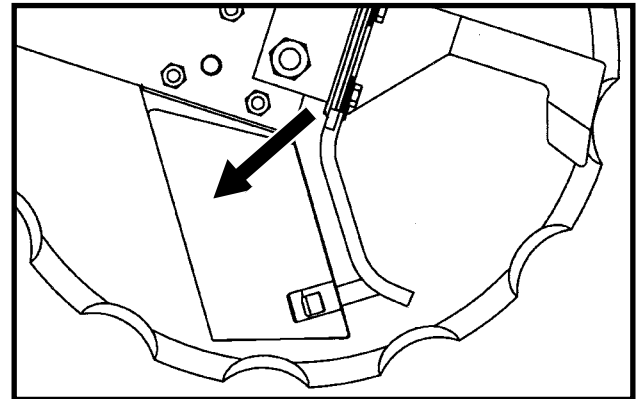

**NOTE: Adjusting the liquid drop tube will ensure it is out of the path of the soil flow across the knife. Drop tube and tab will wear quickly if not adjusted correctly.**

**Adjust scraper** to just touch the opener blade. As the mounting hardware is tightened, the scraper is drawn tighter to the blade. After adjustment, rotate opener blade to be sure blade will turn by hand with slight resistance, but will not coast or freewheel.

**Adjust blade depth** on each row using the cap screws and jam nuts located on the opener mount. The blade can be adjusted to allow a maximum 4" blade depth. Check fertilizer hose clearance (If Applicable) after adjusting opener depth. Torque cap screws and jam nuts to 57 ft. lbs.

# MACHINE OPERATION


**NOTE:** The blade cuts through the soil at an angle relative to the direction of travel. For this reason and to ensure proper operation, the cast mount should be oriented so the front and bottom of the blade tilt towards the knife.

D11200805a



**L.H. Opener (B0399)**


D11200808a

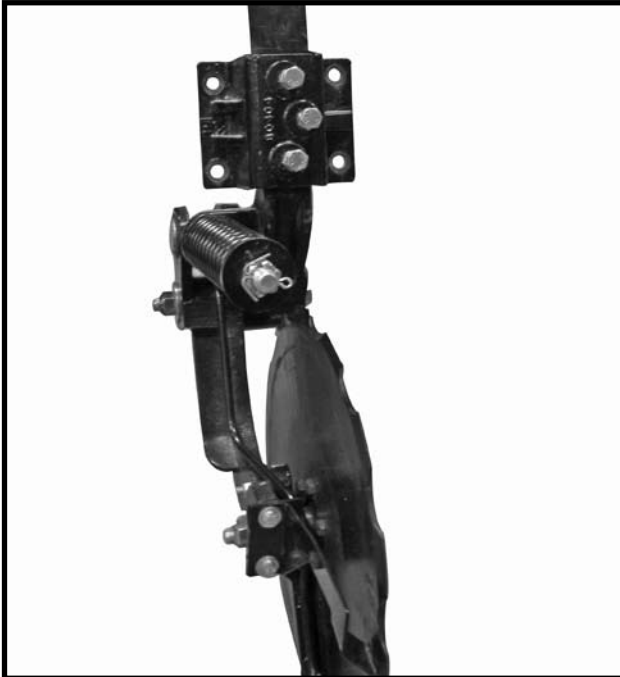


**R.H. Opener (B0404)**

**NOTE:** L.H. and R.H. openers are determined by what side the blade is on, by standing behind the planter in the direction of travel.

FRTZ296

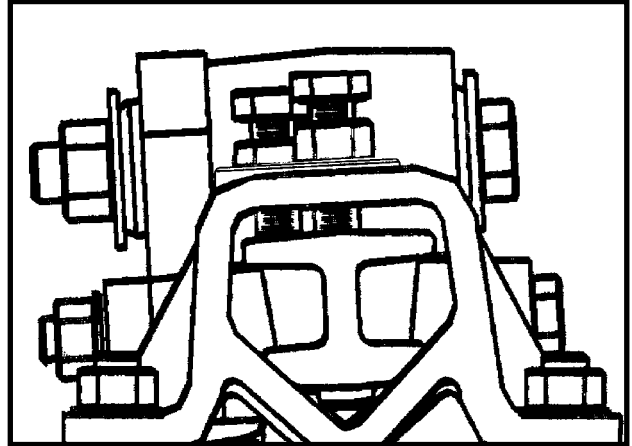

D070103100

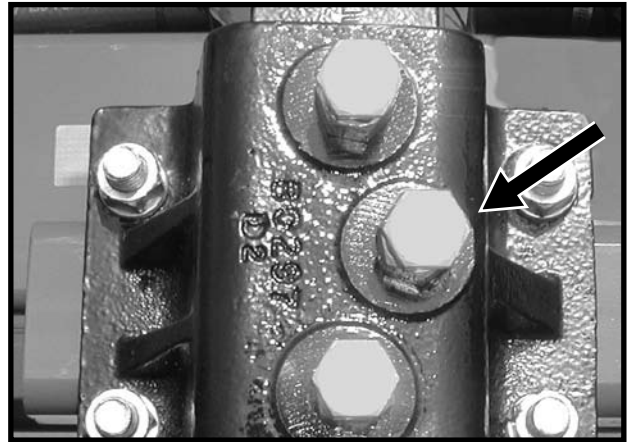

**NOTE:** Recommended maximum operating depth is 4". To adjust depth: (a) Loosen depth adjustment cap screws. (b) Adjust depth to desired setting. (c) Tighten upper and lower cap screws slightly to hold opener arm in place. (d) Tighten middle cap screw to set the opener arm angle. (e) Tighten upper and lower cap screws and all jam nuts.

# MACHINE OPERATION

---

## DEPTH/GAUGE WHEEL ATTACHMENT FOR NOTCHED SINGLE DISC FERTILIZER OPENER


D061101202a



The depth/gauge wheel attachment for the notched single disc fertilizer opener is designed for use in situations where additional gauging is required to maintain desired fertilizer opener depth. The depth/gauge wheel is attached to the notched single disc fertilizer opener using a mounting block fastened to the pivot arm using  $\frac{5}{8}$ " hardware through the disc blade hub w/bearing.

Depth adjustment is made by using the adjustment holes in the depth/gauge wheel mounting block. Moving the depth/gauge wheel increases/decreases depth in approximate 1" increments in relation to the blade depth setting made at the vertical mounting post.

(FRTZ256a)

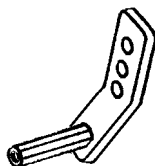

# MACHINE OPERATION


## LIQUID FERTILIZER ATTACHMENT

D01050702



**Model 3800 SDS EdgeVac® 24 Row 30" With Liquid Fertilizer Package**

**NOTE:** An optional low rate check valve is available for installation in-line between the liquid fertilizer piston pump and the liquid fertilizer openers to ensure equal distribution of product at low rates. The check valves also eliminate the need for anti-siphon loops if the valves are installed as close as possible to the fertilizer opener drop tubes.

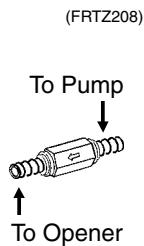


## PISTON PUMP

If the machine is equipped with the piston pump option, the rate of liquid fertilizer application is determined by the piston pump settings.

The delivery rate chart found at the end of this section provides an approximate application rate only. Actual delivery will vary with temperature and the particular fertilizer being used.

To adjust delivery rate, loosen the  $\frac{3}{8}$ " lock nut that secures the arm with the pointer and rotate the scale flange until the pointer is over the desired scale setting. The adjustment wrench will facilitate rotation of the scale flange. Tighten the  $\frac{3}{8}$ " lock nut being careful not to over tighten.

(A12330b)

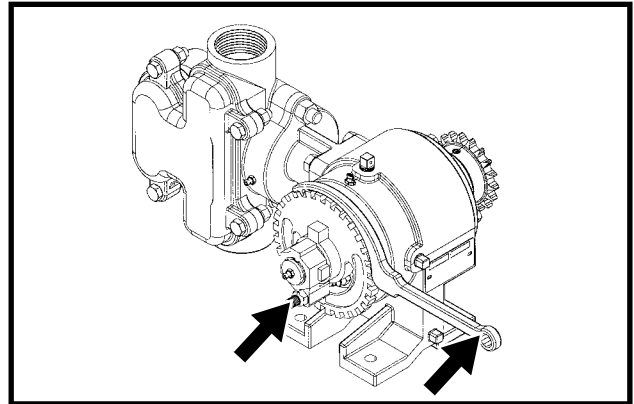

The operator and instruction manual shipped with the pump and flow divider should be kept and stored with this manual for future reference.


**NOTE:** Periodically check flow to all rows. If one or more lines are plugged, set rate will be delivered to remaining rows.

# MACHINE OPERATION

## PISTON PUMP GROUND DRIVE WHEEL SPRING ADJUSTMENT

Initial spring tension of the down pressure spring on the piston pump ground drive wheel is set leaving 12 1/4" between the bottom of the mounting plate and the plug on top of the spring. This dimension is taken with the planter in raised position (tire not contacting the ground). Further adjustment can be made to fit conditions.

(TWL219tt)

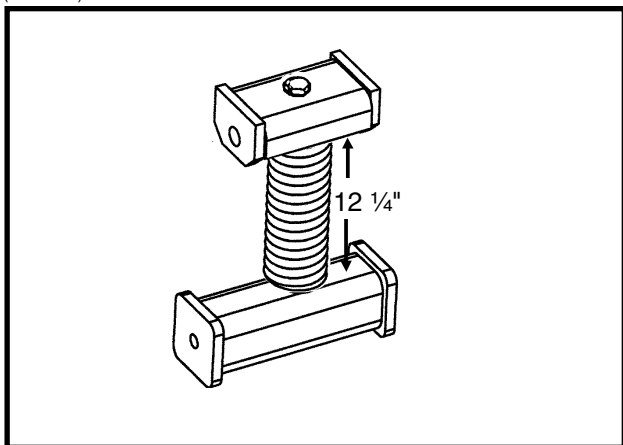


**NOTE:** The piston pump ground drive wheel assembly is designed to allow the assembly to be locked in raised position when not in use. Remove the two cap screws that attach the upper end of the spring to the spring mount. Reattach the spring using the upper holes in the spring mount. Reverse procedure to reset for field use.

## CLEANING

The tanks and all hoses are made of sturdy plastic and rubber to resist corrosion. However, the tanks, hoses and metering pump should be thoroughly cleaned with water at the end of the planting season or prior to an extended period of non-use. Do not allow fertilizer to crystalize due to cold temperature or evaporation.

The strainer, located between the piston pump and ball valve (machines equipped with the piston pump), should be taken apart and cleaned daily. Remove the end cap to clean the screen.

(INS220)

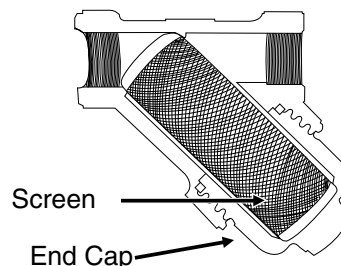

See "Piston Pump Storage" (If Applicable) in the Maintenance section of this manual.

# MACHINE OPERATION

---

## LIQUID FERTILIZER PISTON PUMP APPLICATION RATES GALLONS PER ACRE

Applies To Model NGP-7055 Pump With 18 Tooth Sprocket  
(Planter Equipped With Two Piston Pumps)

| Pump Setting | 1   | 2   | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   |
|--------------|-----|-----|------|------|------|------|------|------|------|------|
| 24 Row 30"   | 3.7 | 7.4 | 11.1 | 14.8 | 18.5 | 22.1 | 25.8 | 29.5 | 33.2 | 36.9 |

Above chart is for planters equipped with 7.60" x 15" drive wheel, based on 91" forward travel per wheel revolution, 48 tooth drive sprocket and 18 tooth driven sprocket on metering pump. Chart is based on average wheel slippage and liquid viscosities.

Measure and weigh one gallon of actual fertilizer solution to determine exact application rate. This chart was calculated based on a solution weighing ten pounds per gallon.

NOTE: Fertilizer application rates can vary from the above chart. To prevent application miscalculations, make field checks to be sure you are applying fertilizer to all rows at the desired rate.

NOTE: Flow to all rows should be checked periodically. If one or more lines are plugged, the desired rate will be delivered to the remaining rows keeping total application rate at desired rate.

To check the exact number of gallons your fertilizer attachment will actually deliver on a 30" row spacing, proceed as follows:

Remove the hose from one of the fertilizer openers and insert it into a collection container which has been secured to the planter frame. Engage the fertilizer attachment and drive forward for 174'. Measure the fluid ounces caught in the container and multiply that amount by 100. Divide that amount by 128. The result will be the gallons of fertilizer delivered per acre when planting in 30" rows. Rinse the collection container and repeat test on other rows if necessary.

# MACHINE OPERATION

## REAR TRAILER HITCH


The Rear Trailer Hitch is used to tow a 3 or 4 wheel wagon behind the planter. Any hoses routed to the rear trailer hitch should follow hydraulic hose routings on the planter to allow the planter to be raised and folded to and from the transport position without stretching the hoses.

(A11210/FWD159)

**IMPORTANT:** Maximum allowable hitch weight is 200 lbs. Gross towing weight should not exceed 16,000 lbs. or the equivalent of a loaded 1000 gallon tank and running gear.

**IMPORTANT:** Connection points are provided on the rear trailer hitch for connection of customer-supplied transport safety chains.

**NOTE:** Periodically check feed hose for kinks to prevent restricted delivery rate.

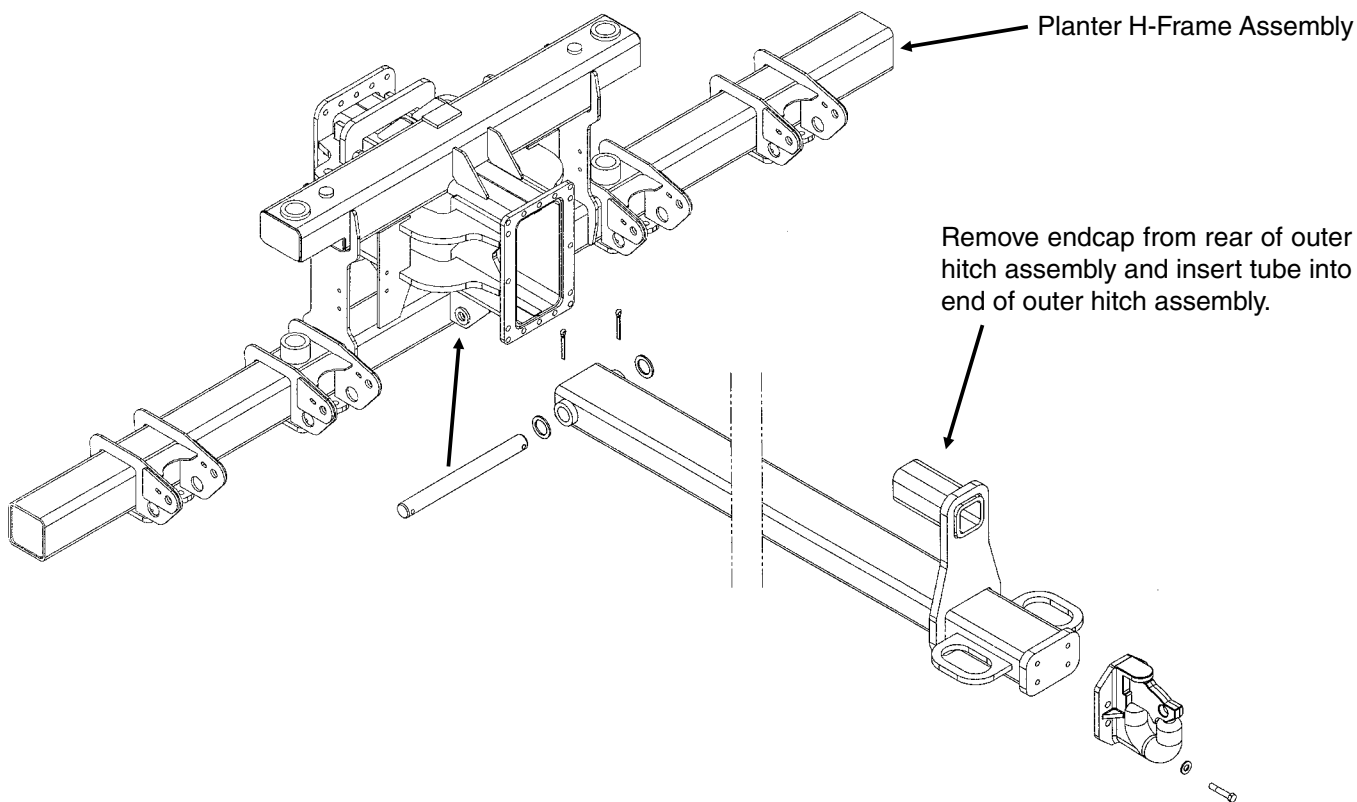

**Note:** Tank hitch length must be long enough to accommodate when hitch raises as the planter is folded to transport position.

**Note:** The lower section of the ladder at the rear of the SDS tanks can not be folded down when using the rear trailer hitch. (Ladder applicable to 3800 SDS only.)

# MACHINE OPERATION

## TRANSPORTING THE PLANTER



**WARNING:** Always make sure safety/warning lights, reflective decals and SMV sign are in place and visible prior to transporting the machine on public roads. In this regard, check federal, state/provincial and local regulations.

**IMPORTANT:** Avoid transporting planter with hoppers loaded whenever possible. When it is necessary to transport the planter with the hoppers loaded, the added weight should be distributed evenly on the planter frame before folding the planter.

## METRIC CONVERSION TABLE

| MULTIPLY                               | BY       | TO GET                                   |
|--|----------|--|
| Inches (in.)                           | x 2.54   | = centimeters (cm)                       |
| Inches (in.)                           | x 25.4   | = millimeters (mm)                       |
| Feet (ft.)                             | x 30.48  | = centimeters (cm)                       |
| Acres                                  | x 0.405  | = hectares (ha)                          |
| Miles per hour (mph)                   | x 1.609  | = kilometers per hour (Km/h)             |
| Pounds (lbs.)                          | x 0.453  | = kilograms (kg)                         |
| Bushels (bu.)                          | x 35.238 | = liters (l)                             |
| Gallons (gal.)                         | x 3.785  | = liters (l)                             |
| Pounds per square inch (psi)           | x 6.894  | = kilopascals (kPa)<br>(100 kPa = 1 bar) |
| Inch pounds (in. lbs.)                 | x 0.113  | = newtons-meters (N•m)                   |
| Foot pounds (ft. lbs.)                 | x 1.356  | = newtons-meters (N•m)                   |
| Centimeters (cm)                       | x .394   | = inches (in.)                           |
| Millimeters (mm)                       | x .0394  | = inches (in.)                           |
| Centimeters (cm)                       | x .0328  | = feet (ft.)                             |
| Hectares (ha)                          | x 2.469  | = acres                                  |
| Kilometers per hour (Km/h)             | x 0.621  | = miles per hour (mph)                   |
| Kilograms (kg)                         | x 2.208  | = pounds (lbs.)                          |
| Liters (l)                             | x 0.028  | = bushels (bu.)                          |
| Liters (l)                             | x 0.264  | = gallons (gal.)                         |
| Kilopascals (kPa)<br>(100 kPa = 1 bar) | x 0.145  | = pounds per square inch (psi)           |
| Newtons-meters (N•m)                   | x 8.85   | = inch pounds (in. lbs.)                 |
| Newtons-meters (N•m)                   | x 0.738  | = foot pounds (ft. lbs.)                 |

## PLANTING SPEED

Planters are designed to operate within a speed range of 2 to 8 MPH. Generally, higher ground speeds will cause more variation in seed spacing. Speeds above 5.5 MPH are typically not recommended. See “Planting And Application Rate Charts” in Seed Meter Operation/Maintenance section for specific recommendations.

## FIELD TEST

With any change of field and/or planting conditions, seed size or planter adjustment, we recommend a field test be made to ensure proper seed placement and operation of row units. See “Planting And Application Rate Charts” in the Seed Meter Operation/Maintenance section and “Checking Seed Population” and “Checking Granular Chemical Application Rate” at end of this section.

- Check the planter for fore to aft and lateral level operation. See “Leveling The Planter”.
- Check **all** row units to be certain they are running level. When planting, the row unit parallel arms should be approximately parallel to the ground.
- Check row markers for proper operation and adjustment. See “Row Marker Length Adjustment”, “Row Marker Speed Adjustment” and “Row Marker Operation”.
- Check for proper application rates and placement of granular chemicals on **all** rows. See “Checking Granular Chemical Application Rate”.
- Check for desired depth placement and seed population on **all** rows. See “Checking Seed Population”.
- Check for proper application rates of fertilizer on **all** rows. See “Fertilizer Application Rate Chart”.

After the planter has been field tested, reinspect the machine.

- Hoses And Fittings
- Bolts And Nuts
- Cotter Pins And Spring Pins
- Drive Chain Alignment




# MACHINE OPERATION

## CHECKING SEED POPULATION


1. Tie up one or more sets of closing wheels by running a chain or rubber tarp strap between the hopper support panel and closing wheels. It may be necessary to decrease closing wheel arm spring tension.

(RU113b)

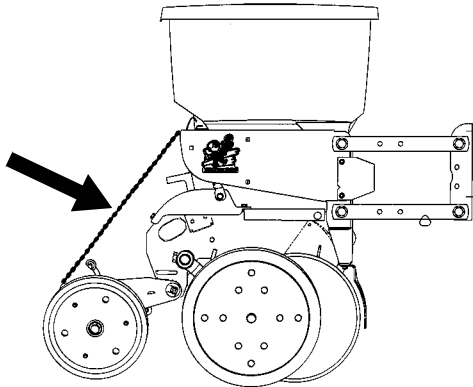

2. Plant a short distance and check to see if seed is visible in the seed trench. Adjust planting depth to a shallower setting if seed is not visible and recheck.

D020705102

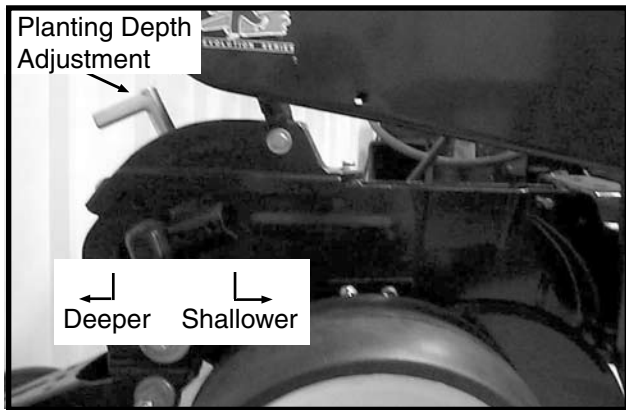

3. Measure  $\frac{1}{1000}$  of an acre. See chart for correct distance for row width being planted. For example, if planting 30" rows  $\frac{1}{1000}$  of an acre would be 17' 5".

| LENGTH OF ROW IN FEET AND INCHES |               |
|----------------------------------|---------------|
| Fraction Of Acre                 | 30" Row Width |
| $\frac{1}{1000}$                 | 17' 5"        |

**NOTE: When planting with closing wheels raised and planting depth set shallow, seeds may bounce or roll affecting seed spacing accuracy.**

4. Count seeds in measured distance.
5. Multiply the number of seeds placed in  $\frac{1}{1000}$  of an acre by 1000. This will give you total population.

EXAMPLE: With 30" row spacing 17' 5" equals  $\frac{1}{1000}$  acre.

|                     |   |      |   |                       |
|---------------------|---|------|---|-----------------------|
| 26 Seeds<br>Counted | x | 1000 | = | 26,000 Seeds Per Acre |
|---------------------|---|------|---|-----------------------|

Seed count can be affected by drive ratio between drive wheel and seed meter, tire pressure and/or seed meter malfunction.

If seed check shows the average distance between seeds in inches is significantly different than the seed rate chart indicates, first check drive ratio between drive wheel and seed meter. Check drive wheel air pressure, check for incorrect sprocket(s) in driveline and check drive and driven sprockets on transmission(s) for proper selection.

Second, check for seed meter performance. For example, if spacing between kernels of corn at the transmission setting being used is 8" and a gap of 16" is observed, a seed cell has lost its seed. If two seeds are found within a short distance of each other, the seed cell has metered two seeds instead of one.

See "Seed Metering System Troubleshooting" in the Seed Meter Operation/Maintenance section of this manual.

# MACHINE OPERATION

## Determining Pounds Per Acre (Brush-Type Seed Meter)

To determine pounds per acre:

|                               |   |   |   |                       |
|-------------------------------|---|---|---|-----------------------|
| Seeds Per<br>Acre On<br>Chart | ÷ | Seeds Per<br>Pound From<br>Seed Tag<br>On Bag | = | Pounds<br>Per<br>Acre |
|-------------------------------|---|---|---|-----------------------|

To determine bushels per acre:

|                    |   |                        |   |                     |
|--------------------|---|------------------------|---|---------------------|
| Pounds<br>Per Acre | ÷ | Unit Weight<br>Of Seed | = | Bushels<br>Per Acre |
|--------------------|---|------------------------|---|---------------------|

The unit weight of:

- 1 Bushel Soybeans = 60 Pounds
- 1 Bushel Milo/Grain Sorghum = 56 Pounds
- 1 Bushel Cotton = 32 Pounds

If seeds per pound information is not available the following is an average:

- 2,600 seeds per pound for medium size soybeans
- 15,000 seeds per pound for medium size milo/grain sorghum
- 4,500 seeds per pound for medium size cotton

If seed population check shows planting rate is significantly different than seed rate chart shows or if a particular meter is not planting accurately, see "Seed Metering System Troubleshooting" in the Seed Meter Operation/Maintenance section of this manual.

## CHECKING GRANULAR CHEMICAL APPLICATION RATE

Many things can affect the rate of delivery of granular chemicals such as temperature, humidity, speed, ground conditions, flowability of different material or any obstruction in the meter.



**WARNING: Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.**

A field check is important to determine correct application rates.

D05149901



To check, fill insecticide and/or herbicide hoppers. Attach a calibrated vial to each granular chemical meter. Lower the planter and proceed as follows.

**NOTE: It is not necessary for seed meter clutch to be engaged during test. Disengage clutch to avoid dropping seed.**

Drive 1320 feet at planting speed. Weigh the chemical in ounces that was caught in one vial. Multiply that amount by the factor shown to determine pounds per acre.

| POUNDS PER ACRE FACTOR FOR GIVEN ROW WIDTH |        |
|--|--------|
| Row Width                                  | Factor |
| 30"  | 0.83   |

**EXAMPLE:** You are planting 30" rows. You have planted for 1320 feet at the desired planting speed. You caught 12.0 ounces of chemical in one vial. 12.0 ounces times 0.83 equals 9.96 pounds per acre.

**NOTE: It is important to check calibration of all rows.**

### Metering Gate

Use the metering gate setting for distributing insecticide or herbicide as a starting point. The charts are based on a 5 miles per hour planting speed. For speeds faster than 5 miles per hour a higher gate setting should be used. For speeds slower than 5 miles per hour a lower gate setting should be used.

# SEED METER OPERATION/MAINTENANCE

## GENERAL PLANTING RATE INFORMATION

These planting rate charts are applicable to KINZE® Model 3800 and 3800 SDS EdgeVac® Forward Folding Planters. See “Tire Pressure” for recommended tire pressures.

**IMPORTANT: The sprocket combinations listed in these charts are best for average conditions. Changes in sprocket combinations may be required to obtain desired planting population. TO PREVENT PLANTING MISCALCULATIONS, MAKE FIELD CHECKS TO BE SURE YOU ARE PLANTING AT THE DESIRED RATE.**

The following seed discs are available for use with the KINZE® EdgeVac® Seed Metering System:

**Corn/Popcorn:** 39 cell. Light blue color-coded. For all seed corn grades from 35 to 70 pounds per 80,000 kernel count unit or popcorn seed size range from 2210 to 4200 seeds per pound. Also used for No. 1 sunflower seeds. *When planting popcorn this seed disc requires use of seed baffle. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Low-Rate Corn/Popcorn:** 24 cell. Light green color-coded. For all seed corn grades from 35 to 70 pounds per 80,000 kernel count unit or popcorn seed size range from 2210 to 4200 seeds per pound. Also used for No. 1 sunflower seeds. *When planting popcorn this seed disc requires use of seed baffle. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Soybean:** 60 cell. Black color-coded. Seed size range from 2200 to 4000 seeds per pound. *This seed disc requires use of seed baffle. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Soybean, High-Rate:** 120 cell. Dark blue color-coded. Seed size range from 2200 to 4000 seeds per pound. *This seed disc requires use of seed baffle. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Milo/Grain Sorghum:** 60 cell. Yellow color-coded. Seed size range from 10,000 to 20,000 seeds per pound. *This seed disc requires use of seed baffle and cleanout brush. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Hill-Drop Cotton, Acid-Delinted (3 Seeds Per Cell):** 20 cell. Brown color-coded. Cotton seed size range from 3800 to 4400 seeds per pound. *This seed disc requires use of cleanout brush w/ball-type ejector. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Small Hill-Drop Cotton, Acid-Delinted (3 Seeds Per Cell):** 20 cell. Grey color-coded. Cotton seed size range from 4200 to 5200 seeds per pound. *This seed disc requires use of cleanout brush w/ball-type ejector. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Cotton, Acid-Delinted/Small Dry Edible Bean:** 54 cell. Dark green color-coded. Cotton seed size range from 3800 to 4400 seeds per pound or dry edible bean seed size range from 1200 to 2500 seeds per pound. *This seed disc requires use of cleanout brush w/ball-type ejector. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Small Cotton/Sunflower:** 54 cell. White color-coded. Cotton seed size range from 4200 to 5200 seeds per pound or sunflower seed sizes No. 2, 3 and 4. *This seed disc requires use of cleanout brush w/ball-type ejector. See “Seed Meter” on pages 7-2 and 7-3 for additional information.*

**Large Dry Edible Bean:** 54 cell. Tan color-coded. Seed size range from 800 to 1200 seeds per pound.


**NOTE: Due to a multitude of variables, seed spacing can be adversely affected at speeds above 5.5 MPH.**

**NOTE: See “Seed Meter Singulator Brush And Vacuum Level Adjustments” on page 7-10.**


# SEED METER OPERATION/MAINTENANCE

## SEED METER

(METR71/METR71a)

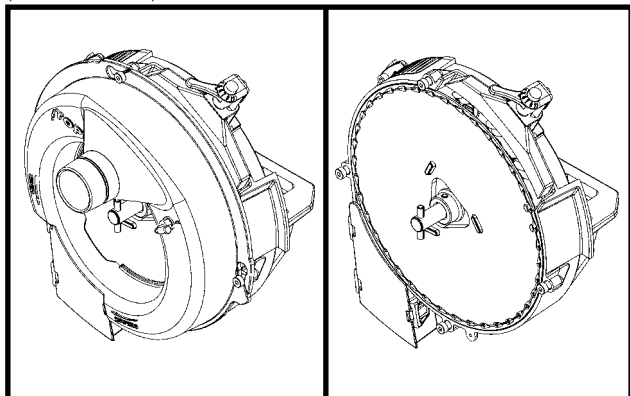


(METR70/D14467a)

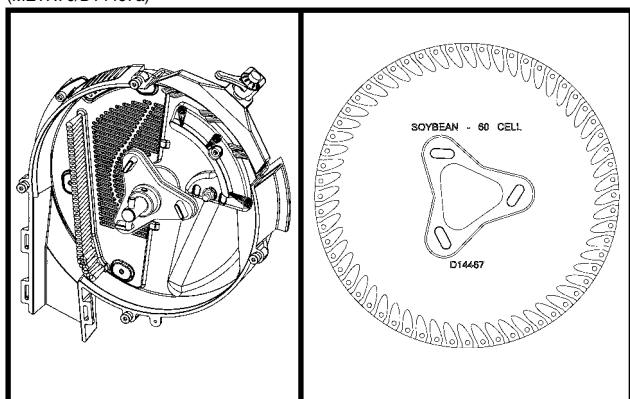


The seed discs below and at right are available for use with the KINZE® EdgeVac® Seed Metering System:

**Corn/Popcorn:** 39 cell. For all seed corn grades from 35 to 70 pounds per 80,000 kernel count unit. Popcorn seed size range from 2210 to 4200 seeds per pound. Also used for No. 1 sunflower seeds. (*Light blue color-coded.*) (D14465)

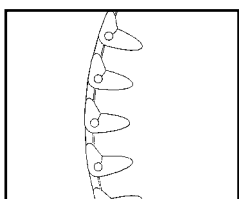


**Low-Rate Corn/Popcorn:** 24 cell. For all seed corn grades from 35 to 70 pounds per 80,000 kernel count unit. Popcorn seed size range from 2210 to 4200 seeds per pound. Also used for No. 1 sunflower seeds. (*Light green color-coded.*) (D16734a)

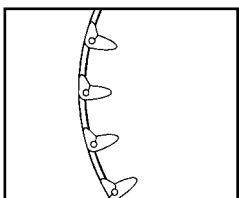


**Soybean:** 60 cell. Seed size range from 2200 to 4000 seeds per pound. (*Black color-coded.*)


(D14467a)

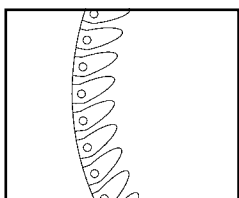


**Soybean, High-Rate:** 120 cell. Seed size range from 2200 to 4000 seeds per pound. (*Dark blue color-coded.*) (D14468a)

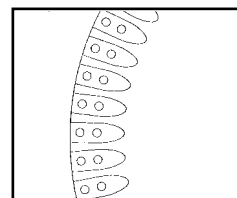


**Milo/Grain Sorghum:** 60 cell. Seed size range from 10,000 to 20,000 seeds per pound. (*Yellow color-coded.*) (D17050)

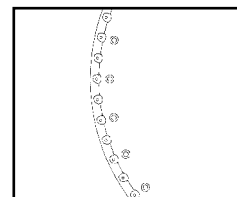


**Hill-Drop Cotton, Acid-Delinted (3 Seeds Per Cell):** 20 cell. Cotton seed size range from 3800 to 4400 seeds per pound. (*Brown color-coded.*) (D17187)

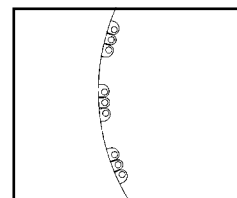


**Small Hill-Drop Cotton, Acid-Delinted (3 Seeds Per Cell):** 20 cell. Cotton seed size range from 4200 to 5200 seeds per pound. (*Grey color-coded.*) (D17187)

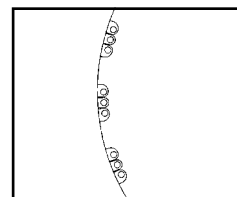


**Cotton, Acid-Delinted/Small Dry Edible Bean:** 54 cell. Cotton seed size range from 3800 to 4400 seeds per pound. Dry edible bean seed size range from 1200 to 2500 seeds per pound. (*Dark green color-coded.*) (D17186)

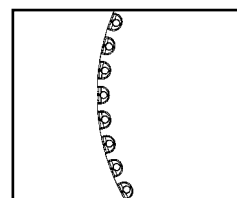

**Small Cotton/Sunflower:** 54 cell. Cotton seed size range from 4200 to 5200 seeds per pound. Sunflower seed sizes No. 2, 3 and 4. (*White color-coded.*) (D17186)

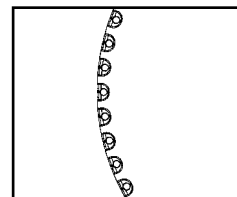

**Large Dry Edible Bean:** 54 cell. Seed size range from 800 to 1200 seeds per pound. (*Tan color-coded.*) (D14477)

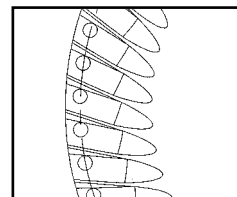


Install the selected seed disc. Position the vacuum cover on the meter by aligning the keyhole slots over the bolt heads. Push the cover on the meter and turn counter clockwise to lock in place. **See following page for additional components required with specific seed discs.**

# SEED METER OPERATION/MAINTENANCE

**NOTE:** Use of damaged seed or seed containing foreign material will cause plugging of seed disc orifices and require more frequent seed meter cleanout to prevent underplanting.

## **SEED BAFFLE**


- Milo/Grain Sorghum
- Soybeans
- Popcorn

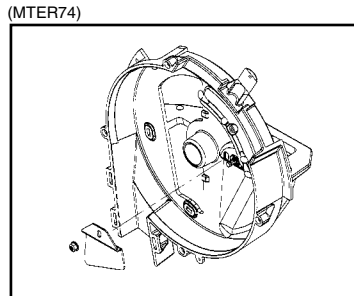

The **seed baffle** is designed to prevent excessive seed in the meter from restricting air flow through the seed. **Used with 60 Cell Milo/Grain Sorghum Disc, 60 Cell Soybean Disc, 120 Cell High-Rate Soybean Disc and 39 Cell and 24 Cell Popcorn Discs.**

## **CLEANOUT BRUSH**

- Milo/Grain Sorghum

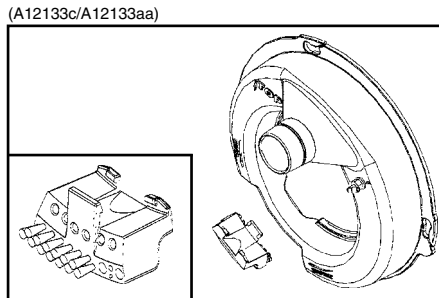


The **cleanout brush** is designed to remove foreign material and seed remnants to help prevent plugging of seed disc orifices.

**Used with 60 Cell Milo/Grain Sorghum Disc.**


## **CLEANOUT BRUSH W/BALL-TYPE EJECTOR**

- Cotton
- Small Edible Beans
- No. 2, No. 3 And No. 4 Sunflowers

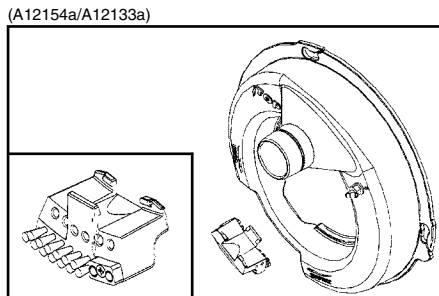

The **cleanout brush w/ball-type ejector** is designed to eject seed remnants from the seed disc orifices. **Used with 20 Cell Hill-Drop Cotton, Acid-Delinted (3 Seeds Per Cell) Discs; 54 Cell Acid-Delinted Cotton/Small Dry Edible Bean; and Small Cotton/Sunflower Discs.**


**NOTE:** Foreign material in seed disc orifices, such as seed chips, hulls, stems, etc., may affect seed delivery. Clean seed is required to ensure accurate seed metering from the vacuum seed meter. Seed discs should be removed daily to check for buildup of foreign material in the seed disc orifices.

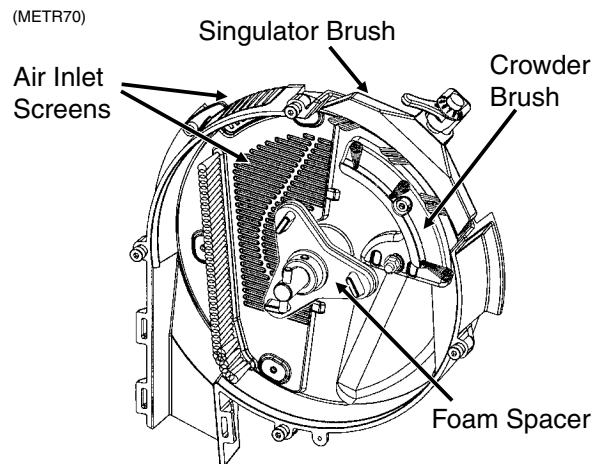

The crowder brush aids in the singulation of small flat seeds by (a) crowding seeds to the outer perimeter of the seed disc and (b) orienting seeds to allow the singulator brush to be more effective.

The air inlet screens allow air to enter the system and aids in keeping field residue or other foreign material out of the meter.

The foam spacer gently preloads the seed disc against the vacuum cover when no vacuum is present.

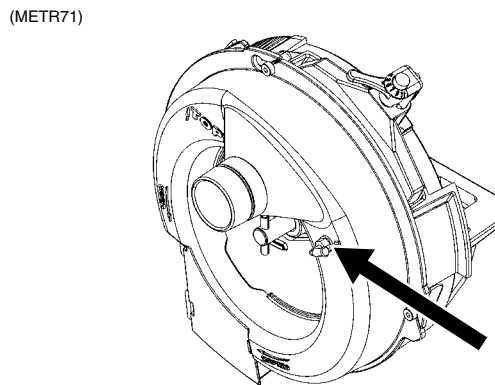

The  $\frac{3}{16}$ " hose barb elbow on the seed meter vacuum cover allows measurement of vacuum level at each meter. A customer-supplied vacuum gauge is required.

See "Seed Meter Singulator Brush And Vacuum Level Adjustments", "Seed Meter Maintenance" and "Preparation For Storage" for additional EdgeVac® Seed Metering System information.

# SEED METER OPERATION/MAINTENANCE

## CONVENTIONAL SEED HOPPERS

One tablespoon of **powdered graphite** should be mixed with the seed each time the hoppers are filled. Regular graphite use will prolong the life of the brush-type seed meter components, improve seed spacing, and may reduce buildup of seed treatments. Apply graphite around the outer perimeter of the hopper as shown below.

D05300104b



**NOTE: DO NOT** apply graphite only in the center of the hopper. It will filter too quickly through the seed and not distribute as evenly as desired.

**NOTE: Additional graphite or talc may be required to retard buildup of seed treatments on meter components. Frequency of monitor seed tube cleaning may be affected due to use of additional graphite or talc.**

**Talc seed lubricant** may be used in lieu of or in addition to graphite to reduce seed treatment buildup on seed discs and meter components. Coat seed disc and brushes with talc before installing meter. Fill hopper  $\frac{1}{2}$  full of seed, add  $\frac{1}{4}$  cup of talc and **mix thoroughly**. Finish filling hopper, add another  $\frac{1}{4}$  cup of talc and **mix thoroughly**. (For sunflowers, increase talc amount from  $\frac{1}{4}$  cup to  $\frac{1}{2}$  cup.) Adjust rate of talc use as needed so all seeds are coated, while avoiding a buildup of talc in the bottom of the hopper. Humid conditions and/or small sized seeds with extra seed treatment may require as much as one cup of talc per hopper to prevent seed treatment buildup on seed discs and/or brushes.

**NOTE: Some liquid seed treatments or inoculants may create buildup on the seed discs or brushes. Check frequently for proper population and/or seed delivery when using any liquid seed treatment.** All seed treatment should be thoroughly mixed with the seed per the manufacturers' recommendations. Seed treatment dumped on top of the seed after the hopper is filled, and not mixed properly may cause bridging of the seed in the meter, reducing population or stopping the meter from planting.

## SDS SEED DELIVERY SYSTEM

**IMPORTANT: Use powdered graphite or talc with each fill of seed. Additional graphite or talc may be required to retard buildup of seed treatments on meter components. Frequency of monitor seed tube cleaning may be affected due to use of additional graphite or talc.**

82354-1e



Powdered graphite should be added with the seed each time the bulk seed hopper is filled. Use 1 cup per hopper fill for 12 row machines and  $1 \frac{1}{2}$  cup per hopper fill for 16 row machines. Graphite should be added in layers as the bulk seed hoppers are filled. The use of powdered graphite will prolong the life of the seed meter components, reduce buildup of seed treatment on components in the meter and improve seed spacing.

**Talc seed lubricant** may be used in lieu of or in addition to graphite to reduce seed treatment buildup on bulk fill auger system components, seed discs and other meter components and will improve meter performance. Coat seed discs and brushes with talc before installing meters. Fill each bulk hopper  $\frac{1}{2}$  full of seed, add  $4 \frac{1}{4}$  cups of talc and mix thoroughly. Finish filling bulk seed hopper, add another  $4 \frac{1}{4}$  cups of talc. (For sunflowers, double the amount of talc.) Adjust rate of talc use as needed so all seeds are coated, while avoiding a buildup of talc in the bottom of the hopper. Humid conditions and/or small sized seeds with extra seed treatment may require additional talc to prevent seed treatment buildup on auger bristles, seed discs and/or meter brushes.

# SEED METER OPERATION/MAINTENANCE

---

## SDS SEED DELIVERY SYSTEM (Continued)

**NOTE: Some liquid seed treatments or inoculants may create buildup on seed discs or meter components. Check frequently for proper population and/or seed delivery when using any liquid seed treatment.**

All seed treatment should be thoroughly mixed with the seed per the manufacturers' recommendations. Seed treatment dumped on top of the seed after the hopper is filled, and not mixed properly will cause bridging of the seed in the meter, reducing population or stopping the meter from planting. Additional graphite or talc may be required to retard buildup of seed treatments on meter components.

**NOTE: See "Seed Lubrication" in SDS Seed Delivery System Operation section for additional information.**

## SEED METER CLEANOUT (Conventional Seed Hoppers)

To maintain genetic purity, thorough seed meter cleanout is important.

To clean the seed meter, disengage the seed drive and remove the seed hopper and meter. Lay the hopper on it's right side.

Disassemble seed meter by rotating vacuum cover clockwise to align key hole slots with bolt heads. Lift off cover. Remove seed disc. Empty the meter and hopper by allowing the seed to run out of the meter. Inspect brushes in meter to ensure all seed is removed. Replace seed disc and install vacuum cover.

**NOTE: Use of damaged seed or seed containing foreign material will cause plugging of seed cell orifices and require more frequent seed meter cleanout to prevent underplanting.**

# SEED METER OPERATION/MAINTENANCE

## SEED METER CLEANOUT (SDS Seed Delivery System)

To maintain genetic purity, thorough seed meter cleanout is important.

D011006301



D011006303



To clean the seed meter, remove locking pin and release latch that secures seed meter and mount.

D011006304




D011006305



Disconnect drop hose from seed meter and seed meter drive and remove assembly from row unit.

D011006308

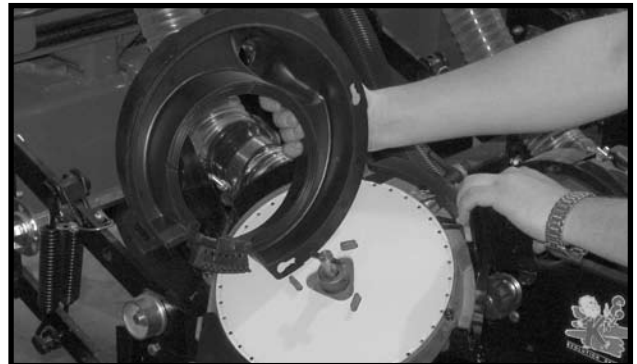

Disassemble vacuum cover and remove seed disc from seed meter. Allow all seed to exit meter and inspect for complete clean-out.

Reassemble.

Follow procedure on all rows.



# SEED METER OPERATION/MAINTENANCE

## DRY INSECTICIDE APPLICATION RATES APPROXIMATE POUNDS/ACRE AT 5 MPH FOR 30" ROW WIDTH

| Meter Setting        | 30" Rows |
|----------------------|----------|
| <b>CLAY GRANULES</b> |          |
| 10                   | 4.9      |
| 11                   | 5.4      |
| 12                   | 6.1      |
| 13                   | 6.9      |
| 14                   | 7.7      |
| 15                   | 8.5      |
| 16                   | 9.6      |
| 17                   | 10.7     |
| 18                   | 11.4     |
| 19                   | 13.1     |
| 20                   | 14.2     |
| 21                   | 15.5     |
| 22                   | 16.4     |
| 23                   | 17.2     |
| 24                   | 18.8     |
| 25                   | 20.9     |
| 26                   | 23.0     |
| 27                   | 24.1     |
| 28                   | 25.4     |
| 29                   | 27.8     |
| 30                   | 29.6     |
| <b>SAND GRANULES</b> |          |
| 5                    | 2.9      |
| 6                    | 4.9      |
| 7                    | 5.3      |
| 8                    | 6.3      |
| 9                    | 7.8      |
| 10                   | 8.9      |
| 11                   | 10.2     |
| 12                   | 11.2     |
| 13                   | 12.6     |
| 14                   | 14.1     |
| 15                   | 15.5     |
| 16                   | 17.5     |
| 17                   | 19.4     |
| 18                   | 21.8     |
| 19                   | 24.3     |
| 20                   | 25.7     |
| 21                   | 27.6     |
| 22                   | 29.6     |
| 23                   | 32.0     |
| 24                   | 34.4     |
| 25                   | 36.9     |

**NOTE:** The above chart represents average values and should be used only as a starting point. The granular chemical flows through the given meter opening at a nearly uniform rate regardless of roller speed. Your actual rate will vary depending upon the insecticide you are using, your planting speed and your plant population. Planting speed/ground speed has the greatest effect on application rate.

Your actual rate must be checked in the field with the actual insecticide that you are using and at the speed and population at which you will be planting. See "Checking Granular Chemical Application Rate" page for additional information.



**WARNING:** Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.

# SEED METER OPERATION/MAINTENANCE

---

## DRY HERBICIDE APPLICATION RATES

APPROXIMATE POUNDS/ACRE AT 5 MPH FOR 30" ROW WIDTH

### CLAY GRANULES

| Meter Setting | 30" Rows |
|---------------|----------|
| 10            | 4.7      |
| 11            | 5.2      |
| 12            | 5.8      |
| 13            | 6.5      |
| 14            | 7.3      |
| 15            | 8.2      |
| 16            | 9.0      |
| 17            | 9.9      |
| 18            | 10.7     |
| 19            | 11.6     |
| 20            | 12.6     |
| 21            | 13.6     |
| 22            | 14.6     |
| 23            | 15.7     |
| 24            | 17.0     |
| 25            | 18.1     |
| 26            | 19.4     |
| 27            | 20.9     |
| 28            | 22.6     |
| 29            | 24.3     |
| 30            | 26.7     |

**NOTE:** The above chart represents average values and should be used only as a starting point. The granular chemical flows through the given meter opening at a nearly uniform rate regardless of roller speed. Your actual rate will vary depending upon the herbicide you are using, your planting speed and your plant population. Planting speed/ground speed has the greatest effect on application rate.

Your actual rate must be checked in the field with the actual herbicide that you are using and at the speed and population at which you will be planting. See "Checking Granular Chemical Application Rate" page for additional information.



**WARNING:** Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.

## **SEED METER OPERATION/MAINTENANCE**

---

**See “Liquid Fertilizer Rate Chart”  
in Machine Operation section.**

# SEED METER OPERATION/MAINTENANCE

## SEED METER SINGULATOR BRUSH AND VACUUM LEVEL ADJUSTMENTS

### SEED DISC SELECTION

| CROP  | CELLS | SEED SIZE RANGE                        | COLOR-CODE  |
|---|-------|--|-------------|
| Corn  | 39    | 35 To 70 Lbs./80,000 Kernel Count Unit | Light Blue  |
| Low-Rate Corn   | 24    | 35 To 70 Lbs./80,000 Kernel Count Unit | Light Green |
| Popcorn   | 39    | 2210 To 4200 Seeds/Lb.                 | Light Blue  |
| Low-Rate Popcorn                                      | 24    | 2210 To 4200 Seeds/Lb.                 | Light Green |
| Soybean   | 60    | 2200 To 4000 Seeds/Lb.                 | Black       |
| High-Rate Soybean                                     | 120   | 2200 To 4000 Seeds/Lb.                 | Dark Blue   |
| Milo/Grain Sorghum                                    | 60    | 10,000 To 20,000 Seeds/Lb.             | Yellow      |
| Hill-Drop Cotton, Acid-Delinted<br>(3 Seeds Per Cell) | 20    | 3800 To 5200 Seeds/Lb.                 | Brown       |
| Cotton, Acid-Delinted                                 | 54    | 3800 To 5200 Seeds/Lb.                 | Dark Green  |
| Dry Edible Bean (Small)                               | 54    | 1200 To 2500 Seeds/Lb.                 | Dark Green  |
| Dry Edible Bean (Large)                               | 54    | 800 To 1200 Seeds/Lb.                  | Tan         |

### EDGEVAC® INITIAL SETTINGS

| CROP               | SIZE                    | SINGULATOR<br>SEED DISC | VACUUM<br>BRUSH<br>SETTING | SETTING<br>(H <sub>2</sub> O) | SEE NOTES |
|--------------------|-------------------------|-------------------------|----------------------------|-------------------------------|-----------|
| Corn               | 35-45 Lbs./80K          | Corn/Popcorn            | 7                          | 20                            | 4, 5      |
|                    | 45-60 Lbs./80K          | Corn/Popcorn            | 6                          | 20                            | 4, 5      |
|                    | 60-70 Lbs./80K          | Corn/Popcorn            | 5                          | 20                            | 4, 5      |
| Popcorn            | 2210-4200 Seeds/Lb.     | Corn/Popcorn            | 9                          | 18                            | 1, 4, 5   |
| Soybeans           | 2200-4000 Seeds/Lb.     | Soybean                 | 5                          | 10                            | 1         |
| Milo/Grain Sorghum | 10,000-20,000 Seeds/Lb. | Milo/Grain Sorghum      | 7                          | 18                            | 1, 2      |
| Hill-Drop Cotton   | 3800-5200 Seeds/Lb.     | Hill-Drop Cotton        | 8                          | 23                            | 3         |
| Cotton             | 3800-5200 Seeds/Lb.     | Cotton                  | 8                          | 20                            | 3         |
| Edible Beans       | 800-1200 Seeds/Lb.      | Large Edible Bean       | 5                          | 18                            | 5         |
|                    | 1200-2500 Seeds/Lb.     | Small Edible Bean       | 6                          | 18                            | 3, 5      |

#### NOTES:

1. Requires use of seed meter baffle. Refer to page 7-3 for additional information.
2. Requires use of cleanout brush. Refer to page 7-3 for additional information.
3. Requires use of cleanout brush w/ball-type ejector. Refer to page 7-3 for additional information.
4. For flat seeds, higher vacuum level may be required.
5. Larger seeds may require a lower numbered singulator brush setting from the initial setting. Smaller seeds may require a higher numbered setting.

Refer to the planting rate charts in this manual for seed drive transmission sprocket combinations.

**IMPORTANT:** See “General Planting Rate Information” and “Checking Seed Population” pages for additional information. Always check seed population in the field to ensure planting rates are correct.

**NOTE:** Singulator brush settings are marked from 1 thru 11. The lower the singulator brush setting, the less aggressive. The higher singulator brush settings are the most aggressive. Refer to illustrations on page 7-11.

**NOTE:** Optimum meter performance will be attained with consistent seed size and shape. A mixture of seed sizes and shapes will affect meter performance.

**NOTE:** Use 1 tablespoon powdered graphite with each hopper fill of seed. Seed treatment, foreign material, dirt or seed chaff may cause gradual reduction of seed disc fill (population). See “Seed Meter”.




**NOTE:** Excessive seed treatment, humidity and light-weight seed can affect meter performance. Use ½ cup of talc with each hopper fill of seed and mix thoroughly so that all seeds are coated, adjust rates as needed. Use of talc will aid the seed flow into the meter, singulation and seed drop from the disc.

# SEED METER OPERATION/MAINTENANCE

**STEP 1** Select seed disc (and seed meter baffle, cleanout brush and/or cleanout brush w/ball-type ejector if applicable) to match crop and population.

**STEP 2** Adjust the singulator brush to initial setting. Note that seed size, seed shape, seed treatments, travel speed and planting rate will all affect meter performance.

D06260660

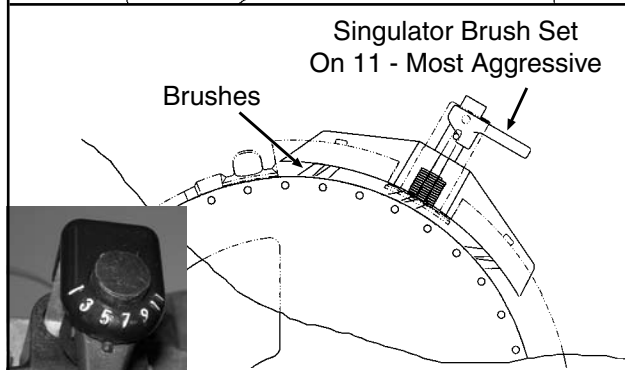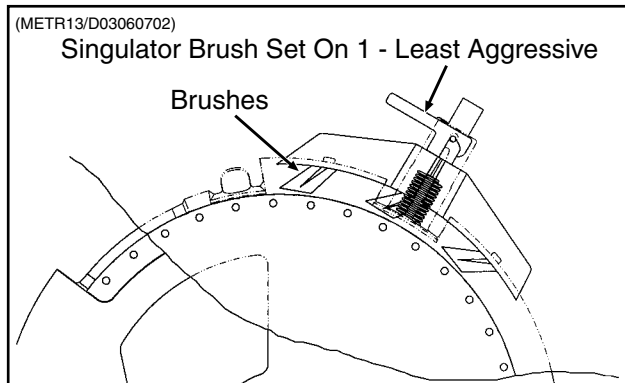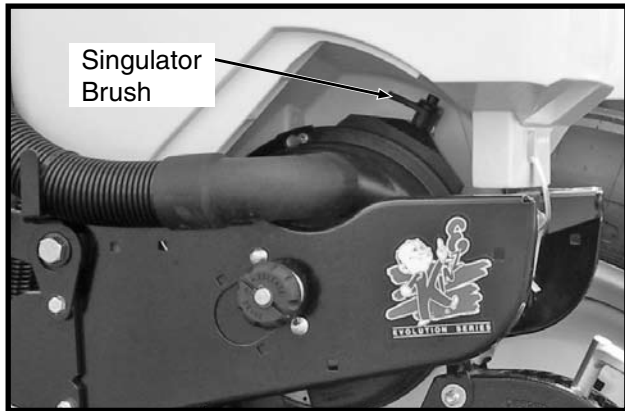

**STEP 3** With vacuum fan running, lower planter to planting position and drive forward a short distance to load seed into the seed disc cells.

Adjust vacuum level to the initial setting according to the tables on preceding page. Note that seed size, seed shape, seed treatments, travel speed and planting rate will all affect meter performance.

**NOTE:** Vacuum reading will be much lower when seed disc cells are empty. Prior to setting vacuum level, load all seed cells.

D10240583



See "Digital Vacuum Gauge Operation" in Machine Operation section

**NOTE:** Operate vacuum fan 3-5 minutes to bring oil up to normal operating temperature prior to making the final vacuum level adjustment.

**STEP 4** Perform optional seed disc fill check.

D101906132



D101906130



With vacuum hose connected and vacuum fan operating, remove vacuum cover and seed disc as an assembly. Inspect seed discs for proper seed fill.

See "Seed Metering System Troubleshooting" at the end of this section.


# SEED METER OPERATION/MAINTENANCE

---

## SEED METER DRIVE RELEASE

The seed meter drive is equipped with a clutch release mechanism that allows the drive to be disengaged from the seed metering unit for removal of the seed meter and mount or hopper. Disconnecting the drive allows the operator to check granular chemical application rates without dropping seed. It also allows the drive to one or more of the rows to be disconnected when finishing fields.

D011006101

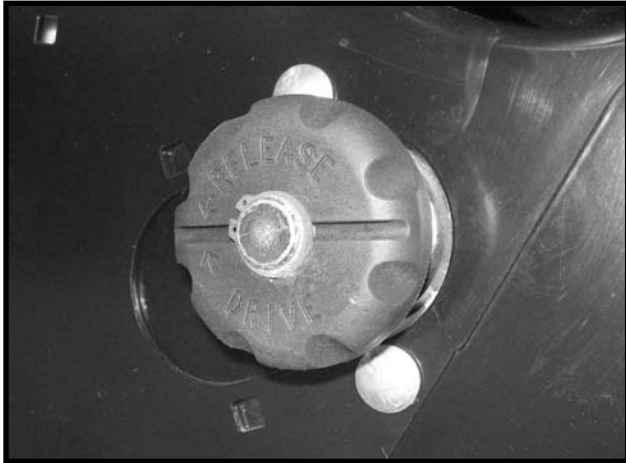


To disengage the drive, turn the knob  $\frac{1}{4}$  turn counter-clockwise. To engage the drive, turn the knob  $\frac{1}{4}$  turn clockwise.

# SEED METER OPERATION/MAINTENANCE

## SEED METER MAINTENANCE

(METR71)

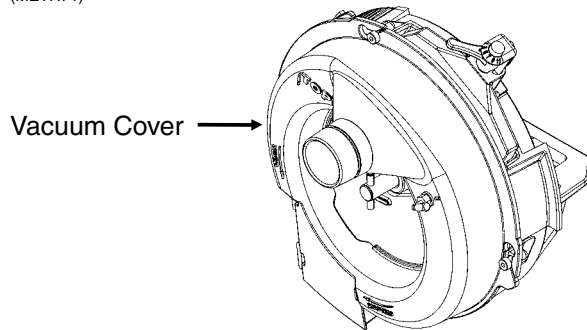


Clean, high quality seed should be used for maximum meter accuracy. Damaged or cracked seed, hulls or foreign material may become lodged in the seed disc orifices and greatly reduce meter accuracy.

It is suggested that the seed disc be inspected and cleaned daily, checking for any buildup of foreign material or any blocked orifices. Clean the seed disc by washing it with soap and water as needed. Dry thoroughly.

Inspect singulator brush for wear and replace if necessary following every 200 acres per row of operation.

The seed disc and/or vacuum cover should be replaced if abnormally high vacuum is required for consistent operation or if consistent operation can not be achieved. If adjustment of the singulator brush does not affect performance of the meter or if the brushes appear frayed, the singulator brush may need to be replaced. If the seed disc orifices are plugged frequently with seed remnants, the cleanout brush or cleanout brush with ball-type ejector (if applicable) may need to be replaced. High quality seed should be used to attain best performance.

(METR70)

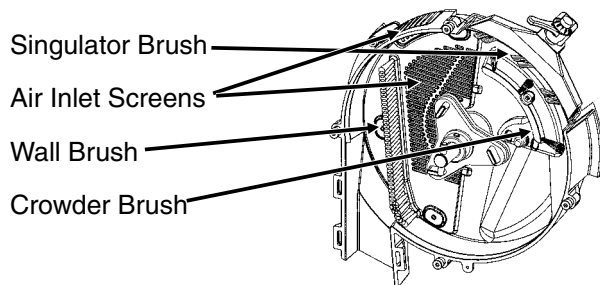

Prior to each planting season, inspect seed discs, singulator brush, crowder brush, wall brush and air inlet screens and clean or replace as needed.

See “Preparation For Storage” for additional EdgeVac® Seed Metering System maintenance.

**IMPORTANT:** Replace hopper lids after hoppers are filled to prevent accumulation of dust or dirt in the seed meter which will cause premature wear.

**NOTE:** Remove seed discs from meters for annual storage and store the seed discs vertically on a dowel or pipe.

## VACUUM MANIFOLD MAINTENANCE

In the course of normal operation, dust will accumulate in manifolds and hoses. Manifolds should be cleaned annually. More frequent cleaning may be necessitated by abnormally dusty planting conditions.

Remove vacuum hose from each seed meter. Operate the vacuum fan at full hydraulic flow from the tractor for two minutes to clear manifolds, hoses and fittings of dust and debris.

# SEED METER OPERATION/MAINTENANCE

## SEED METERING SYSTEM TROUBLESHOOTING

| PROBLEM            | POSSIBLE CAUSE  | SOLUTION  |
|--------------------|---|---|
| Low seed count.    | Meter RPM too high.   | Reduce planting rate or planting speed.   |
|                    | Singulator brush setting too aggressive.                                    | Adjust singulator brush.  |
|                    | Vacuum level too low.   | Increase fan speed.   |
|                    | Seed sensor not picking up all seeds dropped.                               | Clean seed tube. Move meter to different row.   |
|                    | Seeds sticking to seed disc.  | Use graphite or talc to aid release.  |
|                    | Seed treatment buildup in seed disc recesses.                               | Reduce amount of treatment used and or mix thoroughly. Add talc.  |
|                    | Seed size too large for disc used.  | Use appropriate disc for seed size.   |
|                    | Wrong transmission setting.   | Change transmission to desired rate.  |
|                    | Wrong seed disc.  | Use appropriate disc for seed type and size.  |
|                    | Low tire pressure.  | Adjust tire pressure to correct level.  |
|                    | Failed/worn drive components.   | Inspect and replace parts as required.  |
|                    | Plugged orifices in seed disc.  | Inspect and clean disc.<br>Check cleanout brush. (If Applicable)  |
|                    | Loss of vacuum at meter.  | Check for foreign material between vacuum cover and disc. Inspect parts for wear/damage. Clean or replace as required.      |
|                    | Seed bridging in hopper.  | Add graphite to improve seed flow.  |
|                    | Faulty vacuum gauge reading.  | Repair/replace gauge.   |
|                    | Dirt in vacuum manifold.  | Check vacuum manifold for dirt and clean.   |
|                    | Seed baffle (If Applicable) not allowing seed flow due to bridging of seed. | Thoroughly mix talc to coat all seeds.<br>Remove seed baffle. See "Seed Meter" in Seed Meter Operation/Maintenance section. |
|                    | 60 cell soybean disc not filling properly due to excessive RPM.             | Replace with 120 cell soybean disc.   |
|                    | Seed disc worn.   | Replace.  |
|                    | Vacuum cover worn.  | Replace.  |
| Not planting seed. | Seed hoppers empty.   | Fill seed hopper.   |
|                    | Seed tube plugged/damaged.  | Clean or replace tube.  |
|                    | Meter drive damaged.  | Repair/replace drive components.  |
|                    | Low/no vacuum.  | Inspect vacuum system and repair as necessary.  |
|                    | Singulator brush setting too aggressive.                                    | Adjust singulator brush.  |
|                    | Faulty vacuum gauge.  | Repair/replace vacuum gauge.  |
|                    | Seed bridging in hopper.  | Add graphite to improve seed flow.  |
|                    | Loss of vacuum at meter.  | Check for foreign material between vacuum cover and disc. Inspect parts for wear/damage. Clean and/or replace as required.  |
|                    | Wrong seed disc.  | Use appropriate disc for seed type and size.  |
|                    | Meter drive clutch not engaged.   | Engage drive clutch.  |
|                    | Fan not running.  | Start fan.  |
|                    | Dirt in vacuum manifold.  | Check vacuum manifold for dirt and clean.   |

(Continued On Following Page)



# SEED METER OPERATION/MAINTENANCE

## SEED METERING SYSTEM TROUBLESHOOTING (Continued)

| PROBLEM                                 | POSSIBLE CAUSE  | SOLUTION   |
|---|---|--|
| Not planting seed.<br>(Continued)       | Seed baffle (If Applicable) not allowing seed flow due to bridging of seed. | Thoroughly mix talc to coat all seeds. Remove seed baffle. See "Seed Meter" in Seed Meter Operation/Maintenance section.                       |
|   | 60 cell soybean disc not filling properly due to excessive RPM.             | Replace with 120 cell soybean disc.  |
| High seed count.                        | High vacuum.  | Adjust vacuum level to appropriate level.  |
|   | Wrong seed disc.  | Replace seed disc.   |
|   | Singulator brush setting not aggressive enough.                             | Adjust singulator brush.   |
|   | Worn singulator brush.  | Inspect brush and replace as required.   |
|   | Seed leaking past wall brush.   | Inspect wall brush condition and installation. Replace as necessary.   |
|   | Faulty vacuum gauge.  | Check gauge line for dirt/obstruction. Repair/replace vacuum gauge.  |
| Poor seed spacing.                      | Obstruction in seed tube.   | Clean seed tube.   |
|   | Dirty/damaged seed disc.  | Inspect seed disc for damage, foreign material in orifices or seed treatment buildup in recesses. Clean or replace as required.                |
|   | Wrong vacuum setting.   | Adjust vacuum to appropriate level.  |
|   | Excess foreign material in seed.  | Inspect and clean meter and seed discs. Use clean, undamaged seed.   |
|   | Incorrect singulator brush setting.   | Adjust singulator brush to appropriate setting.  |
|   | Inconsistent driveline.   | Inspect drive components for rust, misalignment, worn or damaged parts. Replace/repair as required.  |
|   | Toolbar not level or wrong height.  | Adjust hitch to level toolbar and row units.   |
|   | Planting too fast for conditions.   | Reduce speed.  |
|   | Rough field conditions.   | Reduce speed.  |
| Irregular seed population.              | Driving too fast.   | Reduce speed.  |
|   | Drive wheels slipping.  | Reduce speed. Decrease row unit down pressure spring settings.   |
| Unable to achieve desired vacuum level. | Tractor hydraulic flow set too low.   | Increase flow to fan motor.  |
|   | Incorrect hydraulic connections.  | Check all hydraulic connections and hose routings.   |
|   | Damaged fan components.   | Inspect motor and impeller for wear/damage and repair/replace as necessary.  |
|   | Vacuum hose pinched/kinked/ blocked.  | Inspect air lines for any damage or obstruction. Clean air lines and manifold by removing end cap from manifold and running fan at high speed. |
|   | Vacuum hose loose/disconnected.   | Inspect and reattach all air hoses.  |
|   | Tractor not producing required hydraulic flow/pressure.                     | Have tractor serviced by qualified technician.   |
|   | Dirt in vacuum gauge line.  | Check gauge line for dirt/obstruction and clean.   |

# SEED METER OPERATION/MAINTENANCE

---


# SDS SEED DELIVERY SYSTEM OPERATION

## INTRODUCTION

The seed delivery system consists of two bulk seed hoppers with removable lids that each service half of the planter. Approximate capacity of each hopper is 55 bushels for a total of 110 bushels. Seed hoppers are accessible via a rear-mounted ladder and access deck. Individual mini-hoppers are filled from the central-mounted seed hoppers with 3 1/2" diameter augers in steel tubes which flex to match wing flex and fold requirements. The auger system is hydraulic driven with two variable speed motors controlled from a cab mounted console. The control console includes two electronic tachometers and switches for master shut-off and variable speed control by section. The system is driven on-demand to ensure constant supply to all rows. Limit switches disable the system when the planter is in folded position.

The mini-hoppers are used in lieu of conventional seed hoppers. The row units and seed meters are the same as used on other KINZE® planters.

D01050702

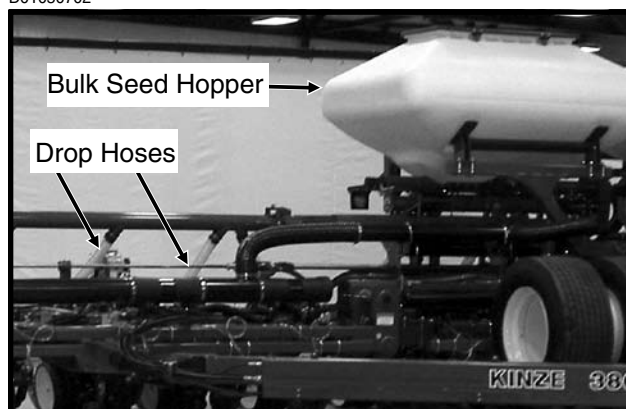

D10060627




**NOTE: After all row outlets are filled to capacity, seed will continue to be evenly distributed to all rows until the bulk seed hopper is empty. When the bulk seed hopper is empty or the auger system is shut off, all drop hoses will “plant out” equally and all rows should run out of seed at approximately the same time.**

## OPERATION

To operate the Seed Delivery System (SDS) the tractor must be equipped with a closed center hydraulic system.

Position the main power switch on the control console to **ON**. The left and right side of the planter use independent systems that operate the same, except for auger flighting direction. Toggle switches are used to control the auger systems on each half of the planter. To operate, place switches in **RUN** position. Place hydraulic lever in **ON** position. The auger systems will continue to run until they have charged the system. The operator can increase or decrease the speed by utilizing the **FASTER/SLOWER** switches positioned to the right of each **RUN** switch. Auger RPM is displayed for each side using an LCD tachometer. Recommended starting speed is 100 RPM. Adjust for the type and weight of seed and population being planted.

(FWD83)

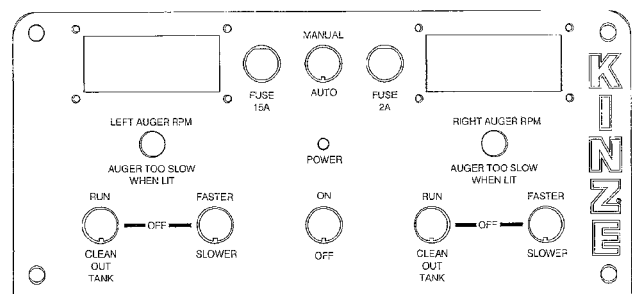

The outermost drop on each side of the planter is equipped with a proximity sensor that will stop the system when the drop tube is full. When the seed level drops away from the sensor, the system will automatically start after a short time delay (approximately 2 minutes). The augers will then restart and run until the system is fully recharged. If the system does not recharge fast enough, a light on the display will illuminate. Increase the auger RPM to ensure adequate seed availability.

In the event of a sensor failure, the system will not operate. Hold the **MANUAL/AUTO** switch in the **MANUAL** position to override the sensor and run the system. This override is intended **ONLY** for emergency operation until the system can be repaired. An additional shut-off switch (limit switch) on each outboard end is designed to keep the system from stuffing if the proximity sensor fails and the **MANUAL** run switch is engaged too long.

(Continued On Following Page)

# SDS SEED DELIVERY SYSTEM OPERATION




**WARNING: ALWAYS** use master power switch to turn the system OFF when leaving the tractor operator platform, as the system can start and run at any time if seed demand occurs. Always turn the system OFF before transport. A limit switch on each half of the system at the center of the planter disables the system when the planter is folded.

To empty the bulk seed hoppers, a nipple is provided near the hydraulic motor on each hopper. Connect a 3" hose to each nipple and move the **RUN/CLEANOUT TANK** switch to **CLEANOUT**. To operate toggle lever, pull the toggle lever out and reposition it to the **CLEANOUT** position. The auger below the hopper will run in reverse to empty the hopper. The rest of the system will not run in reverse.

## ADJUSTMENT OF LIMIT (SAFETY) SWITCHES AND PROXIMITY SENSORS

### LIMIT SWITCHES - LOCATED ON OUTER ENDS OF PLANTER


D12200683

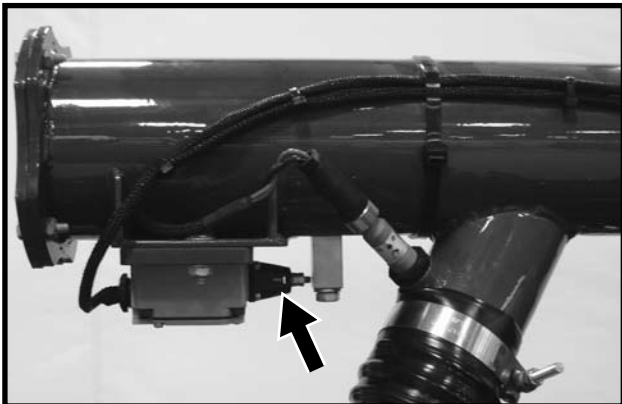

The limit (secondary overload) switches on the outer ends of the tubes are connected as normally CLOSED switches. When relaxed (no pressure applied to the roller), they allow current to flow through the switches. A 1/8" air gap should be maintained between the switch roller and the actuator arm when all components are in a relaxed state to allow current to pass through the switches. This function can be tested by turning the system ON. While the system is running, carefully pull back the actuator arm until it makes contact with the switch roller. Continue to pull the actuator arm back another 1/4". The system should shut off and then restart when the actuator arm is released. To adjust for 1/8" air gap, reposition the switch by loosening the bolts holding the retainer plate.

### LIMIT SWITCHES - LOCATED NEAR CENTER OF PLANTER

D12200684

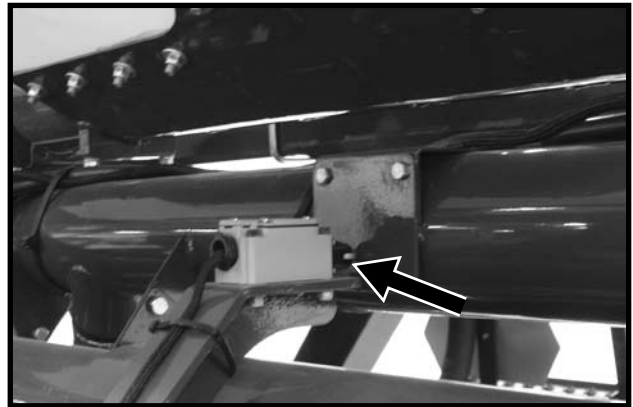


Two limit (transport safety) switches are located near the center of the machine on both sides. These switches are connected as normally OPEN switches. When relaxed (no pressure applied to the roller), they do not allow current to flow through the switch. These switches shut off the power when the planter is folded to avoid accidental operation of the system during transport. The system can be run in CLEANOUT mode while the planter is folded to allow easier access to the hopper unload nipples. These switches must be depressed when the planter is in field operation position to allow electrical current to pass through the switches to other components of the seed delivery system. To adjust the switch with planter in field operation position, loosen the nuts holding the switch to the mount. Move the switch toward the striking plate an additional 1/8" after a click is heard. Tighten mounting hardware and test system.

# SDS SEED DELIVERY SYSTEM OPERATION

## PROXIMITY SENSORS

D12200683

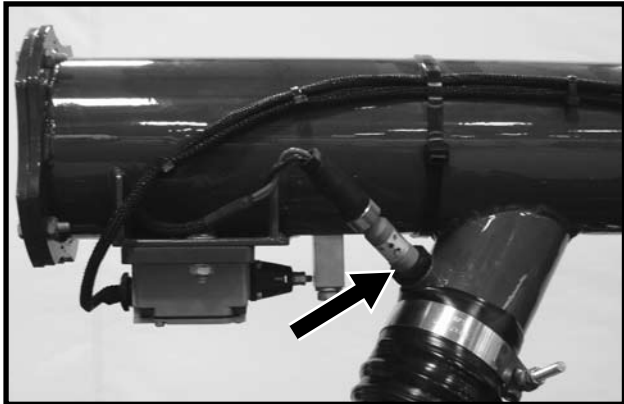


The proximity sensor screws into the outer drop tube at each end of the planter. The tip of the sensor should be approximately 1/2" up from the bottom of the deflector pad in the drop tube. When replacing a sensor draw a line on the sensor 1 1/2" up from the sensing tip. Screw the sensor into the drop tube until the line is just below the surface. Rotate the sensor so the indicator light is visible. Tighten the plastic jam nut to prevent the sensor from rotating and vibrating. Be careful not to over tighten the jam nut.

To test the sensor, turn the key ON in the tractor but DO NOT start the tractor. Turn the power switch ON. The control console power light should be illuminated. The sensor light should only be illuminated if it senses seed. Remove the drop hose and pass your finger under the sensor. When your finger gets to within 12 mm (approximately 7/16") from the tip of the sensor the indicator light on the sensor should come on. When you remove your finger the light should go out. If the light stays illuminated, try cleaning the sensor with a dry cloth. DO NOT adjust the sensitivity on the sensor without contacting factory service personnel.

## MINI-HOPPER LATCH

Due to the pull exerted by the drop hose on the mini-hopper as the row unit moves up and down, a pin is provided to secure the mini-hopper latch.

D041801101

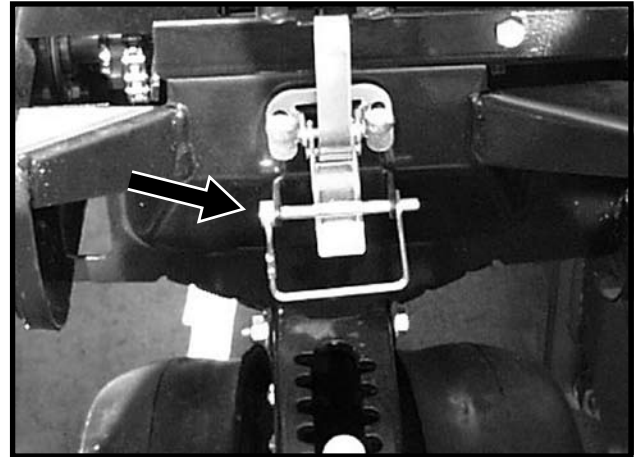

**IMPORTANT: Disengage row unit clutch and unlatch mini-hopper on each row unit to release stress on drop hoses and hoppers during storage.**

# SDS SEED DELIVERY SYSTEM OPERATION

## SEED LUBRICATION

The use of powdered graphite is recommended. In addition to the benefits graphite provides the seed meters, graphite will also aid seed flow through the bulk seed auger system. If seed treatments or inoculants that add moisture to the seed are used, talc is recommended along with the graphite. Be sure to test unfamiliar combinations before completely filling the system. Apply any seed treatments, graphite and/or talc alternately in layers with the seed while filling the bulk seed hopper. The auger system will assist in mixing the seed, seed treatments, graphite and/or talc. For this reason, pre-mixing may not be as critical as with planters equipped with individual seed hoppers.

82354-1e



See "Seed Meter Operation/Maintenance" section for additional information.

## SDS TROUBLESHOOTING

| PROBLEM                  | POSSIBLE CAUSE                         | SOLUTION   |
|--------------------------|--|--|
| System does not operate. | No power to main switch.               | Check to be sure the main power switch and RUN switch are both ON.<br>Check all fuses.                       |
|                          | Limit switches incorrectly positioned. | Check to make sure limit switches are adjusted correctly.  |
|                          | Faulty proximity sensor.               | Check if proximity sensors are working correctly. Replace if necessary.                                      |
|                          | Built-in 2 minute delay.               | Wait 2-3 minutes after cycling proximity sensors to determine if system is in TIME DELAY mode.               |
|                          | No hydraulic flow.                     | Check to determine tractor hydraulic valve is detented ON (in the correct position) and set for proper flow. |
|                          | Auger speed set too low.               | Increase auger speed. If set too slow system will stall.   |

# ROW UNIT OPERATION


## PLANTING DEPTH

Planting depth is maintained by the row unit gauge wheels. To increase or decrease the planting depth, first raise the planter to remove weight from the wheels. Then push down on the depth adjustment handle and reposition it forward to decrease depth or rearward to increase planting depth. Adjust all units to the same setting initially. Then lower the planter and check operation and planting depth of all row units. It may be necessary to readjust some rows to obtain uniform operation. Available depth adjustment range is approximately 1/2" to 3 1/2".



**WARNING: Never work under the planter while in raised position without using safety lockup devices.**

D020705102

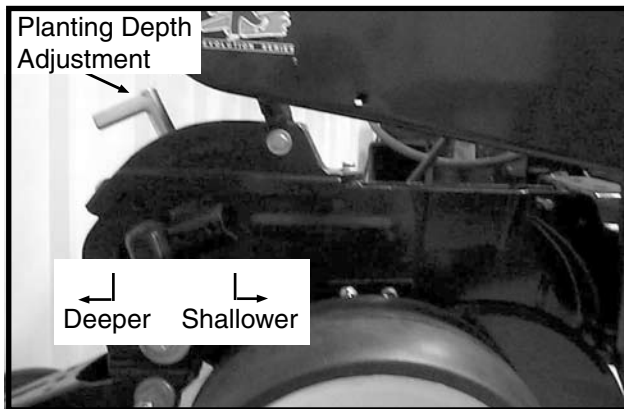

## "V" CLOSING WHEEL ADJUSTMENT (Rubber And Cast Iron)




**WARNING: Raise planter and install safety lockup devices before making closing wheel adjustments.**

After adjusting planting depth, check the operation of the "V" closing wheels. The "V" closing wheels should have enough down pressure to close the seed trench and ensure good soil to seed contact. To increase spring pressure on the closing wheels, move the 5-position quick adjustable down force lever located on the top of the closing wheel arm to the rear. Moving the lever forward decreases spring tension.

Adjust all row units to a similar setting.


LF212299-15

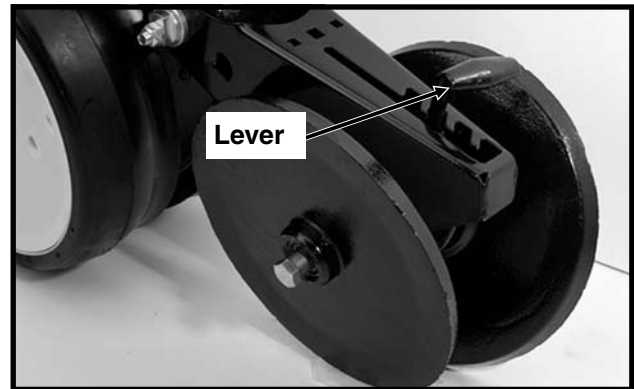


Light soil usually requires less down force at average depth (approximately 2") while heavy soil requires increased down force.

Eccentric bushings in the wheel arm stop allow for lateral adjustment of the "V" closing wheel assembly. Using a 3/4" wrench, loosen the hardware which attaches the closing wheel arm to the wheel arm stop. Using another 3/4" wrench turn the eccentric bushings until the **closing wheels are aligned with the seed trench**. Tighten hardware.

LF212299-15

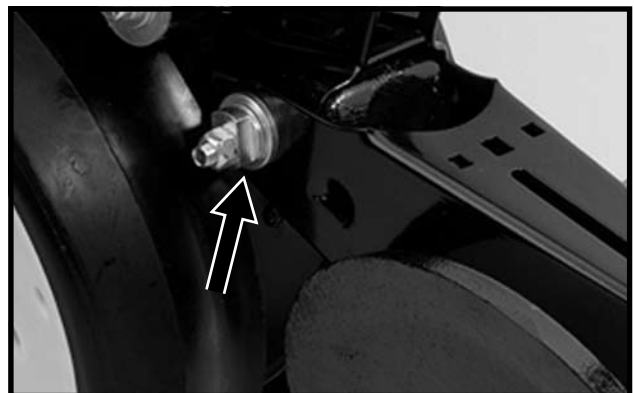


The closing wheels can be installed in two locations either "offset" (to improve residue flow) or "directly" opposite. If set "directly" opposite, the forward installation holes should be used.

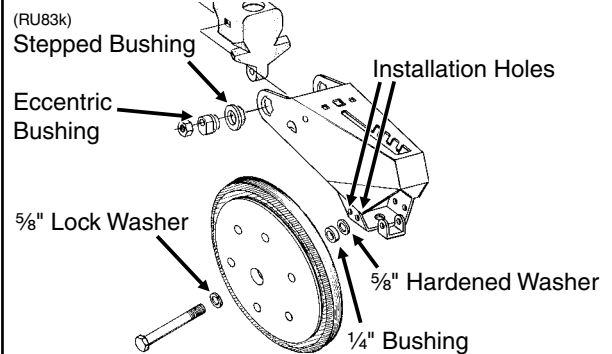

# ROW UNIT OPERATION

## CLOSING WHEEL SHIELD (Rubber And Cast Iron "V" Closing Wheels)

D11090208a

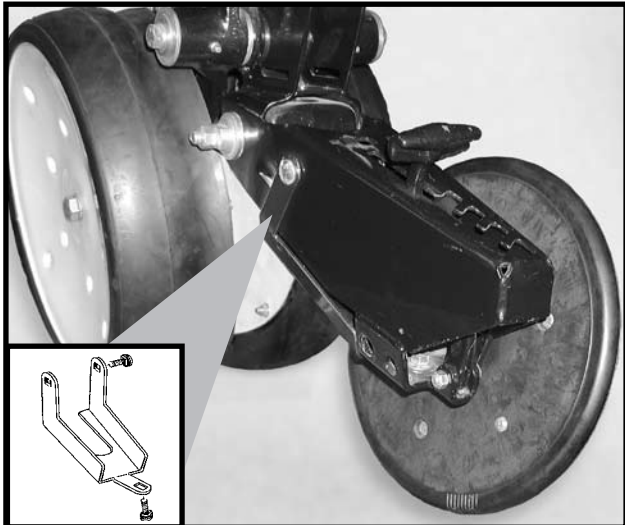

**Shown With Closing Wheel Removed For Visual Clarity**


The optional closing wheel shield is designed to be installed onto the underside of the closing wheel arm to help prevent root balls and stalks from plugging the closing wheels.

## COVERING DISCS/SINGLE PRESS WHEEL ADJUSTMENT



**WARNING:** Raise planter and install safety lockup devices before making covering discs/single press wheel adjustments.


72359-31

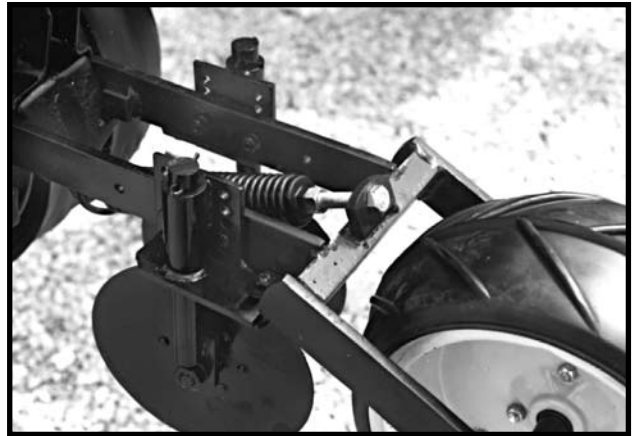

After adjusting planting depth, check the operation of the covering discs/single press wheels.

Initial press wheel down force setting should be with 2 1/2" between mounting arm tab and locking nut. To adjust down force spring, loosen 1/2" locking nut and turn adjusting bolt in to increase down force or out to decrease down force. Tighten locking nut against spring plug. Adjust all row units to a similar setting.

RH993(PLTR12)

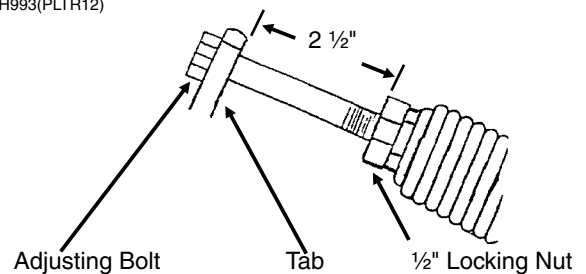




# ROW UNIT OPERATION


Eccentric bushings in the wheel arm stop allow for lateral adjustment of the covering discs/single press wheel assembly. Using a 3/4" wrench, loosen the hardware which attaches the assembly to the wheel arm stop. Using another 3/4" wrench, turn the eccentric bushings until the press wheel is aligned with the seed trench.

(RU94b)

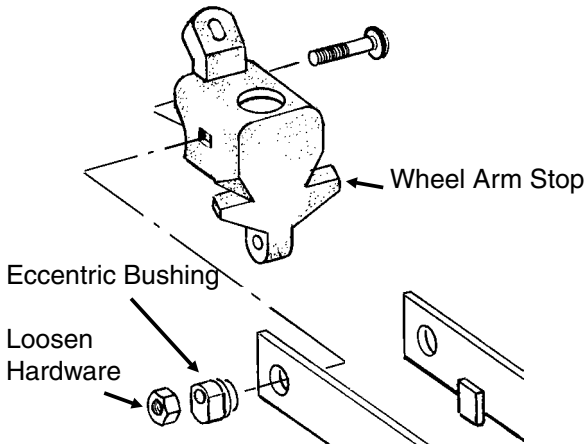

Two sets of holes in the mounting arm allow the covering discs to be located for staggered or side-by-side operation as desired.

72359-35

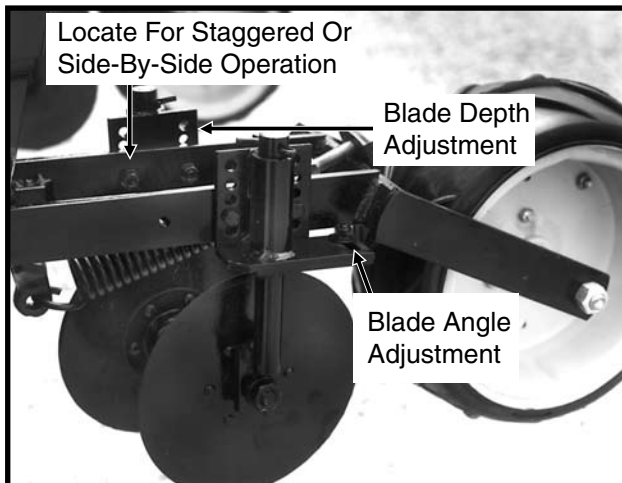


Five sets of holes in each disc bracket allow for 1/2" incremental blade depth adjustment.

Slotted holes in the disc mount and bracket allow for 0° - 15° blade angle adjustment.

Adjust covering discs on all row units to similar settings.

## DRAG CLOSING ATTACHMENT

LF212299-18

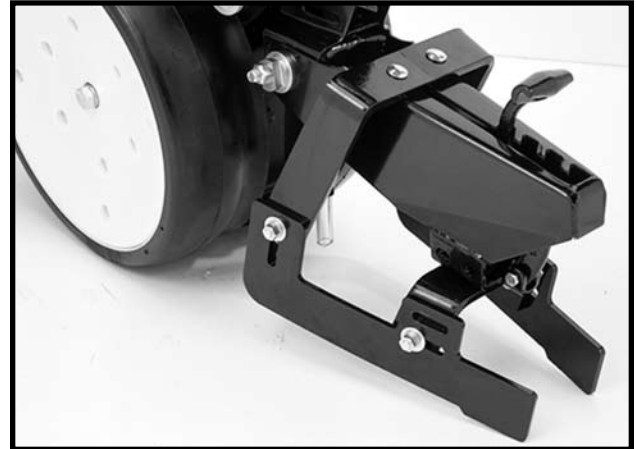

The drag closing attachment is designed to pull loose soil over the seed trench.


Front and rear adjustment is made using the slotted holes in the blades. Adjust all rows the same.

**NOTE: Use of a seed firming wheel or other seed firming device is recommended with the drag closing attachment.**



**WARNING: Raise planter and install safety lockup devices before making drag closing attachment adjustments.**

(RU90d)

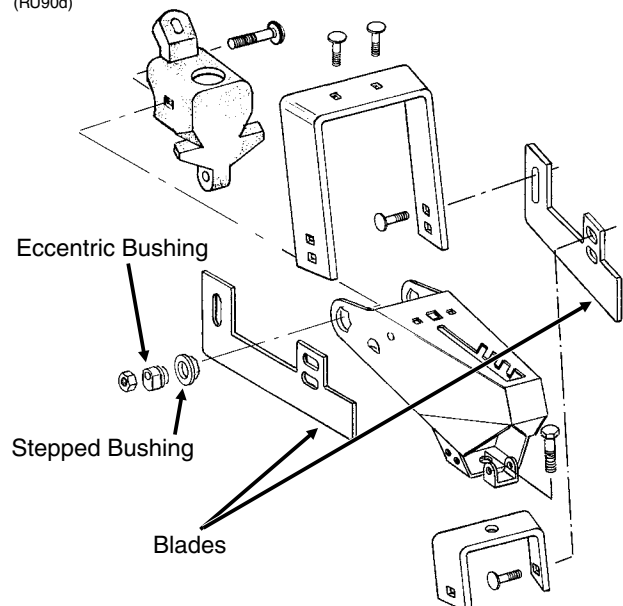

Eccentric bushings allow for lateral adjustment of the drag closing attachment. Using a 3/4" wrench, loosen the hardware which attaches the assembly to the wheel arm stop. Using another 3/4" wrench, turn the eccentric bushings until the drag closing attachment is aligned with the seed trench.

# ROW UNIT OPERATION

## SEED HOPPER (Conventional Seed Hoppers)

LF212199-7a




Seed hopper capacity is 1.9 bushels.

When filling the seed hopper use clean seed and make certain there are no foreign objects in the hopper. **Replace hopper lids after hoppers are filled to prevent the accumulation of dust or dirt in the seed meter which will cause premature wear.** See "Seed Meter" in Seed Meter Operation/Maintenance section.

Periodically empty the hoppers completely to remove any foreign objects and to ensure proper seed meter operation. To empty hopper, disengage meter drive and hopper latch and lift hopper off the hopper support. See "Seed Meter Drive Release".

## ROW UNIT EXTENSION BRACKETS

(RU145)

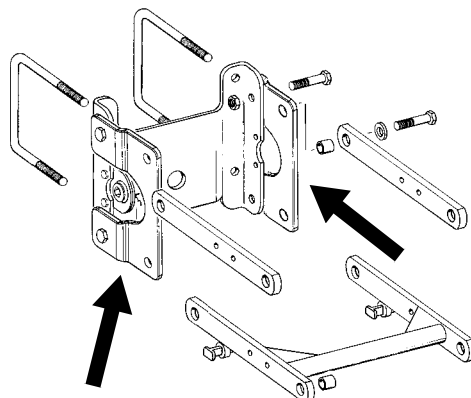

Model 3800 and 3800 SDS planters are equipped with row unit extension brackets on the the six center section rows to provide clearance at the axle rock shaft.

Row unit extension brackets are required on all row units if 3800 planters are equipped with coulter mounted residue wheels and notched single disc fertilizer openers.

# ROW UNIT OPERATION


## ROW UNIT CHAIN ROUTING

For proper operation and to minimize wear, the row unit drive chains must be properly tensioned and aligned.

Inspect and replace weak, worn or broken springs and/or idlers and idler bushings.


**NOTE: When idler shows signs of wear, it can be reversed for prolonged use.**

D051705103

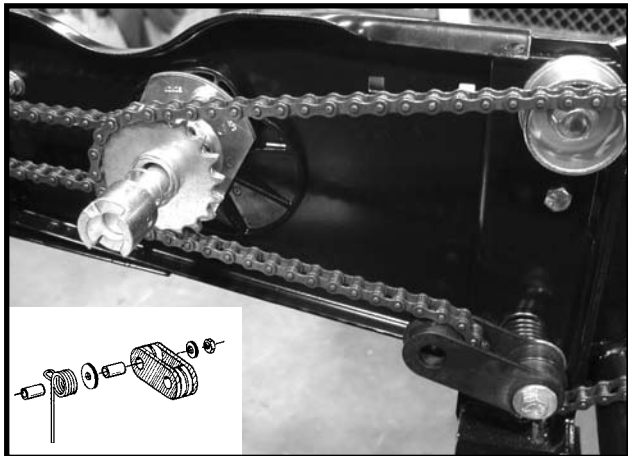

**Pull Row Unit Meter Drive**

D051705102

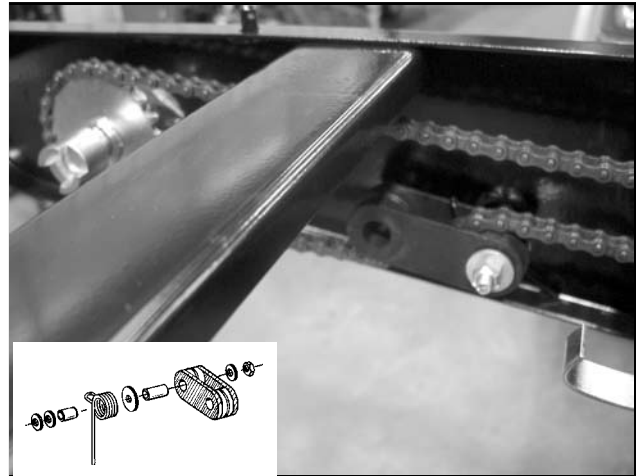

**Row Unit Granular Chemical Drive**

**NOTE: Make sure connector link is installed with closed end oriented properly as shown below.**

(PLTR24)



**Direction Of Chain Travel** →

# ROW UNIT OPERATION

## QUICK ADJUSTABLE DOWN FORCE SPRINGS

Quick adjustable down force springs are designed to increase penetration in hard soil and keep the row unit from bouncing in rough field conditions.


Two springs per row, one on the L.H. parallel arms and one on the R.H. parallel arms, are used unless equipped with row unit mounted no till coulters. Four springs per row are used with row unit mounted no till coulters.

D06300305



Two Springs Per Row (Dual)

D07010301

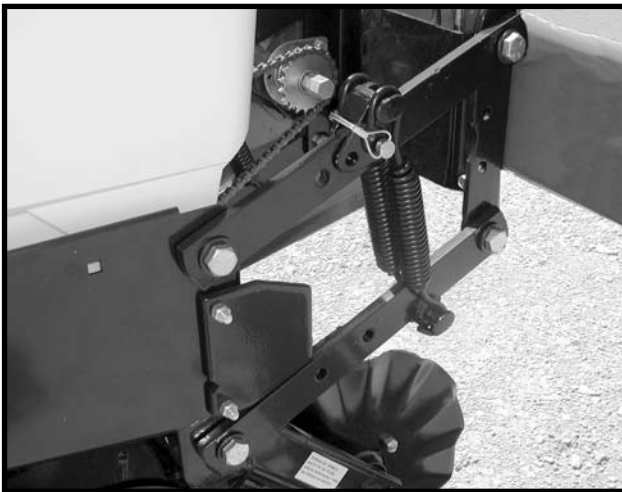


Four Springs Per Row (Quad)

**NOTE:** Four springs per row are to be used with row unit mounted no till coulters only.


There are four positions for spring tension adjustment. Position 1 allows for minimum down pressure and position 4 for maximum down pressure.

L0096(PLTR27e)

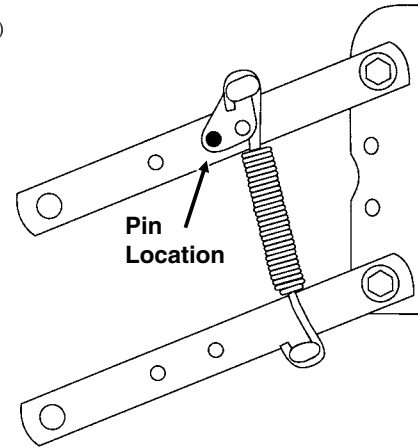


Position 1 (Minimum)

(PLTR28e)

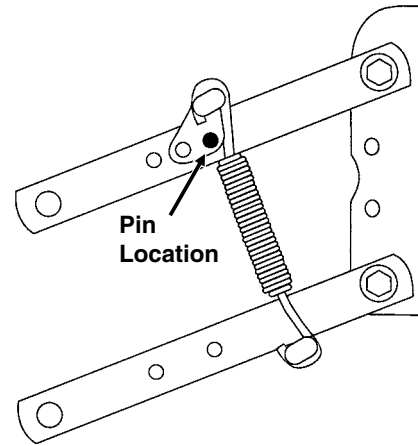

Position 2

(PLTR29e)

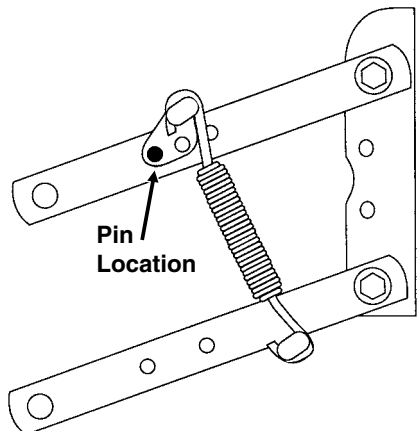


Position 3

# ROW UNIT OPERATION

---

(PLTR30e)

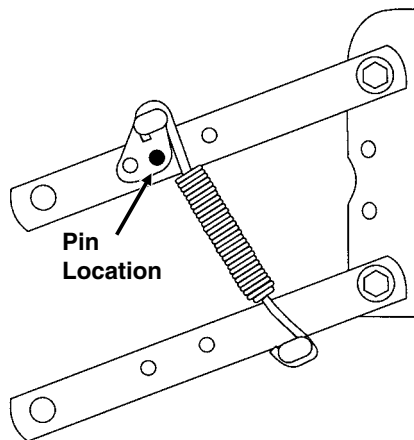

## Position 4 (Maximum)

To adjust spring tension, raise planter and remove spring mount pin at top of spring. Slide mount to desired position and install pin.

**NOTE:** It is necessary for the operator to adjust springs according to field conditions. If springs are adjusted for too much down pressure for field conditions, it is possible for the row units to lift the planter to the extent that the drive wheels do not make sufficient contact. Too much down pressure in soft field conditions can cause the row unit to run too deep.



**WARNING:** Always install safety lockup devices or lower machine to the ground before working under or around the machine.

**IMPORTANT:** Springs must always be installed with open side of spring hooks toward the seed hoppers to prevent binding on spring mount adjustment pins.

# ROW UNIT OPERATION


## PNEUMATIC DOWN PRESSURE PACKAGE

With pneumatic down pressure option, the operator can vary row unit down pressure on-the-go as field conditions change. A cab-mounted digital readout displays down force (lbs.) applied. A planter-mounted 12 VDC air compressor, with 3 gallon capacity air tank, supplies air for the down pressure system.

Packages also include upper and lower air spring mounting castings for pull row units, 150 psi rated air springs, 3/8" O.D. nylon hoses, dual solenoid air valve and stainless steel, 160 psi, 2" liquid-filled gauge and planter wiring harness.


Pneumatic down pressure row unit extension brackets are required in some applications.

(PNE01)

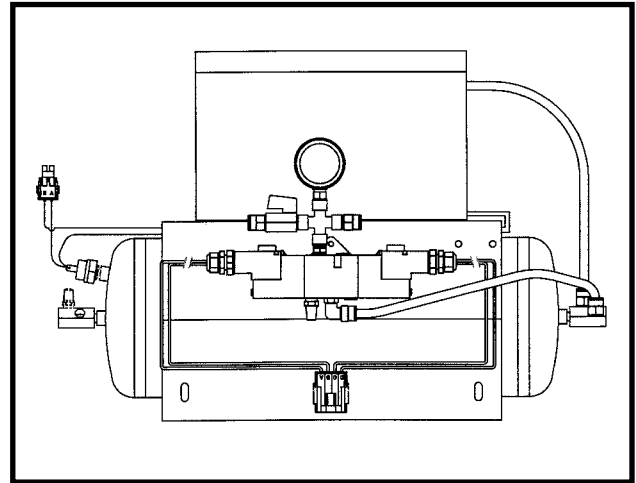


**Air Compressor With Dual Solenoid Assembly**

(PNE07)

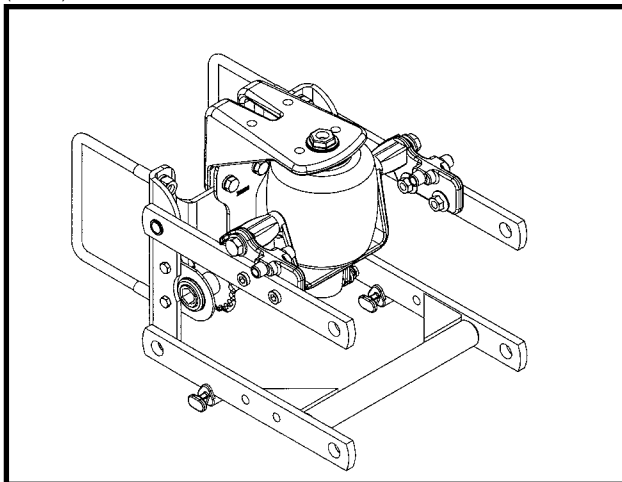

**Pull Row Unit Air Spring**

(A12644a)

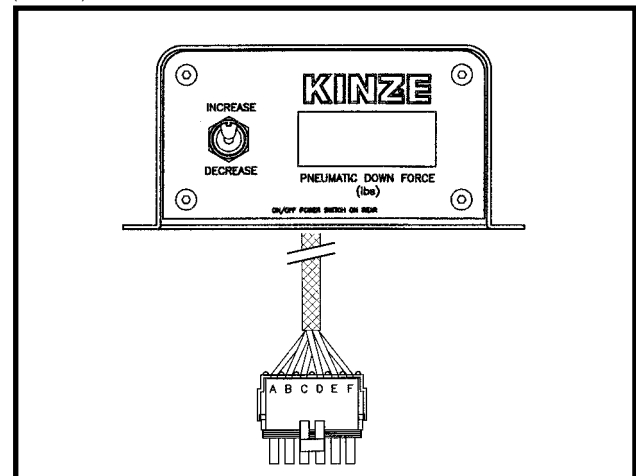


**Control Console Assembly**

# ROW UNIT OPERATION

**NOTE:** If additional down pressure is needed with the Pneumatic Down Pressure Package, assist springs are available through your KINZE® dealer. One spring is installed on the outer side of the parallel arms on each side of the row unit as shown below.

D11280153a

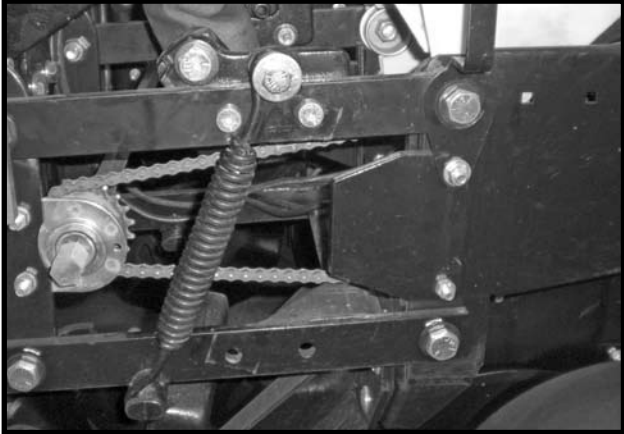


**Pull Row Unit Assist Springs**

## FIELD OPERATION

**NOTE:** For the most accurate adjustment, adjust down pressure with planter lowered and row units in the ground. Pressure can be adjusted from tractor using the control console, or at planter using the manual control valves.

D112907101

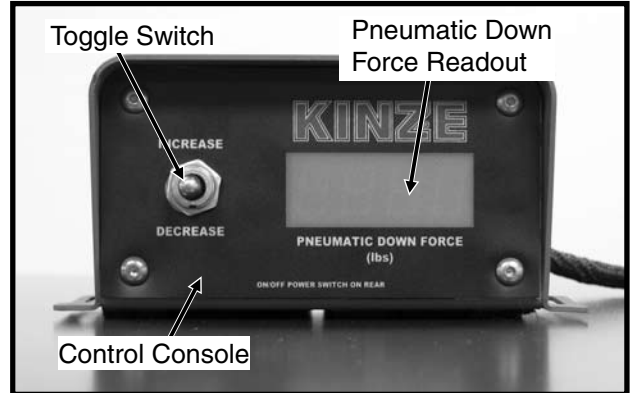

*To adjust down pressure from cab:*

To INCREASE pressure, push toggle switch up.

To DECREASE pressure, push toggle switch down.

The readout value on the control console is pounds of down pressure force.


*To adjust down pressure from planter:*

To INCREASE pressure, press and hold button on solenoid as shown below.

To DECREASE pressure, press and hold button on solenoid as shown below.

The readout value on the air pressure gauge is NOT the down pressure force value. To calculate the force value, multiply the air pressure (psi) by four (4).


D112907100

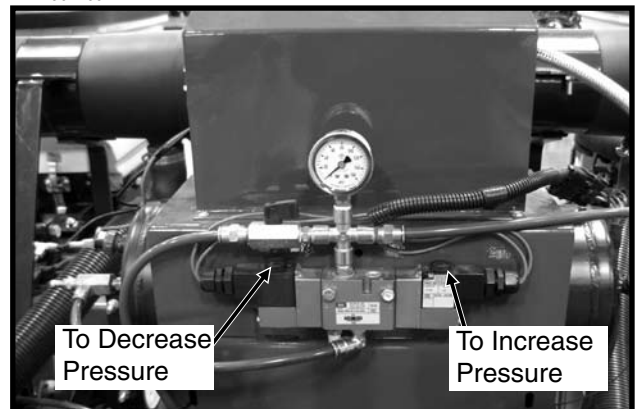

# ROW UNIT OPERATION

## FRAME MOUNTED COULTER

LF083002101

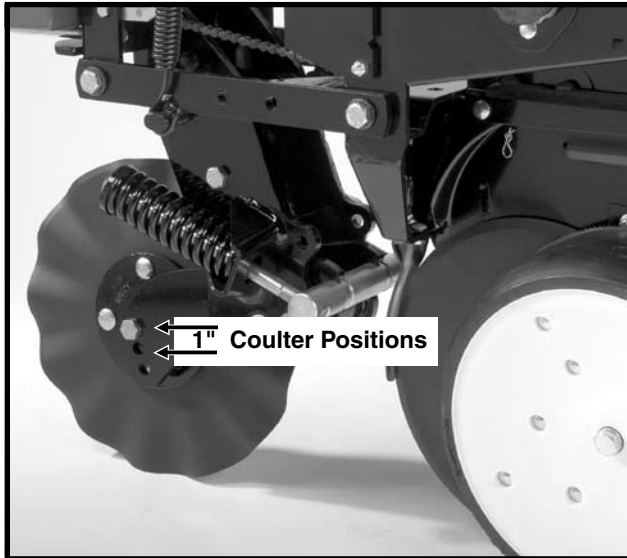


Frame mounted coulters with 1" bubbled, 1" fluted (8 flutes) or 3/4" fluted (13 flutes) blades may be used on pull row units only. (Not compatible with push row units.)

The frame mounted coulters is designed to apply necessary spring down pressure on the coulters for maximum penetration while exerting less shock load on the row unit.

The initial location of the coulters blade is in the top hole. The blade can be relocated to one of the lower two holes (1" increments) as wear occurs or if deeper operation of the blade is desired.

LF083002101

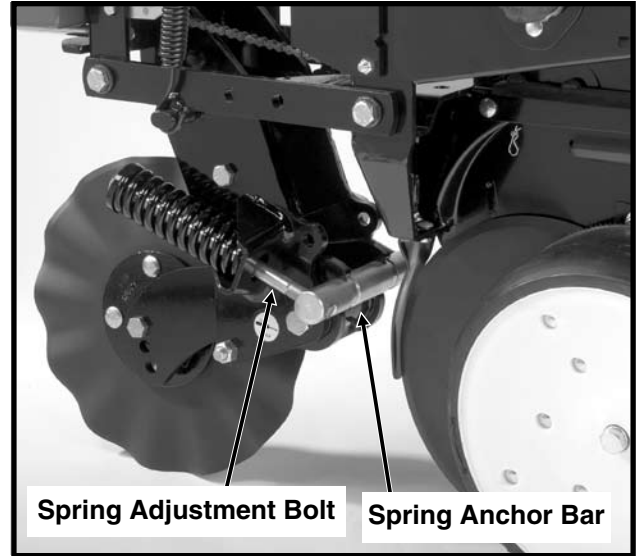

### DOWN PRESSURE ADJUSTMENT

Down force adjustment is made by tightening or loosening the two spring adjustment bolts. With the planter in raised position, turn the bolts clockwise to increase down pressure or counterclockwise to decrease down force. Set both springs the same.

Down force on the blade is shown below in lbs.

| End Of Spring Adjustment Bolt Flush With Spring Anchor Bar (Shown Above) | End Of Spring Adjustment Bolt Extended 1/2" Through Spring Anchor Bar | All Threads Used (Maximum) |
|--|---|----------------------------|
| 275 lbs.   | 400 lbs.  | 500 lbs.                   |

**NOTE: Avoid setting down pressure higher than is required for consistent soil penetration. Excessive pressure will increase the chances of damage to coulters components when the coulters strikes an obstacle.**



# ROW UNIT OPERATION

---

## RESIDUE WHEELS

(For Use With Frame Mounted Coulter)


The residue wheels for use with the frame mounted coulter may be used on pull row units only.

LF083002102



The residue wheels are attached to the frame mounted coulter with two cap screws and sleeves allowing the unit to free-float. A 2-position spindle bolt mounting allows the tined wheels to be mounted interlocked or staggered. Depth adjustment is made using a spring-loaded cam and pin with 11 positions in  $\frac{1}{4}$ " increments. A high point on the cam allows the wheels to be locked up so they do not contact the ground. A weed guard, located on the inboard side of each wheel, aids in the prevention of weed wrap which can cause premature bearing failure.

(RU135m)

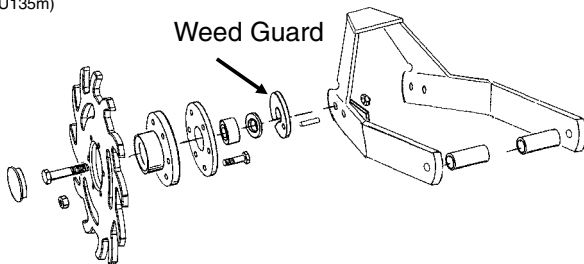

**NOTE: Opening in weed guard must point down.**


# ROW UNIT OPERATION

## ROW UNIT MOUNTED DISC FURROWER

The row unit mounted disc furrower is for use on pull row units only (not compatible with Interplant® push row units). The disc furrower may be equipped with either 12" solid blades or 12" notched blades.


Disc furrowers are used to clear crop residue, dirt clods and dry soil from in front of the row units for a clean and smooth seed bed. Notched blades are used for heavier residue conditions. The notched blades cut crop residue and move it aside to prevent plugging or pushing.

LF212299-22

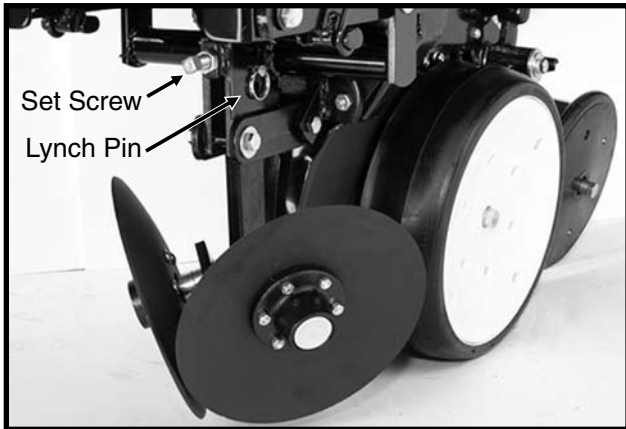

Vertical adjustment in  $\frac{1}{3}$ " increments is possible by removing the lynch pin which secures the vertical support arm and moving the support arm up or down as required. Reinstall lynch pin. Finer adjustment can be attained by removing the lynch pin and using the  $\frac{5}{8}$ " x  $2 \frac{1}{4}$ " set screw to clamp the support arm in the required position.

(RU98e)

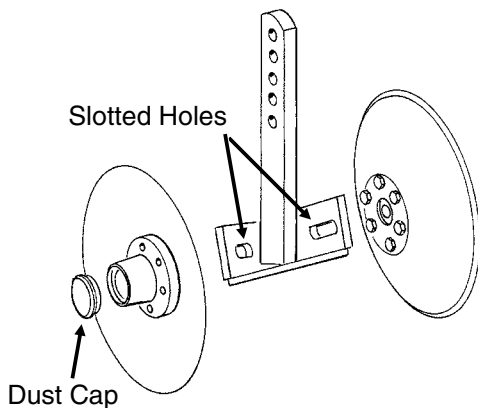


Slotted holes in the support arm where the blades are mounted allow fore and aft adjustment of the disc blades. Blades can be adjusted so the front edges meet or one blade can be moved to the rear and the other to the front of the slot so the cutting edge of one blade overlaps the edge of the other blade. The dust cap must be removed to make these adjustments.

## ROW UNIT MOUNTED RESIDUE WHEEL


The row unit mounted residue wheel may be used on pull row units and push row units.

(A12685)

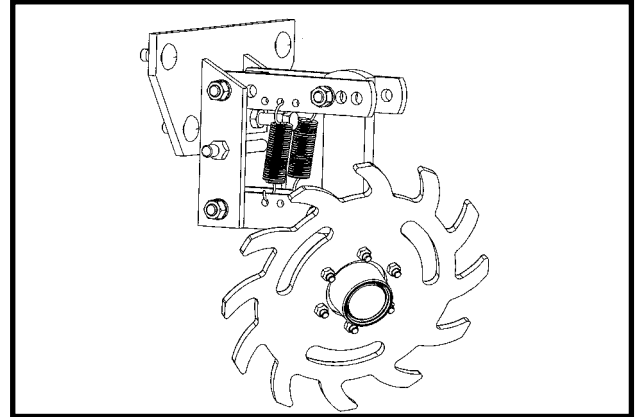


# ROW UNIT OPERATION


Two adjustable springs on the parallel links on each residue wheel allow for down force adjustment. Position 1 as shown below provides minimum down pressure and position 3 maximum down pressure.

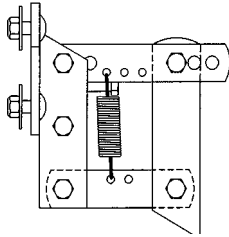

**Position 1 (Minimum)** (PLTR31a)

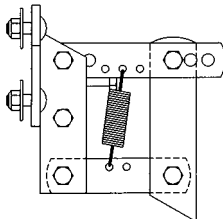


**Position 2** (PLTR32a)

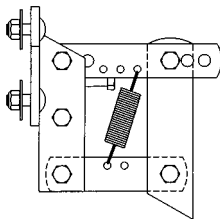

**Position 3 (Maximum)** (PLTR33a)


For additional uplift or float, position springs as shown below.

(PLTR34a)

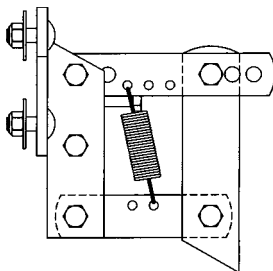

To adjust down force springs, raise the row unit out of the ground and reposition springs as shown for the desired down pressure.


D101701112

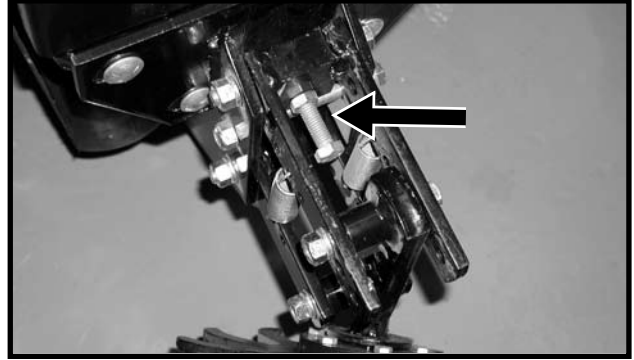

A full threaded bolt and jam nut located on the upper link allows maximum depth to be set for loose soil conditions. Initial setting should be 1 3/4" above the depth of the row unit double disc opener.


Three holes in the upper link allow for wheel angle adjustment. With the wheel mount in the most vertical position, using the rear hole in the upper link, the residue wheel is most aggressive. Moving the wheel mount to one of the forward holes reduces the aggressiveness of the wheel for use in mulch till applications where the soil is loose.

D101701202

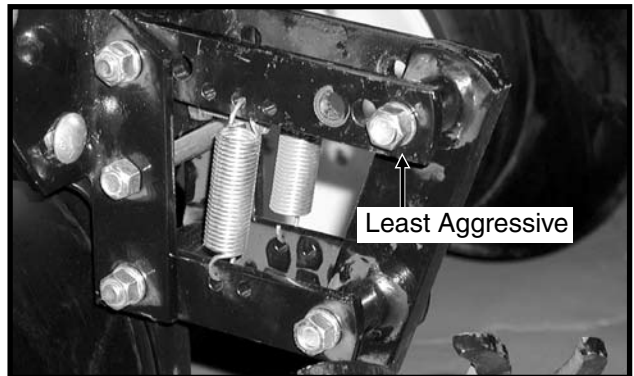

To lock the residue wheel up out of the ground, remove the 1/2" x 5" lockup bolt, raise the residue wheel and install bolt.

D011701203

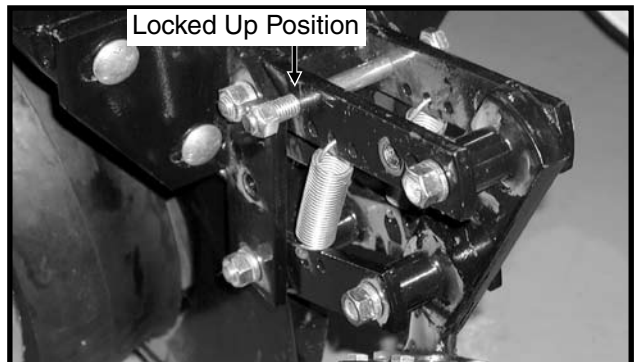

# ROW UNIT OPERATION

---

## ROW UNIT MOUNTED NO TILL COULTER

D05170706a



Row unit mounted no till coulters with 1" bubbled, 1" fluted (8 flutes) or 3/4" fluted (13 flutes) blades may be used on pull row units and push row units. (3/4" fluted shown)

Four quick adjustable down force springs are required per row when using row unit mounted no till coulters. See "Quick Adjustable Down Force Springs".

For proper operation, the coulters blade should be aligned in relation to the row unit double disc openers. The coulters assembly can be adjusted by loosening the four attaching bolts, moving coulters arm to align and tightening the four attaching bolts.

The coulters blade can be adjusted to one of four 1/2" incremental settings in the forked arm. Initial location of the coulters is in the top hole. As the coulters blade wears, the blade should be adjusted downward to one of the three lower settings to maintain the coulters blade at or slightly below the opener discs. In very hard soil conditions such as compacted wheel tracks, opener penetration and cutting of surface residue may be improved by adjusting the coulters to operate below the depth of the double disc opener blades.

Operating depth can be checked by setting the planter down on a level concrete floor and checking the relationship between the coulters blade and row unit opener blade. Make sure the planter is level and coulters is square with the planter frame and aligned with the row unit disc opener.

**NOTE: Torque 5/8" spindle hardware to 120 ft. lbs.**

# ROW UNIT OPERATION

## COULTER MOUNTED RESIDUE WHEELS


D05170708a



Coultter mounted residue wheels are designed for use on pull row units and push row units. Row unit extension brackets are required on the four center pull row units if the planter is equipped with coultter mounted residue wheels.

The coultter mounted residue wheels are attached to the row unit mounted no till coultter with one cap screw and sleeve allowing the unit to free-float. A 2-position spindle bolt mounting allows the tined wheels to be mounted interlocked or staggered. A lock nut on the inside of the mount locks the spindle cap screw. Depth adjustment is made using a spring-loaded cam and pin with 11 positions in  $\frac{1}{4}$ " increments. A high point on the cam allows the wheels to be locked up so they do not contact the ground. A weed guard, located on the inboard side of each wheel, aids in the prevention of weed wrap which can cause premature bearing failure.

(RU153a)

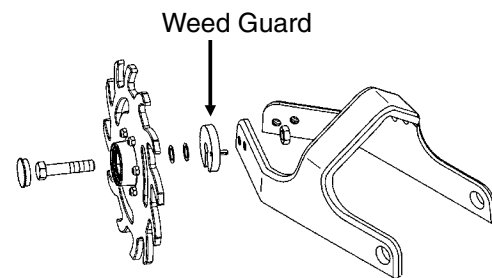

**NOTE: Opening in weed guard must point down.**

# ROW UNIT OPERATION

## GRANULAR CHEMICAL HOPPER AND DRIVE

LF212299-6



The granular chemical hopper has a 1.4 cubic feet capacity.

Be sure no foreign objects get into the hopper when it is being filled. Replace the hopper lids after filling the hoppers to prevent the accumulation of dirt and moisture.


The metering gate located on the bottom of the hopper regulates the application rate. See “Dry Insecticide And Dry Herbicide Application Rate Charts” in this manual. Calibrate using the chemical manufacturers’ instructions.



**WARNING: Agricultural chemicals can be dangerous. Improper selection or use can seriously injure persons, animals, plants, soil or other property. BE SAFE: Select the right chemical for the job. Handle it with care. Follow the instructions on the container label and of the equipment manufacturer.**

The granular chemical clutch drive coupler and meter shaft can be disengaged and engaged by turning the throwout knob located at the rear of the hopper support panel. To engage the drive, turn the knob ¼ turn clockwise. To disengage the drive, turn the knob ¼ turn counterclockwise. Slotted holes in the hopper support panel and clutch housing allow for alignment adjustment between the clutch drive coupler and meter shaft.


LF212299-4

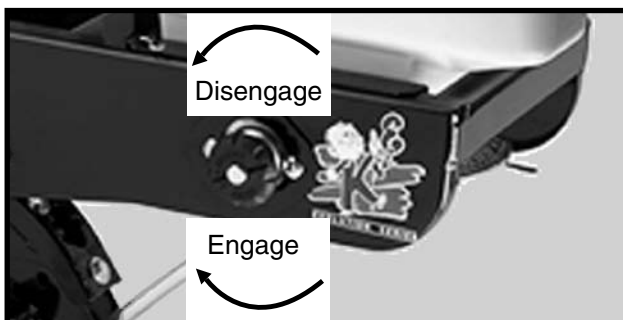


## GRANULAR CHEMICAL BANDING OPTIONS

Granular chemical banding options allow 4 ½" slope-compensating banding, straight drop in-furrow placement or 14" rear banding.


**NOTE: The granular chemical rear bander is not compatible with the covering discs/single press wheel option.**

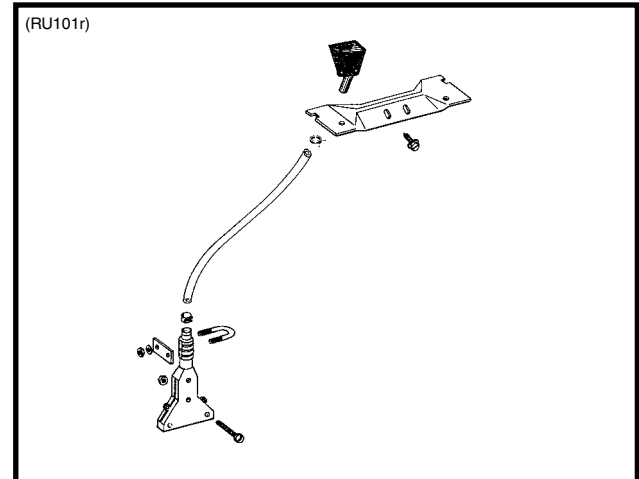

4 ½" Slope-Compensating Bander

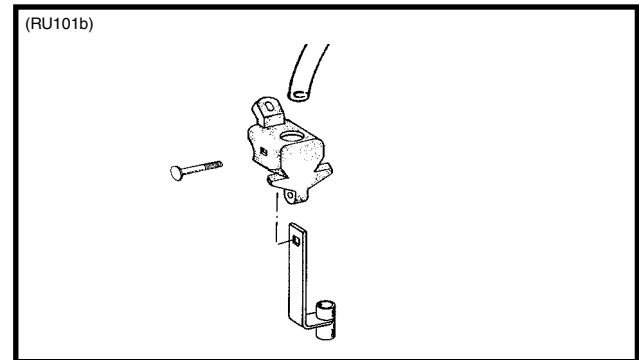

Straight Drop In-Furrow Placement

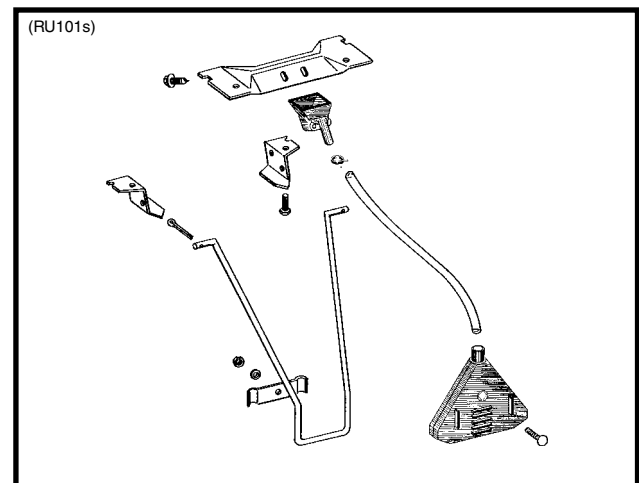


14" Rear Banding

# ROW UNIT OPERATION

## GRANULAR CHEMICAL BANDER SHIELD

The optional granular chemical banded shield is designed to be installed onto the underside of the wheel arm stop to shield crop residue from lodging in the granular chemical bander.

(RU83m)

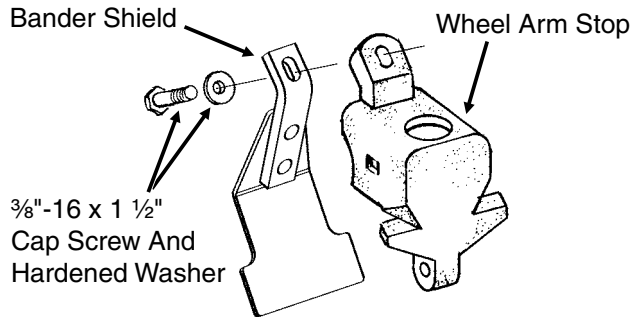


## SPRING TOOTH INCORPORATOR

The spring tooth incorporator smooths the soil behind the row unit and incorporates granular chemicals. The two mounting chains on each spring tooth incorporator should be adjusted so there is approximately 1/8" slack in the chain when the unit is lowered to planting position.

**NOTE: The spring tooth incorporator is not compatible with the covering discs/single press wheel option.**

LF212299-26

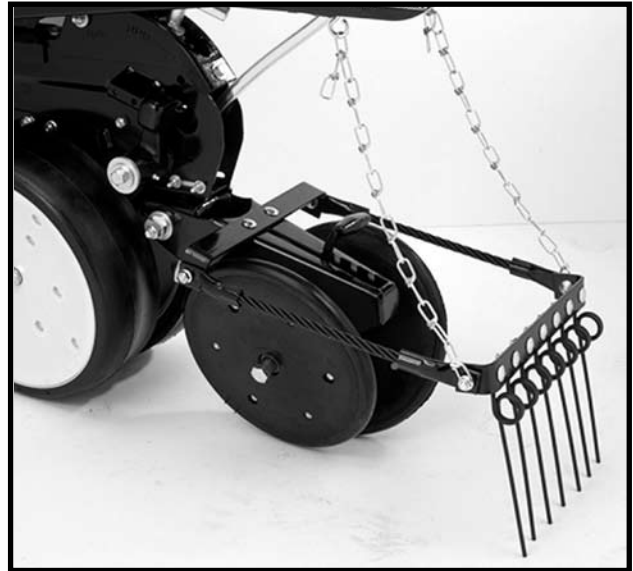

# ROW UNIT OPERATION

---





# LUBRICATION

The following pages show the locations of all lubrication points. Proper lubrication of all moving parts will help ensure efficient operation of your KINZE® planter and prolong the life of friction producing parts.



**WARNING:** Always install safety lockup devices or lower the planter to the ground before working under or around the machine.

## LUBRICATION SYMBOLS

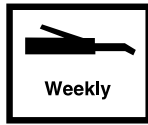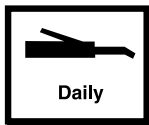


Lubricate at frequency indicated with an SAE multipurpose grease.



Lubricate at frequency indicated with a high quality SAE 10 weight oil or a quality spray lubricant.

## SEALED BEARINGS

LF212199-3

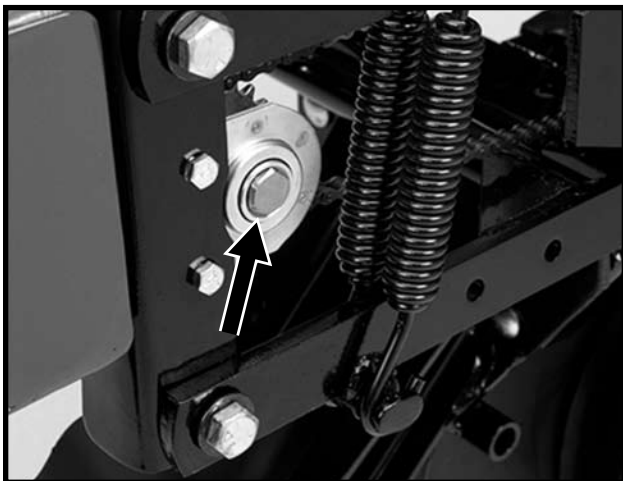


A number of sealed bearings are used on your KINZE® planter to provide trouble free operation. These are located in such areas as the drive shaft, row units and transmission bearings. Sealed bearings are lubricated for life. Due to the seals, relubrication is not practical.

## AIR CLUTCHES

Lubricate air clutches every 75-100 hours.

Using a Phillips head screw driver remove the Phillips screw as shown and spray a 1-2 second burst of silicone spray into each clutch, then insert and retighten the screws.

D06060802

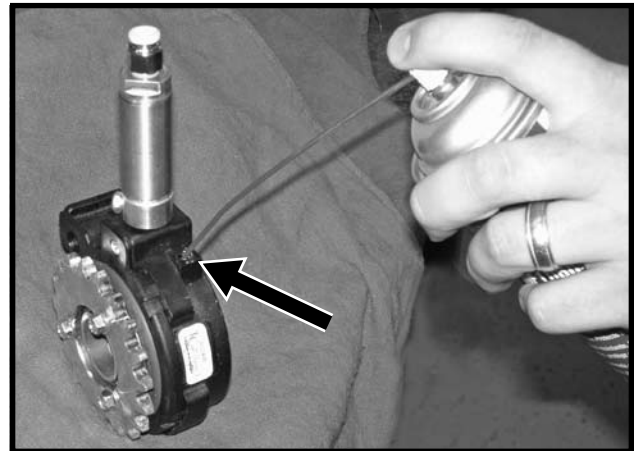


# LUBRICATION

## DRIVE CHAINS


All drive chains should be lubricated daily with a high quality chain lubricant. Extreme operating conditions such as dirt, temperature or speed may require more frequent lubrication. If a chain becomes stiff, it should be removed, soaked and washed in solvent to loosen and remove dirt from the joints. Then soak the chain in oil so the lubricant can penetrate between the rollers and bushings.

D051705103

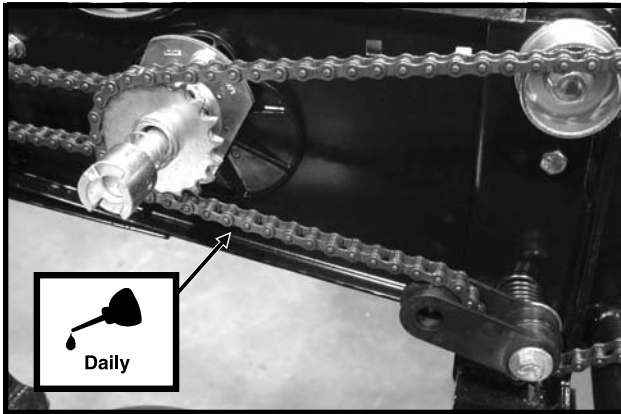


**Pull Row Unit Drive Chains**

D051705102

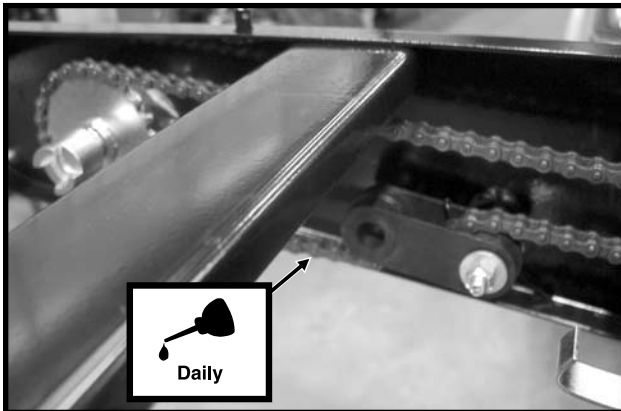


**Row Unit Granular Chemical Drive Chains**

(FWD149)

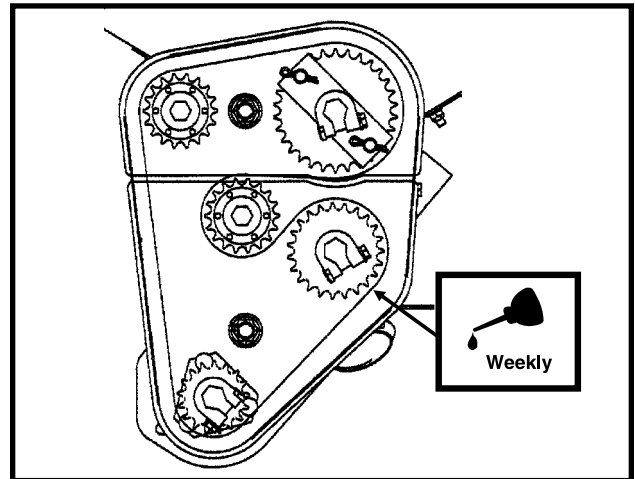

**SDS Drive Chains**

D05230703(TWL219c)

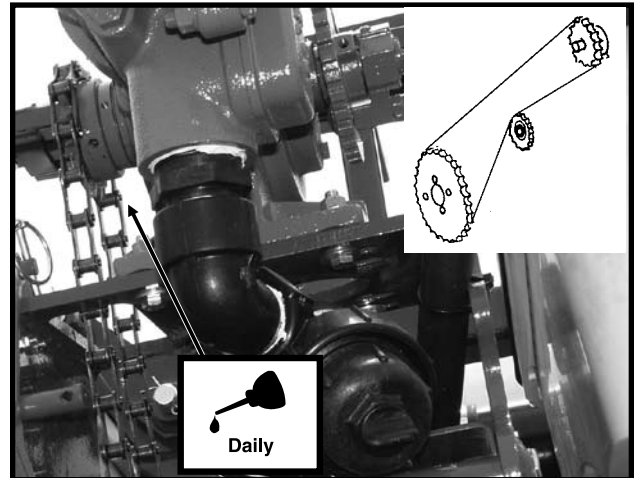

**Liquid Fertilizer Drive Chain (Piston Pump)**


# LUBRICATION

## BUSHINGS

Lubricate bushings at the frequency indicated.

Using a torque wrench, check each bolt for proper torque. If bolt is loose, it should be removed and the bushing inspected for cracks and wear. Replace bushing if necessary. **Only hardened flat washers should be used. Replace damaged flat washers with proper part. Torque hardware to 130 ft. lbs.**

D06300305

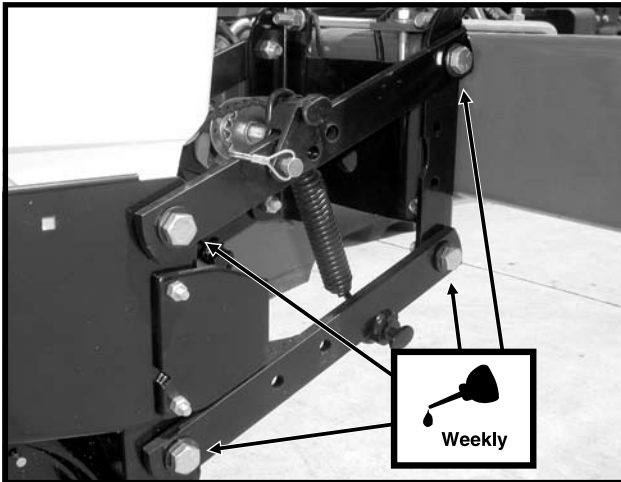


**Pull Row Unit Parallel Linkages (8 Per Row)**

LF212299-22



**Row Unit Mounted Disc Furrower Parallel Linkages (6 Per Row)**

LF212199-2

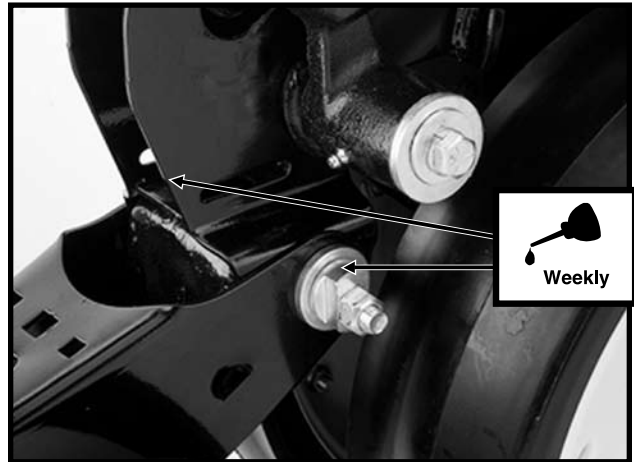


**Row Unit "V" Closing Wheel, Covering Discs/ Single Press Wheel And/Or Drag Closing Wheel Eccentric Bushings (2 Per Row)**

# LUBRICATION

## PTO SHAFT ASSEMBLY

D01290844

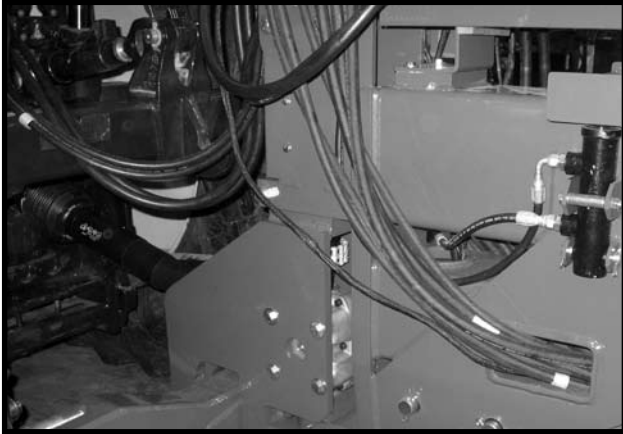

**IMPORTANT:** The PTO assembly should be cleaned and greased each time the PTO is installed.

**IMPORTANT:** To extend life of shaft splines, apply a coating of high-speed industrial coupling grease, such as Chevron® Coupling Grease, that meets AGMA CG-1 and CG-2 Standards.

*(The Chevron® trademark is owned by Chevron Products Company. AGMA is the acronym for the American Gear Manufacturers Association)*

## WHEEL BEARINGS

The transport wheel hubs are equipped with grease fittings. Pump grease into the hub until grease comes out around the seals. See “Grease Fittings” for lubrication frequency.

All wheel bearings should be repacked annually and checked for wear. This applies to all drive wheels, transport wheels and marker hubs.

To check for wear, lift the wheel off the ground. Check for endplay in the bearings by moving the tire in and out. Rotate the tire to check for roughness in the bearings. If bearings sound rough, the hub should be removed and the bearings inspected and replaced if necessary. See Maintenance section.

To repack wheel hubs, follow the procedure outlined for wheel bearing replacement with the exception that bearings and bearing cups are reused.

## HITCH SLIDE ASSEMBLY (If Applicable)


If the hitch does not extend or retract smoothly, extend the hitch and spray the inner slide area using a heavy duty aerosol grease lubricant.

# LUBRICATION

---

## LIQUID FERTILIZER PISTON PUMP CRANKCASE OIL LEVEL

(A12330a)

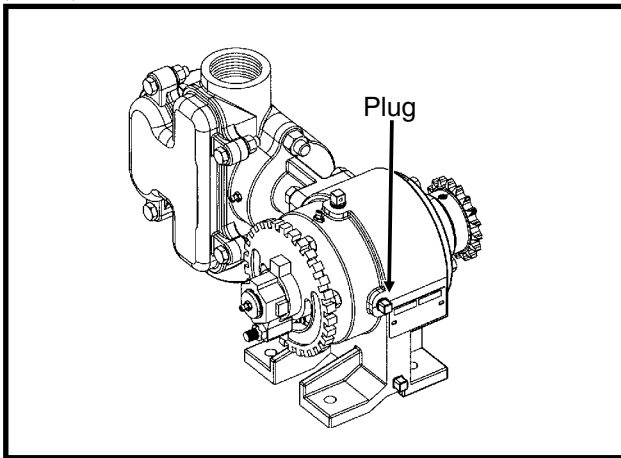

Check crankcase oil daily and maintain at plug level. Fill as needed with EP 90 weight gear oil. Total oil capacity is approximately  $\frac{3}{4}$  pint.

Refer to operator and instruction manual supplied with the pump and flow divider for additional information.

## GREASE FITTINGS


Those parts equipped with grease fittings should be lubricated at the frequency indicated with an SAE multipurpose grease. Be sure to clean the fitting thoroughly before using grease gun. The frequency of lubrication recommended is based on normal operating conditions. Severe or unusual conditions may require more frequent attention.



**WARNING: Always install safety lockup devices or lower the planter to the ground before working under or around the machine.**


# LUBRICATION

D01050702

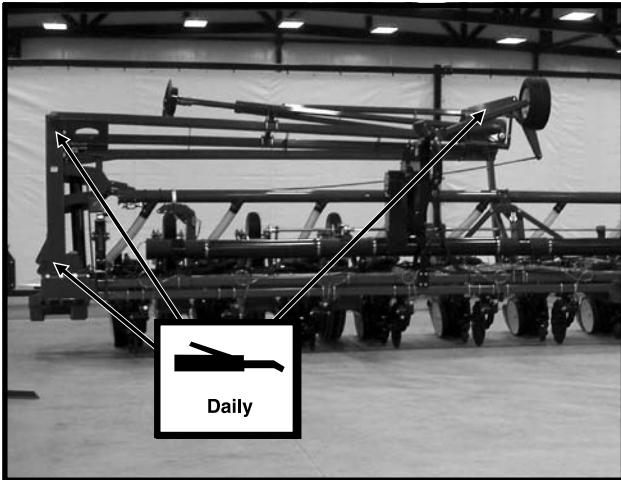


1. Row Marker Assemblies - 11 Zerks Per Assembly On 24 Row 30"

(FWD173)

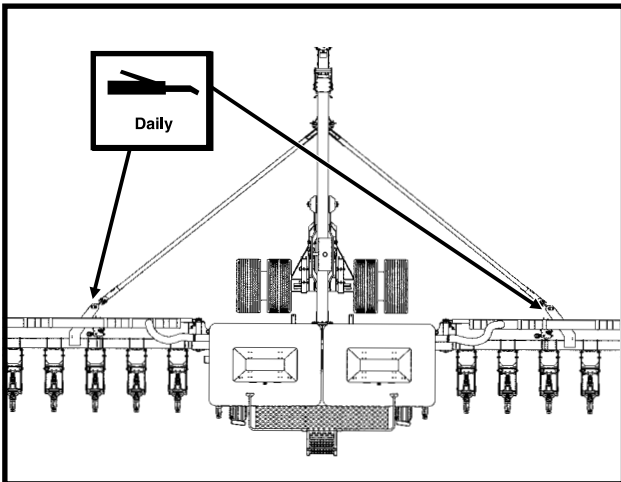


2. Wing Linkage Pivot - 1 Zerk Per Wing

D033104100

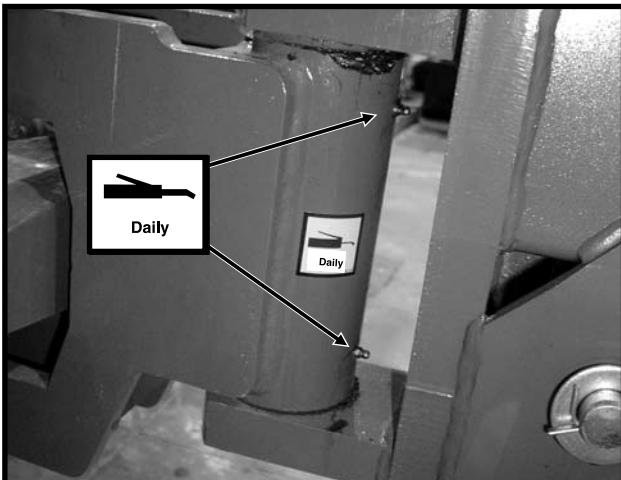

3. Hitch Pivot - 2 Zerks

D01050708

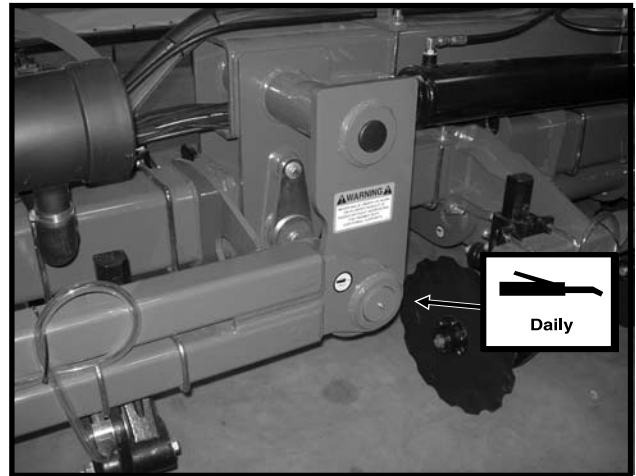


4. Outer End Of Stub Wing - 3 Zerks Per Assembly

D081905101



5. Inner End Of Stub Wing - 2 Zerks Per Assembly


D032404143

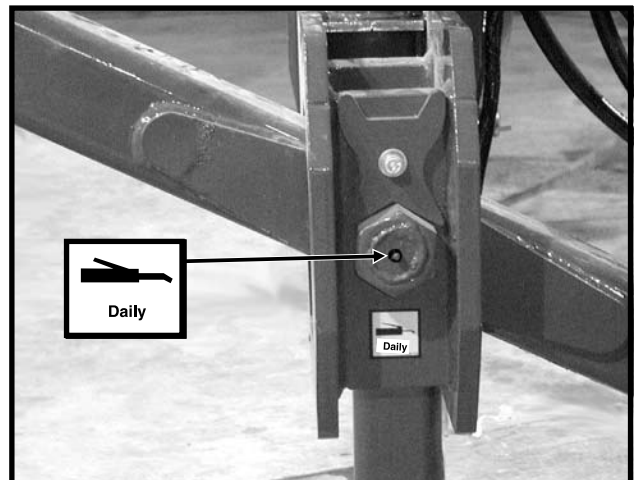

6. Hitch Pivot Pin - 1 Zerk

# LUBRICATION

D040204102

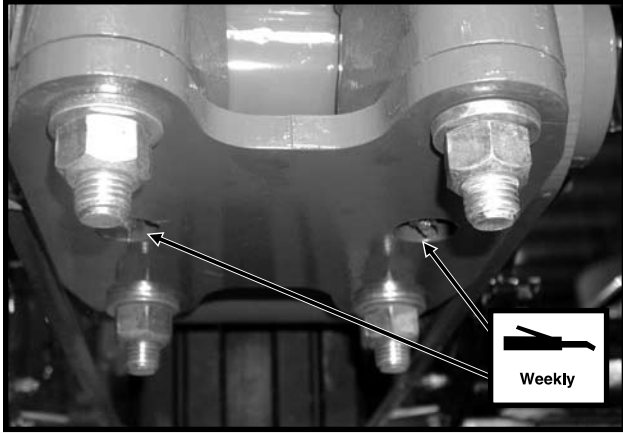


7. Center Section Lift Axle Pivot - 2 Zerks Per Wheel Assembly

72495-5




10. Transport Wheel Bearings - 1 Zerk Per Hub

D033104113

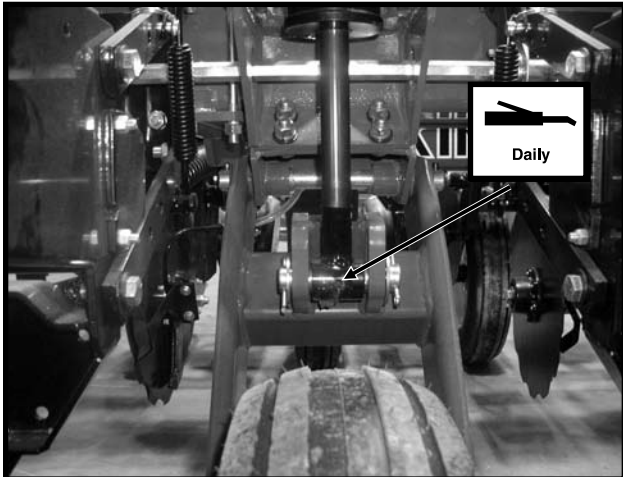


8. Wing Lift Cylinders - 1 Zerk Per Cylinder

D040204105

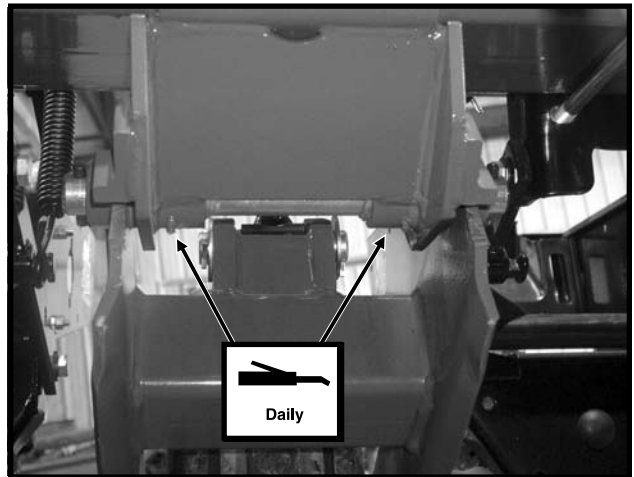

11. Wing Wheel Pivot - 2 Zerks Per Wheel Module


D033104112

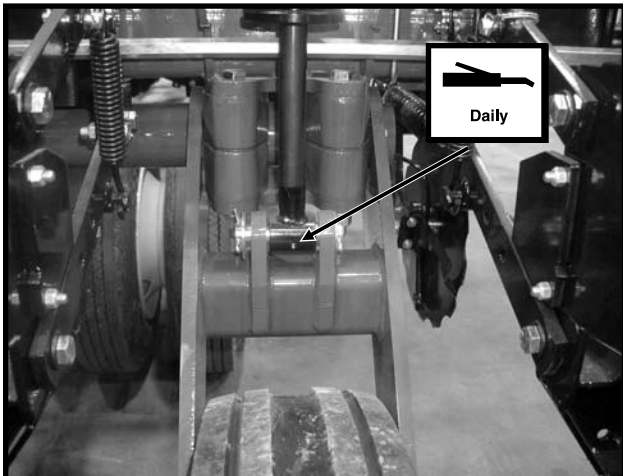

9. Center Section Lift Cylinders - 1 Zerk Per Cylinder


# LUBRICATION

D032404124

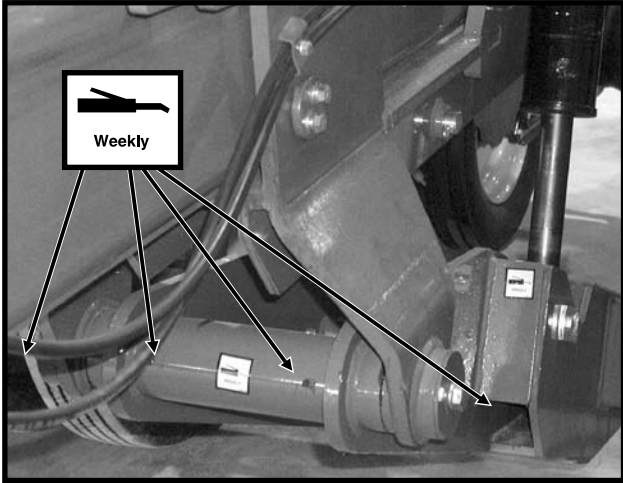

13. Transport Axle Pivot - 4 Zerks

(FWD124a

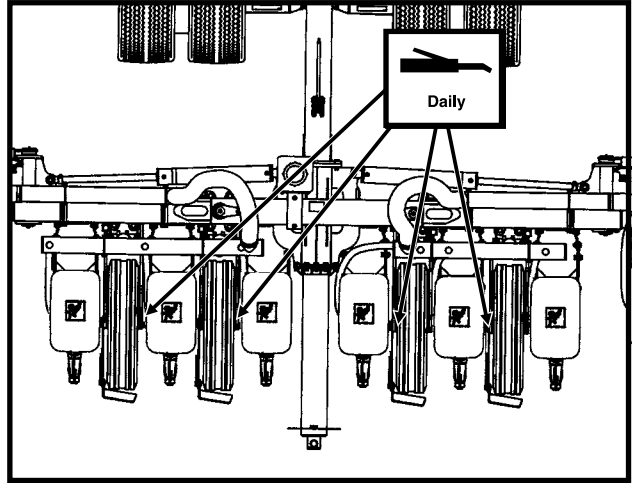

16. Rock Shaft Wheel Hub Assembly - 1 Zerk Per Hub

D081905101




17. U-Joint Shaft Between Center Section And Wing - 1 Zerk On Each End Of U-Joint Shafts (2 Per U-Joint Shaft)




# LUBRICATION

D01290834

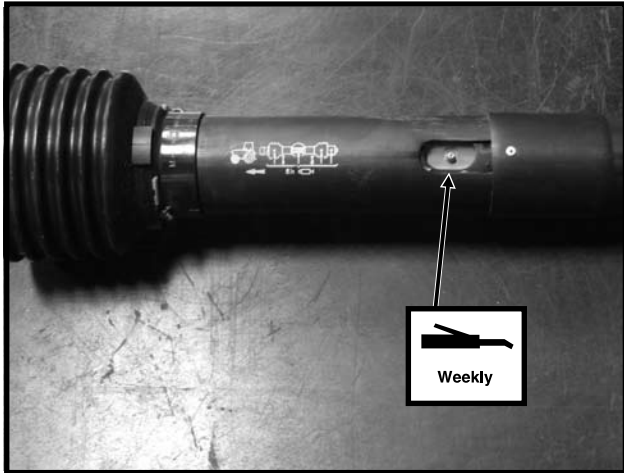

20. PTO Assembly- 1 Zerk


D02808101

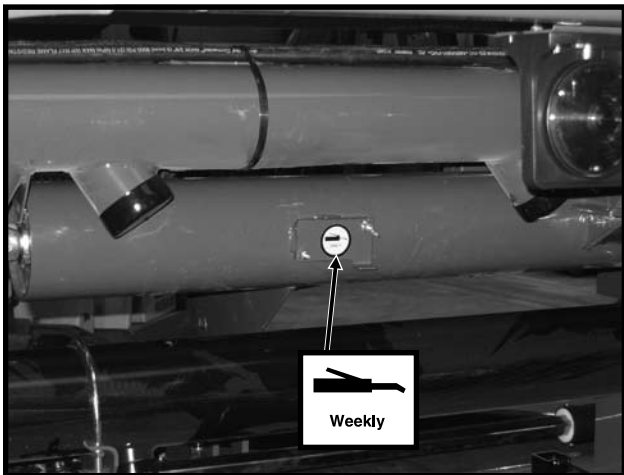

21. SDS Auger Shaft - 1 Zerk On Each Side Of Planter


## Row Unit

LF212199-2

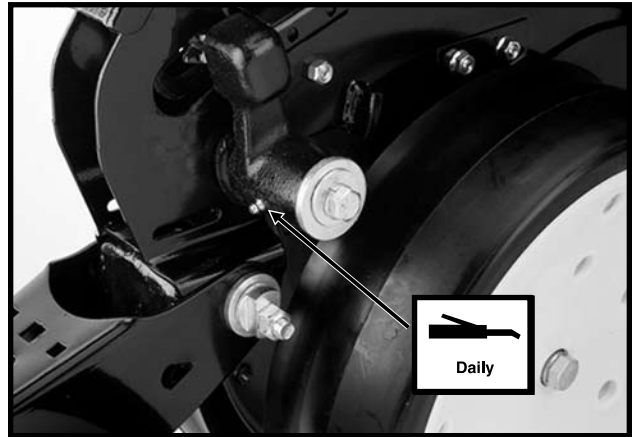

Gauge Wheel Arms - 1 Zerk Per Arm  
**(Seals in gauge wheel arm are installed with lip facing out to allow grease to purge dirt away from seal. Pump grease into arm until fresh grease appears between washers and arm.)**

LF083002101

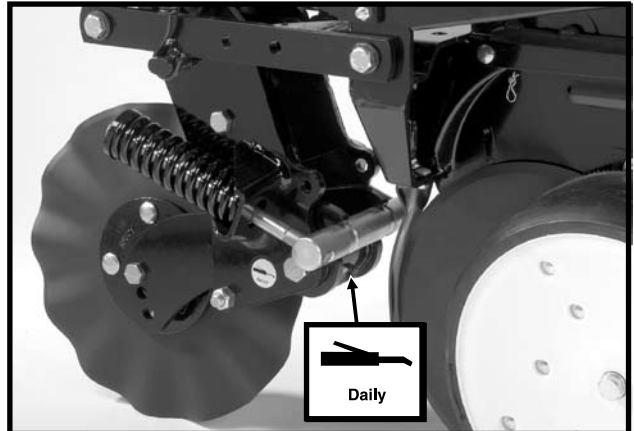


Frame Mounted Coulter - 1 Zerk Per Arm

# LUBRICATION

## Fertilizer Openers


D040704104

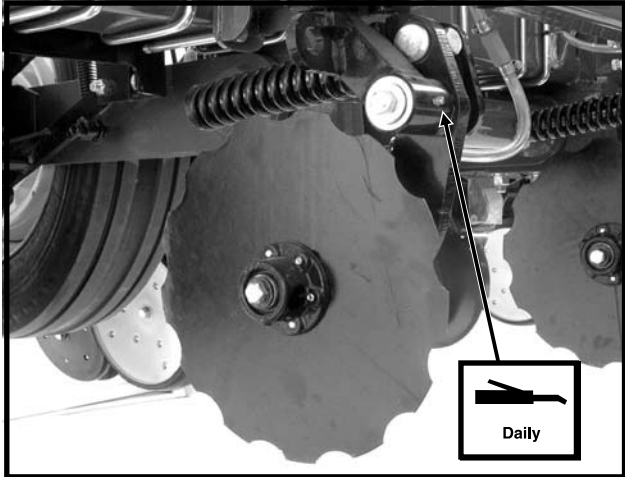

Notched Single Disc Fertilizer Opener - 1 Zerk

## Liquid Fertilizer Piston Pump

(A12330a)

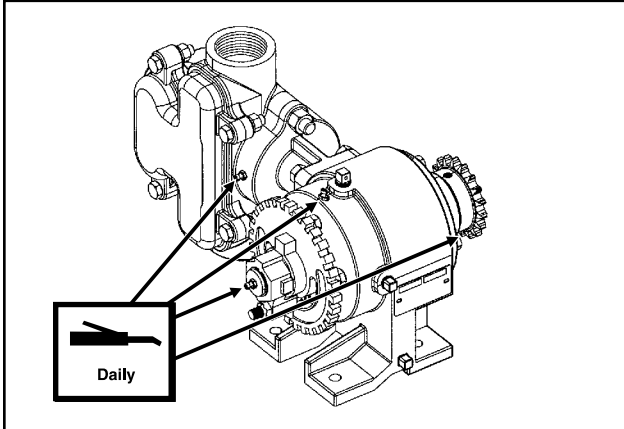

Liquid Fertilizer Piston Pump - 4 Zerks (**Fill zerk on outboard stuffing box until lubricant seeps out of drain hole in bottom.**)

# MAINTENANCE

## MOUNTING BOLTS AND HARDWARE

Before operating the planter for the first time, check to be sure all hardware is tight. Check all hardware again after approximately the first 50 hours of operation and at the beginning of each planting season thereafter.

All hardware used on the KINZE® planter is Grade 5 (high strength), unless otherwise noted. Grade 5 cap screws are marked with three radial lines on the head. If hardware must be replaced, be sure to replace it with hardware of equal size, strength and thread type. Refer to the torque values chart when tightening hardware.

**Row Unit Parallel Linkage Bushing Hardware - 130 Ft. Lbs.** (See “Bushings” in the Lubrication Section of this manual.)

**5/8" No Till Coulter Spindle Hardware - 120 Ft. Lbs.**

**Transport Tire Flange Nuts - 350 Ft. Lbs.**

**Transport Tire (W/Duals) Cap Screws - 160 Ft. Lbs.**

**Center Section Lift/Gauge Tire Lug Nuts - 180 Ft. Lbs.**

**Wing Lift/Gauge Tire Lug Bolts - 90 Ft. Lbs.**


**3 Point Hitch Adapter Pin And Pivot Bolt - 550 Ft. Lbs.**

**IMPORTANT:** Over tightening hardware can cause as much damage as under tightening. Tightening hardware beyond the recommended range can reduce its shock load capacity.



**WARNING:** Before operating the planter for the first time and periodically thereafter, check to be sure the lug nuts on the transport wheels are tight. This is especially important if the planter is to be transported for a long distance.

**IMPORTANT:** Torque setting for 5/8"-18 hex jam nut that secures fan impellor assembly to motor shaft is 50 ft. lbs.

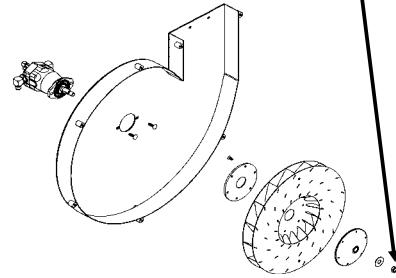

### TORQUE VALUES CHART - PLATED HARDWARE

| Bolt Diameter | Grade 2      |              | Grade 5       |               | Grade 8       |               |
|---------------|--------------|--------------|---------------|---------------|---------------|---------------|
|               | Coarse       | Fine         | Coarse        | Fine          | Coarse        | Fine          |
| 1/4"          | 50 In. Lbs.  | 56 In. Lbs.  | 76 In. Lbs.   | 87 In. Lbs.   | 9 Ft. Lbs.    | 10 Ft. Lbs.   |
| 5/16"         | 8 Ft. Lbs.   | 9 Ft. Lbs.   | 13 Ft. Lbs.   | 14 Ft. Lbs.   | 18 Ft. Lbs.   | 20 Ft. Lbs.   |
| 3/8"          | 15 Ft. Lbs.  | 17 Ft. Lbs.  | 23 Ft. Lbs.   | 26 Ft. Lbs.   | 33 Ft. Lbs.   | 37 Ft. Lbs.   |
| 7/16"         | 25 Ft. Lbs.  | 27 Ft. Lbs.  | 37 Ft. Lbs.   | 41 Ft. Lbs.   | 52 Ft. Lbs.   | 58 Ft. Lbs.   |
| 1/2"          | 35 Ft. Lbs.  | 40 Ft. Lbs.  | 57 Ft. Lbs.   | 64 Ft. Lbs.   | 80 Ft. Lbs.   | 90 Ft. Lbs.   |
| 9/16"         | 50 Ft. Lbs.  | 60 Ft. Lbs.  | 80 Ft. Lbs.   | 90 Ft. Lbs.   | 115 Ft. Lbs.  | 130 Ft. Lbs.  |
| 5/8"          | 70 Ft. Lbs.  | 80 Ft. Lbs.  | 110 Ft. Lbs.  | 125 Ft. Lbs.  | 160 Ft. Lbs.  | 180 Ft. Lbs.  |
| 3/4"          | 130 Ft. Lbs. | 145 Ft. Lbs. | 200 Ft. Lbs.  | 220 Ft. Lbs.  | 280 Ft. Lbs.  | 315 Ft. Lbs.  |
| 7/8"          | 125 Ft. Lbs. | 140 Ft. Lbs. | 320 Ft. Lbs.  | 350 Ft. Lbs.  | 450 Ft. Lbs.  | 500 Ft. Lbs.  |
| 1"            | 190 Ft. Lbs. | 205 Ft. Lbs. | 480 Ft. Lbs.  | 530 Ft. Lbs.  | 675 Ft. Lbs.  | 750 Ft. Lbs.  |
| 1 1/8"        | 265 Ft. Lbs. | 300 Ft. Lbs. | 600 Ft. Lbs.  | 670 Ft. Lbs.  | 960 Ft. Lbs.  | 1075 Ft. Lbs. |
| 1 1/4"        | 375 Ft. Lbs. | 415 Ft. Lbs. | 840 Ft. Lbs.  | 930 Ft. Lbs.  | 1360 Ft. Lbs. | 1500 Ft. Lbs. |
| 1 3/8"        | 490 Ft. Lbs. | 560 Ft. Lbs. | 1100 Ft. Lbs. | 1250 Ft. Lbs. | 1780 Ft. Lbs. | 2030 Ft. Lbs. |
| 1 1/2"        | 650 Ft. Lbs. | 730 Ft. Lbs. | 1450 Ft. Lbs. | 1650 Ft. Lbs. | 2307 Ft. Lbs. | 2670 Ft. Lbs. |

**NOTE:** Unplated hardware and bolts with lock nuts should be torqued approximately 1/3 higher than the above values. Bolts lubricated prior to installation should be torqued to 70% of value shown in chart.



**GRADE 2**  
No Marks



**GRADE 5**  
3 Marks



**GRADE 8**  
6 Marks

### TORQUE VALUES- ALUMINUM


| Bolt Diameter | Torque Value     |
|---------------|------------------|
| 1/8"          | 180-220 In. Lbs. |
| 3/4"          | 350-400 In. Lbs. |
| 1/2"          | 350-400 In. Lbs. |
| 3/8"          | 350-380 In. Lbs. |

**NOTE:** These torque values are to be used with pneumatic down pressure components.

# MAINTENANCE


## TIRE PRESSURE

(FWD173)

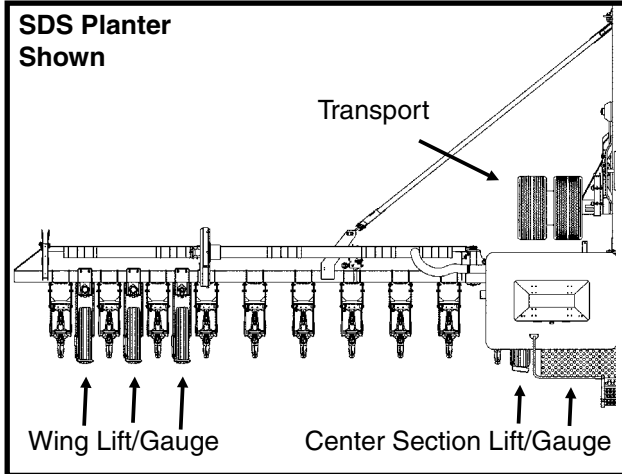

Tire pressure should be checked regularly and maintained as follows:

- (4) 41 x 11R22.5" Radial Load Range H  
(Center Section Lift/Gauge)..... 75 PSI
- (6-12) 7.50" x 20" 8 Ply Custom Rib Implement  
(Wing Lift/Gauge) ..... 40 PSI
- (2-4) 445-50R22.5R Radial Load Range H  
(Transport) ..... 120 PSI
- (2) 20.5 x 8.0-10 (Marker)..... 35 PSI
- (2) 7.60" x 15" Rib Implement  
(Liquid Fertilizer Piston Pump) ..... 40 PSI

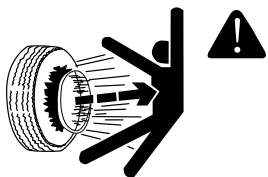

**DANGER: Rim and tire servicing can be dangerous. Explosive separation of tire and rim parts can cause serious injury or death.**

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. This should only be done by persons properly trained and equipped to do the job.

Always maintain the correct tire pressures. Do not inflate the tires above the recommended pressures.

When inflating tires, use a clip-on air chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage to enclose the tire and rim assembly when inflating.

Inspect tires and wheels daily. Do not operate with low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

# MAINTENANCE

---

## PTO PUMPS AND OIL COOLERS

Drain the reservoirs and change filters annually.

Refill system with a SAE 10W-20 multigrade wide temperature range transmission hydraulic fluid.

Reservoirs are supplied with a drain hose to allow easy draining.

Replace filters with high quality 10 micron filters.

Start the system and allow to run with tractor at idle and the fans turned off for 1-2 minutes. Allow to run with tractor at idle and the fans at full speed for 1-2 minutes. Check reservoir fluid level and fill as required. Hydraulic fluid level should be within 2" from the top of the reservoir after the pumps have run and hydraulic hoses have been primed to allow the fluid to expand when heated. Bring tractor to PTO speed and adjust flow control to the desired vacuum level using the switches on the vacuum fan control console.

## PTO PUMPS AND OIL COOLERS TROUBLESHOOTING

| PROBLEM                               | POSSIBLE CAUSE  | SOLUTION                             |
|---------------------------------------|---|--------------------------------------|
| Pump is squealing.                    | Lack of oil to pump.                                  | Check oil level.                     |
| Oil temperature is high.              | Low oil level.  | Check oil level and add as required. |
|                                       | Coolers plugged not allowing oil to flow across them. | Wash or blow off coolers.            |
| Desired fan speed cannot be achieved. | Low oil level.  | Check oil level and add as required. |
|                                       | Plugged filter.                                       | Check and change as required.        |
| Vacuum level is not displayed.        | Digital vacuum gauge console power is OFF.            | Turn ON.                             |
|                                       | Cable not plugged in.                                 | Check connection.                    |
|                                       | Digital vacuum gauge console has no power.            | Check fuse.                          |

# MAINTENANCE

## CLOSING WHEEL TROUBLESHOOTING

| PROBLEM  | POSSIBLE CAUSE                            | SOLUTION  |
|--|---|---|
| Closing wheel(s) leave severe imprint in soil.   | Too much closing wheel down pressure.     | Adjust closing wheel pressure.  |
| Closing wheel(s) not firming soil around seed.   | Insufficient closing wheel down pressure. | Adjust closing wheel pressure. Severe no till conditions may require use of cast iron closing wheels. |
| “V” closing wheel running on top of seed furrow. | Improper centering.                       | Align. See “V Closing Wheel Adjustment”.  |
| Single closing wheel not directly over seed.     | Improper centering.                       | Align. See “Covering Discs/Single Press Wheel Adjustment”.  |


## DRAG CLOSING ATTACHMENT

LF212299-18



Prior to storage of the planter, inspect each drag closing attachment and replace any worn or broken parts. Check for loose hardware and tighten as needed.

LF212199-2

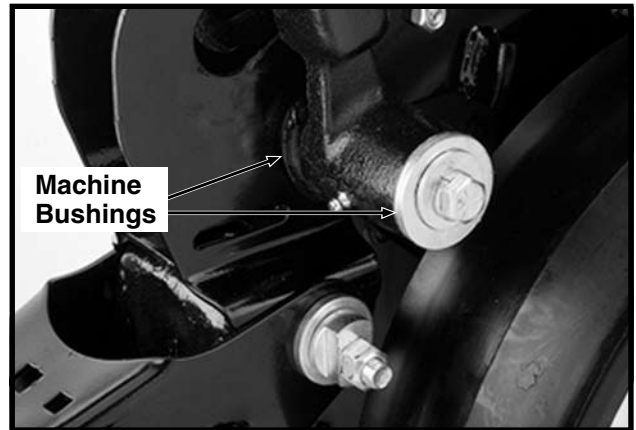


(RU113g)

## GAUGE WHEEL ADJUSTMENT

To prevent an accumulation of dirt or trash, gauge wheels should lightly contact the opener blades. Gauge wheels and opener blades should turn with only slight resistance.

To adjust clearance between gauge wheels and opener blades, add or remove machine bushings between the shank and gauge wheel arm. Store remaining machine bushings between gauge wheel arm and flat washer on outer side of gauge wheel arm.

**NOTE:** It may be desirable to space gauge wheel further from blade when operating in sticky soils.

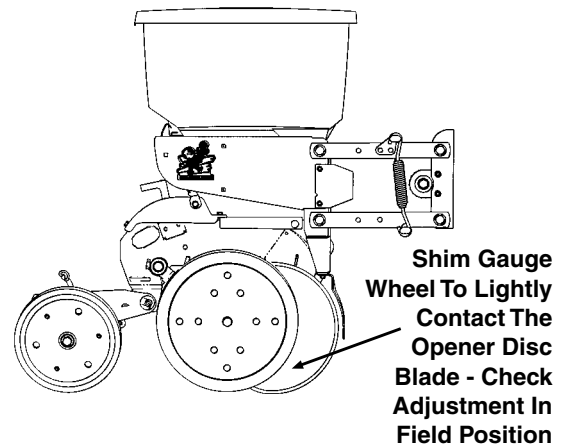


# MAINTENANCE

## GAUGE WHEEL ARM BUSHING AND/OR SEAL REPLACEMENT

(RU113g)

Gauge Wheel Arm Bushings/Seals

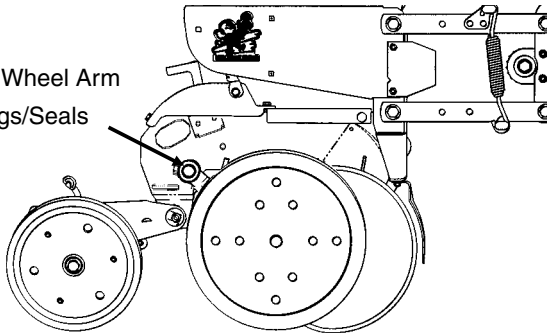


**NOTE: A Gauge Wheel Arm Bushing And Seal Driver Kit (G1K296), for use in bushing and seal replacement, is available through your KINZE® Dealer.**

### To replace gauge wheel arm assembly bushing(s) and/or seal(s):

1. Remove gauge wheel from arm.
2. Remove the gauge wheel arm assembly from the shank assembly.
3. Remove seal and bushing and discard. Clean and dry inner bore.

(A7975/RU122)

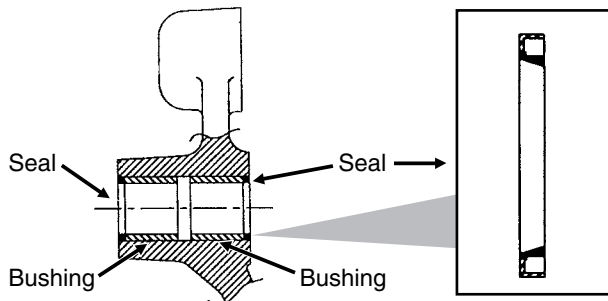

4. Drive/press replacement bushing inside bore of arm to a depth of .125" below flush.
5. Coat wiping edge of seal with grease.
6. Drive/press seal into place with lip to the outside as shown above.

**NOTE: Use extra care to protect the sealing lip during installation. Apply uniform pressure to assemble the seal into the bore of the arm. Never apply a direct hammer blow to the seal surface.**

7. Inspect gauge wheel pivot spindle.
8. Reinstall gauge wheel arm assembly and gauge wheel.


**NOTE: Special machine bushing between gauge wheel arm and gauge wheel.**

9. Shim for proper gauge wheel tire/disc blade clearance.
10. Lubricate with an SAE multipurpose grease.

## GAUGE WHEEL ARM PIVOT SPINDLE REPLACEMENT

(RU113g)


Gauge Wheel Pivot Spindle

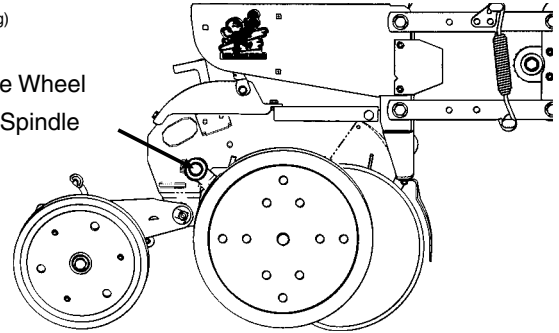

### To replace gauge wheel pivot spindle:


1. Remove the gauge wheel and arm assemblies from the shank assembly.
2. Remove 1/2" x 3/4" cap screw that locks the pivot spindle in place and remove the spindle.

D06189902

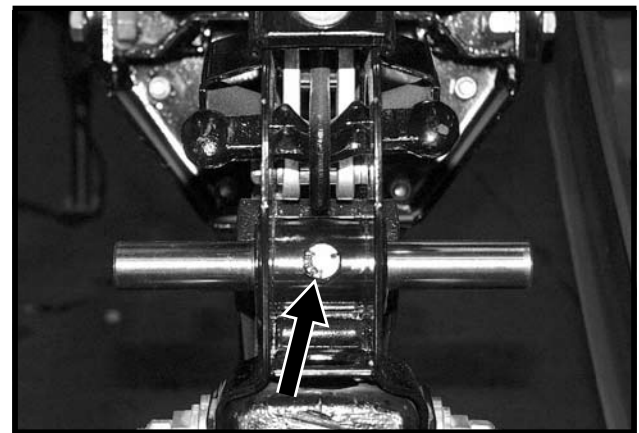

3. Install the replacement spindle and position as shown below. Exact centering is critical.

(A7966)

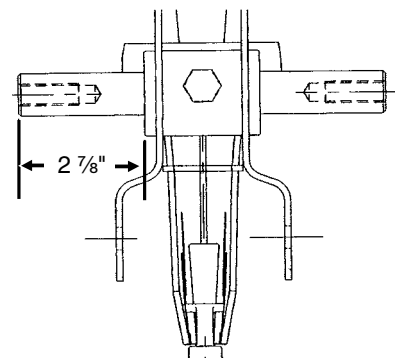

4. Install 1/2" x 3/4" cap screw and torque to lock pivot spindle in place.
5. Install gauge wheel and arm assemblies. Shim for proper gauge wheel tire/disc blade clearance.

# MAINTENANCE


## 15" SEED OPENER DISC BLADE/ BEARING ASSEMBLY

Approximately 1" - 1 1/2" of blade-to-blade contact should be maintained to properly open and form the seed trench. As the blade diameter decreases, due to wear, it will be necessary to relocate machine bushings from inside to outside to maintain approximately 1" - 1 1/2" of contact.

**NOTE: If proper blade-to-blade contact cannot be maintained after relocating machine bushings or if blade diameter wears below 14 1/2", the blades should be replaced.**

**IMPORTANT: Excessive blade contact may result in premature disc opener bearing/hub failures and excessive wear on seed tube guard/inner scraper. When properly adjusted, if one blade is held in fixed position, the opposite blade should be able to be rotated with minimal force (Less than 5 pounds force at outer edge of blade).**

(RU113g)

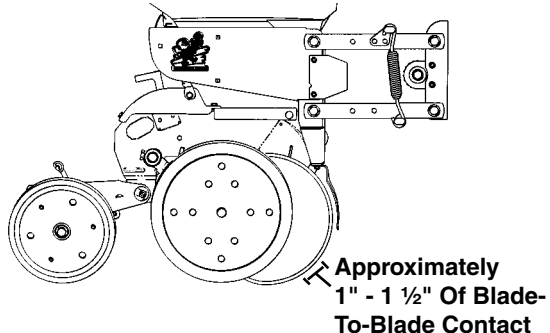

### To replace disc blade/bearing assembly:

1. Remove gauge wheel.
2. Remove scraper.
3. Remove bearing dust cap.
4. Remove cap screw, washer and disc blade/bearing assembly. The machine bushings between the shank and disc blade are used to maintain the approximate 1" - 1 1/2" of blade-to-blade contact.

**IMPORTANT: Left hand side of opener uses a left hand threaded cap screw. DO NOT OVERTIGHTEN. Damage to shank threads will require replacement of row unit shank assembly.**

5. Install machine bushing(s), new disc blade/bearing assembly, washer and cap screw. Torque 5/8"-11 Grade 5 cap screw to value shown in "Torque Values Chart".

**NOTE: Replace disc blades only with disc blades of equal thickness.**

6. Replace bearing dust cap.
7. Install scraper.
8. Install gauge wheel.

It may be necessary to replace only the bearing if there is excessive endplay or if the bearing sounds or feels rough when the disc blade is rotated.

### To replace bearing:

1. Remove gauge wheel, scraper, bearing cap, cap screw, washer and disc blade/bearing assembly.
2. Remove 1/4" rivets from bearing housing to expose bearing.
3. After installing new bearing, install three evenly spaced 1/4" cap screws into three of the six holes in the bearing housing to hold the bearing and bearing housing in place. Install rivets in the other three holes. Remove 1/4" cap screws and install rivets in those three holes.
4. Reinstall disc blade/bearing assembly, washer and cap screw. Torque 5/8"-11 cap screw to value shown in "Torque Values Chart" at the beginning of this section.
5. Replace bearing dust cap.
6. Install scraper and gauge wheel.




# MAINTENANCE

## SEED TUBE GUARD/INNER SCRAPER

The seed tube guard protects the seed tube and acts as the inner scraper for the seed opener disc blades.

Remove the seed tube and check for wear. Excessive wear on the seed tube indicates a worn seed tube guard. Replace the seed tube guard if it measures  $\frac{5}{8}$ " or less at the lower end. A new seed tube guard measures approximately  $\frac{7}{8}$ ".

LF212199-12

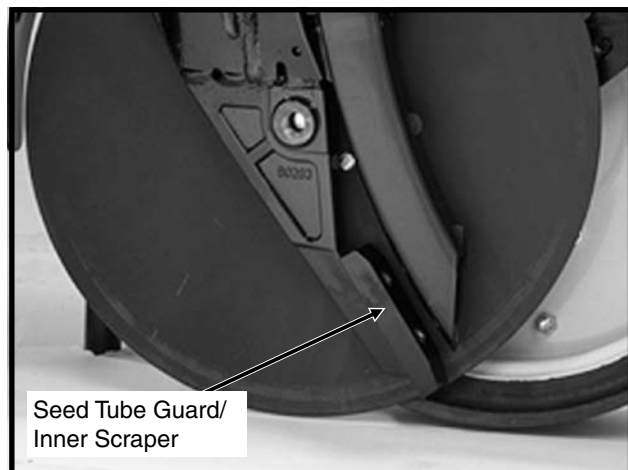

Shown With Gauge Wheel And Seed Opener Disc Blade Removed For Visual Clarity

**IMPORTANT: No till planting or planting in hard ground conditions, especially when the planter is not equipped with no till coulters, and/or excessive blade-to-blade contact will increase seed tube guard wear and necessitate more frequent inspection and/or replacement.**


To replace the seed tube guard, remove the seed tube and the two hex socket head cap screws which attach the seed tube guard. Hold the replacement seed tube guard centered between the seed opener disc blades. Install, but **DO NOT** tighten, the hex socket head cap screws. Using a clamp or vise-grip, squeeze the opener blades together in front of the seed tube guard. Tighten the seed tube guard retaining screws. Remove the clamps. The distance between the seed tube guard and opener blades should be equal on both sides. Reinstall seed tube.

**IMPORTANT: Over tightening the hex socket head cap screws may damage the threads in the shank and require replacement of the shank. A seed tube guard that is worn excessively may allow the blades to wear into the row unit shank, also requiring replacement of the shank.**

# MAINTENANCE

## FRAME MOUNTED COULTER

LF083002101

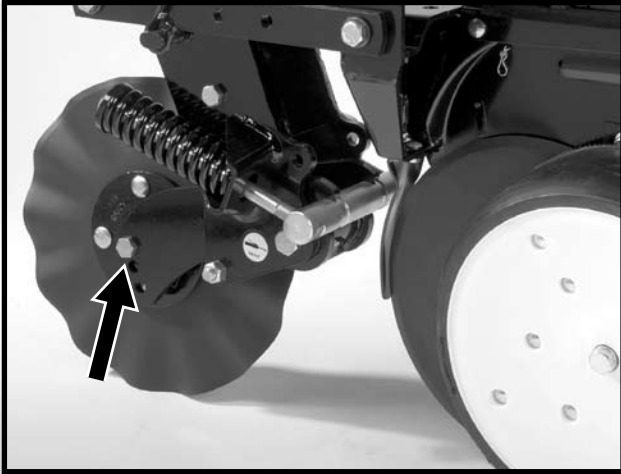


**NOTE: Torque  $\frac{5}{8}$ " spindle hardware to 120 ft. lbs.**

See "Frame Mounted Coultter" in Row Unit Operation section of this manual for depth and spring adjustment.

When the 16" diameter coultter blade (1" fluted, 1" bubbled or  $\frac{3}{4}$ " fluted) is worn to 14  $\frac{1}{2}$ " (maximum allowable wear), it should be replaced.

## RESIDUE WHEELS (For Use With Frame Mounted Coultter)

(RU154)

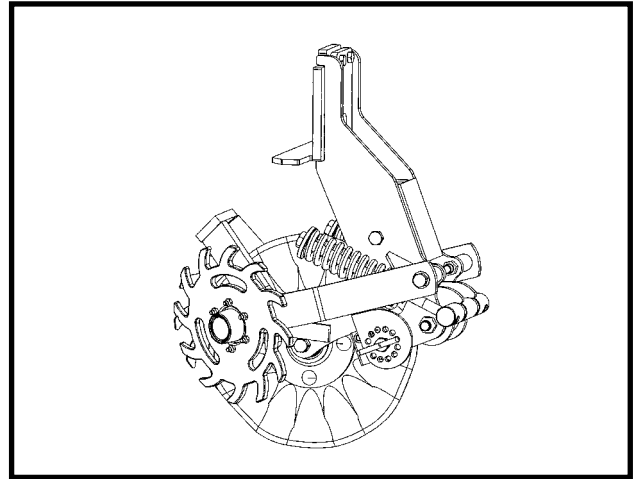


The wheel hub is equipped with sealed bearings. If a bearing sounds or feels rough when the wheel is rotated, replace the bearings.

# MAINTENANCE

## ROW UNIT MOUNTED DISC FURROWER

LF212299-22

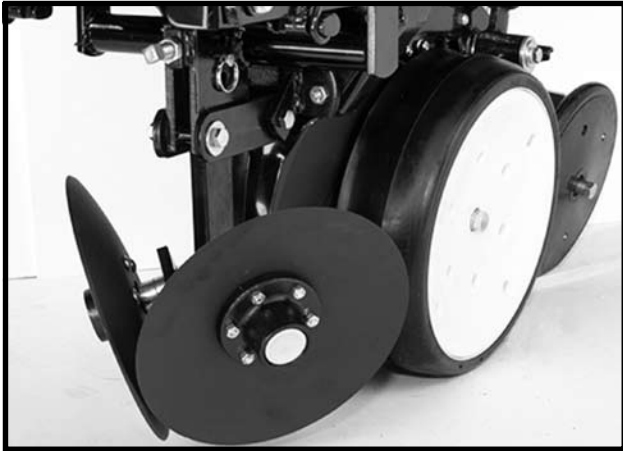


Lubricate the bushings in the support arm and mounting bracket at the frequency indicated in the Lubrication Section of this manual. Using a torque wrench, check each bolt for proper torque. If the bolt is loose, it should be removed and the bushing inspected for cracks and wear. Replace bushings as necessary. **Only hardened flat washers should be used. Replace damaged flat washers with proper part. Torque cap screws to 57 ft. lbs.**

The blade hubs are equipped with sealed bearings. If bearings sound or feel rough when the blade is rotated, replace the bearings.

When the 12" diameter blades (solid or notched) are worn to 11", they should be replaced.

## ROW UNIT MOUNTED RESIDUE WHEEL

(A12685)

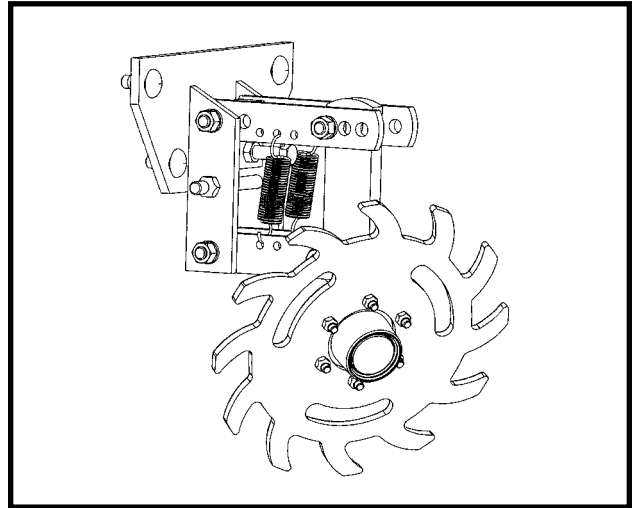

The wheel hub is equipped with sealed bearings. If a bearing sounds or feels rough when the wheel is rotated, replace the bearings.

# MAINTENANCE

## ROW UNIT MOUNTED NO TILL COULTER

D05170706a



Check periodically to be sure nuts and hardware are tightened to proper torque specification.

**NOTE: Torque  $\frac{5}{8}$ " spindle hardware to 120 ft. lbs.**

Be sure the coulters is positioned square with the row unit and aligned in front of row unit disc opener.

The coulters blade can be adjusted to one of four settings. Initially the blade is set in the highest position. As the blade wears it can be adjusted to one of the three lower settings. See "Row Unit Mounted No Till Coulters" in Row Unit Operation section of this manual.

When the 16" diameter coulters blade is worn to 14  $\frac{1}{2}$ " (maximum allowable wear), it should be replaced.

## COULTERS MOUNTED RESIDUE WHEELS

D05170708a



The wheel hubs are equipped with sealed bearings. If bearings sound or feel rough when the wheel is rotated, replace the bearings.


# MAINTENANCE

## GRANULAR CHEMICAL ATTACHMENT

Prior to storage of the planter, disengage the granular chemical drive by rotating the throwout knob ¼ turn counterclockwise. Remove the drive chain and empty and clean all granular chemical hoppers. Clean the drive chains and coat them with a rust preventive spray or submerge chains in oil. Inspect and replace any worn or broken parts.

Install hoppers and chains. Check chain alignment.

LF212299-4

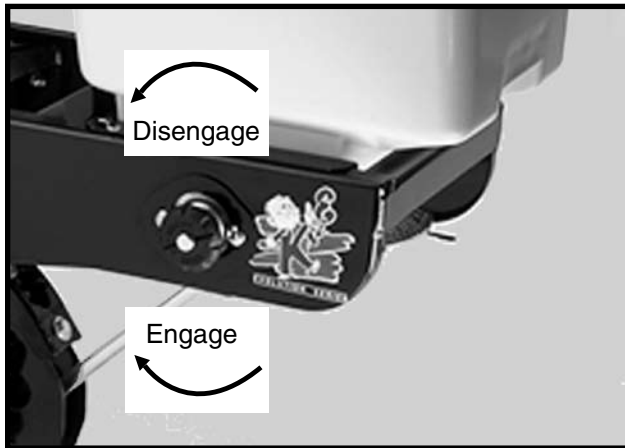

## SPRING TOOTH INCORPORATOR

Prior to storage of the planter, inspect each spring tooth incorporator and replace any worn or broken parts. Check for loose hardware and tighten as needed.

LF212299-26




# MAINTENANCE

## SOLENOID VALVE

The solenoid valve consists of a chambered body containing a cartridge valve which is activated by an electrical coil.


If the solenoid or solenoids fail to operate, first determine if the problem is electrical or hydraulic. If the valve is working properly, a click will be heard when the solenoid coil is energized. This will be the valve stem opening up. If no sound is heard, check the solenoid coil by touching the top of the coil housing with a metallic object such as a pliers or screwdriver. If the coil is working properly, the coil housing will be strongly magnetized when energized. If the voltage to the coil is low, the coil will be weakly magnetized when energized and no click will be heard.

VVB019(PLTR55)

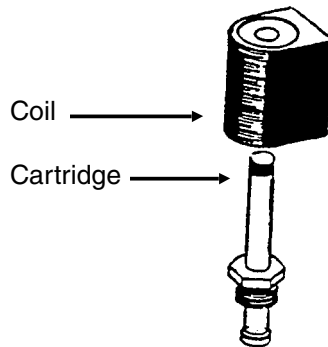

## FLOW CONTROL VALVE INSPECTION

(FWD157)



The flow control valves should be adjusted for row marker raise and lower speed as part of the assembly procedure or upon initial operation. If the valve fails to function properly or requires frequent adjustment, it should be removed for inspection. Check for foreign material and contamination on both the valve and the seating area of the valve body. Replace any components found to be defective.

## PRESSURE RELIEF VALVE INSPECTION (Located At Center Of Rear H-Frame)


(FWD23)



The pressure relief valve limits the available hydraulic pressure to the transport axle cylinder when the cylinder is retracting. Consult your KINZE® Dealer for service.

## COUNTER BALANCE VALVE INSPECTION (Located At Center Of Rear H-Frame)

(FWD21)



The counter balance valve is used for hydraulic load holding. This is a safety feature to prevent the planter from being unintentionally lowered. The valve is factory set and should require no additional adjustments. Consult your KINZE® Dealer for service.

# MAINTENANCE

## SOLENOID VALVE TROUBLESHOOTING

| PROBLEM                              | POSSIBLE CAUSE                 | SOLUTION   |
|--------------------------------------|--------------------------------|--|
| None of the solenoids will operate.  | Low voltage.                   | Must be connected to 12 volt DC only. Negative ground.           |
|                                      | Blown fuse.                    | Replace fuse in control console on tractor with AGC-15 amp only. |
|                                      | Poor battery connection.       | Clean and tighten.   |
|                                      | Wiring harness damaged.        | Repair or replace.   |
| One solenoid valve will not operate. | Bad switch.                    | Replace on control panel.  |
|                                      | Cut wire in harness.           | Locate and repair.   |
|                                      | Bad coil.                      | Replace.   |
|                                      | Poor connection at coil.       | Check.   |
| Valve operating when not energized.  | Valve stem stuck open.         | Replace cartridge.   |
|                                      | O-ring leaking.                | Install new o-ring kit.  |
|                                      | Foreign material under poppet. | Remove cartridge and clean.                                      |

## LIFT/FOLD CIRCUIT TROUBLESHOOTING

| PROBLEM  | POSSIBLE CAUSE              | TROUBLESHOOTING*  | SOLUTION  |
|--|-----------------------------|---|---|
| Planter raising uneven.  | Master cylinder is leaking. | Raise planter <b>slowly</b> until master cylinder reaches mid stroke. If master cylinder is leaking the corresponding slave cylinder will have a greater rod length. If planter settles when hydraulic lever is released, check assist cylinders. | Perform leak test. Consult your KINZE® Dealer for leak testing. Install seal kit. |
|  | Slave cylinder is leaking.  | Fold planter to transport position. Retract field tires and observe which tire settles.   | Perform leak test. Consult your KINZE® Dealer for leak testing. Install seal kit. |
| Planter raising even; however, planter settles when hydraulic lever is released. | Assist cylinder is leaking. | Fold planter to transport position. Retract assist cylinder and observe which tire settles.   | Perform leak test. Consult your KINZE® Dealer for leak testing. Install seal kit. |

\* Operate hydraulics slowly to accentuate the problem.

# MAINTENANCE

## ROW MARKER CIRCUIT TROUBLESHOOTING

| PROBLEM   | POSSIBLE CAUSE   | SOLUTION   |
|---|--|--|
| Right marker lowering slower than left marker.  | Solenoid valve cartridge in port V3 not opening completely.  | Switch cartridge with one in port V4. If problem follows cartridge, replace cartridge.   |
|   | Hose pinched or collapsed.   | Inspect hose routing. Replace or repair hoses as required.   |
| Left marker lowering slower than right marker.  | Solenoid valve cartridge in port V4 not opening completely.  | Switch cartridge with one in port V3. If problem follows cartridge, replace cartridge.   |
|   | Hose pinched or collapsed.   | Inspect hose routing. Replace or repair hoses as required.   |
| Both markers lowering.  | Solenoid valve cartridge stuck open. If marker switch is in the left marker position, the right cartridge (V3) is defective. If the marker switch is in the right marker position, the left cartridge (V4) is defective. | Replace solenoid valve cartridge.  |
| Neither marker will lower.  | Blown fuse.  | Check red light on control console. It should be on if switch is ON. If light is not on, switch to opposite marker position. If light comes on, switch may be defective. Replace switch. Otherwise replace fuse. |
|   | Coils at V3 and V4 not energized.  | Poor ground on wire, bad wire connection or damaged wire. Repair as required.  |
|   | Marker flow control valve closed too far.  | See "Machine Operation" for adjustment.  |
| Neither marker will raise.  | Marker flow control valve closed too far.  | See "Machine Operation" for adjustment.  |
| Right marker will not lower.  | Solenoid coil in port V3 not energized.  | Check switch on control console. Replace if defective. Check coil ground wire. Check for poor connection or damaged wire.  |
|   | Solenoid cartridge in port V3 stuck closed.  | Switch cartridge with one on the planter you know is operating properly. If right marker lowers, replace defective cartridge.  |
| Left marker will not lower.   | Solenoid coil in port V4 not energized.  | Check switch on control console. Replace if defective. Check coil ground wire. Check for poor connection or damaged wire.  |
|   | Solenoid cartridge in port V4 stuck closed.  | Switch cartridge with one on the planter you know is operating properly. If right marker lowers, replace defective cartridge.  |
| Markers traveling too fast and damaging row marker stands and/or damaging pivot at rod end of marker cylinders. | Marker flow control valve out of adjustment.   | See "Machine Operation" for adjustment.  |




# MAINTENANCE

## ROW MARKER BEARING LUBRICATION OR REPLACEMENT

1. Remove row marker blade.
2. Remove dust cap from hub.
3. Remove cotter pin, nut and washer.
4. Slide hub from spindle.
5. Remove bearings and cups and discard if bearings are being replaced. Clean hub and dry. Remove bearings only and not cups if repacking.
6. Press in new bearing cups with thickest edge facing in. (Bearing replacement procedure only.)
7. Pack bearings with heavy duty wheel bearing grease thoroughly forcing grease between roller cone and bearing cage. Also fill the space between the bearing cups in the hub with grease.
8. Install rubber seal into grease seal. Place inner bearing in place and press in new rubber seal/grease seal.
9. Clean spindle and install hub.
10. Install outer bearing, washer and slotted hex nut. Tighten slotted hex nut while rotating hub until there is some drag. This assures that all bearing surfaces are in contact. Back off slotted nut to nearest locking slot and install cotter pin.
11. Fill dust caps approximately  $\frac{3}{4}$  full of wheel bearing grease and install on hub.
12. Install blade and dust cap retainer on hub and tighten evenly and securely.


(PLTR45/PLTR99/PLTR98/PLTR102)

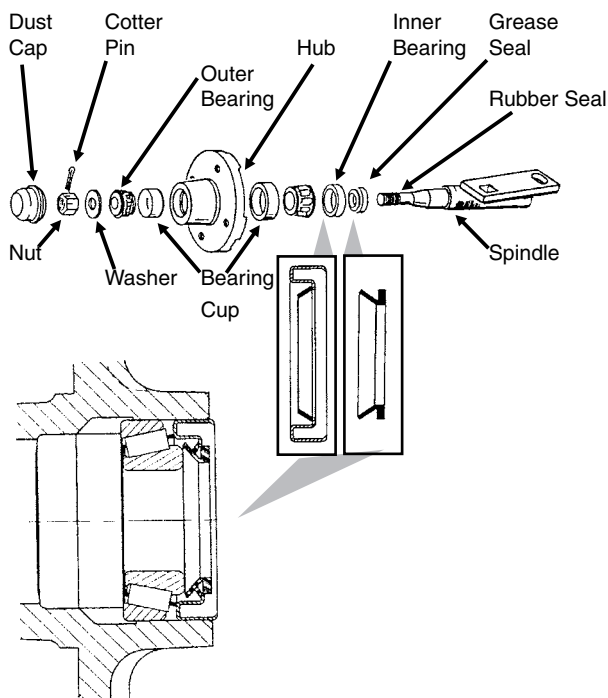

## LIFT/GROUND DRIVE WHEEL BEARING LUBRICATION OR REPLACEMENT

1. Raise tire clear of ground and remove wheel.
2. Remove double jam nuts and slide hub from spindle.
3. Remove bearings, seals (Where Applicable) and cups and discard if bearings are being replaced. Clean hub and dry. Remove bearings only and not cups if repacking.
4. Press in new bearing cups with thickest edge facing in. (Bearing replacement procedure only.)
5. Pack bearings with heavy duty wheel bearing grease thoroughly forcing grease between roller cone and bearing cage. Also fill the space between the bearing cups in the hub with grease.
6. Place inner bearing and seal (If Applicable) in place.
7. Clean spindle and install hub.
8. Install outer bearing, seal (If Applicable) and stepped nut. Tighten jam nut while rotating hub until there is some drag. This assures that all bearing surfaces are in contact. Back off jam nut  $\frac{1}{4}$  turn or until there is only slight drag when rotating the hub. Install second jam nut to lock against first.
9. Install wheel on hub and tighten evenly and securely. Torque lug bolts or nuts to specified torque.


(EF35e/PLTR56)

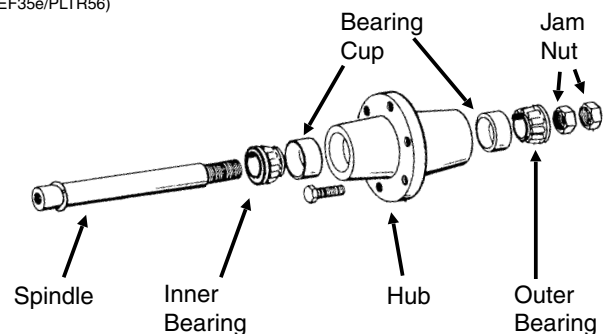

# MAINTENANCE

## TRANSPORT WHEEL BEARING REPLACEMENT

1. Raise tires clear of ground and remove wheels.
2. Remove dust cap attachment hardware and remove cap from wheel hub.
3. Remove cotter pin, axle nut and 2" washer.
4. Slide hub from axle spindle, using a hub puller if necessary.
5. Remove bearings and cups from hub and discard. Thoroughly clean and dry wheel hub.
6. Press in new bearing cups with thickest edges facing in.
7. Pack bearing with heavy-duty wheel bearing grease, thoroughly forcing grease between roller cone and bearing cage. Also fill the space between the bearing cups in the hub with grease.
8. Place inner bearing in hub and press in new grease seal with lip pointing towards bearing.
9. Clean axle spindle and install hub.
10. Install outer bearing, 2" washer and slotted hex nut. Tighten slotted hex nut while rotating the hub until there is some drag. This assures that all bearing surfaces are in contact. Back off slotted nut to nearest locking slot and install cotter pin. Check for endplay in bearings.
11. Fill dust cap half full of wheel bearing grease and install on hub with attachment bolts.
12. Install wheels and remove jack. Torque wheel nuts (and cap screws if applicable) to specified torque.

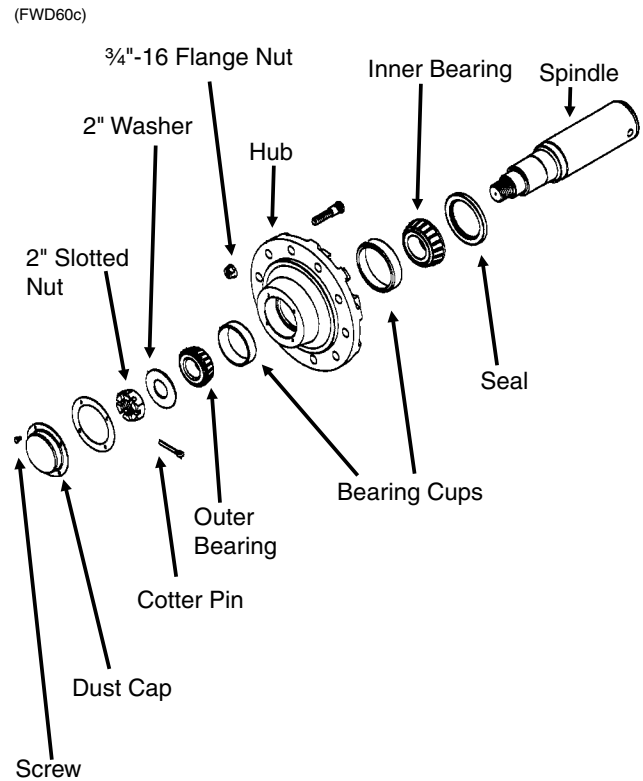

# MAINTENANCE

## PISTON PUMP STORAGE

**IMPORTANT: KEEP AIR OUT OF PUMP! This is the only way to prevent corrosion. Even for short periods of storage, the entrance of air into the pump, will cause RAPID AND SEVERE CORROSION.**


### Overnight Storage

SUSPENSION FERTILIZER must be flushed from the pump for ANY storage period.

### Winter Storage

1. Flush pump thoroughly with 5 to 10 gallons of fresh water and circulate until all corrosive salts are dissolved in the pump.
2. With the pump set on 10, draw in a mixture of half diesel fuel and half 10 weight oil until the discharge is clean. Then plug inlet and outlet.

(A12330a)

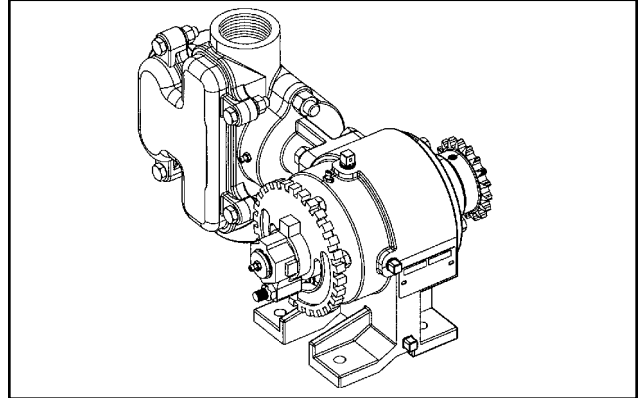

## PISTON PUMP TROUBLESHOOTING

| PROBLEM   | POSSIBLE CAUSE                         | SOLUTION                          |
|---|--|-----------------------------------|
| Pump hard or impossible to prime.               | Valves fouled or in wrong place.       | Inspect and clean valves.         |
|   | Air leak in suction line.              | Repair leak.                      |
|   | Pump set too low.                      | Adjust pump setting.              |
|   | Packing washers worn out.              | Replace.                          |
| Low metering.                                   | Valves fouled or in wrong place.       | Inspect and clean valves.         |
|   | Air leak in suction line.              | Repair leak.                      |
|   | Pump set too low.                      | Adjust pump setting.              |
|   | Broken valve spring.                   | Replace spring.                   |
| Over meters.                                    | Broken discharge valve spring.         | Replace spring.                   |
|   | Trash under valves.                    | Inspect and clean valves.         |
|   | Improper rate setting.                 | Adjust pump setting.              |
| Leaks through when stopped.                     | Broken discharge valve spring.         | Replace spring.                   |
|   | Trash under valves.                    | Inspect and clean valves.         |
| Fertilizer solution leaking under stuffing box. | Packing washers worn out.              | Replace.                          |
| Pump using excessive oil.                       | Oil seals or o-ring worn and leaking.  | Replace.                          |
| Pump operates noisily.                          | Crankcase components worn excessively. | Inspect and replace if necessary. |

# MAINTENANCE

---

## PREPARATION FOR STORAGE

Store the planter in a dry sheltered area if possible.

Remove all trash that may be wrapped on sprockets or shafts and remove dirt that can draw and hold moisture.

Clean all drive chains and coat with a rust preventative spray, or remove chains and submerge in oil.

Lubricate planter and row units at all lubrication points.

Inspect the planter for parts that are in need of replacement and order during the “off” season.

Make sure all seed and granular chemical hoppers are empty and clean.

Remove seed discs from seed meters, clean and store meters in a rodent-free, dry area with discs removed. Store seed discs vertically on a dowel or pipe.

Remove vacuum hose from each seed meter. Operate vacuum fans at full hydraulic flow from the tractor for two minutes to clear manifolds, hoses and fittings of dust and debris.

Clean breather on analog vacuum gauges.

Disassemble, clean and grease all U-joint slides.

Grease or paint disc openers/blades and row marker disc blades to prevent rust.


Flush liquid fertilizer metering pump with clean water. See “Piston Pump Storage”.

Disengage row unit clutch and unlatch mini-hopper on each row unit to release stress on drop hoses and hoppers during storage. (SDS Only)

# MAINTENANCE

## ELECTRICAL WIRING DIAGRAM FOR 7-TERMINAL LIGHT CONNECTOR

(WGN66a)

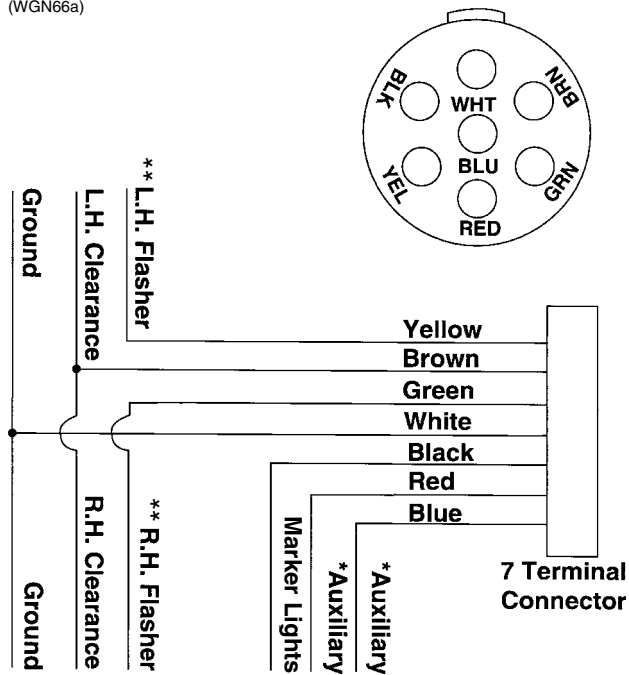

69922-35




- \* Optional customer-supplied auxiliary lights and wires may be wired into existing plug terminals.
- \*\* Rear and side flashers.

The light packages supplied on Model 3800 SDS and 3800 Conventional Forward Folding Planters meet ASAE Standards. For the correct wiring harness to be wired into the lights on your tractor, check with the tractor manufacturer.

# MAINTENANCE

## ELECTRICAL LIGHT HARNESS SCHEMATICS


(A10315/A10316/A10317/A10318/A10319)

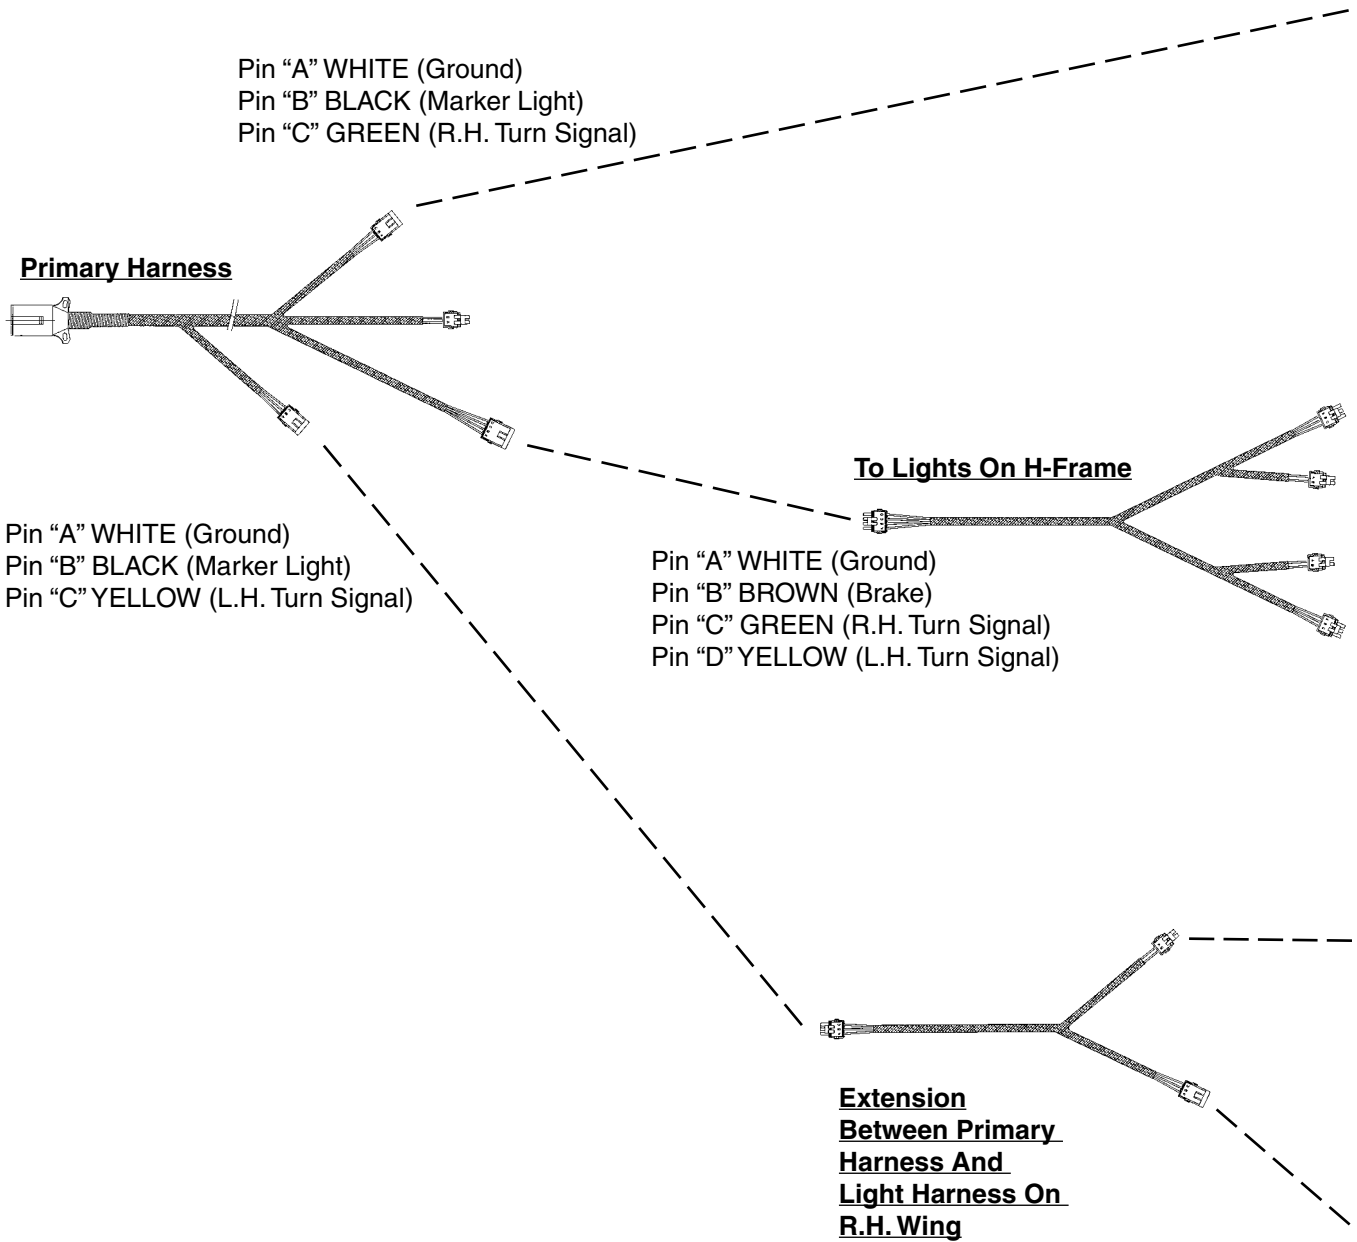

# MAINTENANCE

---

Pin "A" WHITE (Ground)  
 Pin "B" BLACK (Marker Light)

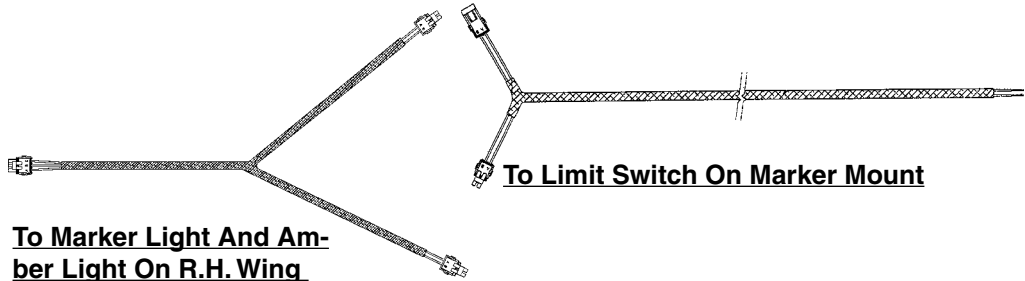

Pin "A" WHITE (Ground)  
 Pin "B" GREEN (R.H. Turn Signal)


Pin "A" WHITE (Ground)  
 Pin "B" BROWN (Brake)  
 Pin "C" GREEN (R.H. Turn Signal)

Pin "A" WHITE (Ground)  
 Pin "B" GREEN (R.H. Turn Signal)

Pin "A" WHITE (Ground)  
 Pin "B" YELLOW (L.H. Turn Signal)

Pin "A" WHITE (Ground)  
 Pin "B" BROWN (Brake)  
 Pin "C" YELLOW (L.H. Turn Signal)

Pin "A" WHITE (Ground)  
 Pin "B" BLACK (Marker Light)

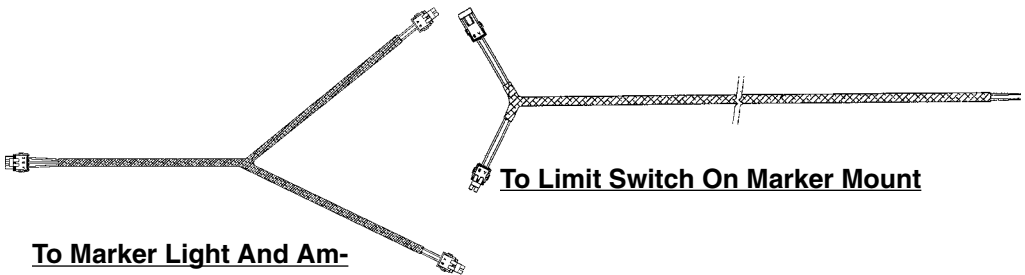



Pin "A" WHITE (Ground)  
 Pin "B" YELLOW (L.H. Turn Signal)

# MAINTENANCE

## ELECTRICAL CONTROL CONSOLE SCHEMATIC (Planter Functions)



**IMPORTANT:** Before doing any electrical work, disconnect the control console from the tractor battery. Keep wiring harnesses away from high temperature areas or sharp edges. **DO NOT** route the wiring harnesses along battery cables. Use tie straps to keep wire harnesses away from moving parts on tractor and planter. Be sure ground connections to the tractor frame are clean to provide good electrical contact.

(FWD30bb/FWD36a/FWD30c/FWD36)

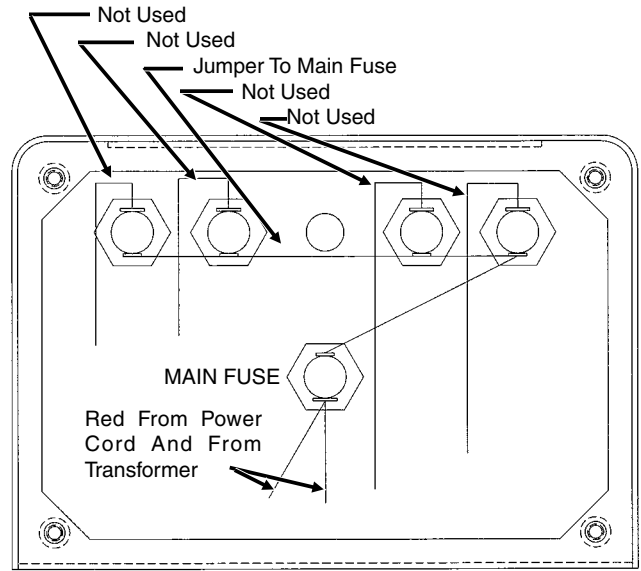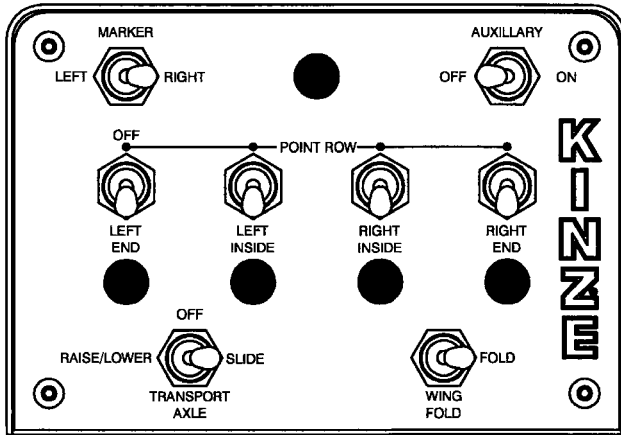

- A. 6" White Jumper
- B.-D., Q. 4" White Jumper (4)
- E. 4" Red Jumper
- F. 7" Orange Jumper
- G.-J. 3" White Jumper (4)
- K. 5" Black Jumper
- L.-P. 7" Purple Jumper (5)
- R. 4" White Jumper

- Pin "A" ORANGE/RED (Slide)
- Pin "R" BROWN (Not Used)
- Pin "G" ORANGE (Not Used)
- Pin "H" BLUE (L.H. Marker)
- Pin "B" BLUE/RED (Fold)
- Pin "U" RED/BLACK (Not Used)
- Pin "S" YELLOW (Not Used)
- Pin "O" RED (R.H. Marker)
- Pin "V" BLUE/BLACK (Raise To Transport)
- Pin "T" BLACK (Ground)(12 Gauge)
- Pin "C" BLACK/RED (Ground)
- Pin "W" ORANGE/BLACK (Auxiliary)
- \* Not Used
- \*\* To Main Fuse

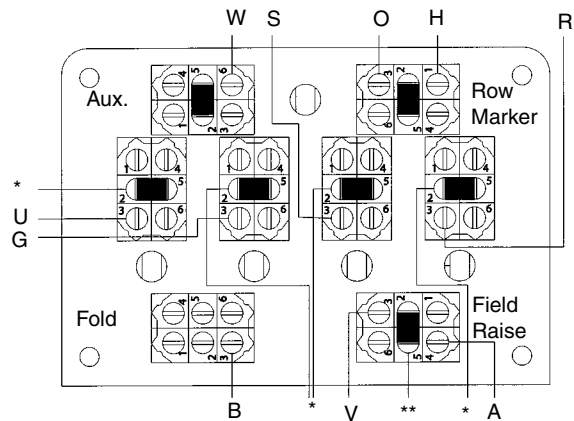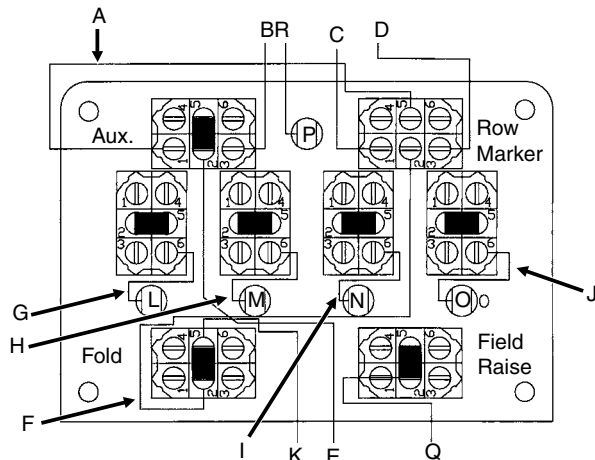

**NOTE:**


1. Operating marker switches in either direction lights panel light.
2. Power to the marker switch is fed through the auxiliary switch and the two transport function switches. Operating any of the switches in the lower row disables the marker function and turns off the panel light.



# MAINTENANCE

## ELECTRICAL WIRING HARNESS SCHEMATIC (On Tractor)


(ELC10c/ELC13)

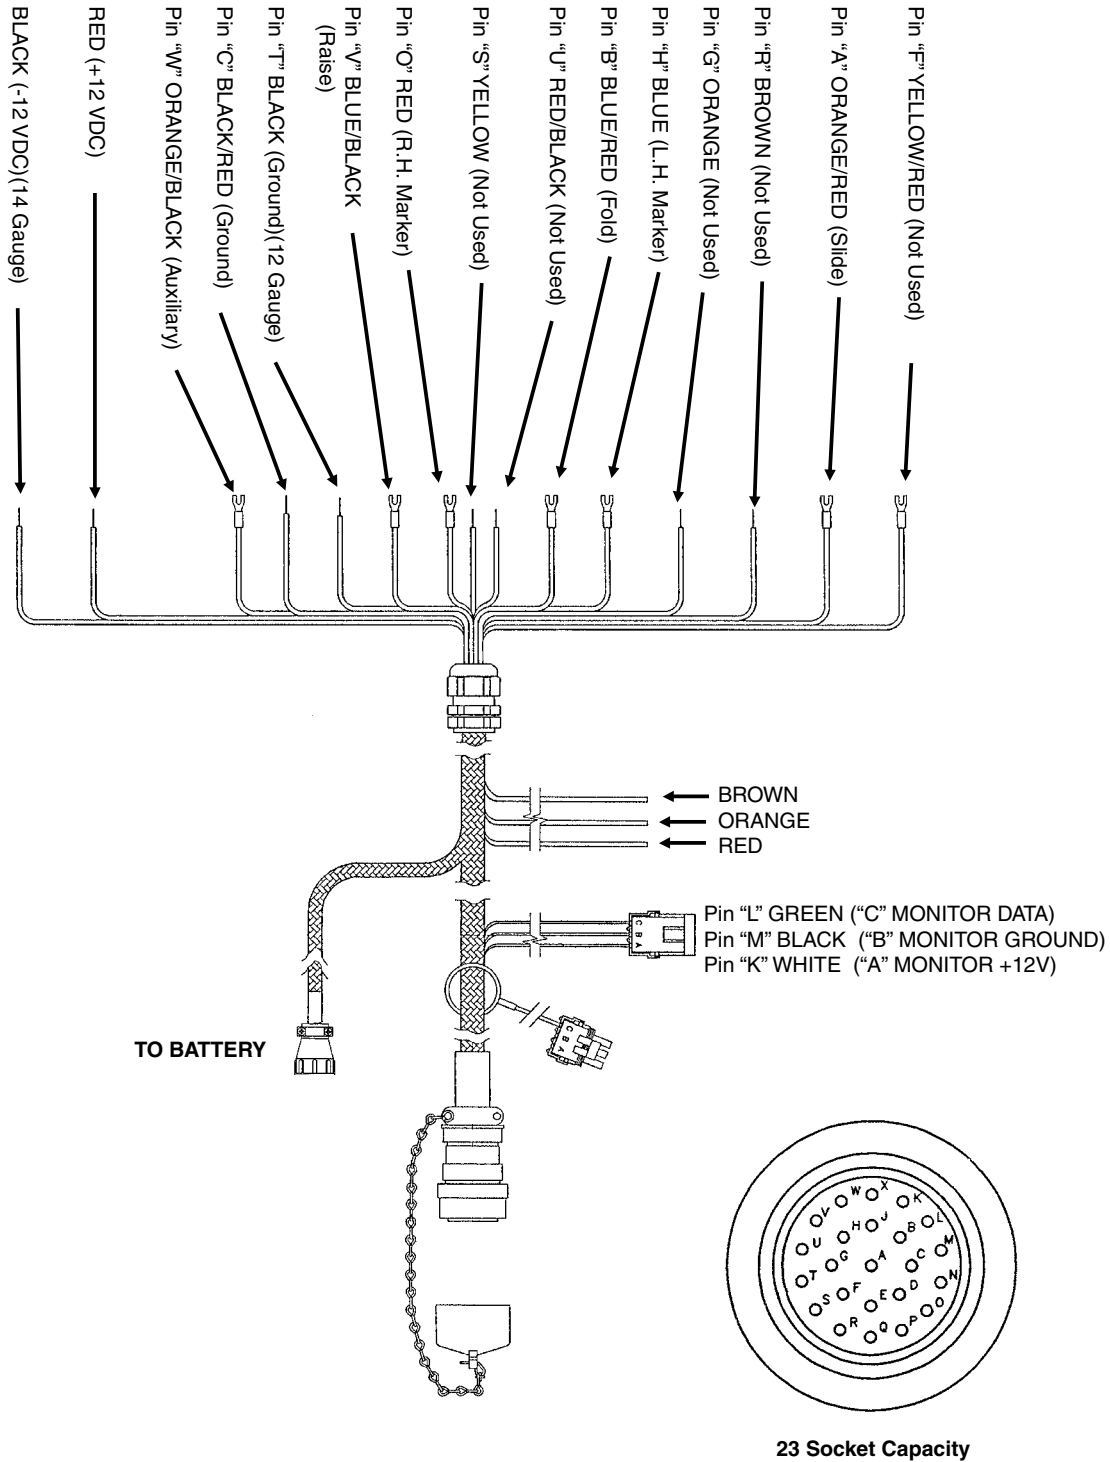

# MAINTENANCE


## ELECTRICAL WIRING HARNESSES SCHEMATIC (On Planter)

(ELC13/A10308)

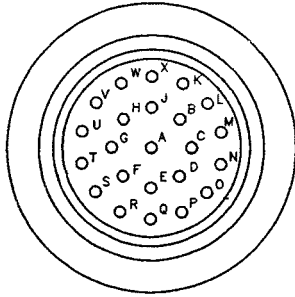

23 Pin Capacity


- Pin "K" WHITE ("A" MONITOR +12V)
- Pin "M" BLACK ("B" MONITOR GROUND)
- Pin "L" GREEN ("C" MONITOR DATA)

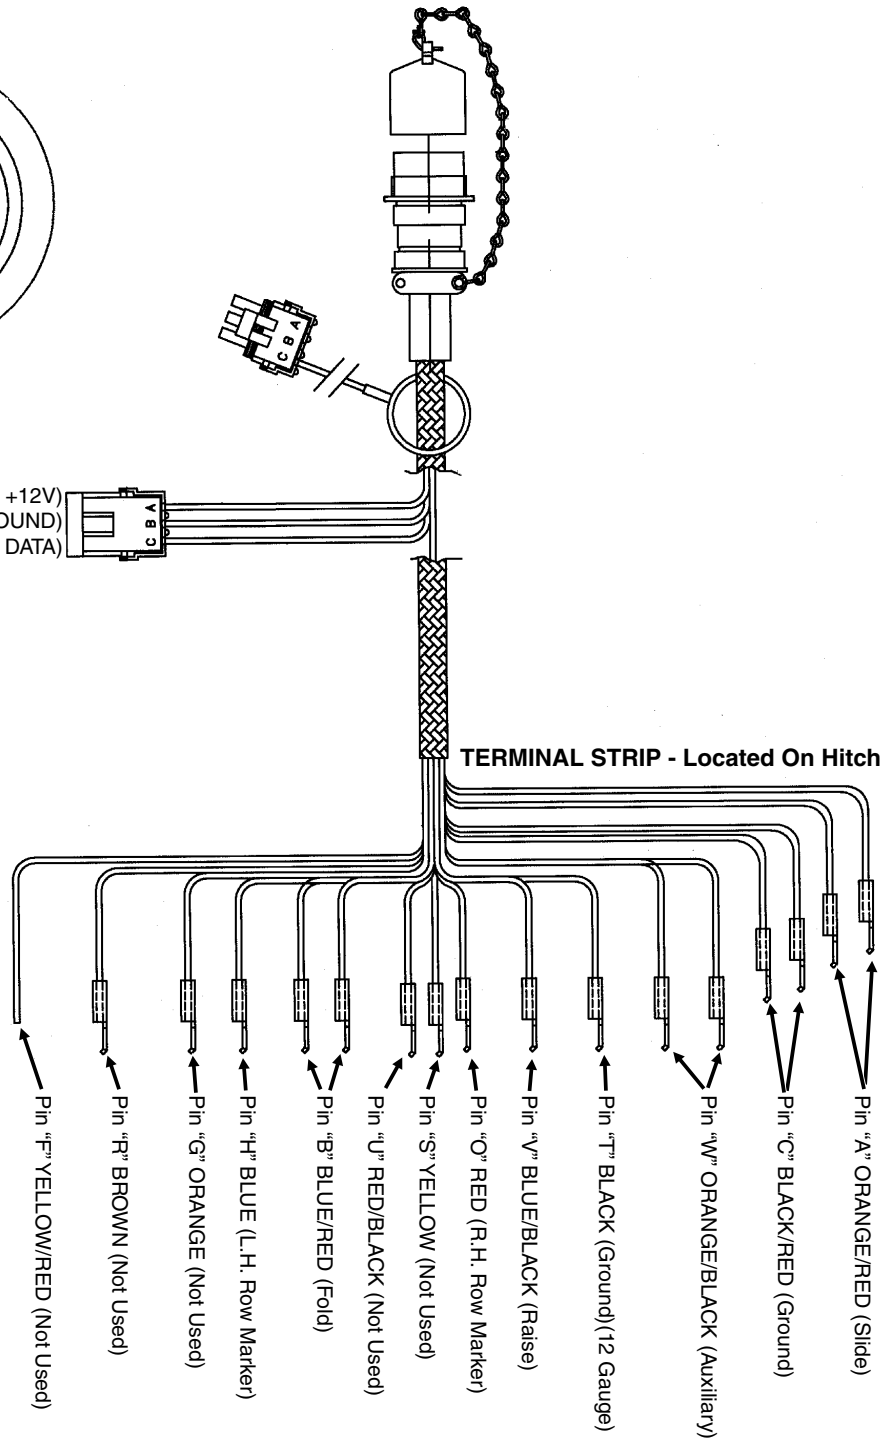

# MAINTENANCE

## ELECTRICAL WIRING HARNESSES SCHEMATIC (Continued) (On Planter)

(A12652)

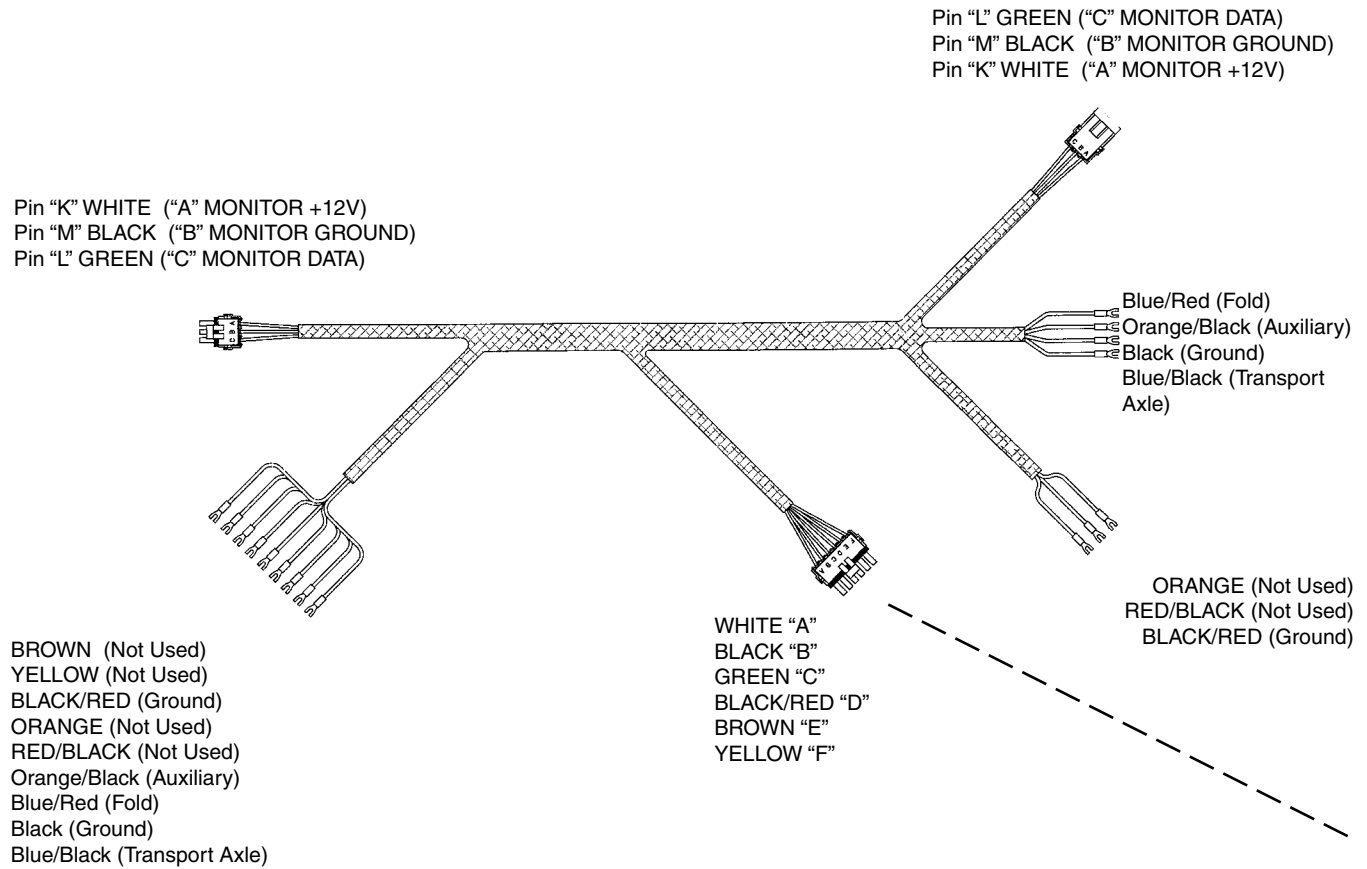


**TERMINAL STRIP - Located On Hitch**

# MAINTENANCE

## ELECTRICAL WIRING SCHEMATIC (SDS)


(FWD102)

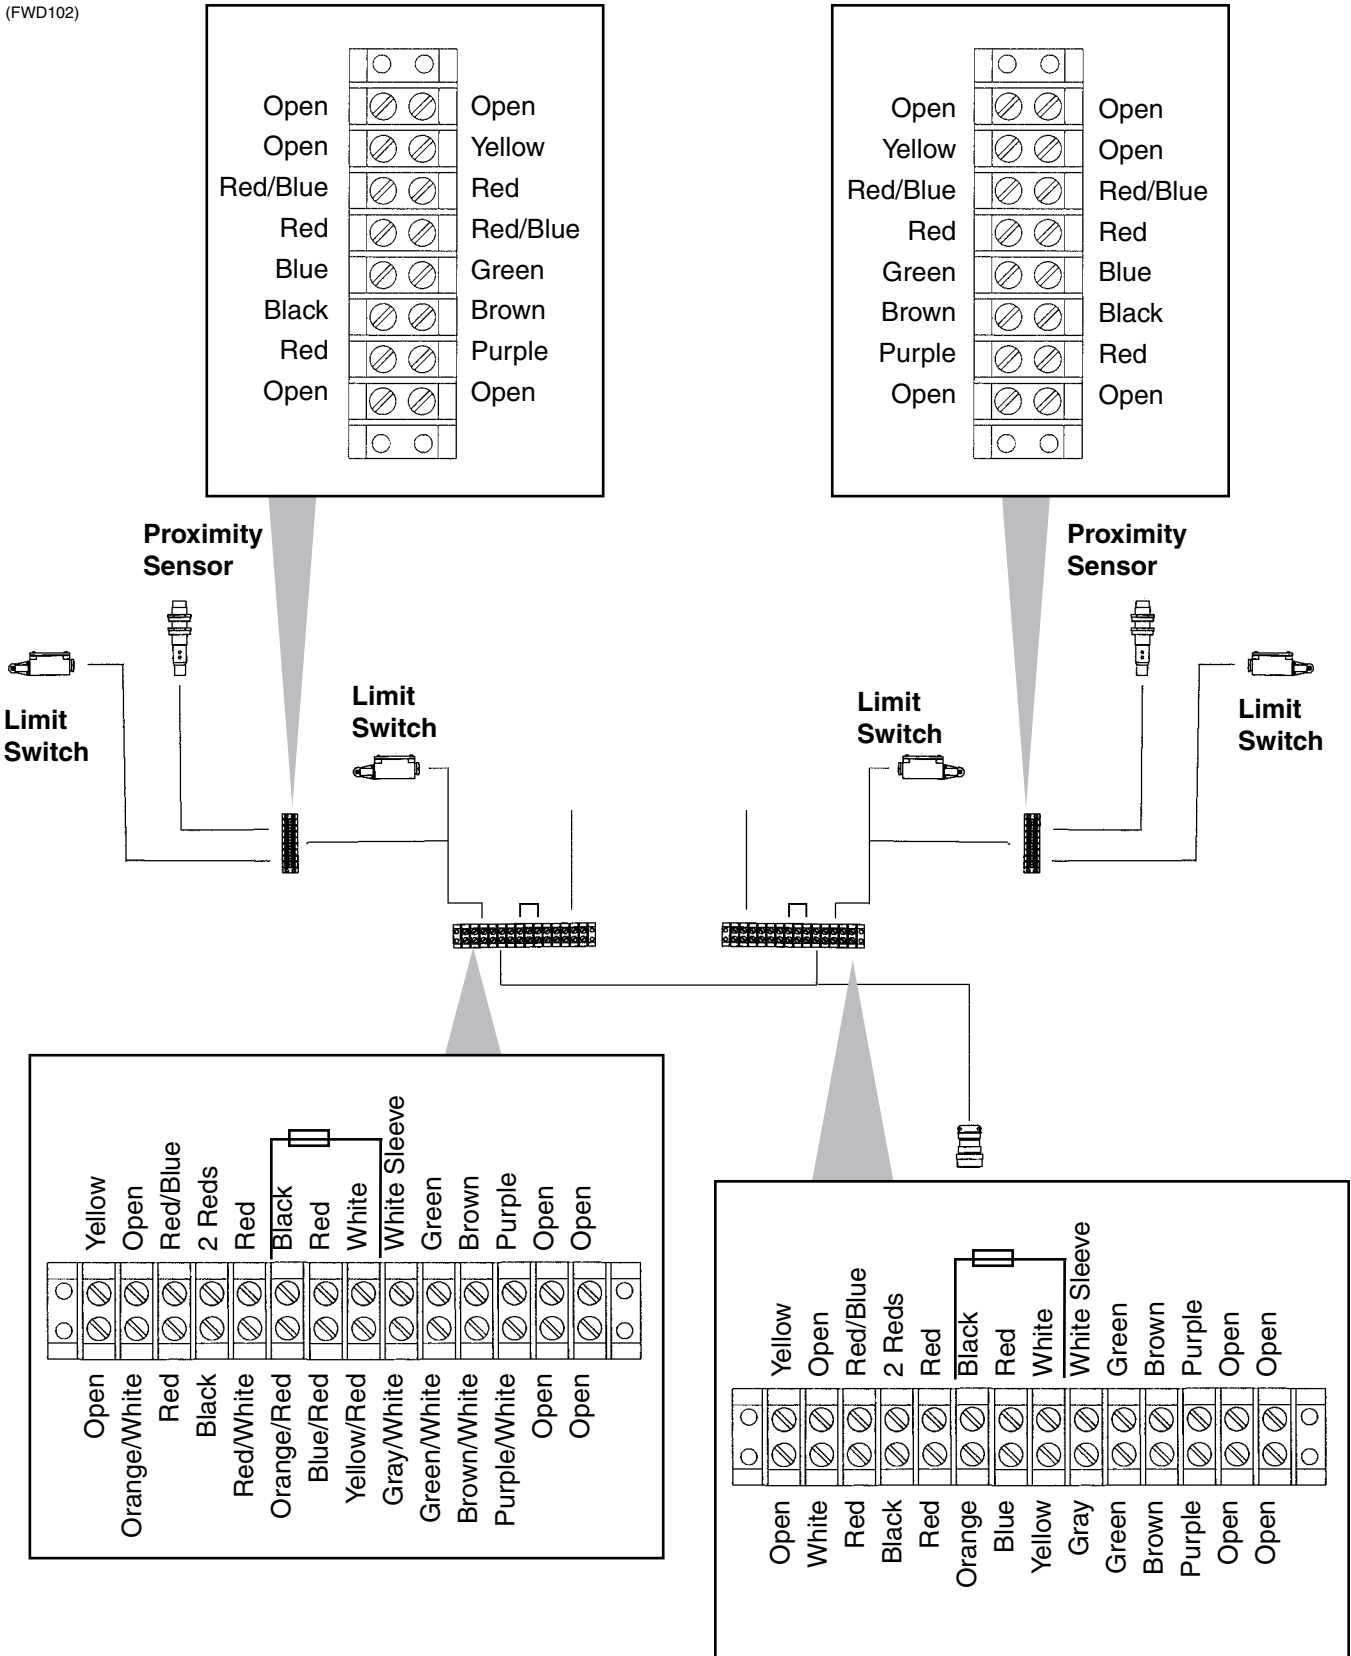

# MAINTENANCE

## ELECTRICAL WIRING HARNESS SCHEMATIC (Vacuum Fan Gauges)


(A11689)

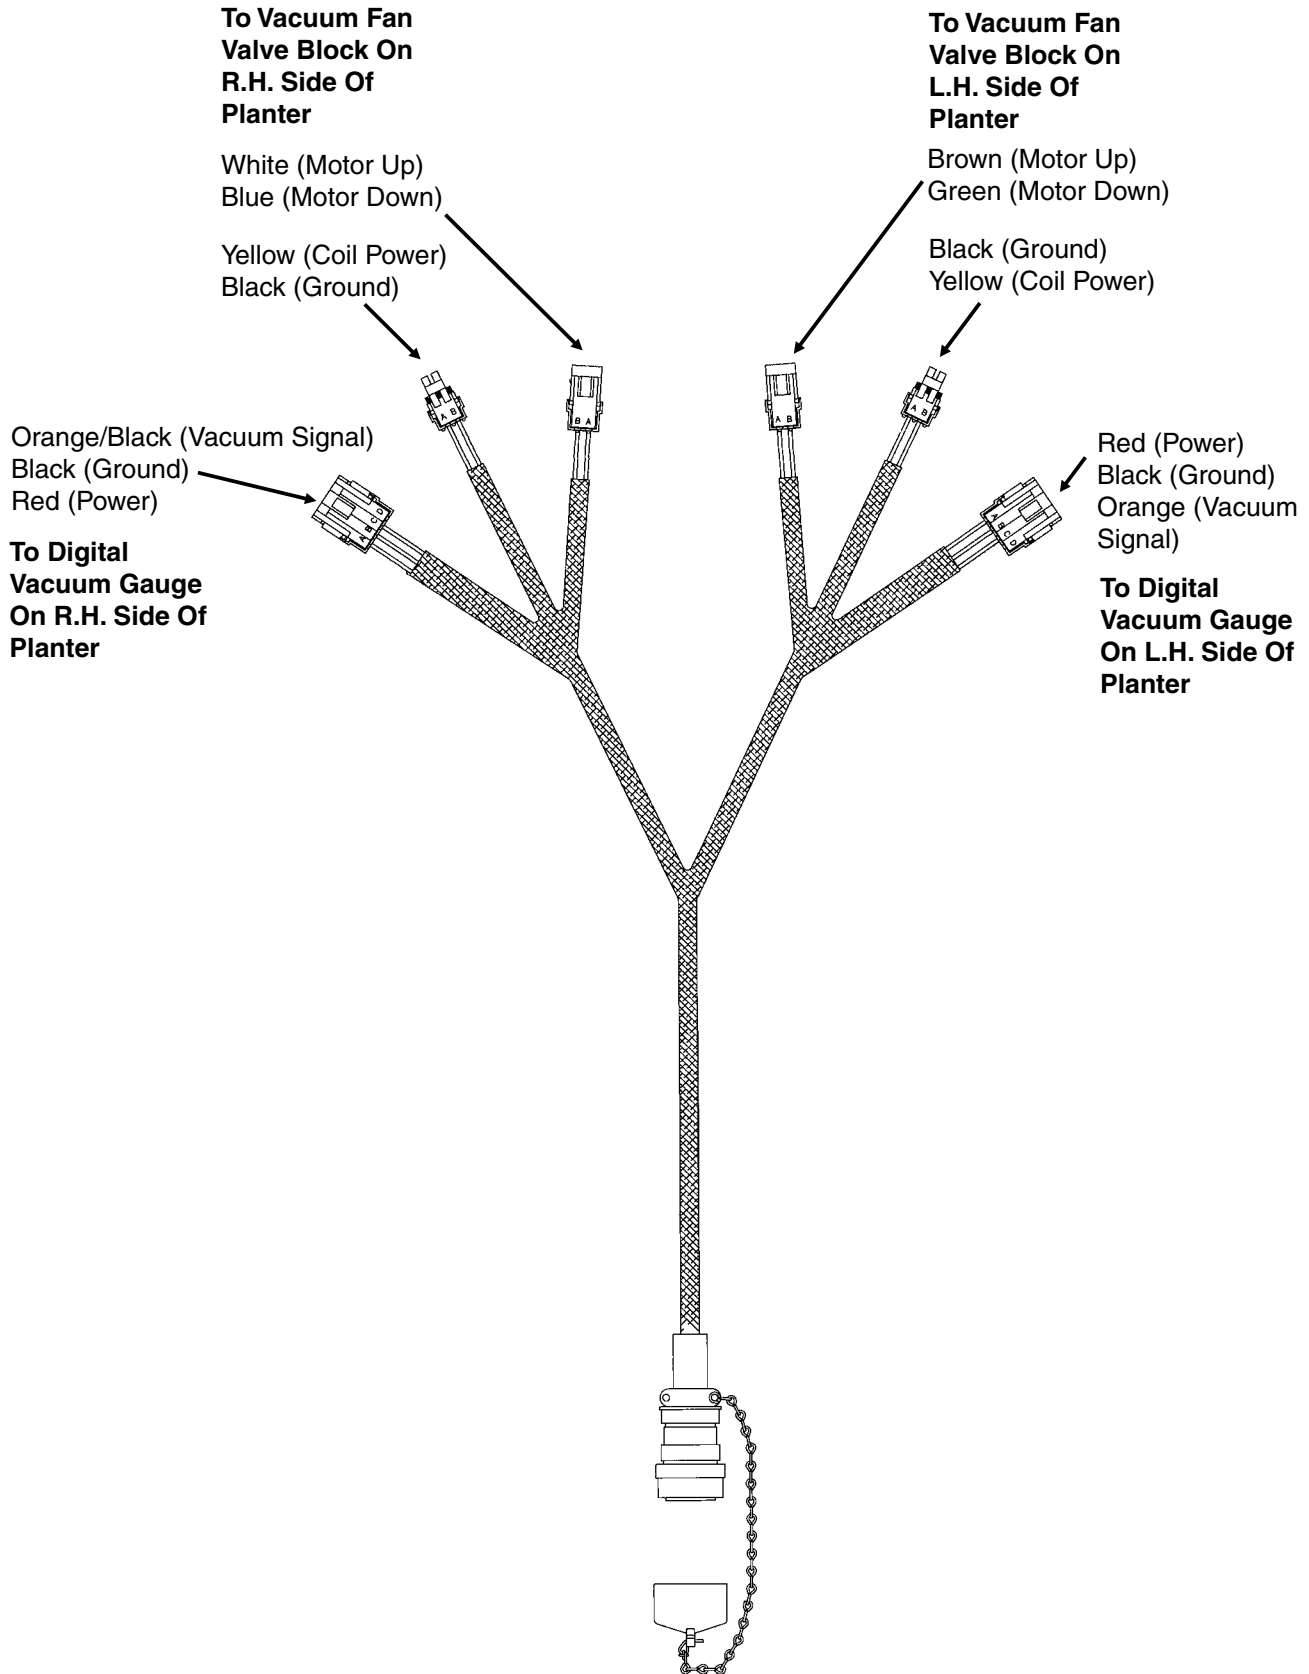

# MAINTENANCE

## HYDRAULIC SCHEMATIC

(A12484-2a)

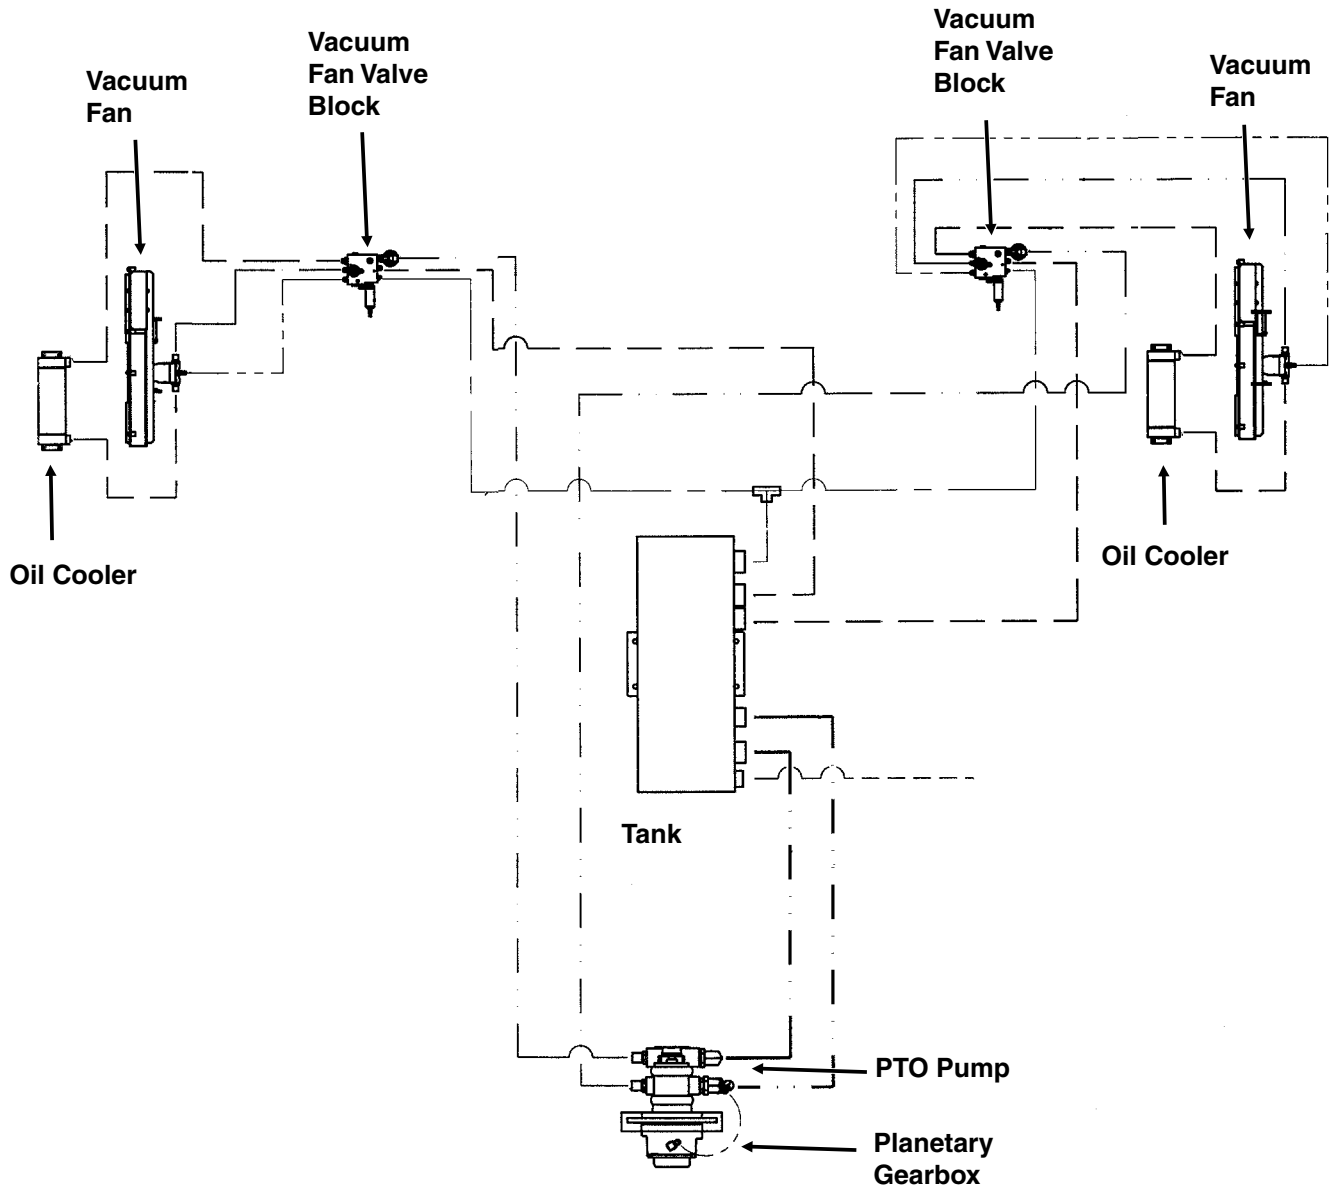

# MAINTENANCE


---

**This page intentionally left blank.**

# MAINTENANCE

## HYDRAULIC SYSTEM SCHEMATIC


(FWD154)

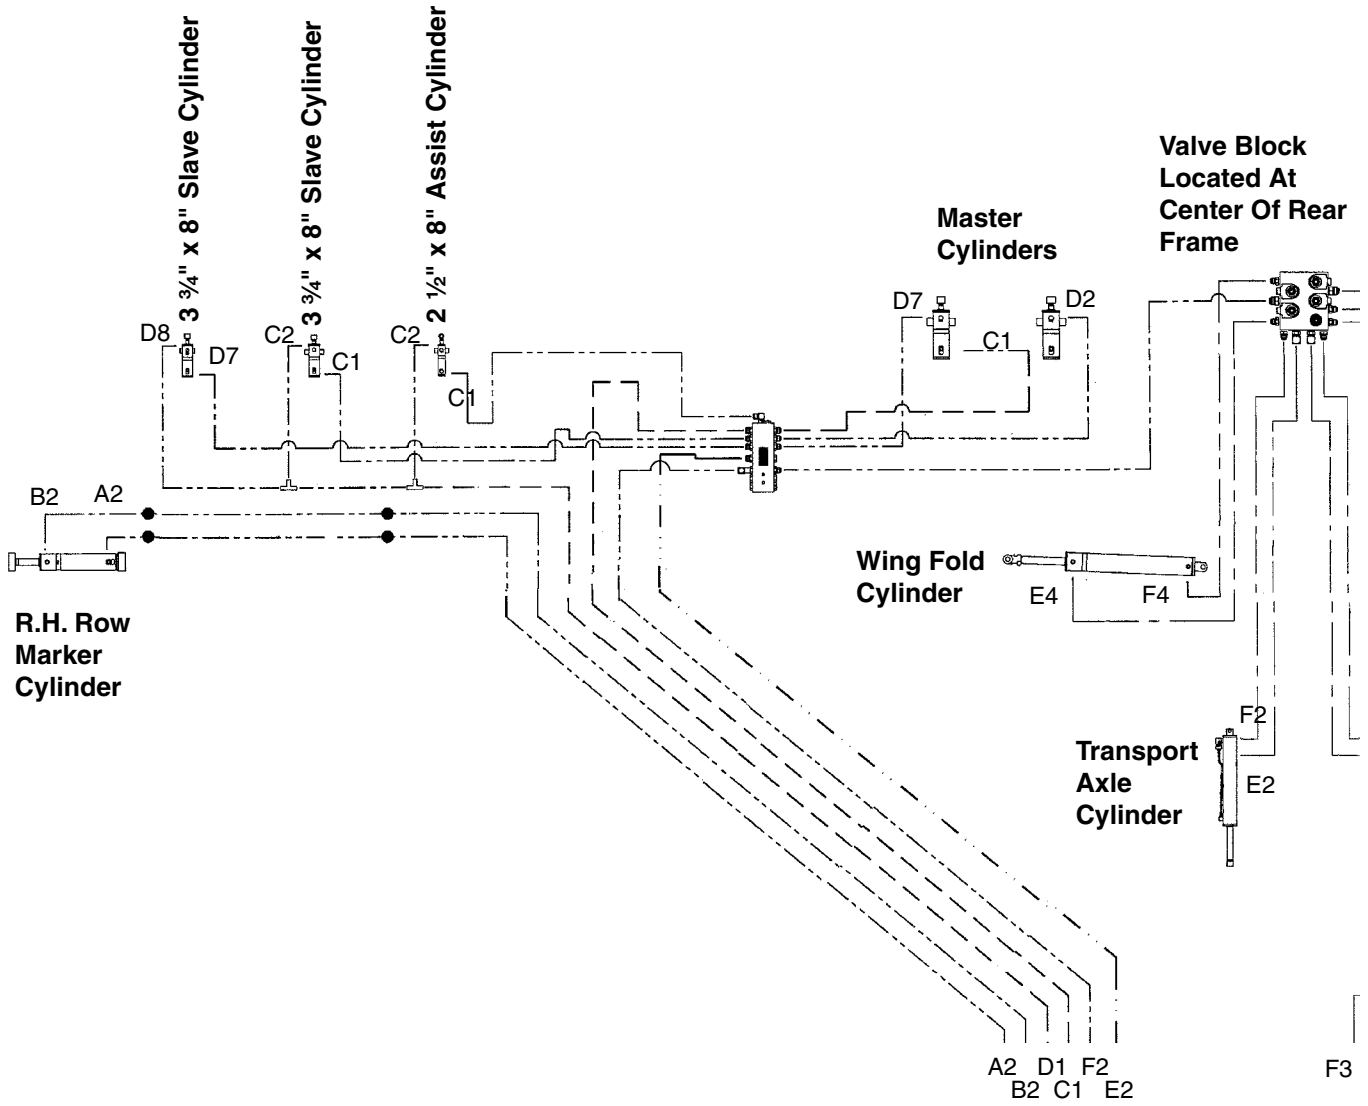

Valve Blocks Located At Front Of Hitch




# MAINTENANCE

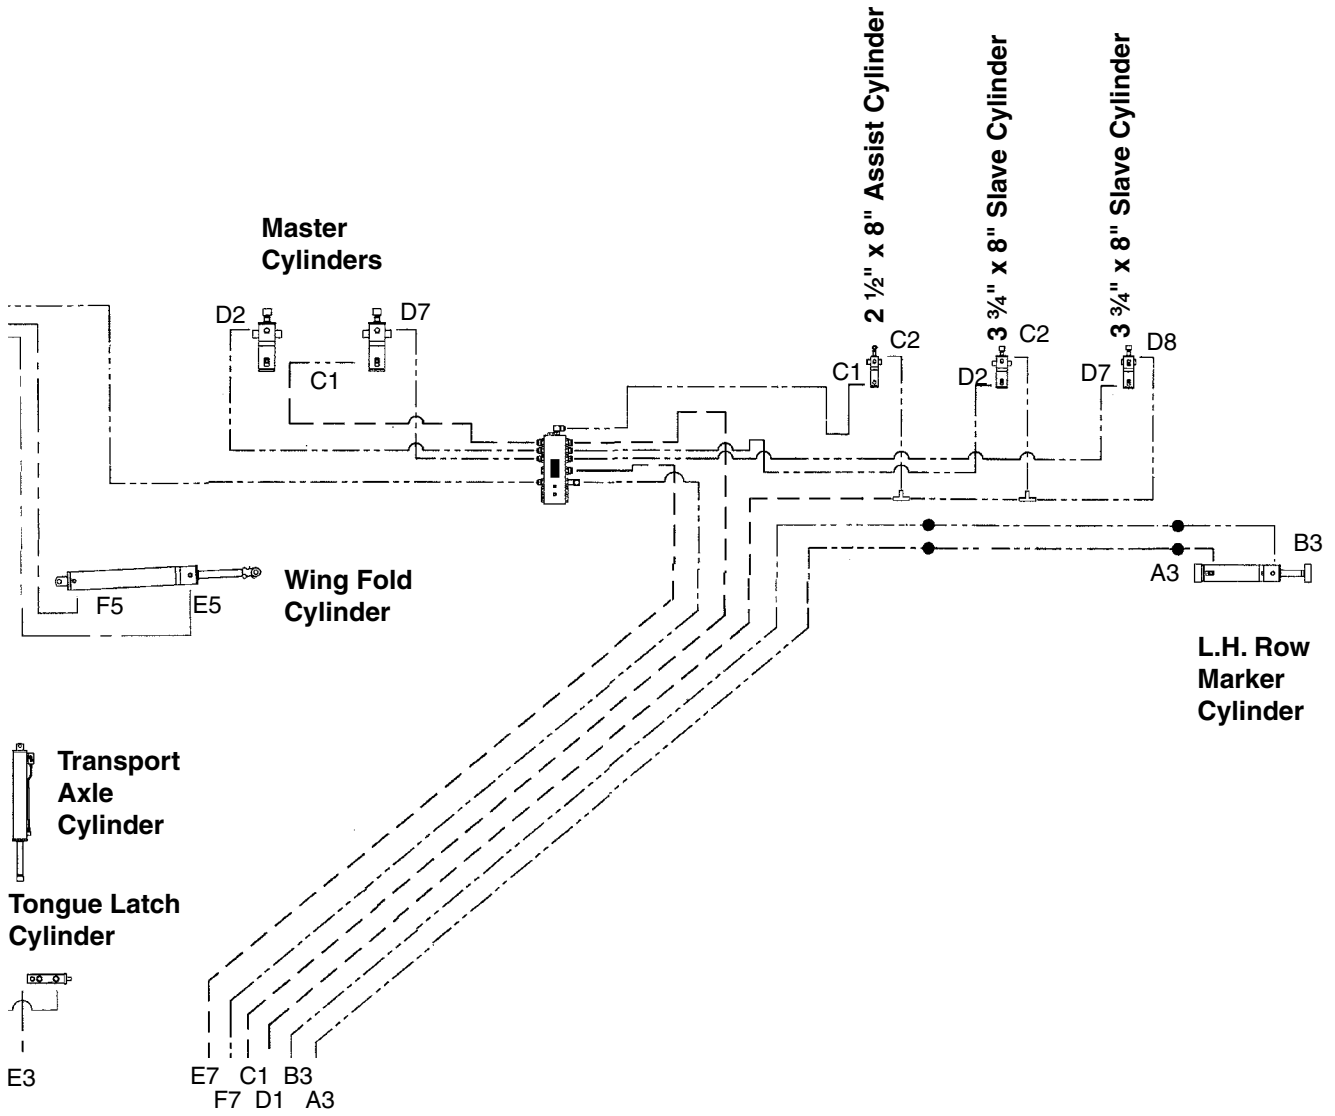

# MAINTENANCE


## HYDRAULIC DRIVE HYDRAULIC SYSTEM SCHEMATIC

(FWD181)

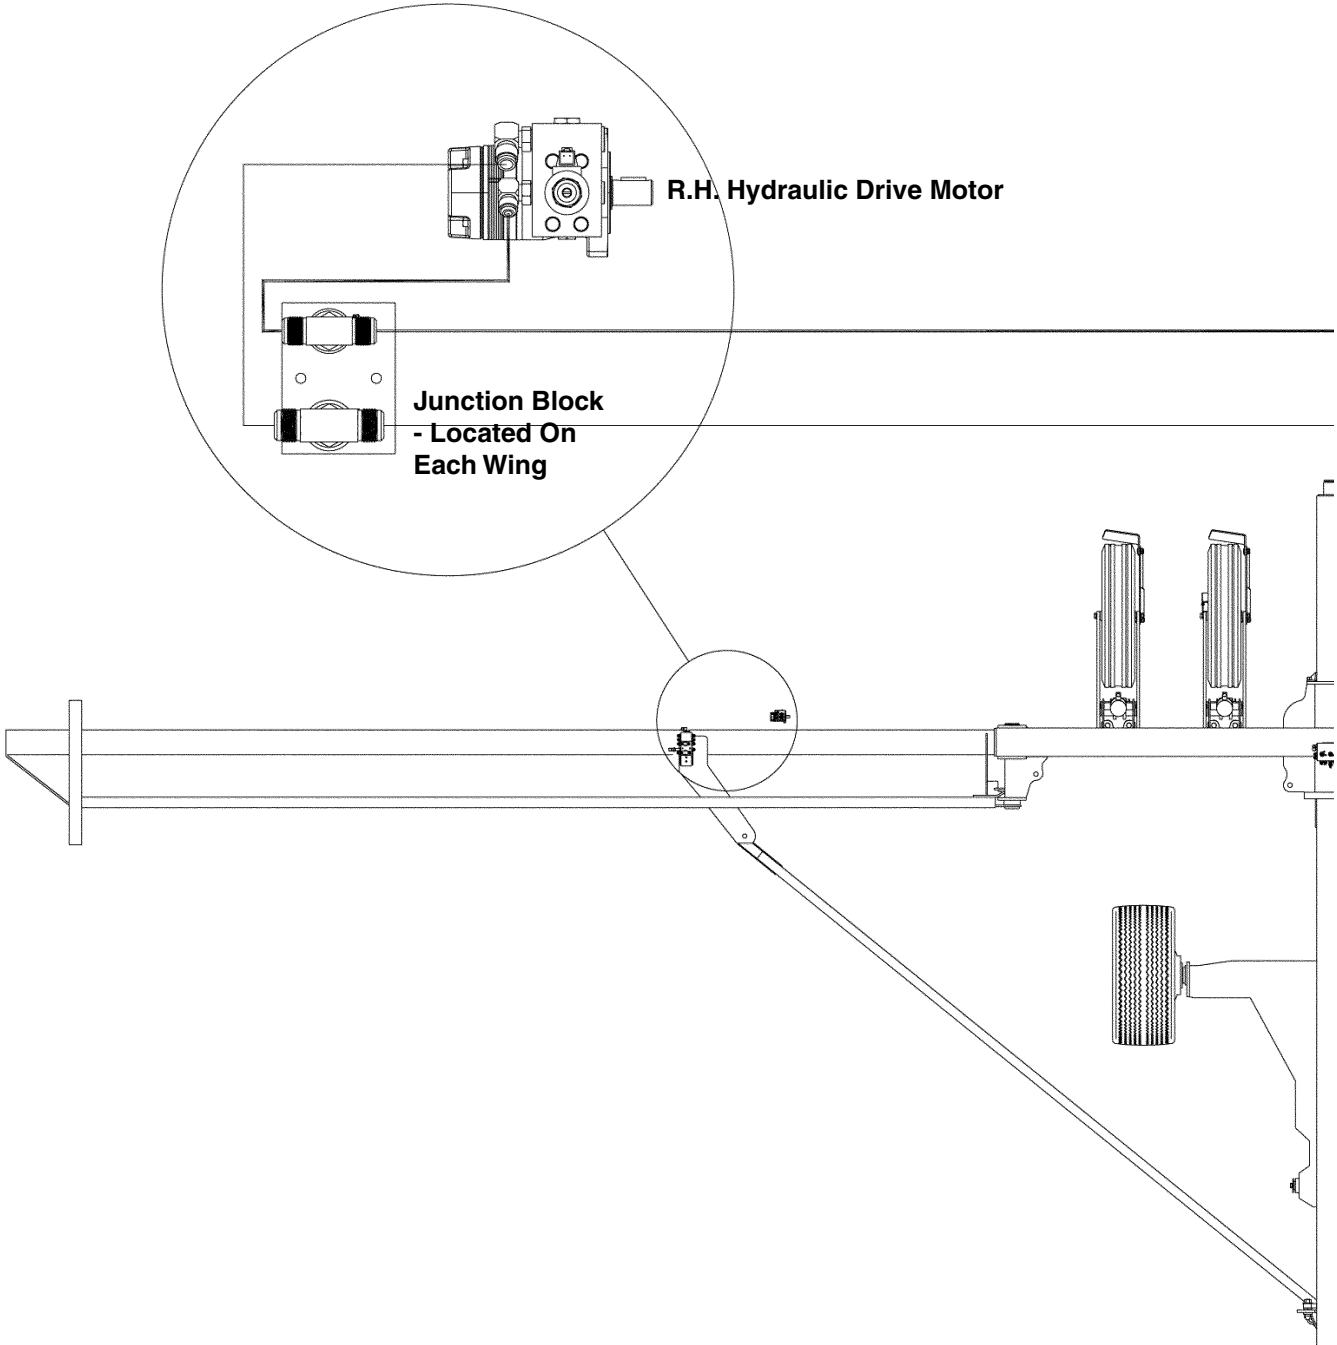

# MAINTENANCE


---

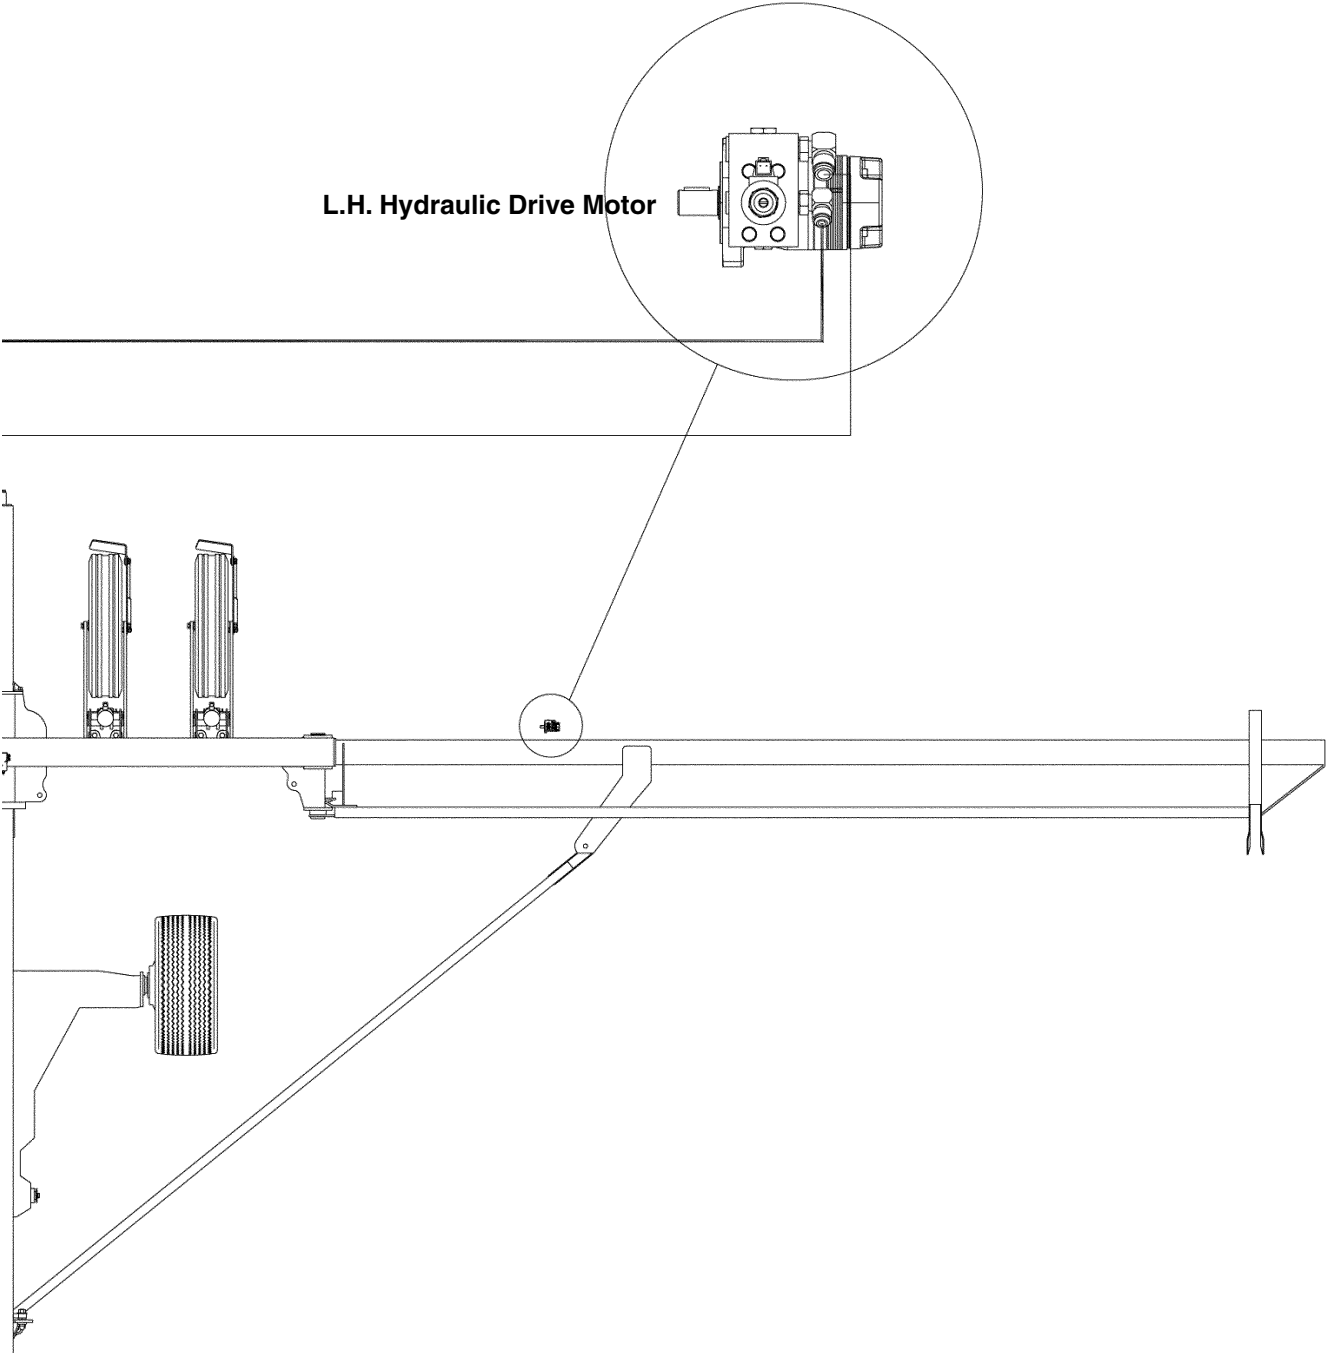

# MAINTENANCE


## AIRLINE SCHEMATIC

(V161)

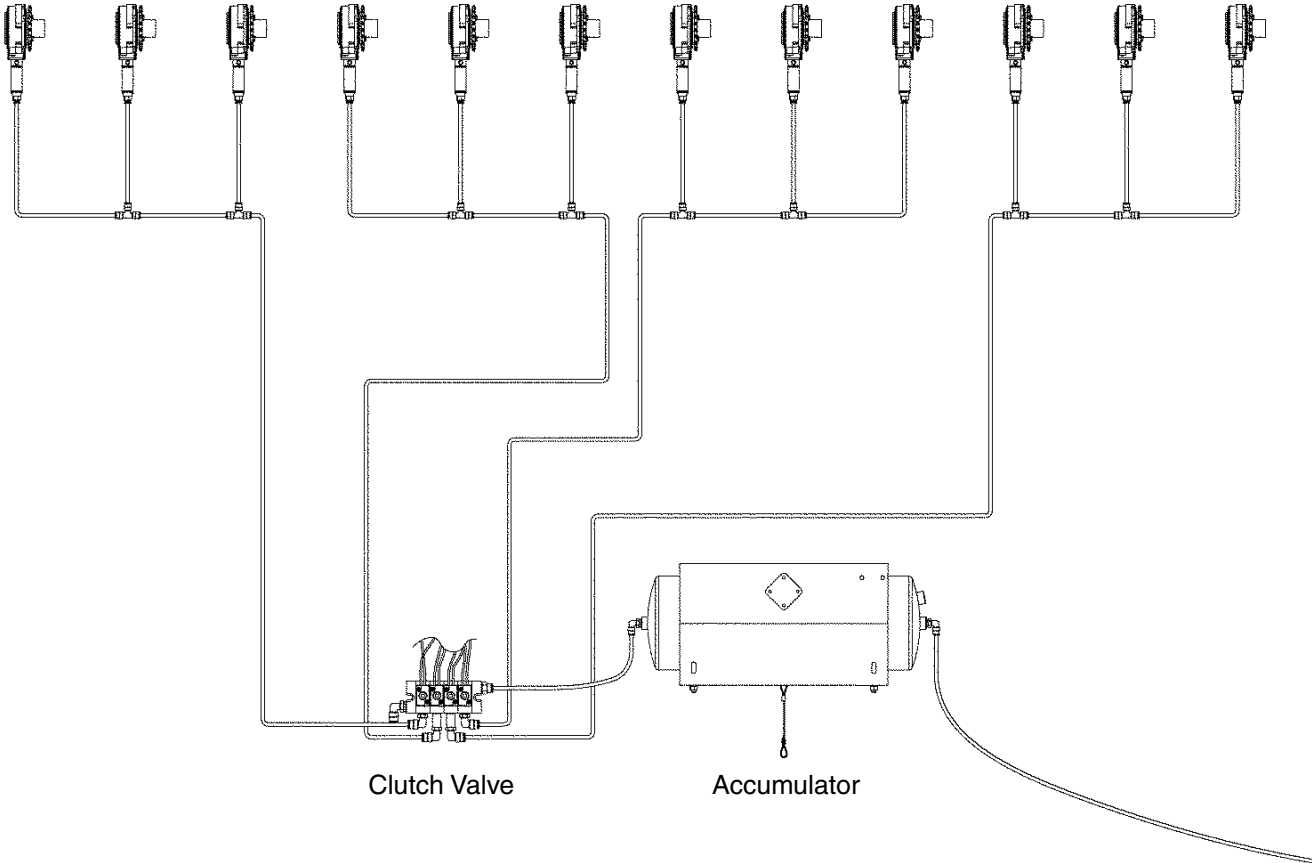

# MAINTENANCE



---

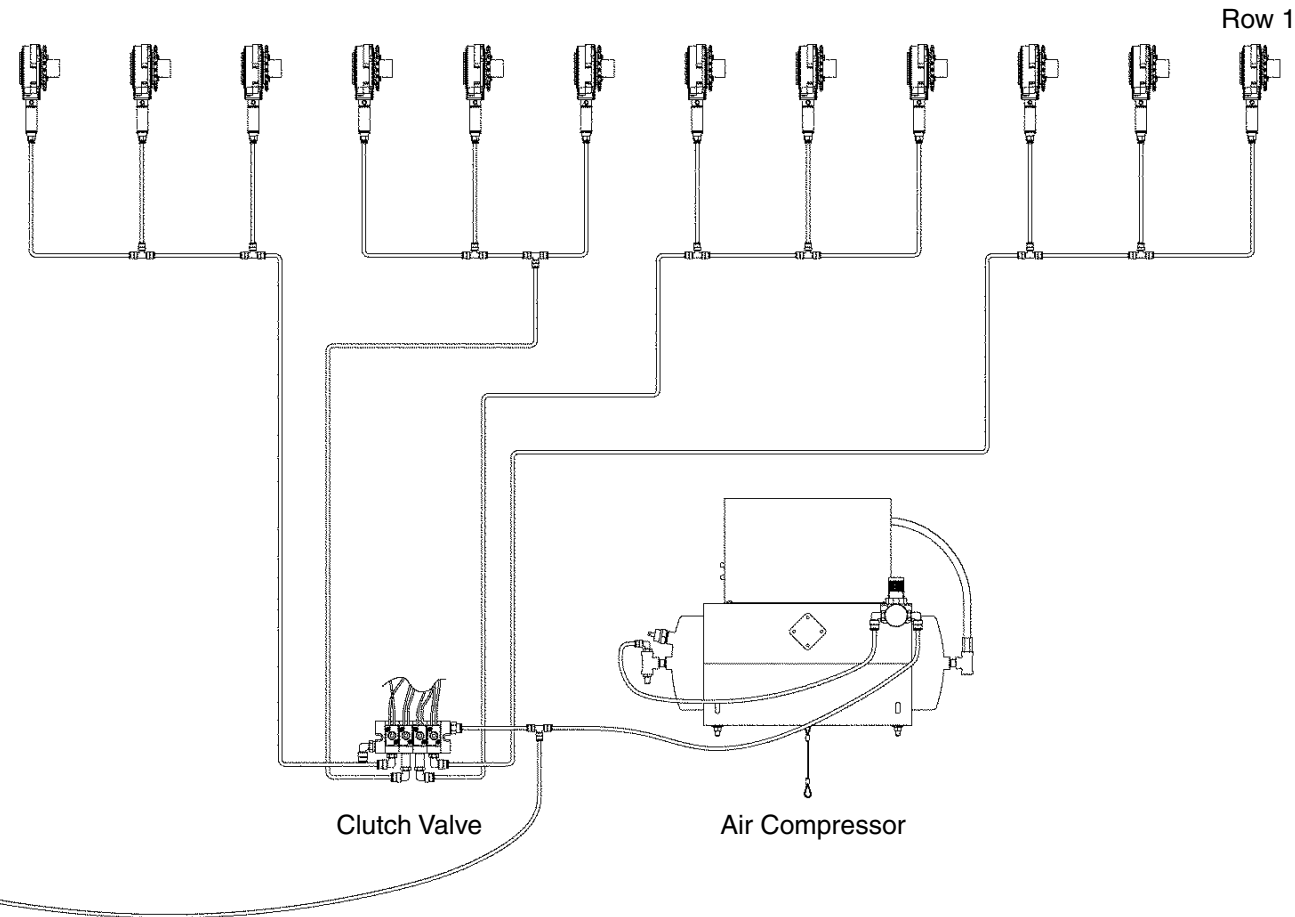

# MAINTENANCE

## HYDRAULIC SCHEMATIC (SDS)

(FWD103/FWD101a)

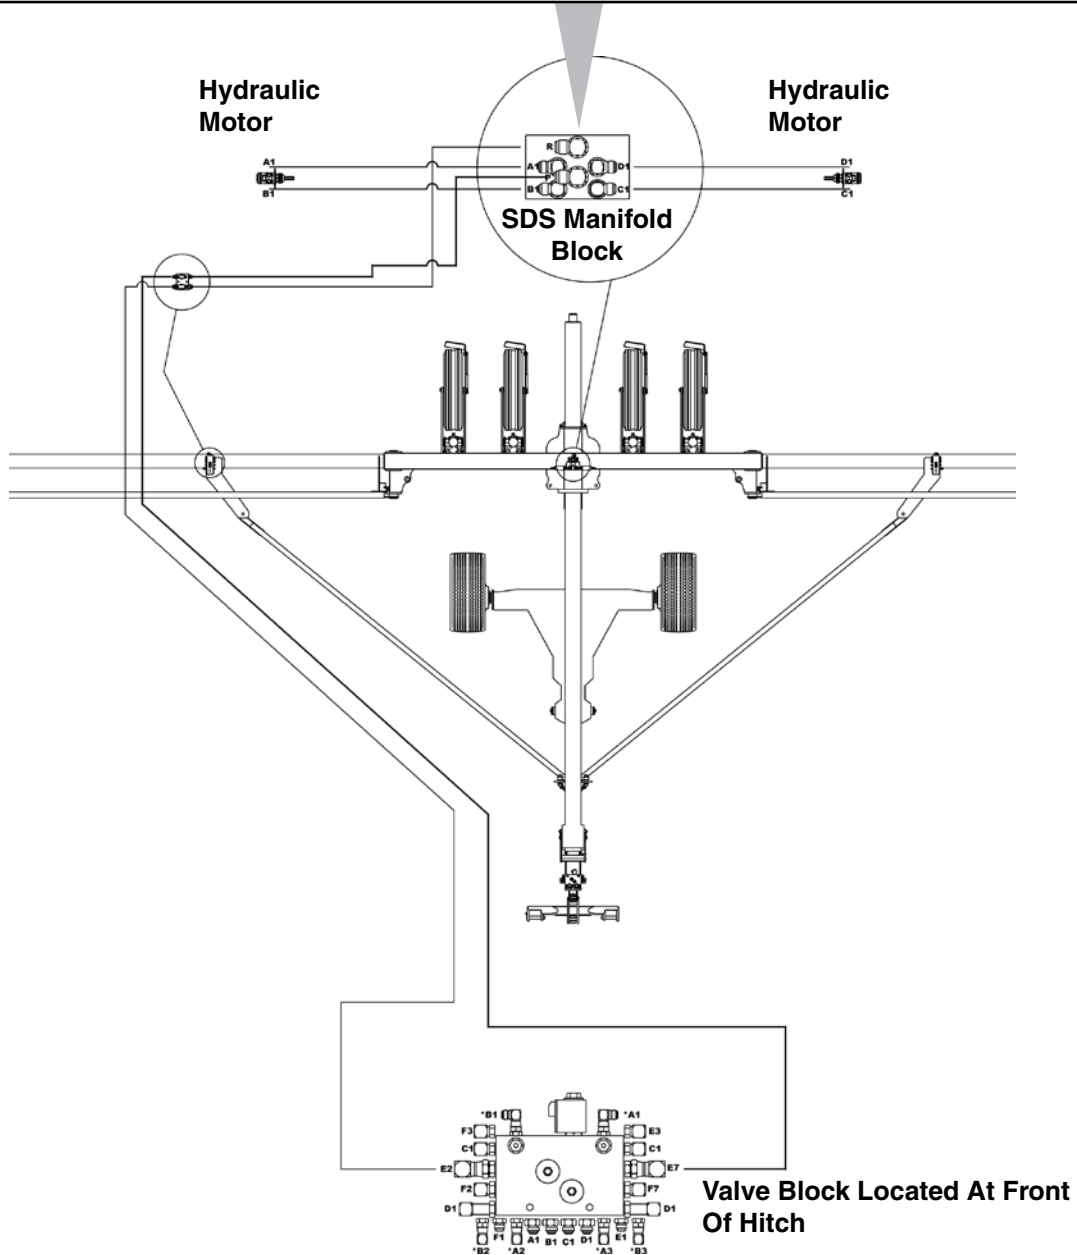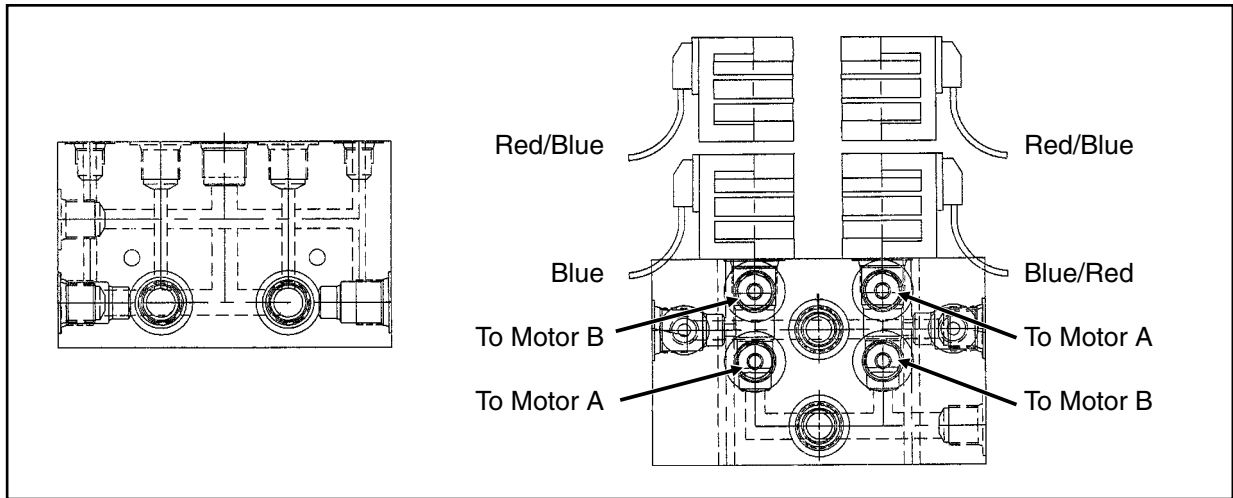



# PARTS LIST INDEX

---

|  |      |
|--|------|
| <b>ROW UNIT</b>  |      |
| 15" Seed Opener Disc Blade/Bearing Assembly And Scrapers .....                               | P13  |
| Accumulator Assembly .....   | P10  |
| Coulter Mounted Residue Wheels .....   | P46  |
| Covering Discs/Single Press Wheel .....  | P16  |
| Drag Closing Attachment.....   | P19  |
| Frame Mounted Coulter W/Residue Wheels.....  | P48  |
| Gauge Wheels.....  | P14  |
| Granular Chemical Banding Options .....  | P39  |
| Granular Chemical Hopper And Hopper Panel Extension.....                                     | P36  |
| Granular Chemical Meter And Meter Drive.....   | P38  |
| Hopper Support And Meter Drive .....   | P20  |
| Parallel Arms, Mounting Support Plate And Pneumatic Down Pressure Package .....              | P4   |
| Parallel Arms, Mounting Support Plate And Quick<br>Adjustable Down Force Springs.....        | P12  |
| Pneumatic Down Pressure Air Compressor, Dual Solenoid Assembly,<br>Tubing And Fittings ..... | P8   |
| Pneumatic Down Pressure Control Console, Sending Unit And Harnesses .....                    | P6   |
| Row Unit Mounted Disc Furrower .....   | P42  |
| Row Unit Mounted No Till Coulter .....   | P41  |
| Row Unit Mounted Residue Wheel .....   | P44  |
| Seed Hopper And Lid (Conventional Planters).....   | P22  |
| Seed Meter .....   | P24  |
| Shank Assembly, Seed Tube And Depth Adjustment .....   | P2   |
| Spring Tooth Incorporator .....  | P40  |
| "V" Closing Wheels .....   | P18  |
| <b>EDGEVAC® SYSTEM</b>   |      |
| Manifolds And Distribution Hoses .....   | P60  |
| PTO Assembly .....   | P50  |
| PTO Assembly On Hitch .....  | P62  |
| PTO Pump Assembly.....   | P54  |
| Vacuum Fan Hydraulic Components .....  | P52  |
| Vacuum Fan Hydraulic Motor Assembly .....  | P56  |
| Vacuum Fan Motor Valve Block Assembly<br>(Located On Both Sides Of Planter) .....            | P57  |
| Vacuum Gauges, Control Console And Vacuum Fan Assembly With Oil Cooler.....                  | P58  |
| <b>BASE MACHINE</b>  |      |
| Center Toolbar/Rear H-Frame Assembly .....   | P66  |
| Clutch Valve Assemblies.....   | P88  |
| Cylinders.....   | P92  |
| Draft Link .....   | P76  |
| Electrical Components .....  | P112 |
| Hitch Assembly.....  | P64  |
| Hydraulic Driveline Assemblies.....  | P80  |
| Hydraulic Hoses And Fittings.....  | P106 |
| Hydraulic Motors.....  | P98  |
| Hydraulic Motor Driveline Assemblies .....   | P84  |
| Lift/Gauge Wheel .....   | P78  |
| Light Assemblies And Brackets .....  | P118 |
| Outer Wing.....  | P74  |
| Rock Shaft Axle Assembly And Wheels .....  | P68  |
| Row Marker Assemblies .....  | P90  |
| Row Marker Spindle/Hub/Blade.....  | P89  |
| Stub Wing .....  | P82  |
| Transport Axle Assembly And Wheels.....  | P70  |
| Valve/Junction Blocks And Valves.....  | P100 |
| <b>SDS SEED DELIVERY SYSTEM</b>  |      |
| Auger Assemblies.....  | P26  |
| Bulk Seed Hopper Assembly (SDS) .....  | P32  |
| Bulk Seed Hopper Catwalk (SDS).....  | P34  |
| SDS Hydraulic System .....   | P110 |
| Seed Meter Mount and Drop Hoses .....  | P23  |
| <b>ELECTRONIC SEED MONITOR</b>   |      |
| KINZE Vision® Display .....  | P120 |
| KINZE Cobalt™ Display .....  | P122 |
| Planter Monitor Module (PMM).....  | P124 |
| <b>FERTILIZER</b>  |      |
| Depth/Gauge Wheel Attachment For Notched Single Disc Fertilizer Opener.....                  | P128 |
| Fertilizer Opener Mounts .....   | P129 |
| Liquid Fertilizer .....  | P130 |
| Notched Single Disc Fertilizer Opener.....   | P126 |
| Rear Trailer Hitch .....   | P141 |
| Decals, Paint And Miscellaneous.....   | P142 |
| Numerical Index.....   | P146 |

# SHANK ASSEMBLY, SEED TUBE AND DEPTH ADJUSTMENT

(D17014/METR29cc/A12650a/D16245)

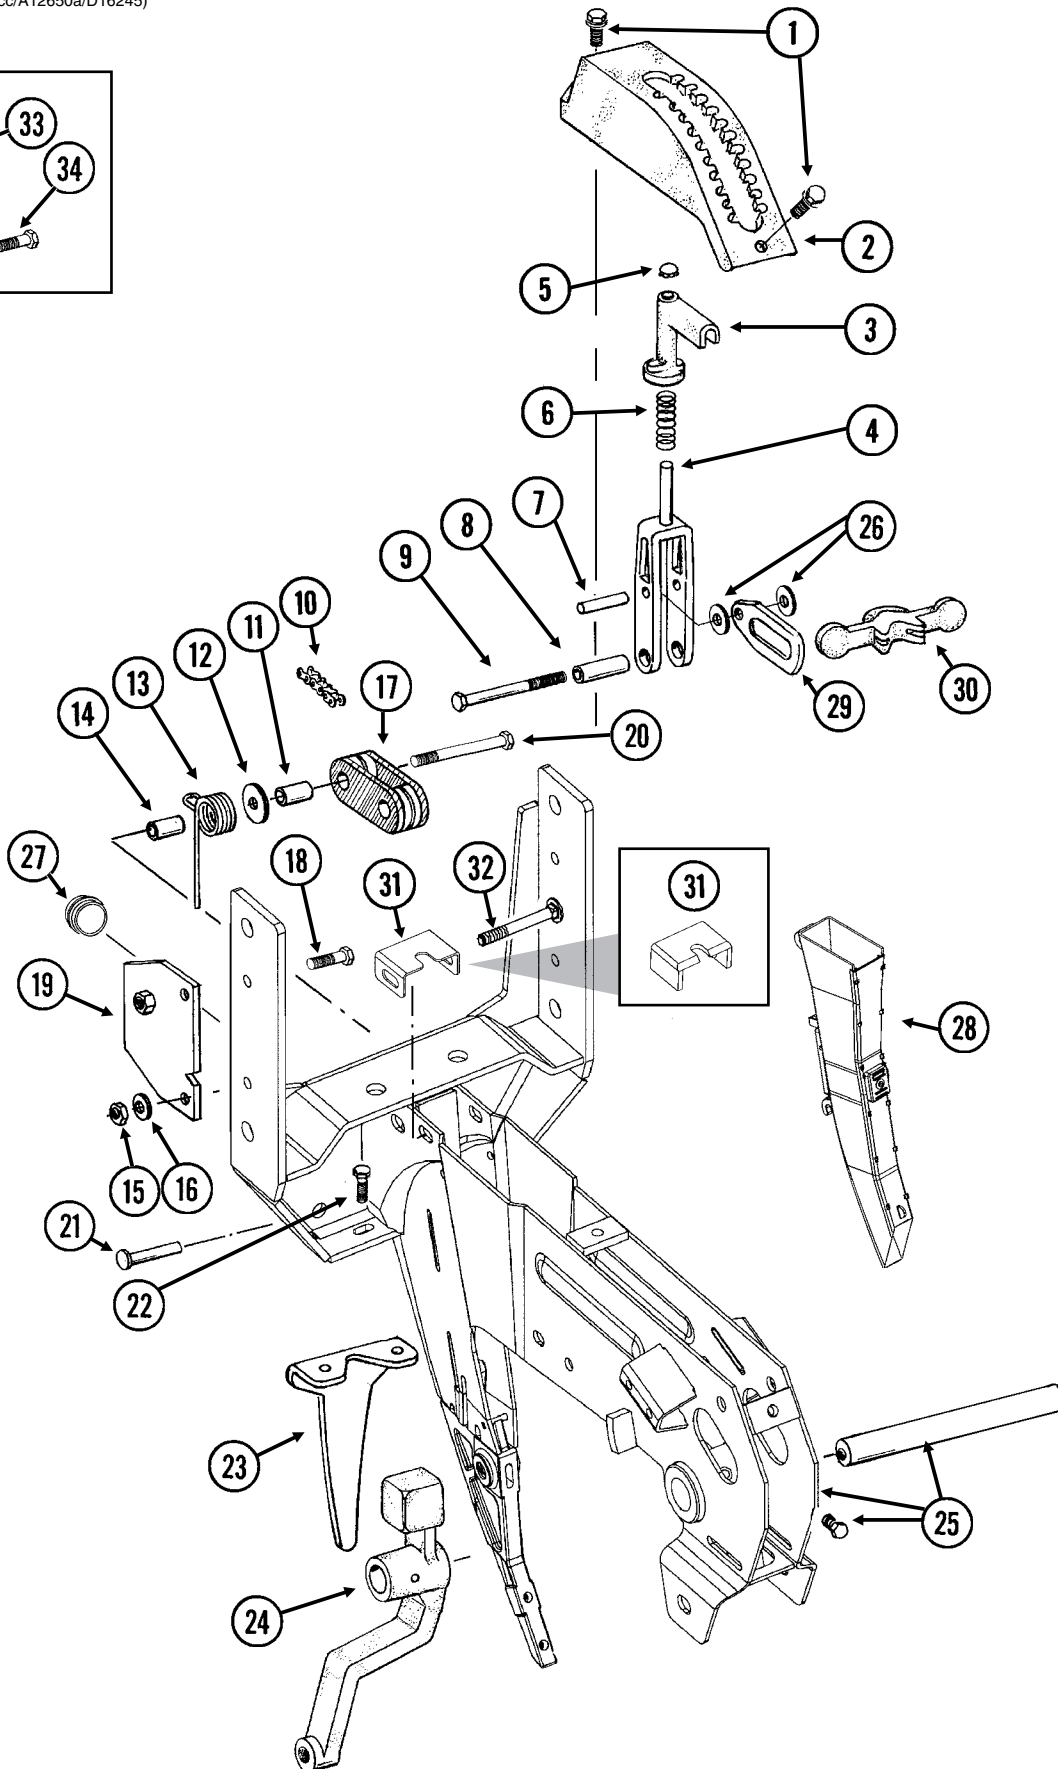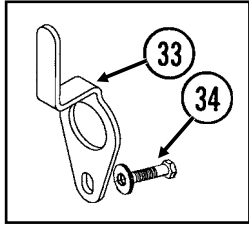



# SHANK ASSEMBLY, SEED TUBE AND DEPTH ADJUSTMENT

---




| ITEM | PART NO.  | QTY.<br>(Per Row) | DESCRIPTION  |
|------|-----------|-------------------|--|
| 1.   | G11015    | 2                 | Hex Washer Head Cap Screw, 3/8"-16 x 1 1/4"  |
| 2.   | GB0274    | 1                 | Cover, Depth Adjustment  |
| 3.   | GB0266    | 1                 | Handle, Depth Adjustment   |
| 4.   | GB0267    | 1                 | Lever, Depth Adjustment  |
| 5.   | GD3612    | 1                 | Cap Plug   |
| 6.   | GD10993   | 1                 | Spring   |
| 7.   | GD13361   | 1                 | Pin, 3/8" x 1 2/3"   |
| 8.   | GD11259   | 1                 | Sleeve, 3/8" I.D. x 5/8" O.D. x 1 25/32" Long  |
| 9.   | G11008    | 1                 | Hex Head Cap Screw, 3/8"-24 x 2 1/2", Grade 8  |
|      | G11007    | 1                 | Lock Nut, 3/8"-24, Grade C   |
| 10.  | G3303-104 | 1                 | Chain, No. 41, 104 Pitch Including Connector Link  |
|      | G3303-16  | 1                 | Chain, No. 41, 16 Pitch Including Connector Link<br>(Used W/Row Unit Extension Brackets) |
|      | GR0196    | 1                 | Connector Link, No. 41   |
| 11.  | GD1026    | 1                 | Sleeve, 1 3/16" Long   |
| 12.  | G10201    | 1                 | Special Washer, 3/8" x 1 1/2" O.D.   |
| 13.  | GD1065    | 1                 | Idler Spring   |
| 14.  | GD7318    | 1                 | Sleeve, 1" Long  |
| 15.  | G10108    | 1                 | Lock Nut, 3/8"-16  |
| 16.  | G10210    | 1                 | Washer, 3/8" USS   |
| 17.  | GD11962   | 1                 | Idler  |
| 18.  | G10003    | 3                 | Hex Head Cap Screw, 3/8"-16 x 1 1/2"   |
|      | G10108    | 3                 | Lock Nut, 3/8"-16  |
| 19.  | GD10867   | 2                 | Stop   |
| 20.  | G10326    | 1                 | Hex Head Cap Screw, 3/8"-16 x 3 3/4"   |
| 21.  | G10551    | 1                 | Clevis Pin, 1/4" x 2 1/2"  |
|      | G10669    | 1                 | Hair Pin Clip, No. 22  |
| 22.  | G10312    | 2                 | Carriage Bolt, 5/16"-18 x 3/4"   |
|      | G10620    | 2                 | Serrated Flange Nut, 5/16"-18  |
| 23.  | GD1033    | 1                 | Shield   |
| 24.  |           | -                 | Wheel Arm, See "Gauge Wheels", Pages P14 And P15   |
| 25.  | GA10157   | 1                 | Shank W/Gauge Wheel Pivot Spindle And Set Screw  |
|      | GD11001   | -                 | Spindle  |
|      | G10438    | -                 | Hex Head Cap Screw, 1/2"-13 x 3/4"   |
| 26.  | G10207    | 2                 | Washer, 7/8" O.D. x 1 3/32" I.D. x .134" (If Applicable)                                 |
| 27.  | GD11845   | 1                 | Dust Cap   |
| 28.  |           |                   | See "Planter Monitor Module (PMM)", Pages P124 And P125                                  |
| 29.  | GB0285    | 1                 | Collar, Depth Adjustment   |
| 30.  | GB0265    | 1                 | Pivot Link, Depth Adjustment   |
| 31.  | GD16245   | -                 | Sun Shade (Rubber)   |
| 32.  | G10304    | 1                 | Carriage Bolt, 3/8"-16 x 3"  |
|      | G10108    | 1                 | Lock Nut, 3/8"-16  |
| 33.  | GD17014   | 1                 | Hose Guide   |
| 34.  | G10047    | 1                 | Hex Head Cap Screw, 3/8"-16 x 1 3/4"   |
|      | G10203    | 2-3               | Washer, 3/8" SAE   |
|      | G10108    | 1                 | Lock Nut, 3/8"-16  |

# PARALLEL ARMS, MOUNTING SUPPORT PLATE AND PNEUMATIC DOWN PRESSURE PACKAGE

(RU157d/RU157c/A12405)

Pull Row Unit Shown

NOTE: Items that are not referenced on this page may be referenced on page P8.

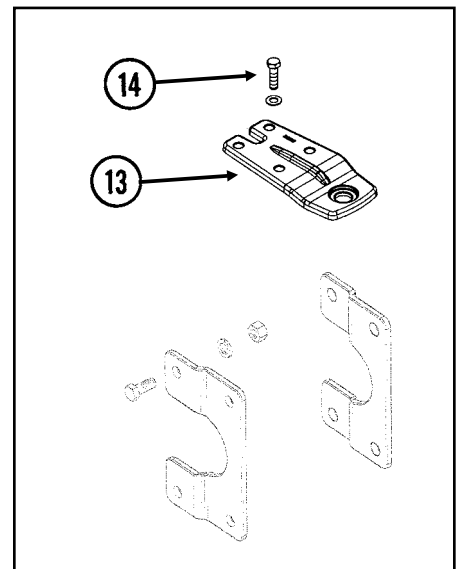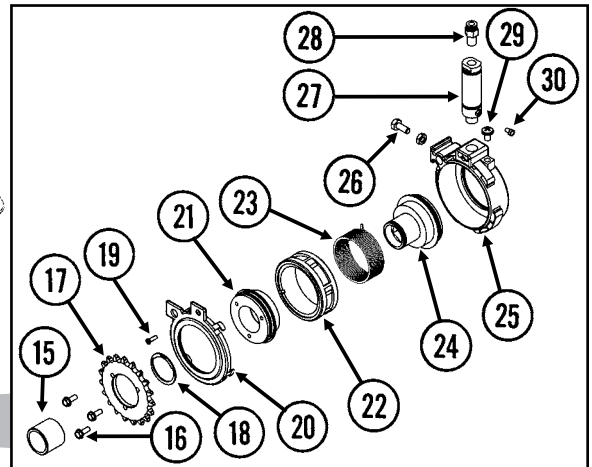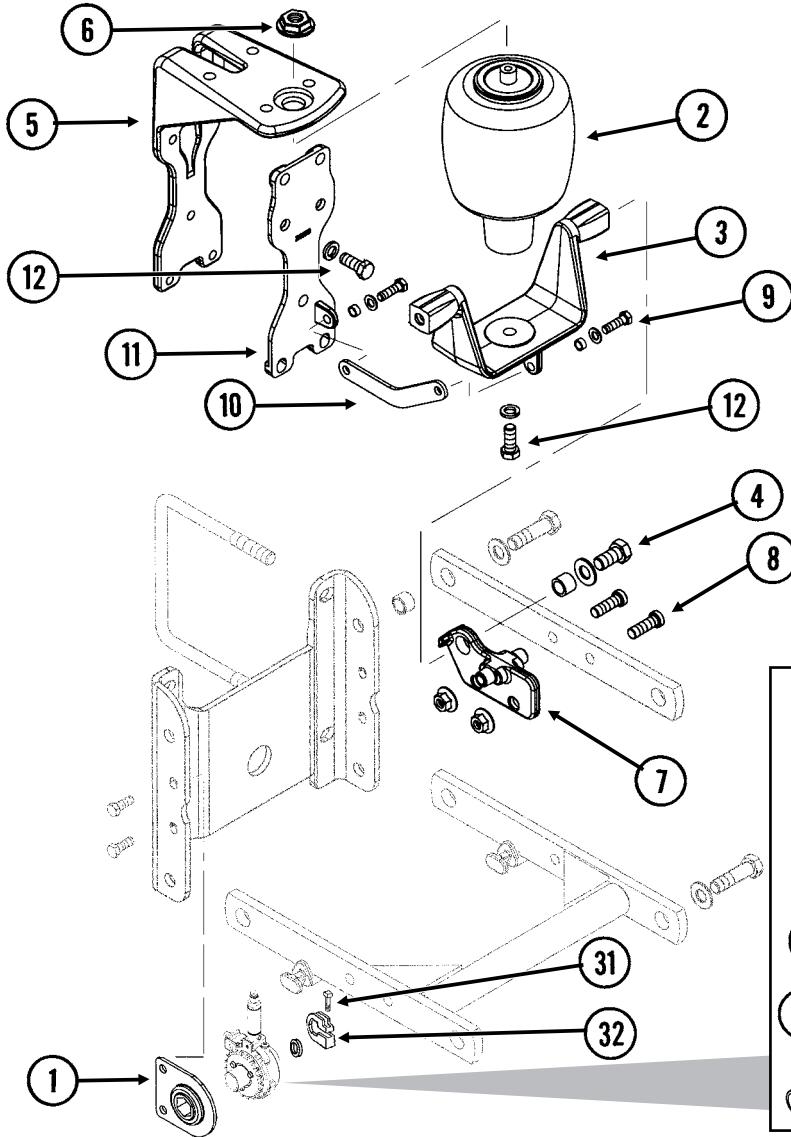


# PARALLEL ARMS, MOUNTING SUPPORT PLATE AND PNEUMATIC DOWN PRESSURE PACKAGE

---

| ITEM | PART NO.   | QTY.<br>(Per Row) | DESCRIPTION   |
|------|------------|-------------------|---|
| 1.   | GA2180     | 1                 | Hanger Bearing, 7/8" Hex Bore   |
| 2.   | GA11982    | 1                 | Air Spring Assembly   |
| 3.   | GB0394     | 1                 | Saddle  |
| 4.   | G11018     | 2                 | Hex Head Cap Screw, 5/8"-18 x 1 1/4"  |
|      | GD7805     | 2                 | Special Washer, 5/8", Hardened  |
|      | GD3180-30  | 2                 | Sleeve, 7/8" O.D. x 5/8" I.D. x 2 1/32"   |
| 5.   | GB0396     | 1                 | Head Mount  |
| 6.   | GB0397     | 1                 | Shoulder Nut, 3/4"-16   |
| 7.   | GB0395     | 2                 | Bracket   |
| 8.   | G11220     | 4                 | Hex Socket Cap Screw, 1/2"-13 x 1 1/2"  |
|      | G10071     | 4                 | Serrated Flange Nut, 1/2"-13  |
| 9.   | G10004     | 2                 | Hex Head Cap Screw, 3/8"-16 x 1 1/4"  |
|      | G10203     | 2                 | Washer, 3/8" SAE  |
|      | GD11963-04 | 2                 | Spacer, 1/4"  |
|      | G10108     | 2                 | Lock Nut, 3/8"-16   |
| 10.  | GD17794    | 1                 | Link  |
| 11.  | GB0393     | 1                 | Plate   |
| 12.  | G10037     | 7                 | Hex Head Cap Screw, 1/2"-13 x 1 1/4"  |
|      | G10206     | 2                 | Washer, 1/2" SAE (Lower Two Holes Only)   |
|      | G10228     | 7                 | Lock Washer, 1/2"   |
| 13.  | GB0398     | 1                 | Extension   |
| 14.  | G10016     | 4                 | Hex Head Cap Screw, 1/2"-13 x 2"  |
|      | G10206     | 4                 | Washer, 1/2" SAE  |
|      | G10111     | 4                 | Lock Nut, 1/2"-13   |
| 15.  | GD18891    | 1                 | Spacer, 1 1/4" O.D. x 1"  |
| 16.  | G10020     | 1                 | Hex Head Cap Screw, 1/4"-20 x 5/8"  |
| 17.  | GR1812     | 1                 | Sprocket, 19 Tooth  |
| 18.  | G11295     | 1                 | Retaining Ring  |
| 19.  | G11243     | 1                 | Slotted Flat Head Machine Screw, No. 8-32 x 1/2", Stainless Steel                     |
| 20.  | GR1894     | 1                 | Air Housing Cover   |
| 21.  | GR1815     | 1                 | Sprocket Hub  |
| 22.  | GR1818     | 1                 | Ratchet Gear  |
| 23.  | GR1813     | 1                 | Clutch Spring   |
| 24.  | GR1830     | 1                 | Hex Bushing   |
| 25.  | GR1895     | 1                 | Air Clutch Housing  |
| 26.  | G10023     | 3                 | Hex Head Cap Screw, 1/4"-20 x 3/4"  |
|      | G10103     | 3                 | Hex Nut, 1/4"-20  |
| 27.  | GR1896     | 1                 | Air Cylinder  |
| 28.  | GR1819     | 1                 | Push Connect, 1/8" NPT Male x 1/4"  |
| 29.  | G11296     | 1                 | Pan Head Machine Screw, 1/4"-20 x 3/4" x 3/4"   |
| 30.  | GR1898     | 1                 | Filter  |
| 31.  | G10130     | -                 | Square Head Machine Bolt, 5/16"-18 x 1 3/4"   |
|      | G10923     | -                 | Flange Nut, 5/16"-18, No Serration  |
| 32.  | GD11045    | -                 | Lock Clamp  |
| A.   | G6325X     | -                 | U-Bolt Package For 5" x 7" Toolbar, Includes: (2) GD1113, (4) G10230, (4) G10104      |
| B.   | GA12405    | -                 | Air Clutch Assembly, (Items 32-48)  |
| C.   | G1K465     | -                 | Pull Row Unit Assist Springs Package, Includes: (2) G10438, (2) G10216 And (2) GD8249 |

# PNEUMATIC DOWN PRESSURE CONTROL CONSOLE, SENDING UNIT AND HARNESSES

(PNE30b/MTR27a/ELC27b/MTR45/MTR27V/PNE30c)

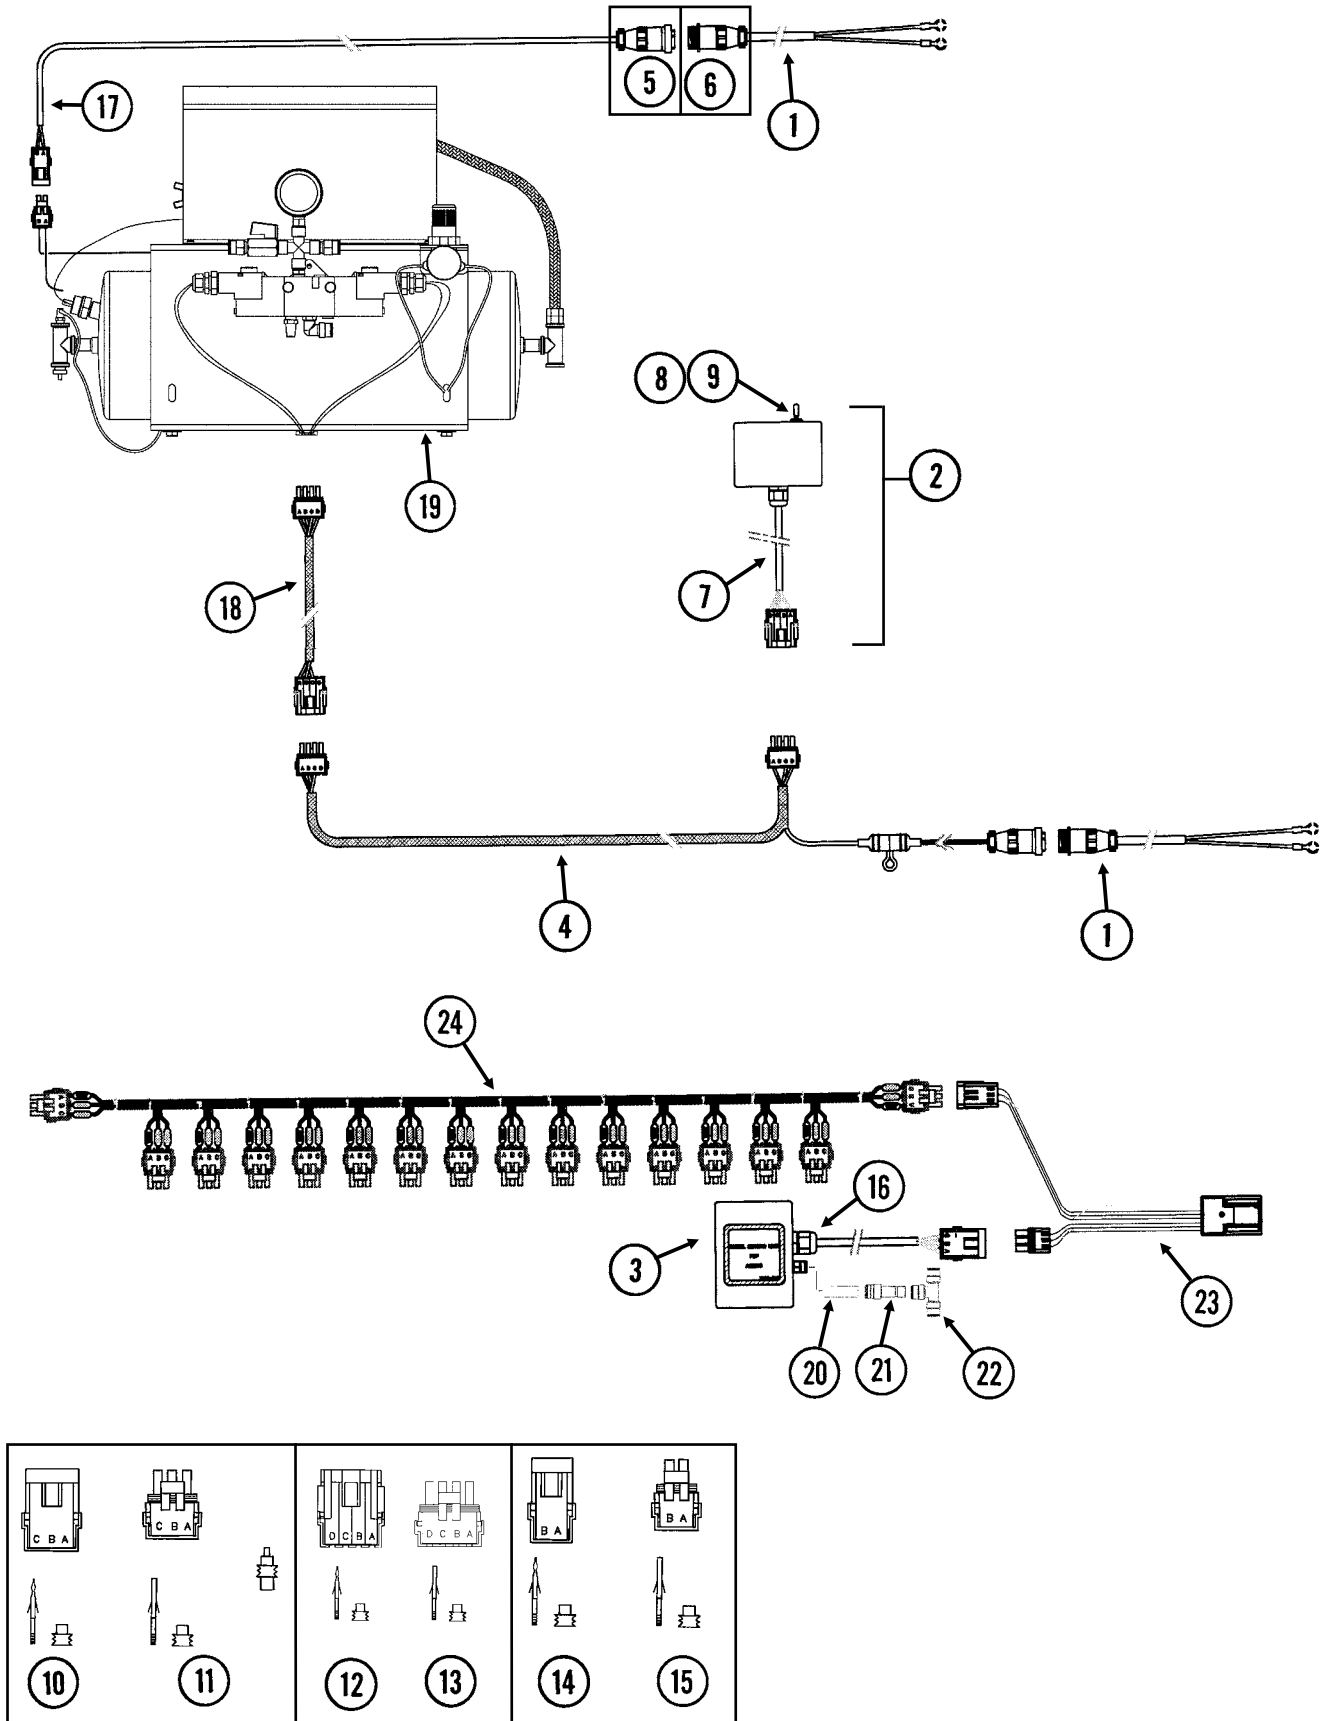




# PNEUMATIC DOWN PRESSURE CONTROL CONSOLE, SENDING UNIT AND HARNESSSES

---

| ITEM | PART NO.   | QTY. | DESCRIPTION  |
|------|------------|------|--|
| 1.   | GA7856     | 2    | Power Lead Adapter   |
| 2.   | GA12813    | 1    | Control Box Assembly   |
| 3.   | GA12815    | 1    | Sending Unit   |
| 4.   | GA12814    | 1    | Wiring Harness W/Fuse Holder And Fuse, 206"  |
|      | GD14258    | -    | Fuse Holder  |
|      | GD14660    | -    | Fuse, 2 Amp Delay Action   |
| 5.   | G1K268     | -    | Console Cable Connector Kit, Includes: (1) 3-Pin Connector, (1) Cable Clamp, (1) Lock Ring, (3) Female Terminal Pins |
| 6.   | G1K267     | -    | Console Cable Connector Kit, Includes: (1) 3-Pin Connector, (1) Cable Clamp, (3) Male Terminal Pins                  |
| 7.   | GA9964     | 1    | Strain Relief  |
| 8.   | GR1363     | 1    | Hex Face Nut, 1 <sup>5</sup> / <sub>32</sub> "-32  |
|      | GR1364     | 1    | Internal Tooth Lock Washer, 1 <sup>5</sup> / <sub>32</sub> "   |
| 9.   | GA6978     | 1    | Switch, 3 Position Toggle, Momentary On-Off-Momentary On   |
| 10.  | G1K248     | -    | 3-Pin Female Connector Kit (Black), Includes: (3) 3-Pin Female Housings, (9) Pin Contacts, (9) Seals                 |
| 11.  | G1K252     | -    | 3-Pin Male Connector Kit (Black), Includes: (3) 3-Pin Male Housings, (9) Socket Contacts, (9) Seals                  |
| 12.  | GA8328     | -    | 4-Pin Female Connector Kit, Includes: (1) 4-Pin Female Housing, (4) Pin Contacts, (4) Seals                          |
| 13.  | GA8329     | -    | 4-Pin Male Connector Kit, Includes: (1) 4-Pin Male Housing, (4) Socket Contacts, (4) Seals                           |
| 14.  | G1K321     | -    | 2-Pin Female Connector Kit (Black), Includes: (3) 2-Pin Female Housings, (6) Pin Contacts, (6) Seals                 |
| 15.  | G1K320     | -    | 2-Pin Male Connector Kit (Black), Includes: (3) 2-Pin Male Housings, (6) Socket Contacts, (6) Seals                  |
| 16.  | GA9964     | 2    | Strain Relief  |
| 17.  | GA12684    | 1    | Wiring Harness W/Fuse Holder And Fuse, 60'   |
|      | GD14258    | -    | Fuse Holder  |
|      | GD18275    | -    | Fuse, 20 Amp   |
| 18.  | GA12858    | 1    | Wiring Harness, 60'  |
| 19.  |            |      | See "Pneumatic Down Pressure Air Compressor, Dual Solenoid Assembly, Tubing And Fittings", Pages P8 And P9           |
| 20.  | GD17151-06 | 1    | Nylon Tubing, 1/4" O.D. x 1 1/2'   |
| 21.  | GD18796    | 1    | Reducer, 3/8" To 1/4"  |
| 22.  | GD18010    | 1    | Tee, 3/8" Tube Union   |
| 23.  | GA12812    | 1    | Hall Effect Adapter  |
| 24.  |            |      | See "KINZE Vision Display", Pages P120 And P121  |

# PNEUMATIC DOWN PRESSURE AIR COMPRESSOR, DUAL SOLENOID ASSEMBLY, TUBING AND FITTINGS

(PNE06b/PNE02/PNE05/A13169/PNE09/PNE08)

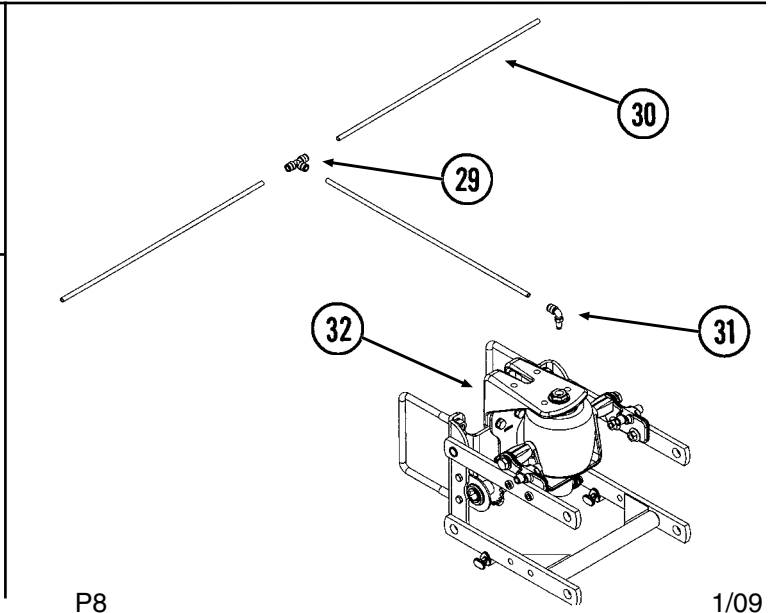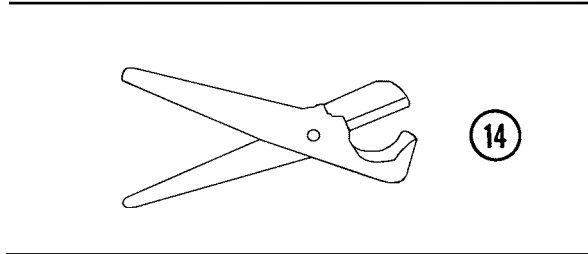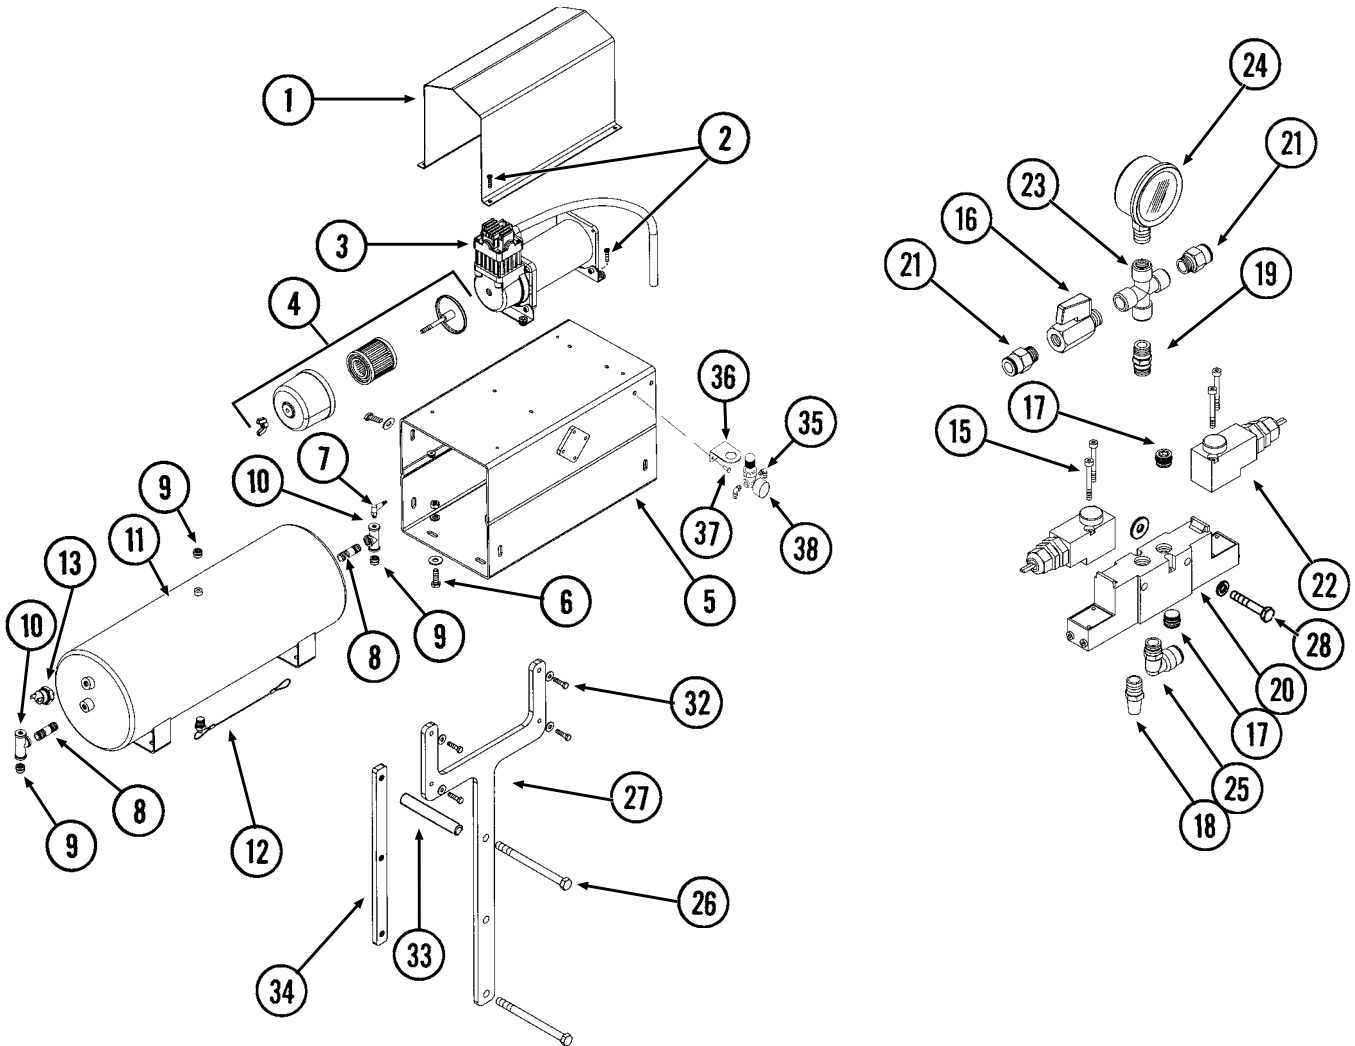


# PNEUMATIC DOWN PRESSURE AIR COMPRESSOR, DUAL SOLENOID ASSEMBLY, TUBING AND FITTINGS

---

| ITEM | PART NO.   | QTY. | DESCRIPTION  |
|------|------------|------|--|
| 1.   | GD18112    | 1    | Cover  |
| 2.   | G11066     | 8    | Phillips Pan Head Machine Screw, No. 10-24 x 3/4", Stainless Steel |
|      | G10992     | 8    | Serrated Flange Nut, No. 10-24                                     |
| 3.   | GA12102    | 1    | Air Compressor   |
| 4.   | GA12404    | 1    | Filter Assembly  |
|      | GR1809     | -    | Filter   |
| 5.   | GA12358    | 1    | Compressor Mount   |
| 6.   | G10019     | 8    | Hex Head Cap Screw, 5/16"-18 x 1"                                  |
|      | G10219     | 8    | Washer, 5/16" USS  |
|      | G10232     | 8    | Lock Washer, 5/16"   |
|      | G10106     | 8    | Hex Nut, 5/16"-18  |
| 7.   | GA13512    | 1    | Valve Stem, 1/4" NPT   |
| 8.   | GD19238    | 2    | Nipple, 1/4" NPT   |
| 9.   | GD17156    | 3    | Plug, 1/4" NPT   |
| 10.  | GD19237    | 2    | Tee, 1/4" NPT  |
| 11.  | GA11988    | 1    | Tank, 3 Gallon   |
| 12.  | GA11991    | 1    | Drain, 1/4" NPT  |
| 13.  | GR1778     | 1    | Pressure Switch  |
| 14.  | GA13169    | 1    | Tube Cutter W/Blade  |
|      | GR1843     | -    | Blade  |
| 15.  | G11247     | 4    | Slotted Pan Head Machine Screw, M4-0.7 x 8                         |
| 16.  | GA11992    | 1    | Shutoff Valve, 1/4" NPT  |
| 17.  | GD17156    | 2    | Plug, 1/4" NPT   |
| 18.  | GA11997    | 1    | Breather, 1/4" NPT   |
| 19.  | GD17154    | 1    | Connector, 1/4" Male   |
| 20.  | GA11993    | 1    | Block  |
| 21.  | GD17141    | 3    | Connector, 1/4" Male   |
| 22.  | GA11994    | 2    | Solenoid   |
| 23.  | GD18078    | 1    | Female Cross, 1/4" NPT   |
| 24.  | GA12104    | 1    | Pressure Gauge, 1/4" NPT   |
| 25.  | GD17143    | 1    | Swivel Elbow, 1/4" NPT x 3/8"                                      |
| 26.  | G10341     | 3    | Hex Head Cap Screw, 5/8"-11 x 8"                                   |
| 27.  | GD18173    | 2    | Bracket  |
| 28.  | G10040     | 2    | Hex Head Cap Screw, 1/4"-20 x 1 3/4"                               |
|      | G10227     | 2    | Lock Washer, 1/4"  |
|      | G10209     | 2    | Washer, 1/4" USS   |
| 29.  | GD18010    | -    | Tee, 3/8" Tube Union, Pull Row Unit (Pneumatic Down Pressure)      |
|      | GD18015    | -    | Tee, 1/4" Press On, Pull Row Unit (Air Clutch)                     |
| 30.  | GD17150-05 | -    | Nylon Tubing, 3/8" O.D. x 112' (Pneumatic Down Pressure)           |
|      | GD17151-01 | -    | Nylon Tubing, 1/4" O.D. x 52' (Air Clutch)                         |
| 31.  | GD18011    | -    | Elbow, 3/8" x 1/8" NPT Extended                                    |
| 32.  | G10171     | 4    | Hex Head Cap Screw, 5/16"-18 x 1 1/4"                              |
|      | G10219     | 4    | Washer, 5/16" USS  |
|      | G10232     | 4    | Lock Washer, 5/16"   |
|      | G10106     | 4    | Hex Nut, 5/16"-18  |
| 33.  | GD3180-33  | 1    | Sleeve, 7"   |
| 34.  | GD18901    | 1    | Tap Block, Long  |
| 35.  | GD19080    | 2    | Elbow, 1/4" x 1/8" NPT Swivel                                      |
| 36.  | GD18084    | 1    | Regulator Bracket  |
| 37.  | G10023     | 2    | Hex Head Cap Screw, 1/4"-20 x 3/4"                                 |
|      | G10227     | 2    | Lock Washer, 1/4"  |
|      | G10103     | 2    | Hex Nut, 1/4"-20   |
| A.   | GA12626    | -    | Air Compressor Assembly (Items 1-14)                               |
| B.   | GA11995    | -    | Dual Solenoid Assembly (Items 15-25)                               |

# ACCUMULATOR ASSEMBLY

(IP1040)

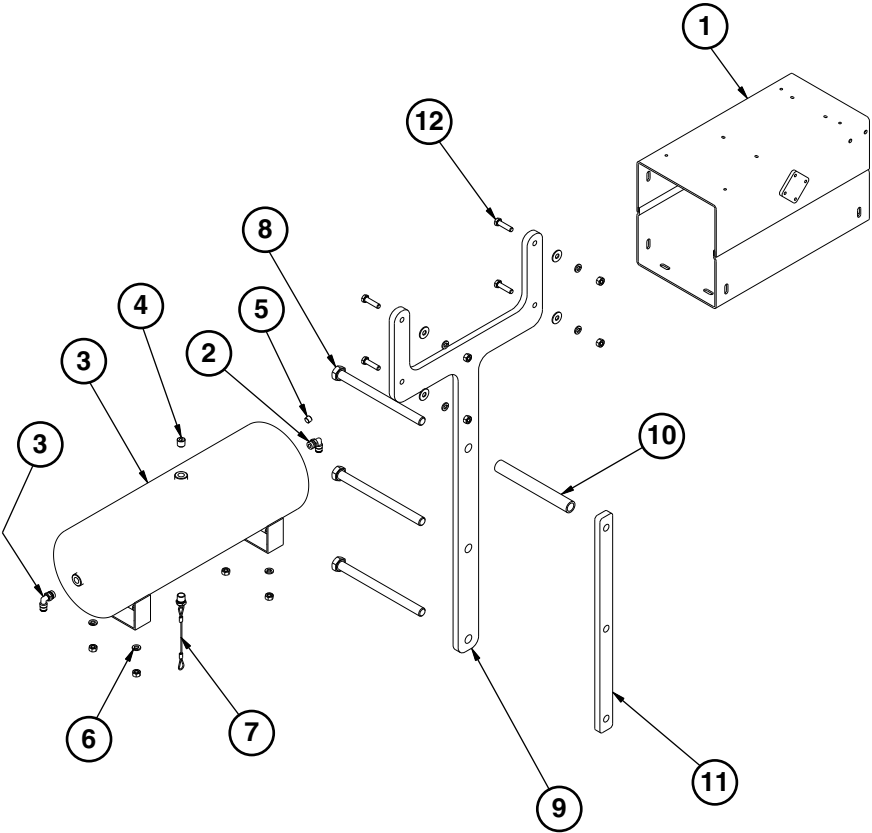




# ACCUMULATOR ASSEMBLY

---


| ITEM | PART NO.  | QTY. | DESCRIPTION                           |
|------|-----------|------|---------------------------------------|
| 1.   | GA12358   | 1    | Compressor Mount                      |
| 2.   | GA11988   | 1    | Tank, 3 Gallon                        |
| 3.   | GD17148   | 2    | Male Connector, 1/4"                  |
| 4.   | GD17156   | 1    | Plug, 1/4" NPT                        |
| 5.   | GD19079   | 1    | Plug, 1/8" NPT                        |
| 6.   | G10232    | 4    | Lock Washer, 5/16"                    |
|      | G10106    | 4    | Hex Nut, 5/16"-18                     |
|      | G10043    | 4    | Hex Head Cap Screw, 5/16"-18 x 3/4"   |
| 7.   | GA11991   | 1    | Drain, 1/4" NPT                       |
| 8.   | G10341    | 3    | Hex Head Cap Screw, 5/8"-11 x 8"      |
| 9.   | GD18173   | 1    | Bracket                               |
| 10.  | GD3180-33 | 1    | Sleeve, 7"                            |
| 11.  | GD18901   | 1    | Tap Block, Long                       |
| 12.  | G10171    | 4    | Hex Head Cap Screw, 5/16"-18 x 1 1/4" |
|      | G10232    | 4    | Lock Washer, 5/16"                    |
|      | G10219    | 4    | Washer, 5/16" USS                     |
|      | G10106    | 4    | Hex Nut, 5/16"-18                     |

# PARALLEL ARMS, MOUNTING SUPPORT PLATE AND QUICK ADJUSTABLE DOWN FORCE SPRINGS

(RU147/RU148a/RU78j/B0366)

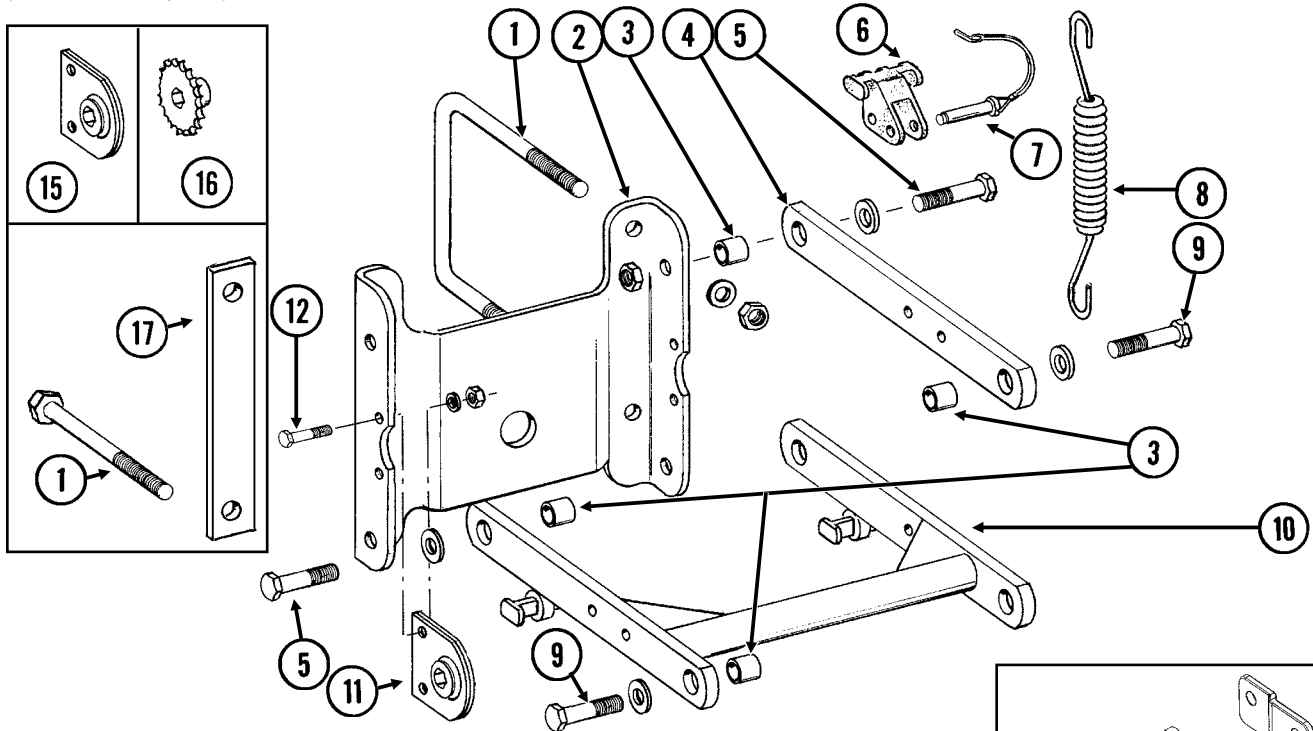


| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION  |
|------|----------|-------------------|--|
| 1.   | GD1114   | 2                 | U-Bolt, 7" x 7" x 5/8"-11  |
|      | G10152   | -                 | Hex Head Cap Screw, 5/8"-11 x 9"   |
|      | G10217   | -                 | Washer, 5/8" USS   |
|      | G10230   | 4                 | Lock Washer, 5/8"  |
|      | G10104   | 4                 | Hex Nut, 5/8"-11   |
| 2.   | GD10036  | 1                 | Mounting Support Plate   |
| 3.   | GB0218   | 4                 | Bushing, 2 1/32" I.D. x 7/8" O.D. x 1 9/32" Long                                 |
| 4.   | GD11422  | 2                 | Upper Parallel Arm   |
| 5.   | G10732   | 4                 | Hex Head Cap Screw, 5/8"-18 x 2"   |
|      | GD7805   | 4                 | Special Washer, 5/8", Hardened   |
|      | G10412   | 4                 | Lock Nut, 5/8"-18  |
| 6.   | GB0186   | 2                 | Spring Anchor  |
| 7.   | GD14217  | 2                 | Tab Lock Pin, 7/16" x 1 1/2"   |
| 8.   | GD8249   | 2-4               | Spring   |
| 9.   |          | -                 | See "Hopper Support And Meter Drive", Page P20                                   |
| 10.  | GA5651   | 1                 | Lower Parallel Arm   |
| 11.  | GA2180   | 1                 | Hanger Bearing, 7/8" Hex Bore  |
| 12.  | G10001   | 2                 | Hex Head Cap Screw, 3/8"-16 x 1"   |
|      | G10229   | 2                 | Lock Washer, 3/8"  |
|      | G10101   | 2                 | Hex Nut, 3/8"-16   |
| 13.  | G10007   | 4                 | Hex Head Cap Screw, 5/8"-11 x 1 1/2"   |
|      | G10230   | 4                 | Lock Washer, 5/8"  |
|      | G10104   | 4                 | Hex Nut, 5/8"-11   |
| 14.  | GB0366   | 2                 | Extension Bracket  |
| 15.  | GA2180   | -                 | Hanger Bearing, 7/8" Hex Bore  |
| 16.  | GA11255  | -                 | Sprocket, 19 Tooth   |
| 17.  | GD1908   | -                 | Mounting Bracket   |
| A.   | G6326X   | -                 | U-Bolt Package For 7" x 7" Toolbar, Includes: (2) GD1114, (4) G10230, (4) G10104 |

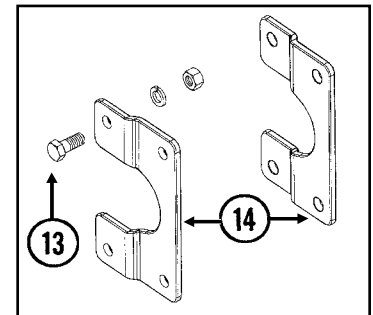

# 15" SEED OPENER DISC BLADE/BEARING ASSEMBLY AND SCRAPERS


(RU139)

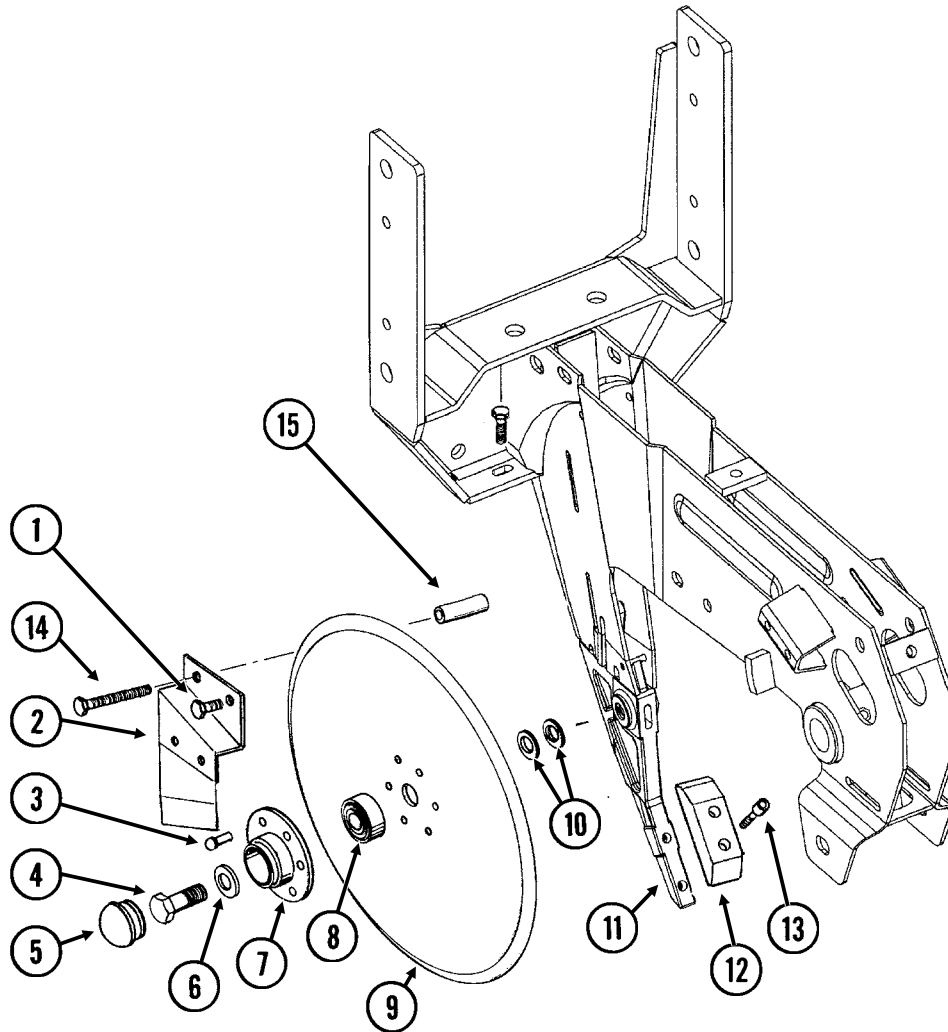

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION  |
|------|----------|-------------------|--|
| 1.   | G10328   | 2                 | Hex Head Cap Screw, 3/8"-16 x 5/8"                           |
|      | G10622   | 2                 | Serrated Flange Nut, 3/8"-16                                 |
| 2.   | GA2012R  | 1                 | Disc Scraper, R.H.   |
|      | GA2012L  | -                 | Disc Scraper, L.H. (Shown)                                   |
| 3.   | G10427   | 12                | Rivet, 1/4" x 1/2"   |
| 4.   | GD11017  | 1                 | Special Hex Head Cap Screw, 5/8"-11 x 1 1/2", L.H. Threads   |
|      | G10007   | 1                 | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                         |
| 5.   | GD11845  | 2                 | Dust Cap   |
| 6.   | G10204   | 2                 | Special Machine Bushing, 5/8" x 1" O.D.                      |
| 7.   | GD10473  | 2                 | Bearing Housing  |
| 8.   | GA2014   | 2                 | Bearing  |
| 9.   | GD11306  | 2                 | Disc Blade, 3.5 mm x 15"                                     |
| 10.  | G10213   | -                 | Machine Bushing, 5/8" (.030" Thick)(As Required)             |
| 11.  |          | -                 | See "Shank Assembly", Pages P2 And P3                        |
| 12.  | GB0301   | 1                 | Seed Tube Guard/Inner Scraper                                |
| 13.  | G10912   | 2                 | Hex Socket Head Cap Screw, 5/16"-18 x 1", Grade 8            |
| 14.  | G10325   | 1                 | Hex Head Cap Screw, 3/8"-16 x 2 3/4"                         |
|      | G10622   | 1                 | Serrated Flange Nut, 3/8"-16                                 |
| 15.  | GD11259  | 1                 | Sleeve, 3/8" I.D. x 5/8" O.D. x 1 25/32" Long                |
| A.   | GA8324   | -                 | Disc Blade/Bearing Assembly, Less Dust Cap (Items 3 And 7-9) |

# GAUGE WHEELS

(RU140)

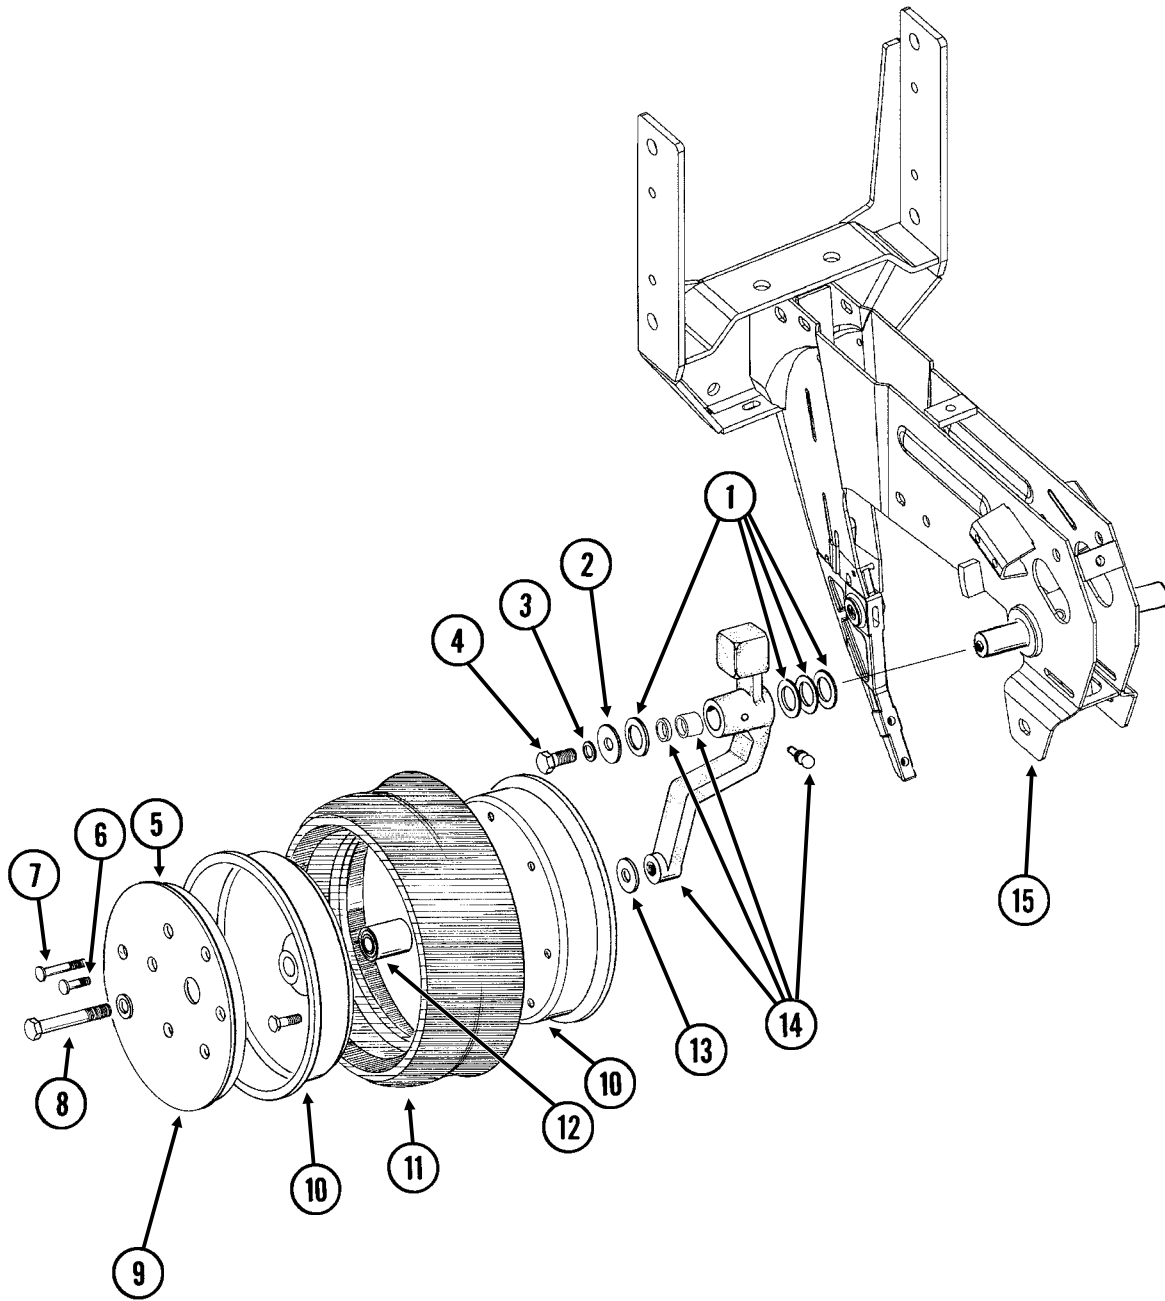


# GAUGE WHEELS

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION   |
|------|----------|-------------------|---|
| 1.   | G10940   | -                 | Machine Bushing, 1" (.048" Thick)   |
| 2.   | G10216   | 2                 | Washer, 1/2" USS  |
| 3.   | G10228   | 2                 | Lock Washer, 1/2"   |
| 4.   | G10014   | 1                 | Hex Head Cap Screw, 1/2"-13 x 1"  |
| 5.   | GD11453  | 2                 | Cover   |
| 6.   | G10338   | 12                | Carriage Bolt, 5/16"-18 x 1 1/4"  |
|      | G10620   | 12                | Serrated Flange Nut, 5/16"-18   |
| 7.   | G10924   | 8                 | Carriage Bolt, 5/16"-18 x 1 3/4"  |
|      | G10620   | 8                 | Serrated Flange Nut, 5/16"-18   |
| 8.   | G10010   | 2                 | Hex Head Cap Screw, 5/8"-11 x 3"  |
|      | G10230   | 2                 | Lock Washer, 5/8"   |
| 9.   | G10018   | 14                | Hex Head Cap Screw, 5/16"-18 x 5/8"   |
|      | G10109   | 14                | Lock Nut, 5/16"-18, Grade 8   |
| 10.  | GD11423  | 4                 | Half Wheel  |
| 11.  | GD1086   | 2                 | Tire  |
| 12.  | GA6171   | 2                 | Bearing   |
| 13.  | G10204   | 2                 | Special Machine Bushing, 5/8" x 1" O.D.   |
| 14.  | GA7975   | 1                 | Wheel Arm W/Grease Fitting, Bushings And Seals, L.H. (Shown)  |
|      | GA7976   | 1                 | Wheel Arm W/Grease Fitting, Bushings And Seals, R.H.  |
|      | G10640   | 1                 | Grease Fitting, 1/4"-28 (Per Arm)   |
|      | GB0276   | 2                 | Bushing, 1" I.D. x 1 1/4" O.D. x 1" Long (Per Arm)  |
|      | GD10991  | 2                 | Seal (Per Arm)  |
| 15.  |          | -                 | See "Shank Assembly", Pages P2 And P3   |
| A.   | GA7949   | -                 | Gauge Wheel Complete (Items 5-7 And 9-12)   |
| B.   | G1K296   | -                 | Gauge Wheel Arm Bushing And Seal Driver Kit, Includes: (1) Seal Driver, (1) Bushing Driver, (1) Instruction |

# COVERING DISCS/SINGLE PRESS WHEEL

RUA054/RUB026(RU94d)

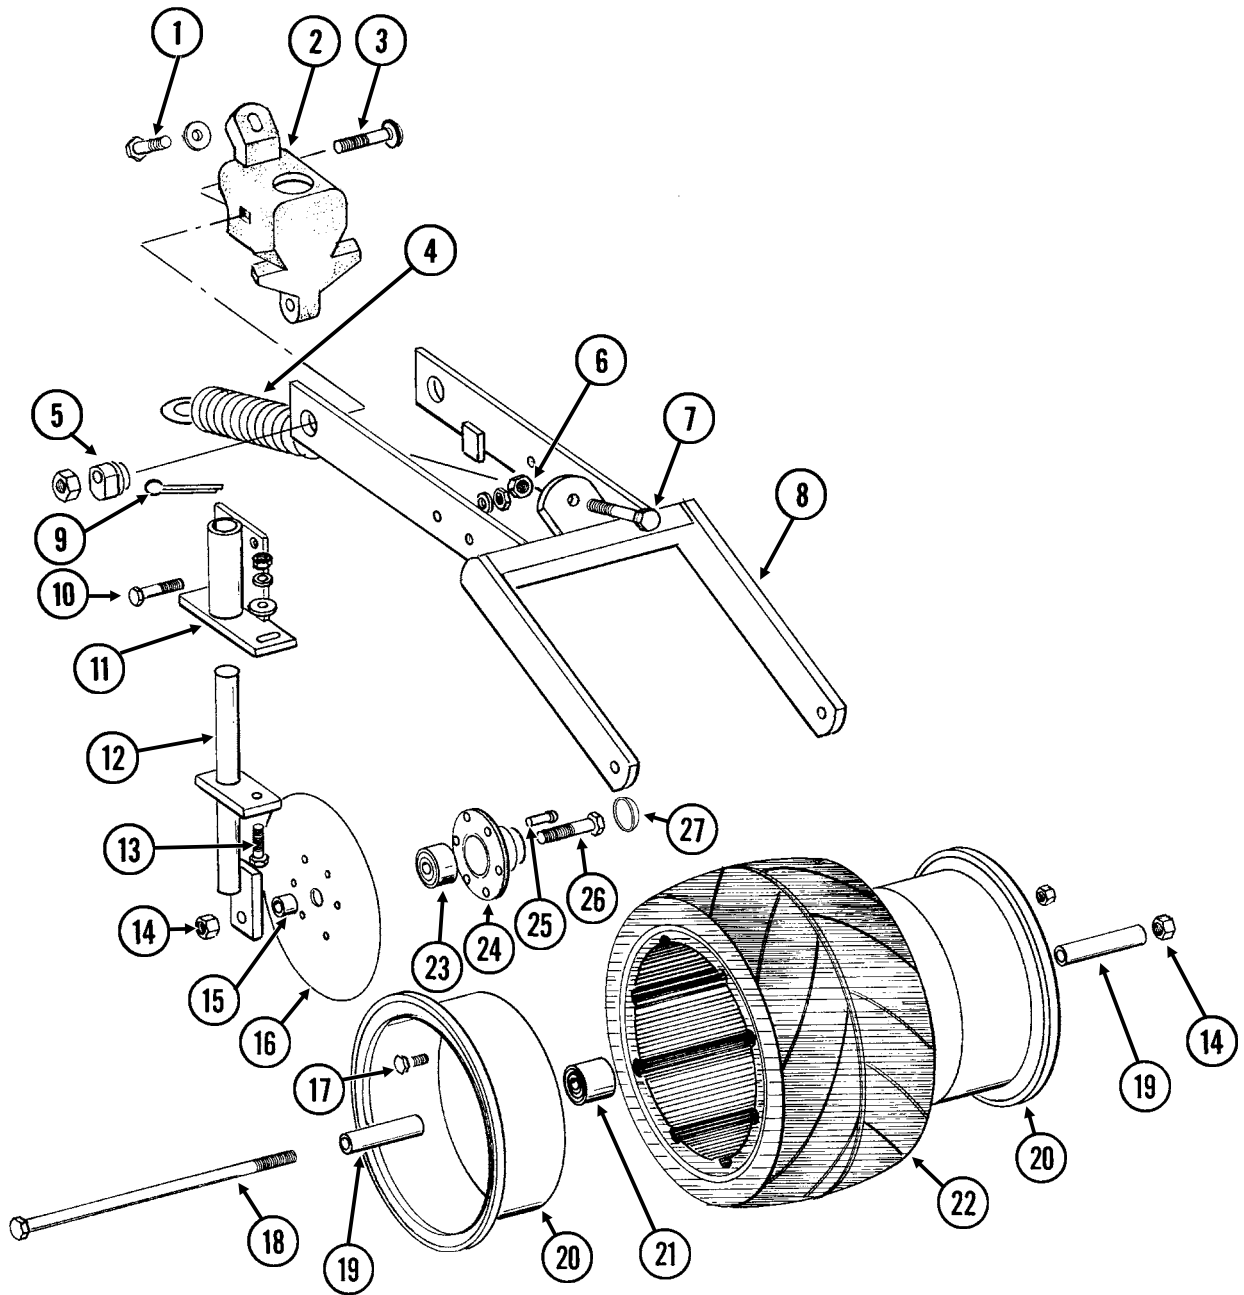


# COVERING DISCS/SINGLE PRESS WHEEL

| ITEM | PART NO.  | QTY.<br>(Per Row) | DESCRIPTION  |
|------|-----------|-------------------|--|
| 1.   | G10001    | 1                 | Hex Head Cap Screw, 3/8"-16 x 1"   |
|      | G10210    | 1                 | Washer, 3/8" USS   |
| 2.   | GB0268    | 1                 | Wheel Arm Stop   |
| 3.   | G10801    | 2                 | Carriage Bolt, 1/2"-13 x 2 1/4"  |
|      | G10315    | -                 | Carriage Bolt, 1/2"-13 x 2 1/2" (Used W/Straight Drop In-Furrow Granular Chemical Bracket) |
|      | G10102    | 2                 | Hex Nut, 1/2"-13   |
| 4.   | GA2054    | 1                 | Spring   |
| 5.   | GB0239    | 2                 | Eccentric Bushing  |
| 6.   | G10102    | 1                 | Hex Nut, 1/2"-13   |
| 7.   | G10015    | 1                 | Adjusting Bolt, 1/2"-13 x 5"   |
| 8.   | GA6619    | 1                 | Mounting Arm   |
| 9.   | G10463    | 2                 | Cotter Pin, 1/4" x 1 1/2"  |
| 10.  | G10171    | 4                 | Hex Head Cap Screw, 5/16"-18 x 1 1/4"  |
|      | G10232    | 4                 | Lock Washer, 5/16"   |
|      | G10106    | 4                 | Hex Nut, 5/16"-18  |
| 11.  | GA6620    | 2                 | Bracket  |
| 12.  | GA6618    | 2                 | Mount  |
| 13.  | G10303    | 2                 | Carriage Bolt, 5/16"-18 x 1"   |
|      | G10219    | 2                 | Washer, 5/16" USS  |
|      | G10232    | 2                 | Lock Washer, 5/16"   |
|      | G10106    | 2                 | Hex Nut, 5/16"-18  |
| 14.  | G10107    | 3                 | Lock Nut, 5/8"-11  |
| 15.  | GD1109    | 2                 | Bushing, 4 1/64" I.D. x 7/8" O.D. x 1/4" Long  |
| 16.  | GD9290    | 2                 | Disc Blade, 8"   |
| 17.  | G10018    | 7                 | Hex Head Cap Screw, 5/16"-18 x 5/8"  |
|      | G10109    | 7                 | Lock Nut, 5/16"-18, Grade 8  |
| 18.  | G10152    | 1                 | Hex Head Cap Screw, 5/8"-11 x 9"   |
| 19.  | GD3180-12 | 2                 | Sleeve, 5/8" I.D. x 7/8" O.D. x 2 7/8" Long  |
| 20.  | GD9562    | 2                 | Half Wheel   |
| 21.  | GA6171    | 1                 | Bearing  |
| 22.  | GD9305    | 1                 | Tire   |
| 23.  | GA2014    | 2                 | Bearing  |
| 24.  | GD10473   | 2                 | Bearing Housing  |
| 25.  | G10427    | 12                | Rivet, 1/4" x 1/2"   |
| 26.  | G10006    | 2                 | Hex Head Cap Screw, 5/8"-11 x 2 1/4"   |
| 27.  | GD11845   | 2                 | Dust Cap   |
| A.   | GA6733    | -                 | Single Press Wheel Complete W/Bearing (Items 17 And 20-22)                                 |
| B.   | GA6801    | -                 | Covering Disc Blade Complete W/Bearing (Items 16 And 23-25)                                |

# "V" CLOSING WHEELS

(RU83i/RU83n)

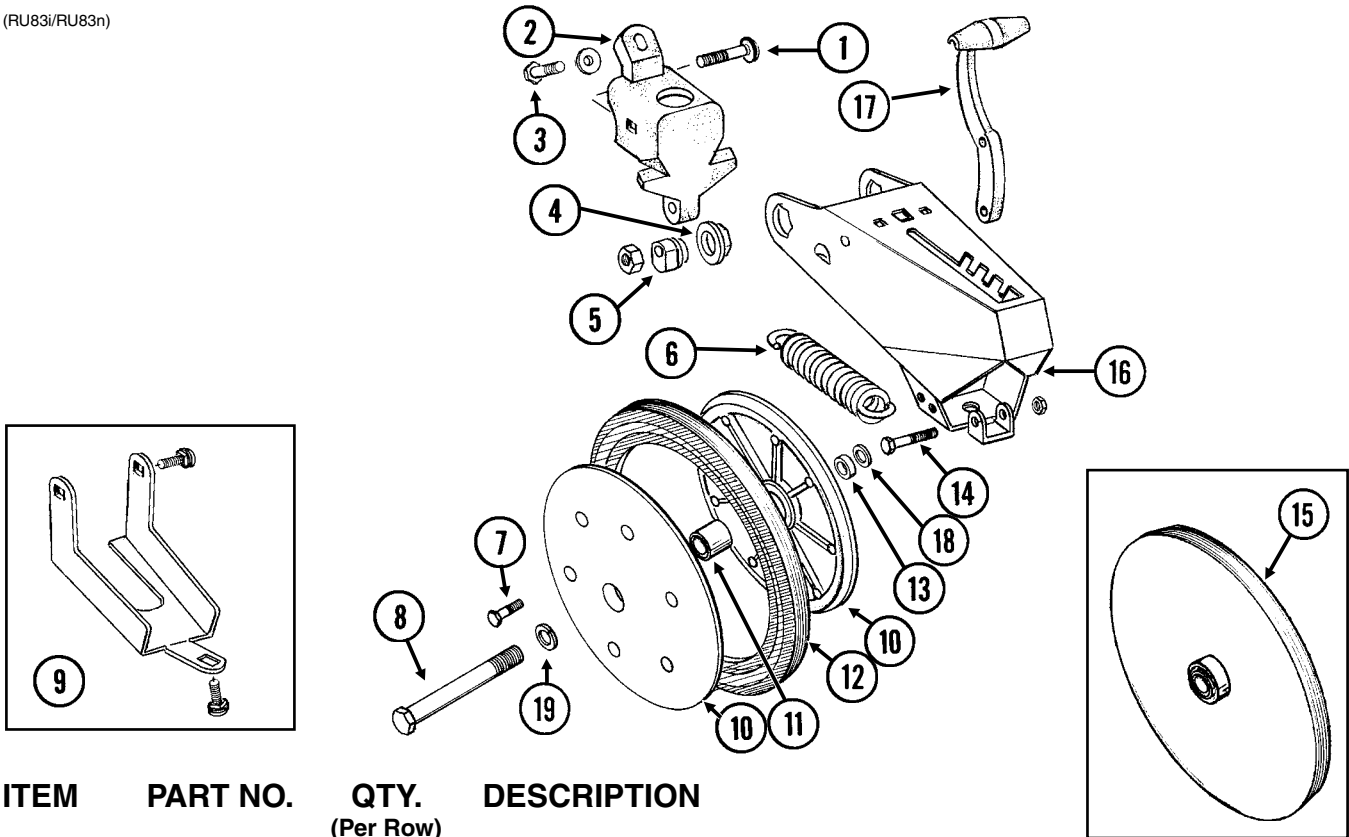


| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION  |
|------|----------|-------------------|--|
| 1.   | G10801   | 2                 | Carriage Bolt, 1/2"-13 x 2 1/4"  |
|      | G10315   | -                 | Carriage Bolt, 1/2"-13 x 2 1/2" (Used W/Straight Drop In-Furrow Granular Chemical Bracket) |
|      | G10111   | 2                 | Lock Nut, 1/2"-13  |
| 2.   | GB0268   | 1                 | Wheel Arm Stop   |
| 3.   | G10001   | 1                 | Hex Head Cap Screw, 3/8"-16 x 1"   |
|      | G10210   | 1                 | Washer, 3/8" USS   |
| 4.   | GB0282   | 2                 | Stepped Bushing  |
| 5.   | GB0239   | 2                 | Eccentric Bushing  |
| 6.   | GD8460   | 1                 | Spring   |
| 7.   | G10064   | 6                 | Hex Head Cap Screw, 1/4"-20 x 1"   |
| 8.   | G10013   | 2                 | Hex Head Cap Screw, 5/8"-11 x 3 1/2"   |
|      | G10107   | 2                 | Lock Nut, 5/8"-11  |
| 9.   | G1K345   | -                 | Closing Wheel Shield Kit W/Hardware And Instruction  |
|      | G10308   | 2                 | Carriage Bolt, 3/8"-16 x 3/4"  |
|      | G10599   | 1                 | Carriage Bolt, 3/8"-16 x 1 1/4"  |
|      | G10210   | 1                 | Washer, 3/8" USS   |
|      | G10229   | 3                 | Lock Washer, 3/8"  |
|      | G10101   | 3                 | Hex Nut, 3/8"-16   |
| 10.  | GD9120   | 4                 | Nylon Half Wheel   |
| 11.  | GA6171   | 2                 | Bearing  |
| 12.  | GD1085   | 2                 | Rubber Tire, 1" x 12"  |
| 13.  | GD1109   | 2                 | Bushing, 4 1/64" I.D. x 7/8" O.D. x 1/4" Long  |
| 14.  | G10133   | 1                 | Hex Head Cap Screw, 5/16"-18 x 1 1/2"  |
|      | G10109   | 1                 | Lock Nut, 5/16"-18, Grade 8  |
| 15.  | GA6597   | -                 | Cast Iron Closing Wheel W/Bearing  |
|      | GA6171   | -                 | Bearing  |
| 16.  | GA8322   | 1                 | Arm  |
| 17.  | GB0254   | 1                 | Lever  |
| 18.  | GD7805   | 2                 | Special Washer, 5/8", Hardened   |
| 19.  | G10230   | 2                 | Lock Washer, 5/8"  |
| A.   | GA6434   | -                 | Rubber Closing Wheel Complete W/Bearing (Items 7 And 10-12)                                |



# DRAG CLOSING ATTACHMENT


RUB050(RU90c)

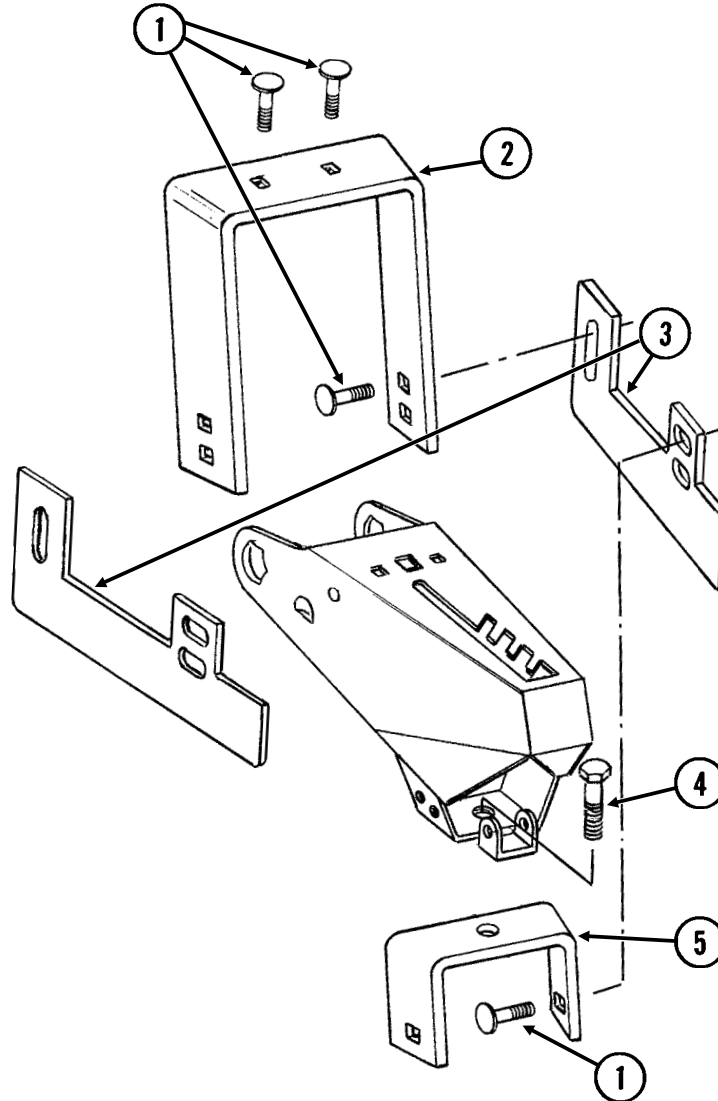

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION                                  |
|------|----------|-------------------|--|
| 1.   | G10599   | 6                 | Carriage Bolt, 3/8"-16 x 1 1/4"              |
|      | G10210   | 6                 | Washer, 3/8" USS                             |
|      | G10229   | 6                 | Lock Washer, 3/8"                            |
|      | G10101   | 6                 | Hex Nut, 3/8"-16                             |
|      | 2.       | GD11508           | 1  |
| 3.   | GD11313  | 2                 | Blade  |
| 4.   | G10007   | 1                 | Hex Head Cap Screw, 5/8"-11 x 1 1/2"         |
|      | G10230   | 1                 | Lock Washer, 5/8"                            |
|      | G10104   | 1                 | Hex Nut, 5/8"-11                             |
| 5.   | GD11509  | 1                 | Rear Bracket                                 |
| A.   | G7566X   | -                 | Drag Closing Attachment Complete (Items 1-5) |

# HOPPER SUPPORT AND METER DRIVE

(METR22f)

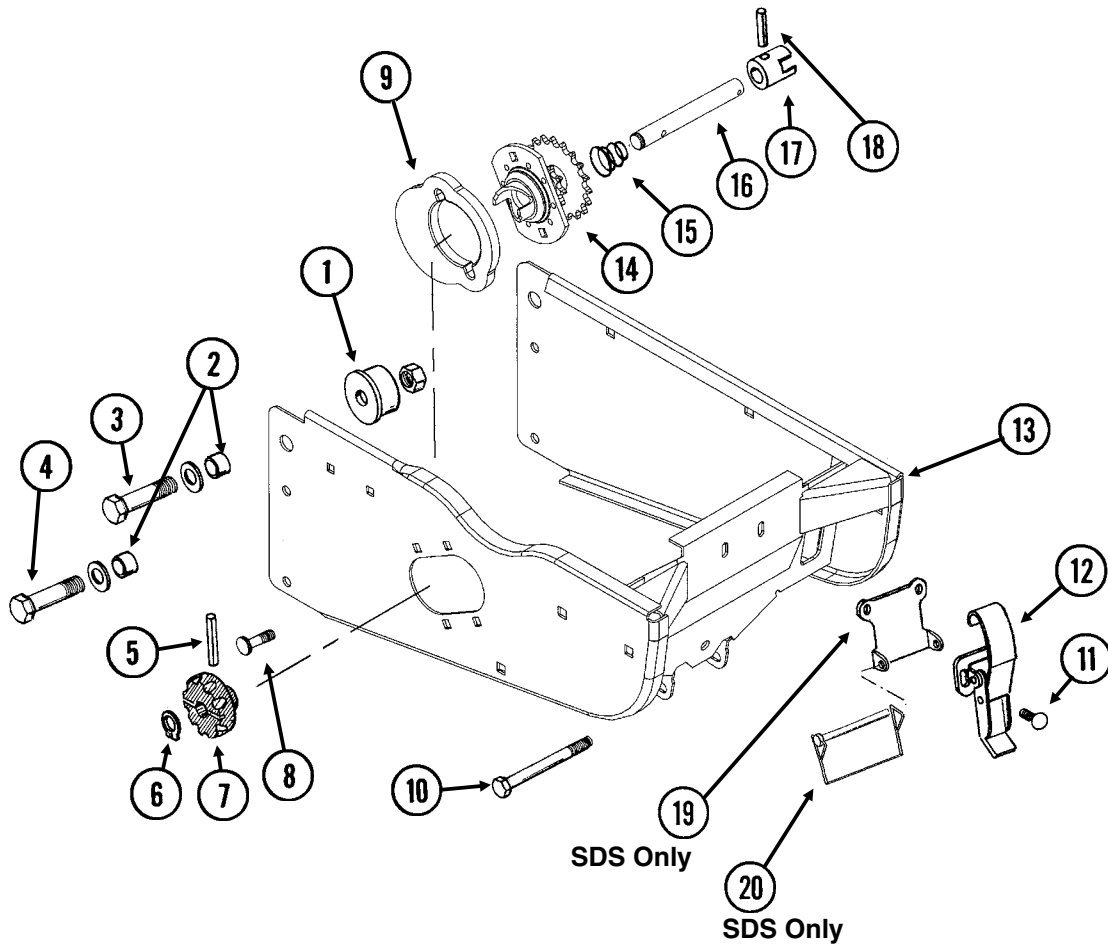


# HOPPER SUPPORT AND METER DRIVE

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION   |
|------|----------|-------------------|---|
| 1.   | GB0314   | 2                 | Hopper Mount  |
| 2.   | GB0218   | 4                 | Bushing, 2 <sup>1</sup> / <sub>32</sub> " I.D. x 7 <sup>8</sup> / <sub>8</sub> " O.D. x 1 <sup>9</sup> / <sub>32</sub> " Long |
| 3.   | G10752   | 2                 | Hex Head Cap Screw, 5 <sup>8</sup> / <sub>8</sub> "-18 x 2 1 <sup>4</sup> / <sub>4</sub> "                                    |
|      | GD7805   | 2                 | Special Washer, 5 <sup>8</sup> / <sub>8</sub> ", Hardened   |
|      | G10412   | 2                 | Lock Nut, 5 <sup>8</sup> / <sub>8</sub> "-18  |
| 4.   | G10751   | 2                 | Hex Head Cap Screw, 5 <sup>8</sup> / <sub>8</sub> "-18 x 1 3 <sup>4</sup> / <sub>4</sub> "                                    |
|      | GD7805   | 2                 | Special Washer, 5 <sup>8</sup> / <sub>8</sub> ", Hardened   |
|      | G10412   | 2                 | Lock Nut, 5 <sup>8</sup> / <sub>8</sub> "-18  |
| 5.   | G10602   | 1                 | Spring Pin, 1 <sup>4</sup> / <sub>4</sub> " x 1 1 <sup>2</sup> / <sub>2</sub> "   |
| 6.   | G10567   | 1                 | External Retaining Ring, 5 <sup>8</sup> / <sub>8</sub> "  |
| 7.   | GD11239  | 1                 | Knob  |
| 8.   | G10338   | 2                 | Carriage Bolt, 5 <sup>16</sup> / <sub>16</sub> "-18 x 1 1 <sup>4</sup> / <sub>4</sub> "                                       |
|      | G10620   | 2                 | Serrated Flange Nut, 5 <sup>16</sup> / <sub>16</sub> "-18   |
| 9.   | GB0331   | 1                 | Clutch Adapter Plate  |
| 10.  | G10061   | 1                 | Hex Head Cap Screw, 3 <sup>8</sup> / <sub>8</sub> "-16 x 3 1 <sup>2</sup> / <sub>2</sub> "                                    |
|      | G10210   | 2                 | Washer, 3 <sup>8</sup> / <sub>8</sub> " USS   |
|      | G10108   | 1                 | Lock Nut, 3 <sup>8</sup> / <sub>8</sub> "-16  |
| 11.  | G10309   | 2                 | Carriage Bolt, 1 <sup>4</sup> / <sub>4</sub> "-20 x 5 <sup>8</sup> / <sub>8</sub> ", Grade 2                                  |
|      | G10621   | 2                 | Serrated Flange Nut, 1 <sup>4</sup> / <sub>4</sub> "-20   |
| 12.  | GA2007   | 1                 | Hopper Hold Down Latch  |
| 13.  | GA10155  | 1                 | Hopper Support  |
| 14.  | GA10137  | 1                 | Double Sprocket And Bearing, Drive Clutch, 11/19 Tooth  |
| 15.  | GD11413  | 1                 | Spring  |
| 16.  | GD15747  | 1                 | Shaft   |
| 17.  | GB0278   | 1                 | Coupler   |
| 18.  | G10546   | 1                 | Spring Pin, 3 <sup>16</sup> / <sub>16</sub> " x 1 1 <sup>4</sup> / <sub>4</sub> "   |
| 19.  | GD13110  | 1                 | Retainer (SDS Only)   |
| 20.  | GD10705  | 1                 | Locking Clip Pin, 1 <sup>4</sup> / <sub>4</sub> " x 2 1 <sup>2</sup> / <sub>2</sub> " (SDS Only)                              |
| A.   | GA10151  | -                 | Meter Drive Assembly, 11/19 Tooth (Items 5-7 And 14-18)   |

# SEED HOPPER AND LID (Conventional)

---




(METR12)

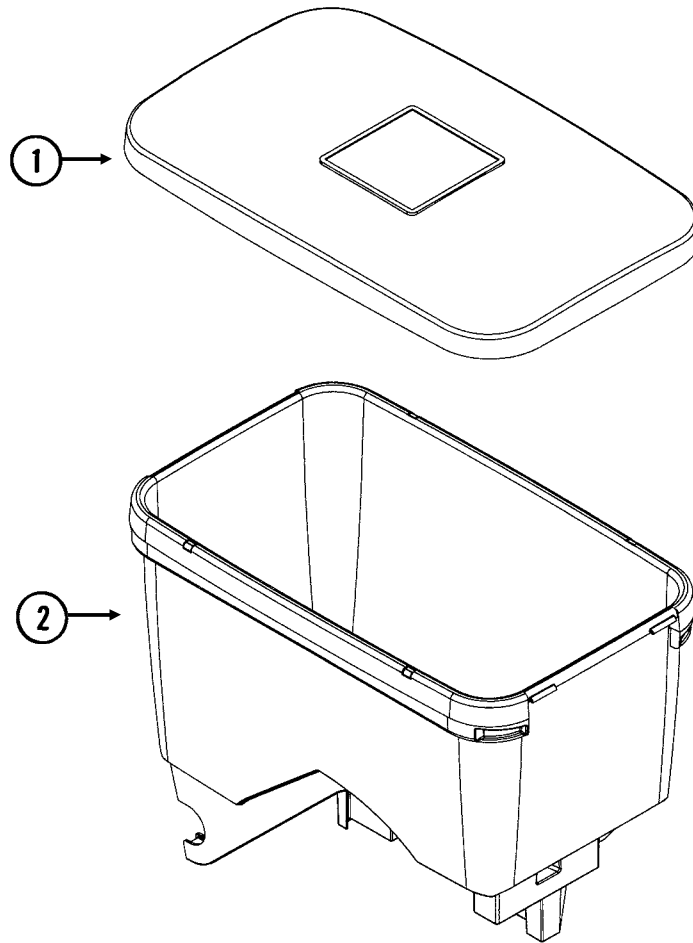

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-------------|
| 1.   | GD11279  | 1    | Lid         |
| 2.   | GA10634  | 1    | Seed Hopper |

# SEED METER MOUNT AND DROP HOSES (SDS)



(D16399/METR63bb)

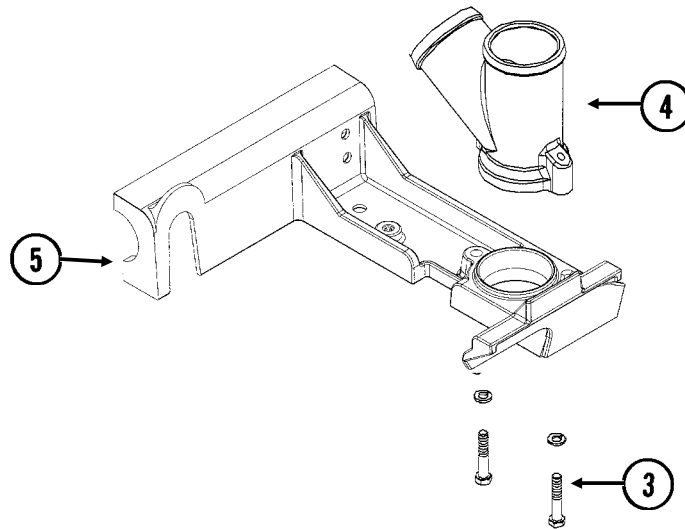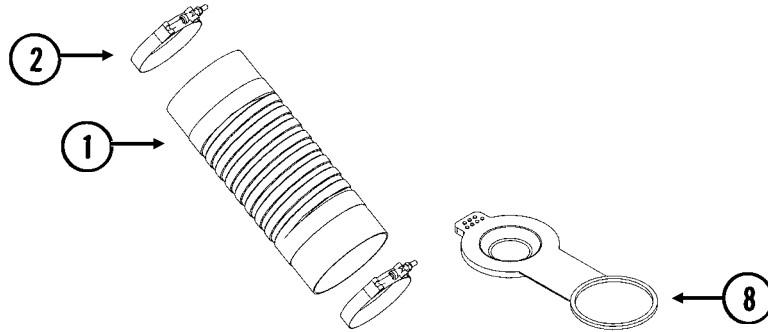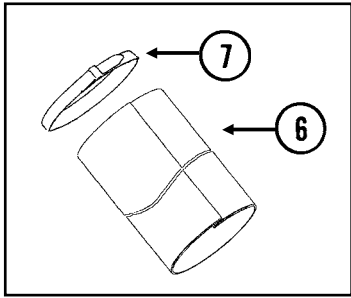

| ITEM | PART NO.   | QTY.<br>(Per Row) | DESCRIPTION                          |
|------|------------|-------------------|--------------------------------------|
| 1.   | GD12797-02 | 1                 | Drop Hose, 3 1/4" x 30"              |
|      | GD12797-04 | -                 | Drop Hose, 3 1/4" x 32"              |
|      | GD12797-05 | -                 | Drop Hose, 3 1/4" x 36"              |
|      | GD12797-09 | -                 | Drop Hose, 3 1/4" x 39"              |
| 2.   | G10999     | 2                 | T-Bolt Hose Clamp, 3 1/4"            |
| 3.   | G10047     | 2                 | Hex Head Cap Screw, 3/8"-16 x 1 3/4" |
|      | G10229     | 2                 | Lock Washer, 3/8"                    |
| 4.   | GB0371     | 1                 | Inlet, Short                         |
| 5.   | GA11392    | 1                 | Meter Mount                          |
| 6.   | GD16399-01 | -                 | Sleeve, 3" x 10"                     |
| 7.   | GD2117     | -                 | Tie Strap, 14 1/2"                   |
| 8.   | GD13412    | 1                 | View Cap                             |

# SEED METER


(METR69/METR65/A12133)

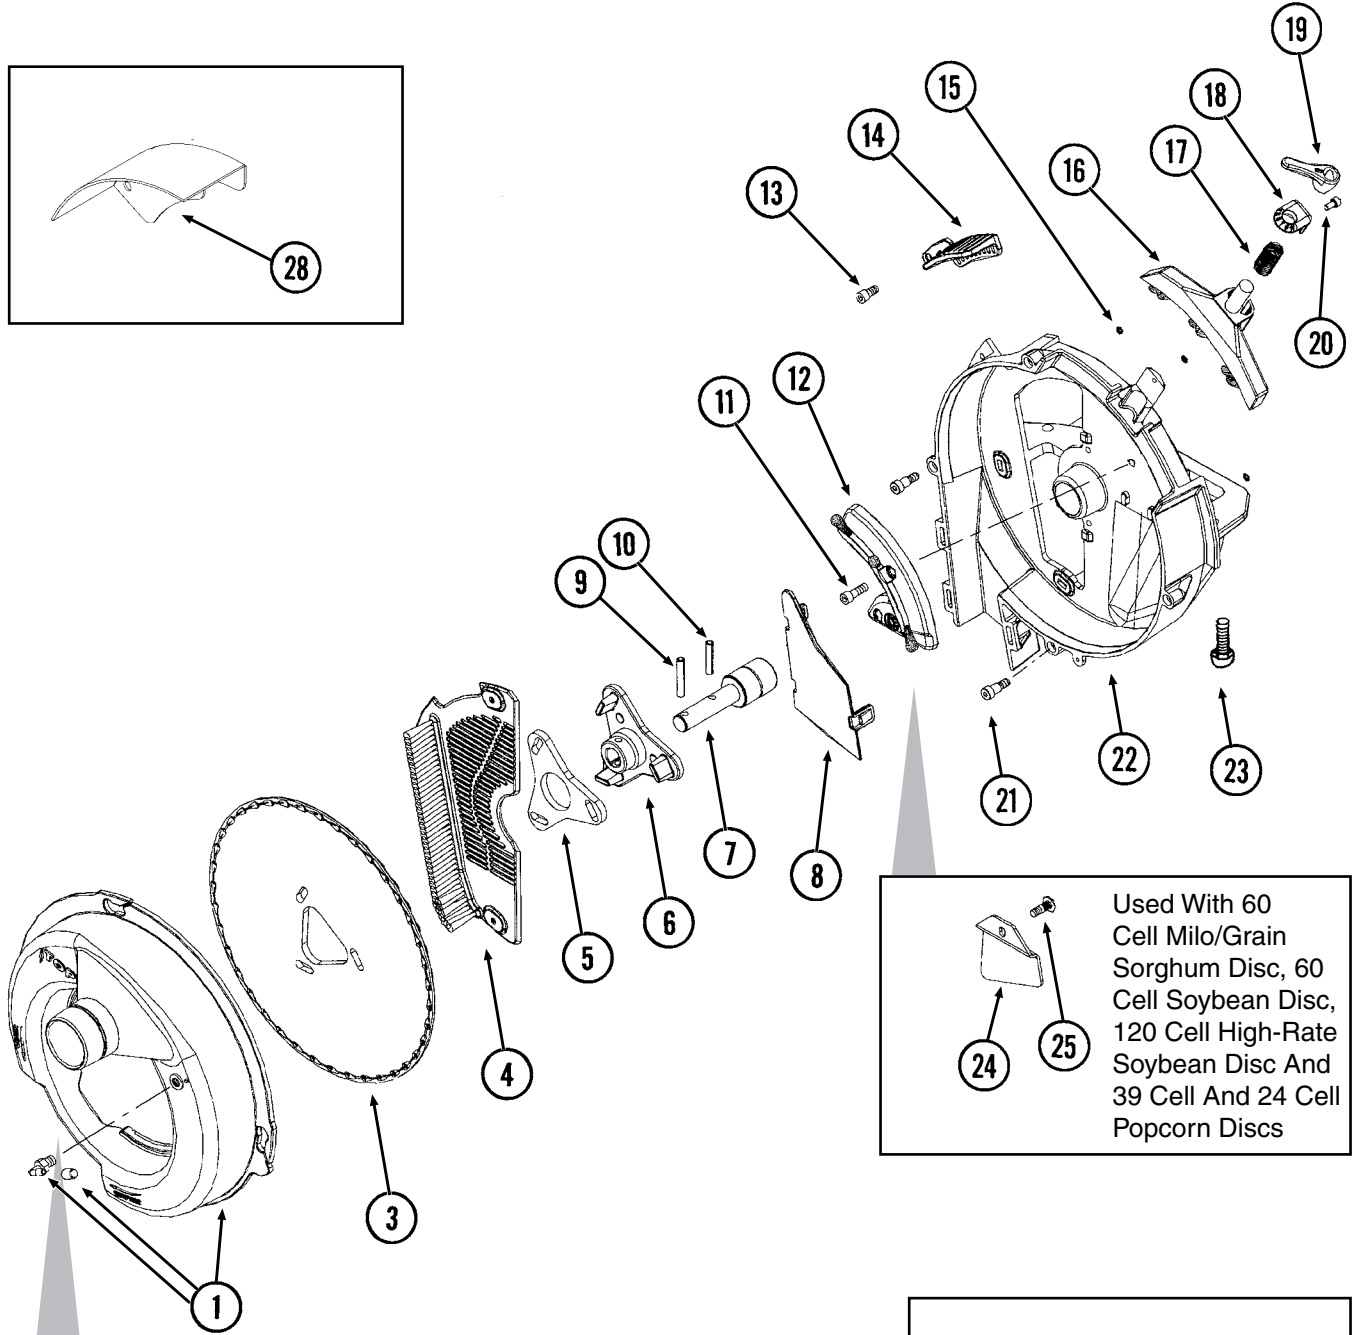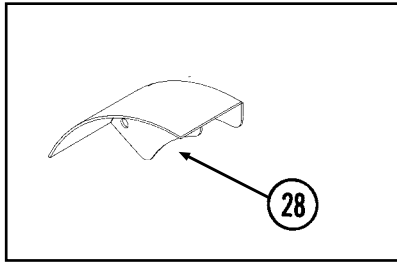

Used With 60 Cell Milo/Grain Sorghum Disc, 60 Cell Soybean Disc, 120 Cell High-Rate Soybean Disc And 39 Cell And 24 Cell Popcorn Discs

**2** Used With 60 Cell Milo/Grain Sorghum Disc

**27** Used With 20 Cell Hill-Drop Acid-Delinted Cotton Discs; 54 Cell Acid-Delinted Cotton/ Small Dry Edible Bean Disc; And Small Cotton/Sunflower Disc

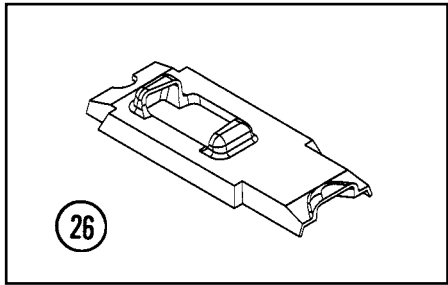


# SEED METER

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA11911  | 1    | Vacuum Cover W/Elbow And Cap   |
|      | GD17099  | -    | 3/16" Hose Barb Elbow  |
|      | GD17152  | -    | Cap  |
| 2.   | GA12133  | 1    | Cleanout Brush <b>(Used With 60 Cell Milo/Grain Sorghum Disc)</b>  |
| 3.   | GD17049  | -    | Seed Disc, Corn/Popcorn, 39 Cell, Light Blue Color-Coded   |
|      | GD17048  | -    | Seed Disc, Low-Rate Corn/Popcorn, 24 Cell, Light Green Color-Coded   |
|      | GD14467  | -    | Seed Disc, Soybean, 60 Cell, Black Color-Coded   |
|      | GD14468  | -    | Seed Disc, High-Rate Soybean, 120 Cell, Dark Blue Color-Coded  |
|      | GD17050  | -    | Seed Disc, Milo/Grain Sorghum, 60 Cell, Yellow Color-Coded   |
|      | GD17187  | -    | Seed Disc, Hill-Drop Cotton, Acid-Delinted, 20 Cell (3 Seeds Per Cell), Brown Color-Coded  |
|      | GD18095  | -    | Seed Disc, Small Hill-Drop Cotton, Acid-Delinted, 20 Cell (3 Seeds Per Cell), Grey Color-Coded   |
|      | GD17186  | -    | Seed Disc, Cotton, Acid-Delinted/Small Dry Edible Bean, 54 Cell, Dark Green Color-Coded  |
|      | GD18098  | -    | Seed Disc, Small Cotton/Sunflower, 54 Cell, White Color-Coded  |
|      | GD14477  | -    | Seed Disc, Large Dry Edible Bean, 54 Cell, Tan Color-Coded   |
| 4.   | GD17028  | 1    | Wall Brush/Vent  |
| 5.   | GD17021  | 1    | Foam Spacer  |
| 6.   | GB0328   | 1    | Mount  |
| 7.   | GA5698   | 1    | Bearing  |
| 8.   | GD14541  | 1    | Discharge Cover  |
| 9.   | G10602   | 1    | Spring Pin, 1/4" x 1 1/2"  |
| 10.  | G10603   | 1    | Spring Pin, 1/4" x 1 1/4"  |
| 11.  | G11213   | 1    | Hex Socket Head Cap Screw, 1/4"-20 x 3/4"  |
| 12.  | GA11935  | 1    | Crowder Brush  |
| 13.  | G10260   | 1    | Hex Socket Head Cap Screw, 1/4"-20 x 1/2" (Conventional Planters)  |
|      | G10252   | 1    | Hex Socket Head Screw, 1/4"-20 x 7/8", Grade 8 (SDS Planters)  |
|      | G10209   | 1    | Washer, 1/4" USS (SDS Planters)  |
|      | G10110   | 1    | Lock Nut, 1/4"-20, Grade B (SDS Planters)  |
| 14.  | GD17047  | 1    | Air Inlet Screen   |
| 15.  | GD17162  | 3    | Push Nut, 1/8" I.D.  |
| 16.  | GA10755  | 1    | Singulator Brush   |
| 17.  | GD14592  | 1    | Spring   |
| 18.  | GB0358   | 1    | Cap  |
| 19.  | GD15663  | 1    | Brush Adjustment Lever   |
| 20.  | G11173   | 1    | Hex Socket Head Cap Screw, No. 10-24 x 3/8", Stainless Steel   |
| 21.  | G11172   | 4    | Hex Socket Head Shoulder Screw, 1/4"-20 x 3/8", Stainless Steel  |
| 22.  | GB0319   | 1    | Housing  |
| 23.  | G11009   | 2    | Locking Thumbscrew, 5/16"-18 x 3/4" (Conventional Planters)  |
|      | G10171   | 2    | Hex Head Cap Screw, 5/16"-18 x 1 1/4" (SDS Planters)   |
|      | G10232   | 2    | Lock Washer, 5/16" (SDS Planters)  |
| 24.  | GD17104  | 1    | Seed Baffle <b>(Used With 60 Cell Milo/Grain Sorghum Disc, 60 Cell Soybean Disc, 120 Cell High-Rate Soybean Disc And 39 Cell And 24 Cell Popcorn Discs)</b>  |
| 25.  | G11210   | 1    | Rib Neck Bolt, 1/4"-20 x 3/4"  |
|      | G10323   | 1    | Hex Flange Nut, 1/4"-20, No Serrations   |
| 26.  | GD15700  | 1    | Shank Cover, EdgeVac® Meter  |
| 27.  | GA12154  | -    | Cleanout Brush W/Ball-Type Ejector <b>(Used With 20 Cell Hill-Drop Acid-Delinted Cotton Discs And 54 Cell Acid-Delinted Cotton/Small Dry Edible Bean And Small Cotton/Sunflower Discs)</b>   |
| 28.  | GD15923  | 1    | Meter Cover (SDS Only)   |
| A.   | G1K472   | -    | Sunflower Rate Reduction Kit, Includes: (2)122 Pitch Chains, (2)94 Pitch Chains, (2)Bars, (4)Spacers, (4)Lynch Pins, (2)Hex Shafts, (1)Hardware Bag, (4)Hanger Bearings, (2)30Tooth Sprockets, (4)15 Tooth Sprockets, (4)18 Tooth Sprockets And (1) Instruction (For Two Contact Wheel Assemblies) |

# CENTER AUGER ASSEMBLIES (SDS)

(FWD93b/FWD116/FWD113/FWD111)

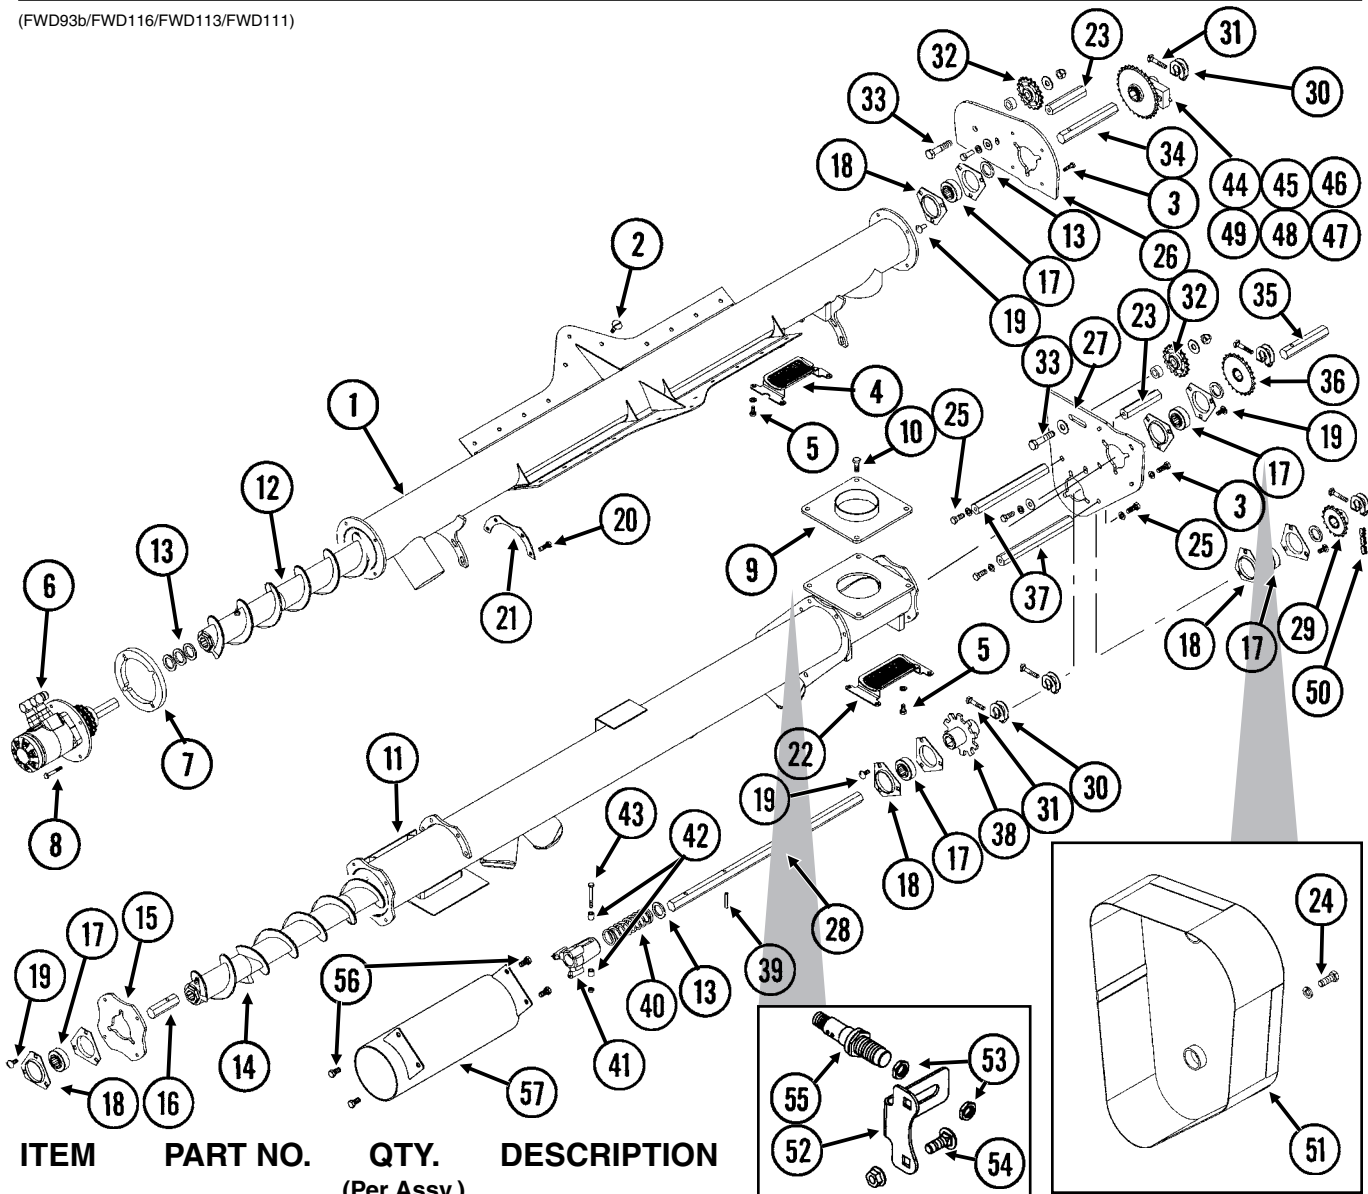

| ITEM | PART NO. | QTY.<br>(Per Assy.) | DESCRIPTION                                     |
|------|----------|---------------------|---|
| 1.   | GA11395  | 1                   | Upper Tube, L.H. (Shown)                        |
|      | GA11396  | -                   | Upper Tube, R.H.                                |
| 2.   | G11192   | 22                  | Bolt, 5/16"-18 x 1"                             |
|      | G10221   | 22                  | Washer, 5/16" SAE                               |
|      | G11182   | 22                  | Lock Nut W/Nylon Insert, 5/16"-18               |
| 3.   | G10064   | 10                  | Hex Head Cap Screw, 1/4"-20 x 1"                |
|      | G10110   | 10                  | Lock Nut, 1/4"-20, Grade B                      |
| 4.   | GA11623  | 1                   | Screen  |
| 5.   | G10018   | 8                   | Hex Head Cap Screw, 5/16"-18 x 5/8"             |
|      | G10232   | 8                   | Lock Washer, 5/16"                              |
| 6.   |          | -                   | See "SDS Hydraulic System", Pages P110 And P111 |
| 7.   | GD16766  | 1                   | Ring  |
| 8.   | G10021   | 4                   | Hex Head Cap Screw, 1/4"-20 x 1 1/2"            |
|      | G10110   | 4                   | Lock Nut, 1/4"-20, Grade B                      |
| 9.   | GA11391  | 1                   | Transfer Plate                                  |
| 10.  | G10001   | -                   | Hex Head Cap Screw, 3/8"-16 x 1"                |
|      | G10622   | -                   | Serrated Flange Nut, 3/8"-16                    |
| 11.  | GA11389  | 1                   | Lower Tube, L.H. (Shown)                        |
|      | GA11390  | -                   | Lower Tube, R.H.                                |
| 12.  | GA11625  | 1                   | Auger Assembly, 61 5/8", L.H. (Shown)           |
|      | GA11624  | 1                   | Auger Assembly, 61 5/8", R.H.                   |
|      | G10403   | -                   | Hex Head Cap Screw, 1/4"-20 x 2 1/2"            |
|      | G10110   | -                   | Lock Nut, 1/4"-20, Grade B                      |
|      | GD16401  | -                   | Auger Section, L.H.                             |
|      | GD16400  | -                   | Auger Section, R.H.                             |
|      | GA11584  | -                   | Hex Tube, 61 5/8"                               |




# CENTER AUGER ASSEMBLIES (SDS)

| ITEM | PART NO.   | QTY.<br>(Per Assy.) | DESCRIPTION   |
|------|------------|---------------------|---|
| 13.  | G10233     | 3                   | Machine Bushing, 1 1/2" x 1/32", 10 Gauge   |
| 14.  | GA11627    | 1                   | Auger Assembly, 63 3/8", L.H. (Shown)   |
|      | GA11626    | 1                   | Auger Assembly, 63 3/8", R.H.   |
|      | G10403     | -                   | Hex Head Cap Screw, 1/4"-20 x 2 1/2"  |
|      | G10110     | -                   | Lock Nut, 1/4"-20, Grade B  |
|      | GD16401    | -                   | Auger Section, L.H.   |
|      | GD16400    | -                   | Auger Section, R.H.   |
|      | GA11585    | -                   | Hex Tube, 63 3/8"   |
| 15.  | GD16547    | 1                   | Bearing Plate   |
| 16.  | GD16707    | 1                   | Shaft   |
| 17.  | G2100-03   | 5                   | Bearing, 7/8" Hex Bore, Spherical   |
| 18.  | G3400-01   | -                   | Flangette   |
| 19.  | G10312     | -                   | Carriage Bolt, 5/16"-18 x 3/4"  |
|      | G10620     | -                   | Serrated Flange Nut, 5/16"-18   |
| 20.  | G10019     | 8                   | Hex Head Cap Screw, 5/16"-18 x 1"   |
|      | G10620     | 8                   | Serrated Flange Nut, 5/16"-18   |
| 21.  | GD16550    | 1                   | Shim  |
| 22.  | GA11763    | 1                   | Screen  |
| 23.  | GD16542    | 2                   | Guard   |
| 24.  | G10001     | -                   | Hex Head Cap Screw, 3/8"-16 x 1"  |
|      | G10210     | -                   | Washer, 3/8" USS  |
|      | G10229     | -                   | Lock Washer, 3/8"   |
| 25.  | G10001     | -                   | Hex Head Cap Screw, 3/8"-16 x 1"  |
|      | G10229     | -                   | Lock Washer, 3/8"   |
| 26.  | GD16539    | 1                   | Plate   |
| 27.  | GD16540    | 1                   | Lower Plate   |
| 28.  | GD11394-23 | 1                   | Hex Shaft, 7/8" x 23" (2 Holes)   |
| 29.  | GA5106     | 1                   | Sprocket, 17 Tooth  |
| 30.  | GD11045    | 5                   | Lock Clamp  |
| 31.  | G10130     | 5                   | Square Head Machine Bolt, 5/16"-18 x 1 3/4"   |
|      | G10923     | 5                   | Flange Nut, 5/16"-18, No Serration  |
| 32.  | GA7154     | 2                   | Sprocket W/Bearing, 18 Tooth  |
| 33.  | G10581     | 2                   | Hex Head Cap Screw, 1/2"-13 x 2 1/4"  |
|      | GD4887-10  | 2                   | Sleeve  |
|      | G10216     | 3                   | Washer, 1/2" USS  |
|      | G10111     | 2                   | Lock Nut, 1/2"-13   |
| 34.  | GD16705    | 1                   | Hex Shaft   |
| 35.  | GD16706    | 1                   | Shaft   |
| 36.  | GA5108     | 1                   | Sprocket, 23 Tooth  |
| 37.  | GD17002    | 2                   | Hex Shaft, 7/8" x 8 1/2"  |
| 38.  | GA11375    | 1                   | Sensor Wheel  |
| 39.  | G10602     | 1                   | Spring Pin, 1/4" x 1 1/2"   |
| 40.  | GD2962     | 1                   | Spring  |
| 41.  | GB0283     | 1                   | Coupler   |
| 42.  | GD11395    | 2                   | Bushing, 1/2"   |
| 43.  | G10880     | 1                   | Hex Head Cap Screw, 1/4"-20 x 2 1/4"  |
|      | G10110     | 1                   | Lock Nut, 1/4"-20, Grade B  |
| 44.  | G10464     | 2                   | Cotter Pin, 3/16" x 1"  |
| 45.  | GD1256     | 2                   | Spring  |
| 46.  | GA0378     | 1                   | Block And Hub Assembly  |
| 47.  | GD1255     | 2                   | L-Pin   |
| 48.  | GA5165     | 1                   | Sprocket, 30 Tooth  |
| 49.  | G10430     | 1                   | External Retaining Ring, 1 1/4"   |
| 50.  | G3310-112  | 1                   | Chain, No. 40, 112 Pitch Including Connector Link   |
|      | GR0912     | -                   | Connector Link, No. 40  |
| 51.  | GA11515    | 1                   | Guard, L.H.   |
|      | GA11513    | -                   | Guard, R.H. (Shown)   |
| 52.  | GD16535    | 1                   | Sensor Mount  |
| 53.  | GD14257    | 2                   | Nut, M12 x 1"   |
| 54.  | G10305     | 2                   | Carriage Bolt, 3/8"-16 x 1"   |
|      | G10622     | 2                   | Serrated Flange Nut, 3/8"-16  |
| 55.  |            | -                   | Proximity Sensor, See "Electrical Components (SDS Control Console)",<br>Pages P152 And P153 |
| 56.  | G10002     | 4                   | Hex Head Cap Screw, 3/8"-16 x 3/4"  |
|      | G10108     | 4                   | Lock Nut, 3/8"-16   |
| 57.  | GA11393    | 1                   | Coupler   |
| A.   | GA5164     | -                   | Ratchet/Sprocket Assembly, L.H. Hopper (Items 44-49)  |
|      | GA9843     | -                   | Ratchet/Sprocket Assembly, R.H. Hopper (Items 44-49)  |

# WING AUGER ASSEMBLIES (SDS)

(FWD99a)

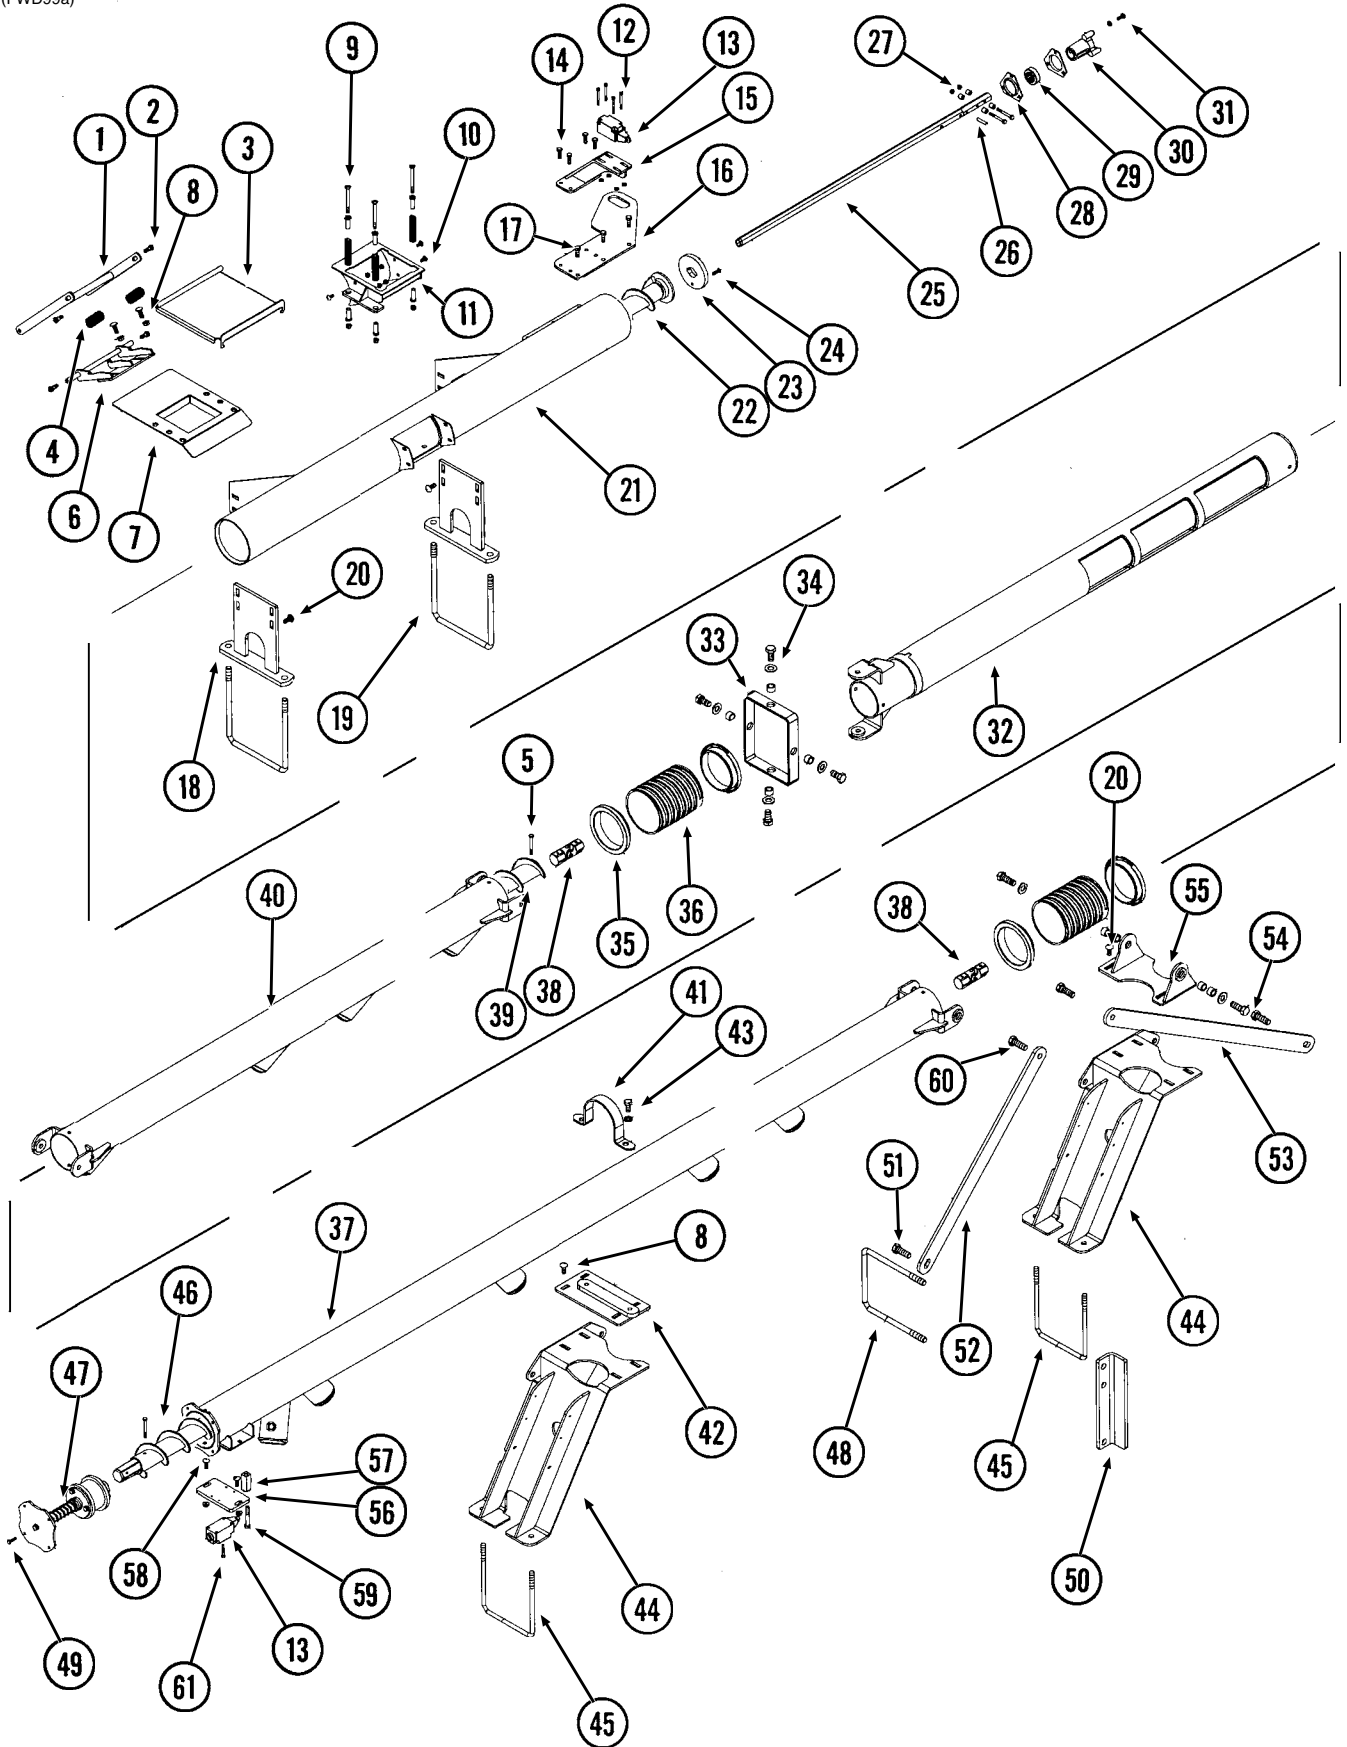

# WING AUGER ASSEMBLIES (SDS)

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GA11539  | 2    | Link  |
| 2.   | G10183   | 4    | Hex Socket Head Set Screw, 5/16"-18 x 3/8"  |
| 3.   | GA11538  | 2    | Lid   |
| 4.   | GD16983  | 4    | Spring  |
| 5.   | G10880   | -    | Hex Head Cap Screw, 1/4"-20 x 2 1/4"  |
|      | G10110   | -    | Lock Nut, 1/4"-20, Grade B  |
| 6.   | GA11540  | 2    | Link Mount  |
| 7.   | GA11541  | 2    | Plate   |
| 8.   | G10305   | -    | Carriage Bolt, 3/8"-16 x 1"   |
|      | G10622   | -    | Serrated Flange Nut, 3/8"-16  |
| 9.   | G11197   | 6    | Slotted Flat Head Machine Screw, 5/16"-18 x 3 1/2"                                  |
|      | GD16634  | 12   | Sleeve  |
|      | GD16982  | 6    | Spring  |
|      | G11182   | 6    | Lock Nut W/Nylon Insert, 5/16"-18   |
| 10.  | G10309   | 8    | Carriage Bolt, 1/4"-20 x 5/8", Grade 2  |
|      | G10621   | 8    | Serrated Flange Nut, 1/4"-20  |
| 11.  | GA11555  | 1    | Transfer Chute, L.H.  |
|      | GA11556  | -    | Transfer Chute, R.H.  |
| 12.  | G11205   | 8    | Hex Socket Head Cap Screw, No. 10-32 x 2"   |
|      | G10243   | 8    | Washer, No. 10 SAE  |
|      | G11206   | 8    | Lock Nut, No. 10-32   |
| 13.  |          | -    | Limit Switch, See "Electrical Components (SDS Control Console), Pages P114 And P115 |
| 14.  | G10019   | 8    | Hex Head Cap Screw, 5/16"-18 x 1"   |
|      | G10620   | 8    | Serrated Flange Nut, 5/16"-18   |
| 15.  | GA11548  | 2    | Mount   |
| 16.  | GD16672  | 2    | Plate   |
| 17.  | G10001   | 6    | Hex Head Cap Screw, 3/8"-16 x 1"  |
|      | G10622   | 6    | Serrated Flange Nut, 3/8"-16  |
| 18.  | GA11531  | 4    | Mount   |
| 19.  | GD16320  | 4    | U-Bolt, 8" x 8" x 5/8"-11   |
|      | G10230   | 4    | Lock Washer, 5/8"   |
|      | G10104   | 4    | Hex Nut, 5/8"-11  |
| 20.  | G10305   | 8    | Carriage Bolt, 3/8"-16 x 1"   |
|      | G10622   | 8    | Serrated Flange Nut, 3/8"-16  |
| 21.  | GA11563  | 1    | Outer Auger Tube, L.H.  |
|      | GA11562  | -    | Outer Auger Tube, R.H.  |
| 22.  | GA12673  | 1    | Auger Assembly, L.H. (Shown)  |
|      | GA12672  | -    | Auger Assembly, R.H.  |
|      | G10403   | -    | Hex Head Cap Screw, 1/4"-20 x 2 1/2"  |
|      | G10110   | -    | Lock Nut, 1/4"-20, Grade B  |
|      | GD16674  | -    | Spacer  |
|      | GD16401  | -    | Auger Section, L.H.   |
|      | GD16400  | -    | Auger Section, R.H.   |
|      | GA11581  | -    | Hex Tube, 64"   |
| 23.  | GD16675  | 2    | Pad   |
| 24.  | G11180   | 2    | Hex Head Cap Screw, 1/4"-20 x 1"  |
|      | G10110   | 2    | Lock Nut, 1/4"-20, Grade B  |
| 25.  | GA11580  | 2    | Shaft   |
| 26.  | G10602   | 2    | Spring Pin, 1/4" x 1 1/2"   |

(Continued On Following Page)

# WING AUGER ASSEMBLIES (SDS)

| ITEM | PART NO.   | QTY. | DESCRIPTION                                      |
|------|------------|------|--|
| 27.  | G10880     | 4    | Hex Head Cap Screw, 1/4"-20 x 2 1/4"             |
|      | GD11395    | 8    | Bushing, 1/2"                                    |
|      | G10110     | 4    | Lock Nut, 1/4"-20, Grade B                       |
| 28.  | G3400-01   | 4    | Flangette  |
| 29.  | G2100-03   | 2    | Bearing, 7/8" Hex Bore, Spherical                |
| 30.  | GB0283     | 2    | Coupler  |
| 31.  | G10043     | 6    | Hex Head Cap Screw, 5/16"-18 x 3/4"              |
|      | G10232     | 6    | Lock Washer, 5/16"                               |
| 32.  | GA11705    | 1    | Inner Auger Tube, L.H. (Shown)                   |
|      | GA11706    | -    | Inner Auger Tube, R.H.                           |
| 33.  | GD16556    | 2    | Pivot Tube                                       |
| 34.  | G10055     | 8    | Hex Head Cap Screw, 5/8"-11 x 1 1/4"             |
|      | GD7805     | 8    | Special Washer, 5/8", Hardened                   |
|      | GB0218     | 8    | Bushing, 2 1/32" I.D. x 7/8" O.D. x 1 9/32" Long |
| 35.  | GD16788    | 8    | Hose Keeper                                      |
| 36.  | GD16913    | 4    | Hose, 5"   |
| 37.  | GA11551    | 1    | Auger Tube, L.H. (Shown)                         |
|      | GA11552    | -    | Auger Tube, R.H.                                 |
| 38.  | GA11575    | 4    | U-Joint  |
| 39.  | GA11631    | 1    | Auger Assembly, L.H. (Shown)                     |
|      | GA11630    | -    | Auger Assembly, R.H.                             |
|      | G10403     | -    | Hex Head Cap Screw, 1/4"-20 x 2 1/2"             |
|      | G10110     | -    | Lock Nut, 1/4"-20, Grade B                       |
|      | GD16401    | -    | Auger Section, L.H.                              |
|      | GD16400    | -    | Auger Section, R.H.                              |
|      | GD16385-04 | -    | Hex Tube, 97 1/4"                                |
|      | GA11549    | 1    | Auger Tube, L.H. (Shown)                         |
| 40.  | GA11550    | -    | Auger Tube, R.H.                                 |
|      | GD16631    | 2    | Strap  |
| 41.  | GD16631    | 2    | Strap  |
| 42.  | GA11518    | 2    | Strap  |
|      | G10014     | 4    | Hex Head Cap Screw, 1/2"-13 x 1"                 |
| 43.  | G10228     | 4    | Lock Washer, 1/2"                                |
|      | GA11517    | 4    | Support  |
| 44.  | GD7145     | 4    | U-Bolt, 7" x 7" x 1/2"-13                        |
|      | G10228     | 8    | Lock Washer, 1/2"                                |
|      | G10102     | 8    | Hex Nut, 1/2"-13                                 |
| 45.  | GA11633    | 1    | Auger Assembly, L.H. (Shown)                     |
|      | GA11632    | -    | Auger Assembly, R.H.                             |
|      | G10403     | -    | Hex Head Cap Screw, 1/4"-20 x 2 1/2"             |
|      | G10110     | -    | Lock Nut, 1/4"-20, Grade B                       |
|      | GD16401    | -    | Auger Section, L.H.                              |
|      | GD16400    | -    | Auger Section, R.H.                              |
|      | GA11582    | -    | Hex Tube, 125 7/8"                               |
|      | GA11583    | -    | Hex Tube, 118 7/8"                               |
| 46.  | GA11778    | 2    | Auger Stop                                       |
| 47.  | GD14559    | 2    | U-Bolt, 7" x 7" x 5/8"-11 (9" Long)              |
|      | G10230     | 4    | Lock Washer, 5/8"                                |
|      | G10102     | 4    | Hex Nut, 5/8"-11                                 |
| 48.  | G10064     | 4    | Hex Head Cap Screw, 1/4"-20 x 1"                 |
|      | G10110     | 4    | Lock Nut, 1/4"-20, Grade B                       |
| 49.  | GD16466    | 1    | Bracket, R.H. Side (Shown)                       |
|      | GD16467    | -    | Bracket, L.H. Side                               |

(Continued On Following Page)


# WING AUGER ASSEMBLIES (SDS)

---

| ITEM | PART NO.  | QTY. | DESCRIPTION  |
|------|-----------|------|--|
| 51.  | G10005    | 4    | Hex Head Cap Screw, 5/8"-11 x 1 3/4"                   |
|      | G10205    | 4    | Washer, 5/8" SAE                                       |
|      | G10107    | 4    | Lock Nut, 5/8"-11                                      |
| 52.  | GD16602   | 2    | Brace  |
| 53.  | GD16601   | 2    | Brace  |
| 54.  | G10008    | 4    | Hex Head Cap Screw, 5/8"-11 x 2"                       |
|      | GD3180-29 | 4    | Sleeve, 7/8" O.D. x 5/8" I.D. x 1 5/16"                |
| 55.  | GA11684   | 2    | Pivot Mount  |
| 56.  | GD16680   | 2    | Mount  |
| 57.  | GD16701   | 2    | Arm, 3/4" x 3/4" x 2"                                  |
| 58.  | G10303    | 2    | Carriage Bolt, 5/16"-18 x 1"                           |
|      | G10620    | 2    | Serrated Flange Nut, 5/16"-18                          |
| 59.  | G10049    | 2    | Hex Head Cap Screw, 3/8"-16 x 2 1/2"                   |
|      | G10229    | 2    | Lock Washer, 3/8"                                      |
| 60.  | G10005    | 4    | Hex Head Cap Screw, 5/8"-11 x 1 3/4"                   |
|      | G10107    | 4    | Lock Nut, 5/8"-11                                      |
| 61.  | G11167    | 4    | Hex Socket Head Cap Screw, No. 10-32 x 1 1/2", Grade 8 |

# BULK SEED HOPPER ASSEMBLY (SDS)

(FWD93a)

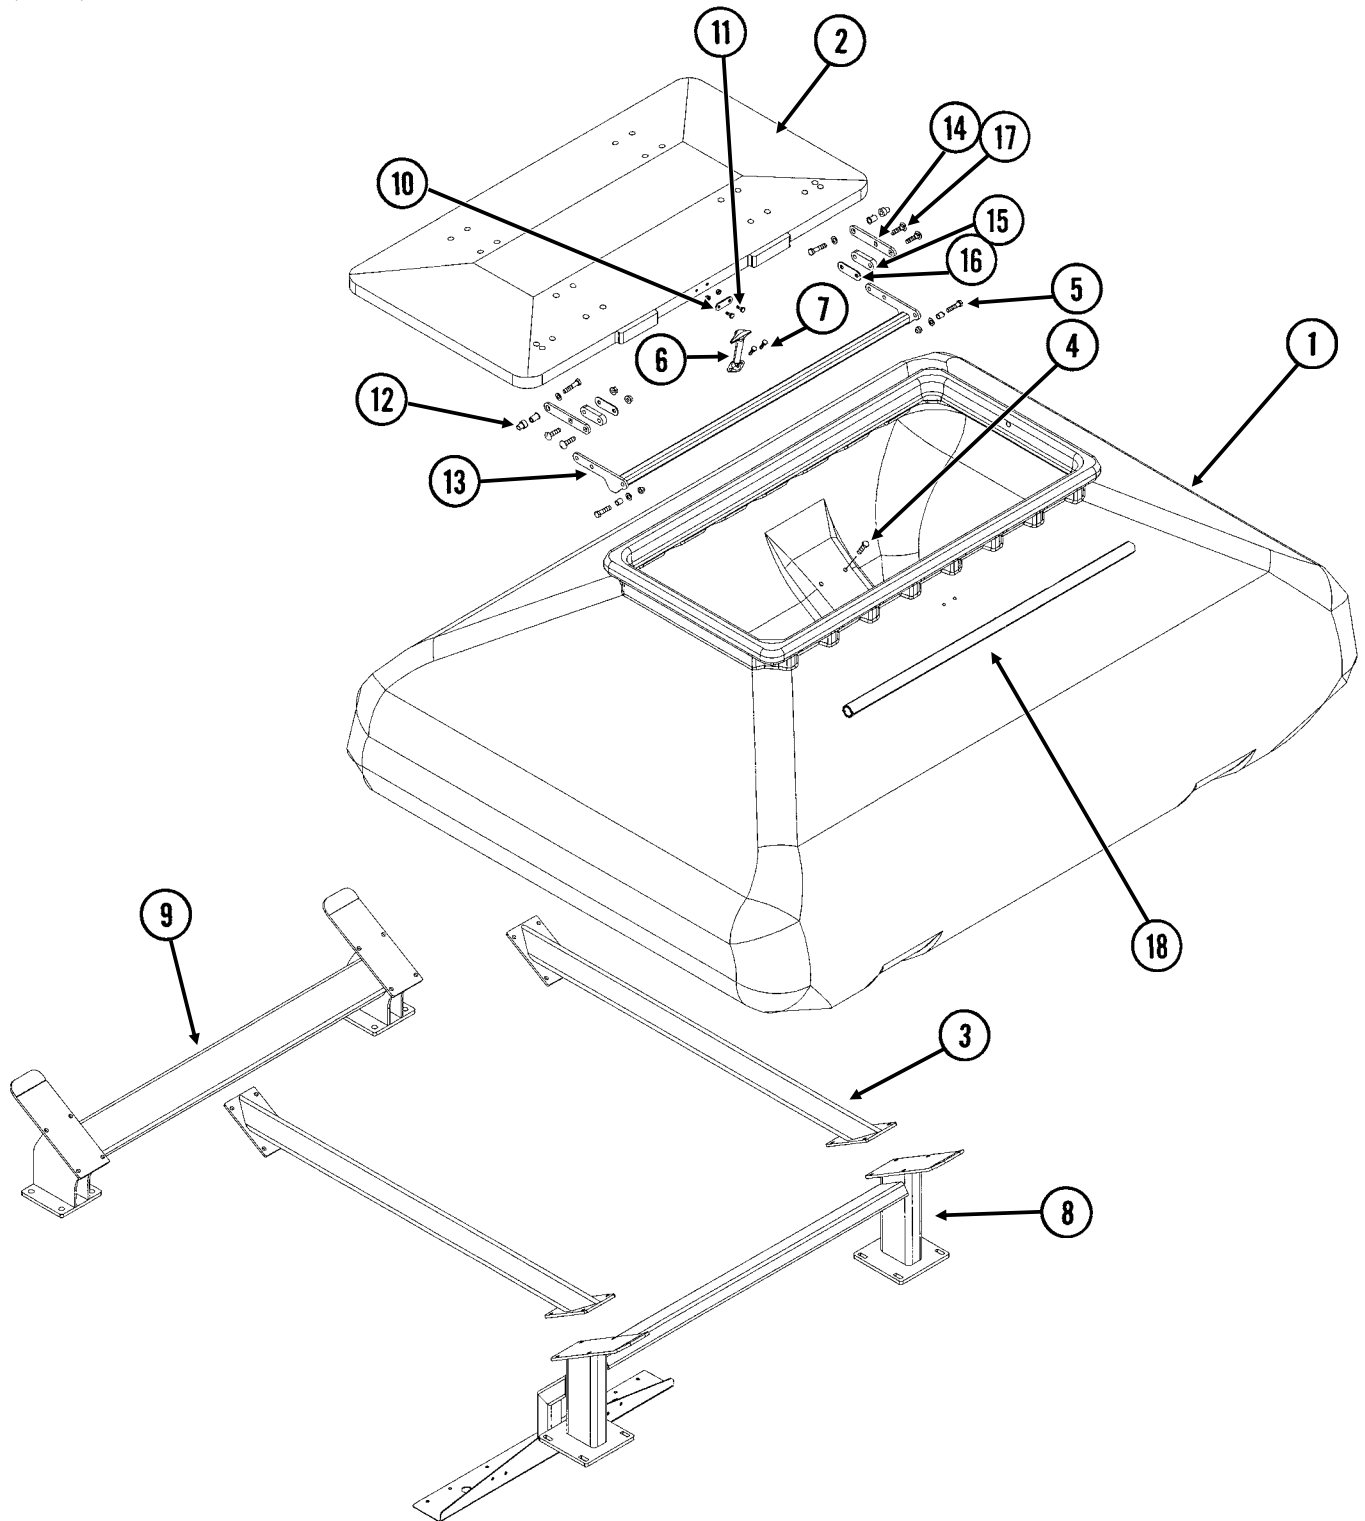


# BULK SEED HOPPER ASSEMBLY (SDS)

| ITEM | PART NO.   | QTY.<br>(Per Assy.) | DESCRIPTION                           |
|------|------------|---------------------|---------------------------------------|
| 1.   | GD17308    | 1                   | Hopper, R.H.                          |
|      | GD17309    | -                   | Hopper, L.H.                          |
| 2.   | GA11579    | 1                   | Lid                                   |
| 3.   | GA11381    | 2                   | Hopper Stiffener                      |
| 4.   | G10003     | 16                  | Hex Head Cap Screw, 3/8"-16 x 1 1/2"  |
|      | G10203     | 16                  | Washer, 3/8" SAE                      |
|      | G10108     | 16                  | Lock Nut, 3/8"-16                     |
| 5.   | G10003     | 2                   | Hex Head Cap Screw, 3/8"-16 x 1 1/2"  |
|      | GD11963-03 | 2                   | Tube, 1/2" O.D. x 25/64" I.D. x 9/16" |
|      | G10203     | 2                   | Washer, 3/8" SAE                      |
|      | G10108     | 2                   | Lock Nut, 3/8"-16                     |
| 6.   | GA11635    | 1                   | Latch Cover                           |
| 7.   | G10064     | 2                   | Hex Head Cap Screw, 1/4"-20 x 1"      |
|      | G10211     | 2                   | Washer, 1/4" SAE                      |
|      | G10110     | 2                   | Lock Nut, 1/4"-20, Grade B            |
| 8.   | GA11617    | 1                   | Rear Mount, L.H.                      |
|      | GA11616    | -                   | Rear Mount, R.H.                      |
| 9.   | GA11615    | 1                   | Front Mount                           |
| 10.  | GD16979    | 1                   | Latch                                 |
| 11.  | G10020     | 2                   | Hex Head Cap Screw, 1/4"-20 x 5/8"    |
|      | G10110     | 2                   | Lock Nut, 1/4"-20, Grade B            |
| 12.  | G10047     | 2                   | Hex Head Cap Screw, 3/8"-16 x 1 3/4"  |
|      | G10203     | 2                   | Washer, 3/8" SAE                      |
|      | GD16694    | 2                   | Bushing                               |
|      | G11226     | 2                   | Tee Nut, 3/8"-16                      |
| 13.  | GA11587    | 1                   | Hinge                                 |
| 14.  | GD16692    | 2                   | Bar                                   |
| 15.  | GD16693    | 2                   | Spacer                                |
| 16.  | GD16691    | 2                   | Shim                                  |
| 17.  | G10301     | 4                   | Carriage Bolt, 3/8"-16 x 1 1/2"       |
|      | G10622     | 4                   | Serrated Flange Nut, 3/8"-16          |
| 18.  | GD13575-05 | -                   | Tube, 1" x 43" (If Applicable)        |

# BULK SEED HOPPER CATWALK (SDS)

(FWD97)

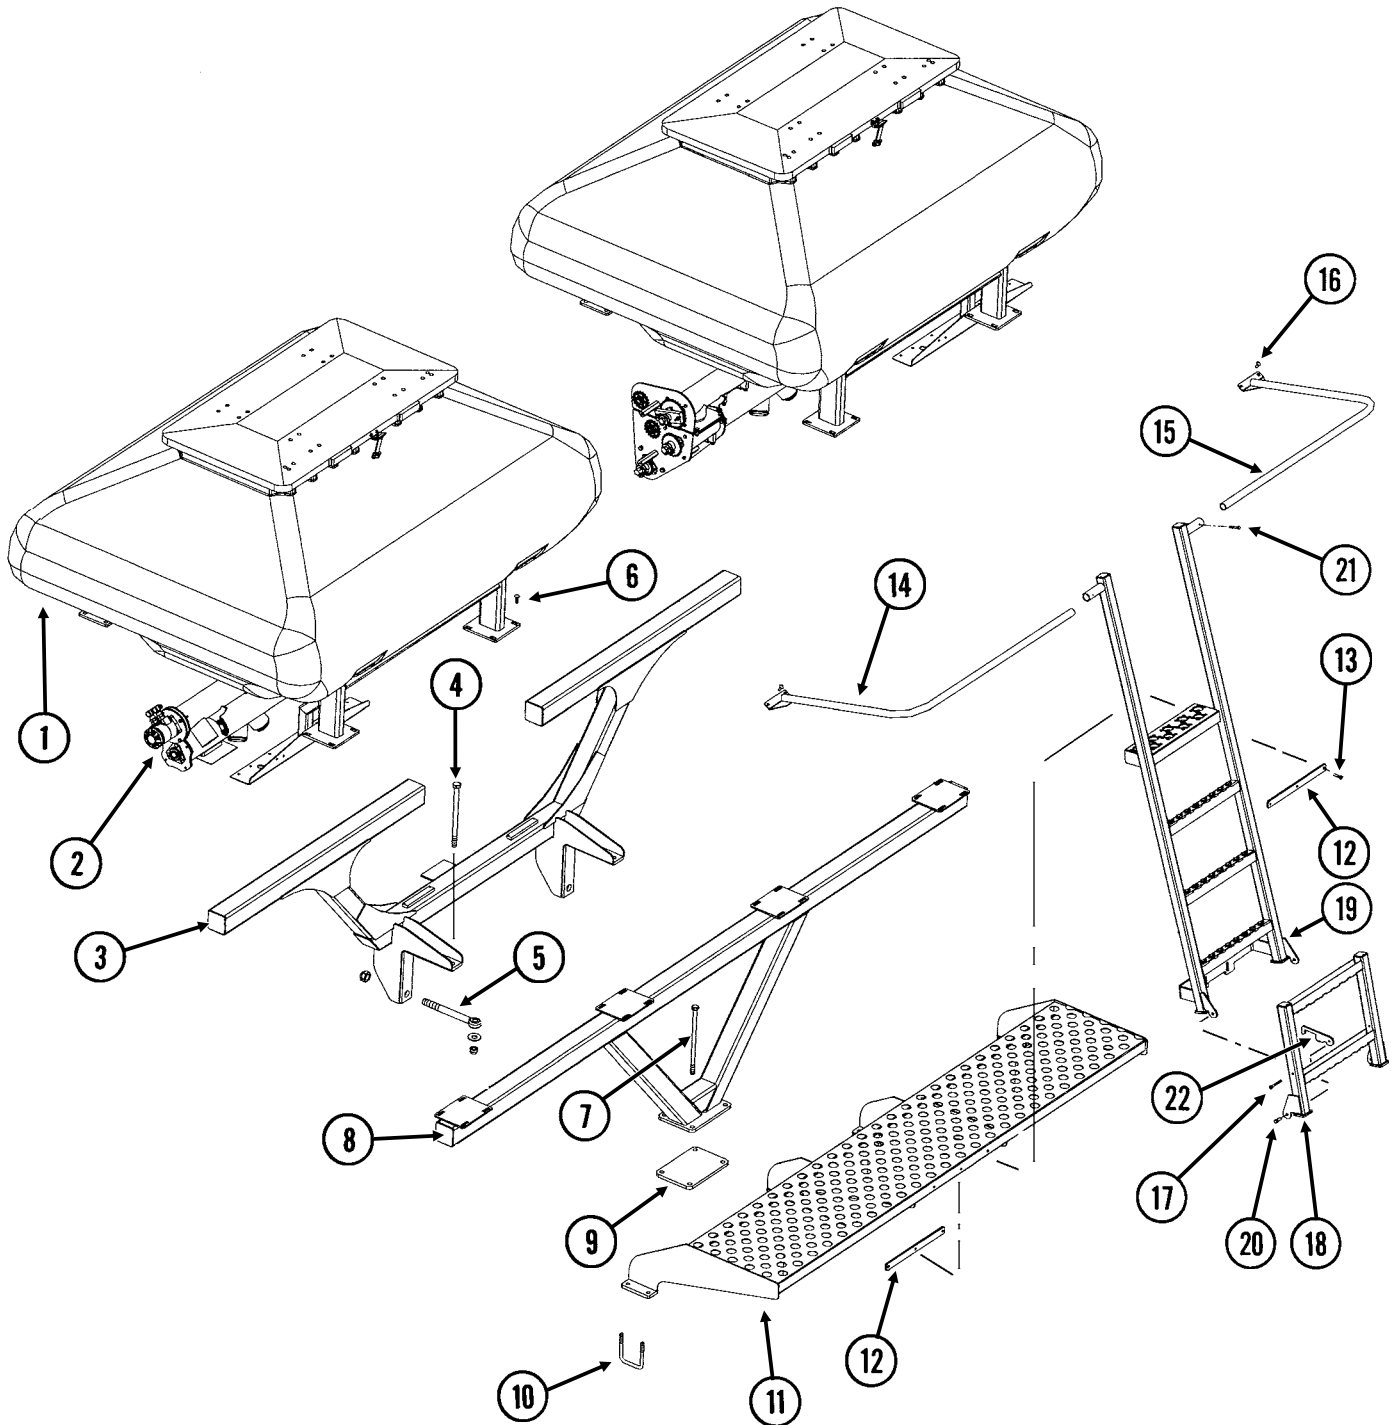




# BULK SEED HOPPER CATWALK (SDS)

---

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   |          | -    | See "Bulk Seed Hopper Assembly (SDS)",<br>Pages P32 And P33 |
| 2.   |          | -    | See "Center Auger Assemblies (SDS)",<br>Pages P26 And P27   |
| 3.   | GA11355  | 1    | Hopper Mount, Front   |
| 4.   | G10541   | 1    | Hex Head Cap Screw, 3/4"-10 x 11"                           |
|      | G10218   | 1    | Washer, 3/4" USS  |
|      | G10112   | 1    | Lock Nut, 3/4"-10   |
| 5.   | GD15283  | 1    | Eyebolt, 1"-14 x 10"  |
|      | G11108   | 1    | Lock Nut, 1"-14   |
| 6.   | G10599   | 4    | Carriage Bolt, 3/8"-16 x 1 1/4"                             |
|      | G10622   | 4    | Serrated Flange Nut, 3/8"-16                                |
| 7.   | G11122   | 4    | Hex Head Cap Screw, 5/8"-11 x 12"                           |
|      | G10205   | 4    | Washer, 5/8" SAE  |
|      | G10107   | 4    | Lock Nut, 5/8"-11   |
| 8.   | GA11356  | 1    | Hopper Mount, Rear  |
| 9.   | GD16530  | 1    | Plate   |
| 10.  | GD16356  | 4    | U-Bolt, 3 1/2" x 3 1/2" x 1/2"-13                           |
|      | G10228   | 8    | Lock Washer, 1/2"   |
|      | G10102   | 8    | Hex Nut, 1/2"-13  |
| 11.  | GA11638  | 1    | Catwalk   |
| 12.  | GD16778  | 2    | Bracket   |
| 13.  | G10171   | 3    | Hex Head Cap Screw, 5/16"-18 x 1 1/4"                       |
|      | G10109   | 3    | Lock Nut, 5/16"-18, Grade 8                                 |
| 14.  | GA11639  | 1    | Railing, L.H.   |
| 15.  | GA11640  | 1    | Railing, R.H.   |
| 16.  | G10303   | 4    | Carriage Bolt, 5/16"-18 x 1"                                |
|      | G10219   | 4    | Washer, 5/16" USS   |
|      | G10109   | 4    | Lock Nut, 5/16"-18, Grade 8                                 |
| 17.  | G10403   | 1    | Hex Head Cap Screw, 1/4"-20 x 2 1/2"                        |
|      | G10110   | 1    | Lock Nut, 1/4"-20, Grade B                                  |
| 18.  | GA11637  | 1    | Lower Ladder  |
| 19.  | GA11636  | 1    | Ladder  |
| 20.  | G10001   | 2    | Hex Head Cap Screw, 3/8"-16 x 1"                            |
|      | G10108   | 2    | Lock Nut, 3/8"-16   |
| 21.  | G10040   | 2    | Hex Head Cap Screw, 1/4"-20 x 1 3/4"                        |
|      | G10110   | 2    | Lock Nut, 1/4"-20, Grade B                                  |
| 22.  | GD16779  | 1    | Hook  |

# GRANULAR CHEMICAL HOPPER AND HOPPER PANEL EXTENSION

(METR14d)

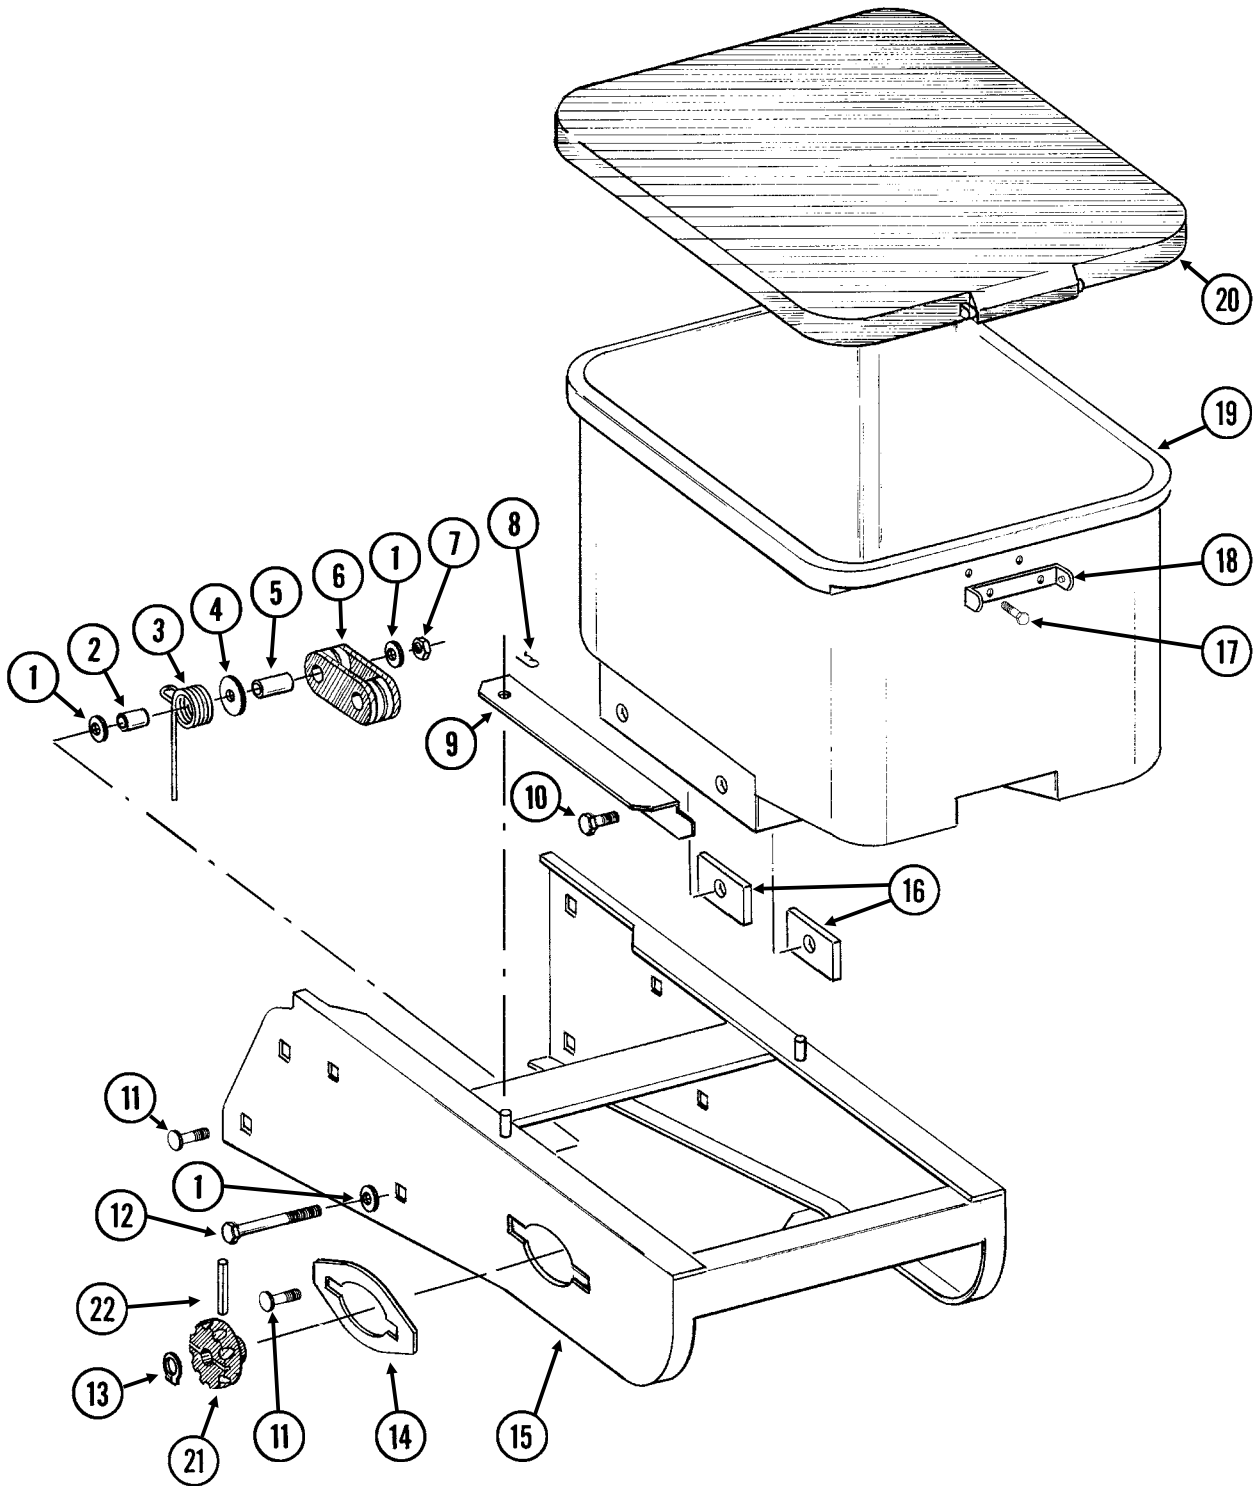


# GRANULAR CHEMICAL HOPPER AND HOPPER PANEL EXTENSION

---

| ITEM | PART NO.  | QTY.<br>(Per Row) | DESCRIPTION  |
|------|-----------|-------------------|--|
| 1.   | G10210    | 3                 | Washer, 3/8" USS   |
| 2.   | GD2971-10 | 1                 | Sleeve, 3/16" Long   |
| 3.   | GD11219   | 1                 | Spring   |
| 4.   | G10201    | 1                 | Special Washer, 3/8" x 1 1/2" O.D.   |
| 5.   | GD1026    | 1                 | Sleeve, 1 3/16" Long   |
| 6.   | GD11962   | 1                 | Idler  |
| 7.   | G10108    | 1                 | Lock Nut, 3/8"-16  |
| 8.   | G10670    | 2                 | Hair Pin Clip, No. 3   |
| 9.   | GD1059L   | 1                 | Support, L.H. (Shown)  |
|      | GD1059R   | 1                 | Support, R.H.  |
| 10.  | G10002    | 4                 | Hex Head Cap Screw, 3/8"-16 x 3/4"   |
|      | G10229    | 4                 | Lock Washer, 3/8"  |
| 11.  | G10312    | 8                 | Carriage Bolt, 5/16"-18 x 3/4"   |
|      | G10620    | 8                 | Serrated Flange Nut, 5/16"-18  |
| 12.  | G10325    | 1                 | Hex Head Cap Screw, 3/8"-16 x 2 3/4"   |
| 13.  | G10567    | 3                 | External Retaining Ring, 5/8"  |
| 14.  | GD11305   | 1                 | Plate  |
| 15.  | A10759    | 1                 | Hopper Panel Extension <b>(Non-Stock Item)</b><br><b>(Sub Wholegoods Order Code 700-01099)</b> |
| 16.  | GD11424   | 4                 | Block  |
| 17.  | G10023    | 2                 | Hex Head Cap Screw, 1/4"-20 x 3/4"   |
|      | G10621    | 2                 | Serrated Flange Nut, 1/4"-20   |
| 18.  | GD1060    | 1                 | Hinge  |
| 19.  | GA8371    | 1                 | Hopper   |
| 20.  | GA4444    | 1                 | Lid  |
| 21.  | GD11239   | 1                 | Knob   |
| 22.  | G10602    | 1                 | Spring Pin, 1/4" x 1 1/2"  |

# GRANULAR CHEMICAL METER AND METER DRIVE



RUA051/RUB028(RU91a)

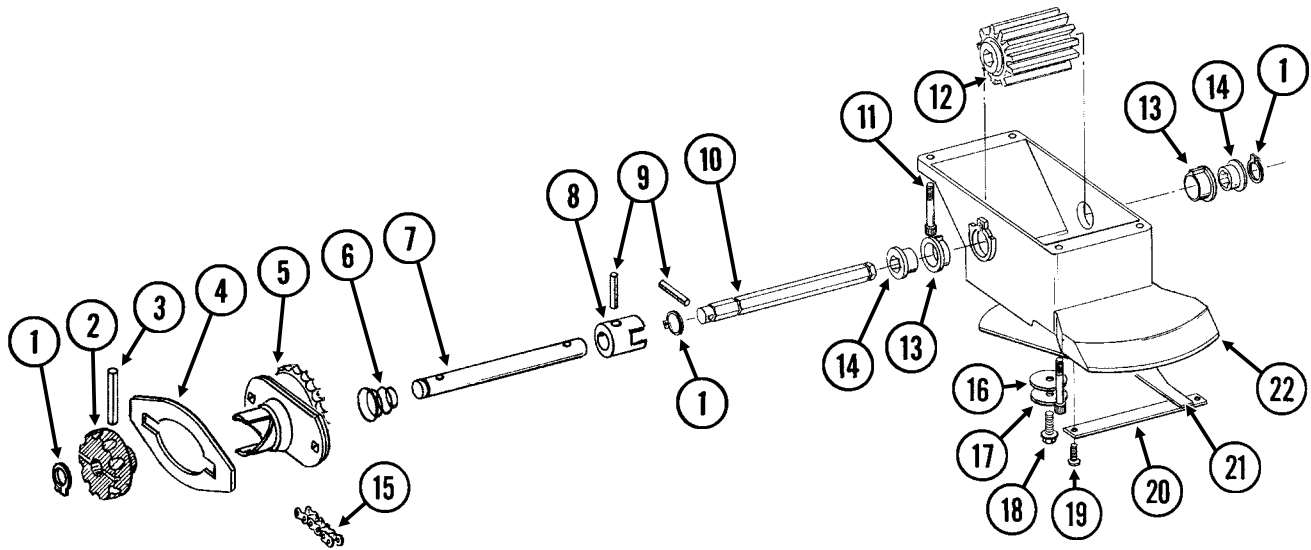

| ITEM | PART NO.  | QTY.<br>(Per Row) | DESCRIPTION   |
|------|-----------|-------------------|---|
| 1.   | G10567    | 3                 | External Retaining Ring, 5/8"   |
| 2.   | GD11239   | 1                 | Knob  |
| 3.   | G10602    | 1                 | Spring Pin, 1/4" x 1 1/2"   |
| 4.   |           | -                 | See "Granular Chemical Hopper And Hopper Panel Extension",<br>Pages P36 And P37 |
| 5.   | GA8364    | 1                 | Sprocket And Bearing, Drive Clutch, 24 Tooth                                    |
| 6.   | GD11413   | 1                 | Spring  |
| 7.   | GD11240   | 1                 | Shaft   |
| 8.   | GB0278    | 1                 | Coupler   |
| 9.   | G10546    | 2                 | Spring Pin, 3/16" x 1 1/4"  |
| 10.  | GD11297   | 1                 | Shaft   |
| 11.  | G10921    | 4                 | Hex Socket Head Cap Screw, No. 10-24 x 7/8"                                     |
|      | G10257    | 4                 | Lock Washer, No. 10   |
| 12.  | GD7148    | 1                 | Feed Roller, Hex Bore   |
| 13.  | GB0115    | 2                 | Bearing   |
| 14.  | GD7258    | 2                 | Hex Bushing   |
| 15.  | G3303-114 | 1                 | Chain, No. 41, 114 Pitch Including Connector Link                               |
|      | GR0196    | 1                 | Connector Link, No. 41  |
| 16.  | G10660    | 1                 | Wave Washer, 1/2"   |
| 17.  | G10209    | 1                 | Washer, 1/4" USS  |
| 18.  | G10570    | 1                 | Slotted Hex Self-Tapping Screw, 1/4"-20 x 3/4"                                  |
| 19.  | G11073    | 2                 | Slotted Hex Self-Tapping Screw, No. 10 x 3/8"                                   |
| 20.  | GD1061    | 1                 | Support Strap   |
| 21.  | GD1063    | 1                 | Metering Gate   |
| 22.  | GB0116    | 1                 | Granular Housing  |
| A.   | GA8326    | -                 | Granular Chemical Meter Complete (Items 1, 9, 10, 12-14 And 16-22)              |

# GRANULAR CHEMICAL BANDING OPTIONS


RUA061/RUA073(RU101mm/RU83m)

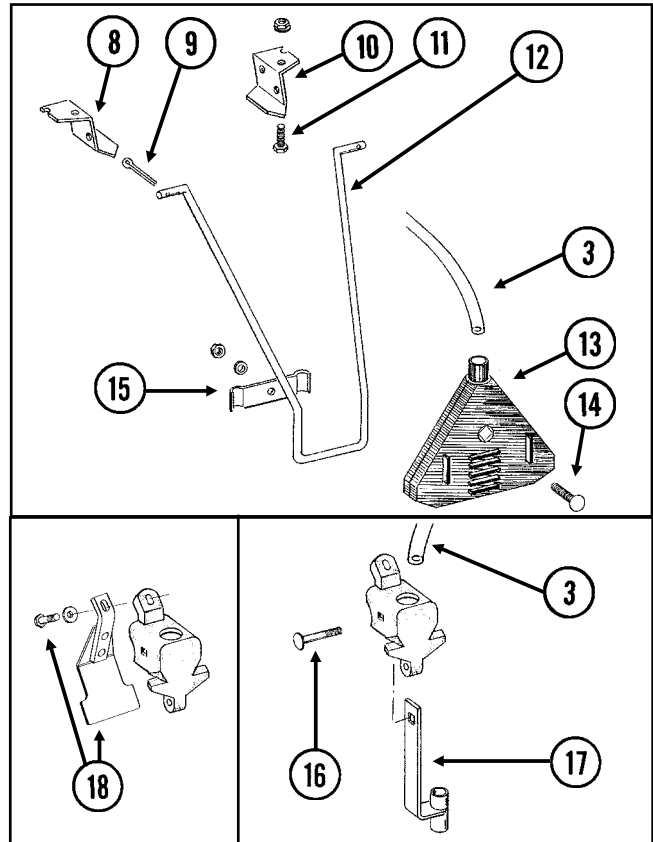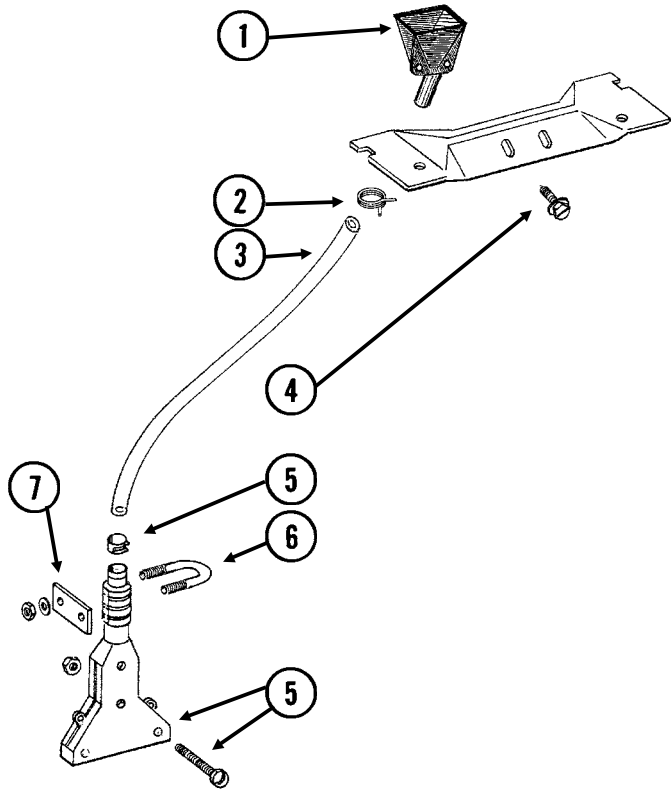

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GD2423   | 1    | Funnel  |
| 2.   | G11209   | 1    | Wire Hose Clamp, 3/4"   |
| 3.   | GD2947   | 1    | Hose, 7/16" x 28"   |
| 4.   | G10523   | 2    | Slotted Pan Head Self-Tapping Screw, No. 10 x 1/2"                            |
| 5.   | GA6907   | 1    | Slope-Compensating Bander W/Hardware (4 1/2" Band Width)                      |
|      | G10864   | 1    | Uni-Clamp   |
|      | G10757   | 2    | Pan Head Screw, No. 10-32 x 1 1/4"  |
|      | G10758   | 2    | Hex Nut, No. 10-32  |
| 6.   | GD10963  | 1    | U-Bolt, 1 1/2" x 1 5/16" x 1/4"-20  |
|      | G10209   | 2    | Washer, 1/4" USS  |
|      | G10110   | 2    | Lock Nut, 1/4"-20, Grade B  |
| 7.   | GD10984  | 1    | Spacer  |
| 8.   | GD1115L  | -    | Hanger Bracket, L.H.  |
| 9.   | G10452   | -    | Cotter Pin, 1/8" x 1/2"   |
| 10.  | GD1115R  | -    | Hanger Bracket, R.H.  |
| 11.  | G10310   | -    | Carriage Bolt, 1/4"-20 x 3/4", Grade 2  |
|      | G10227   | -    | Lock Washer, 1/4"   |
|      | G10103   | -    | Hex Nut, 1/4"-20  |
| 12.  | GD1116   | -    | Hanger  |
| 13.  | GA2075   | -    | Diffuser, 14" Band  |
| 14.  | G10306   | -    | Carriage Bolt, 3/8"-16 x 2"   |
|      | G10229   | -    | Lock Washer, 3/8"   |
|      | G10101   | -    | Hex Nut, 3/8"-16  |
| 15.  | GD1118   | -    | Clamp   |
| 16.  | G10315   | 1    | Carriage Bolt, 1/2"-13 x 2 1/2"<br>(Replaces Existing 1/2" x 2 1/4" Hardware) |
| 17.  | GA6741   | 1    | Bracket (Straight Drop In-Furrow)   |
| 18.  | G1K385   | -    | Bander Shield Kit W/Hardware And Instruction                                  |
|      | G10003   | 1    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"  |
|      | GD14659  | 1    | Special Washer, 3/8", Hardened  |

# SPRING TOOTH INCORPORATOR



RUA055(RU95)

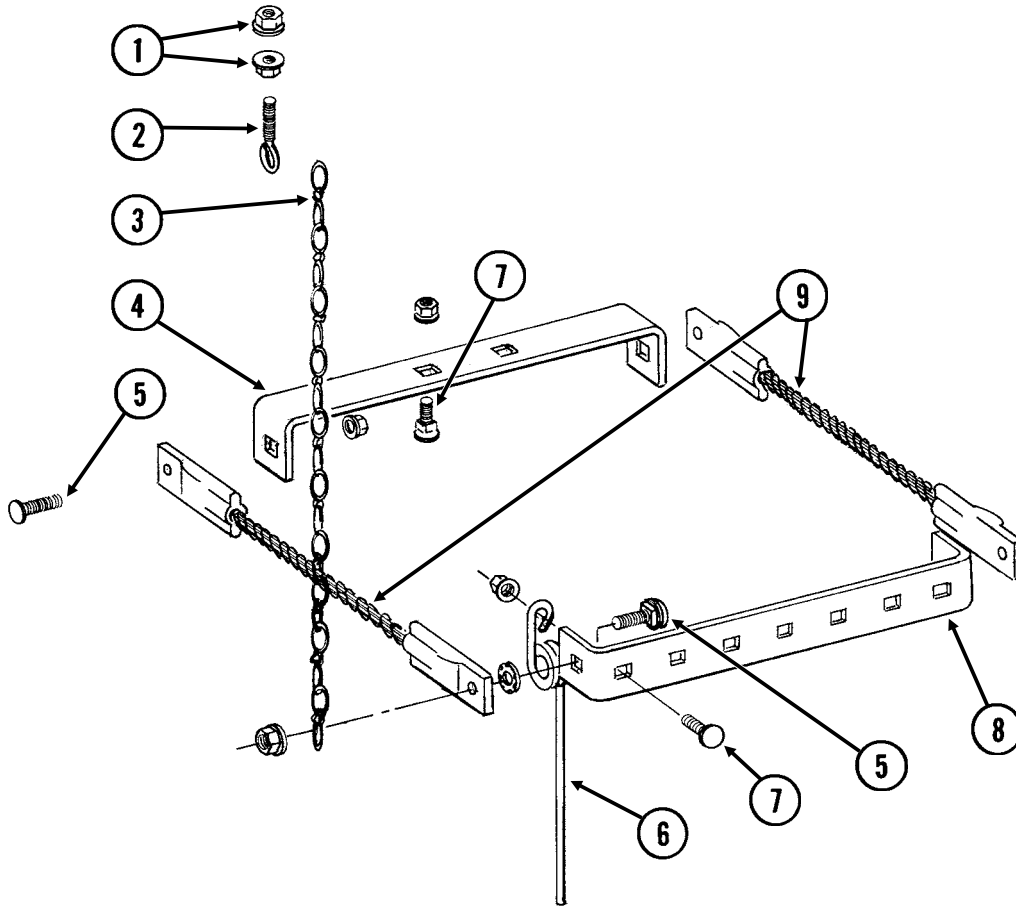

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION                      |
|------|----------|-------------------|----------------------------------|
| 1.   | G10621   | 4                 | Serrated Flange Nut, 1/4"-20     |
| 2.   | GD2460   | 2                 | Eyebolt, 1/4"-20                 |
| 3.   | G3305-01 | 4                 | Twin Loop Chain, 9 Links         |
| 4.   | GD1143   | 1                 | Front Bracket                    |
| 5.   | G10305   | 4                 | Carriage Bolt, 3/8"-16 x 1"      |
|      | G10529   | 4                 | External Tooth Lock Washer, 3/8" |
|      | G10622   | 4                 | Serrated Flange Nut, 3/8"-16     |
| 6.   | GD1145   | 7                 | Spring Tooth                     |
| 7.   | G10308   | 9                 | Carriage Bolt, 3/8"-16 x 3/4"    |
|      | G10622   | 9                 | Serrated Flange Nut, 3/8"-16     |
| 8.   | GD1144   | 1                 | Rear Bracket                     |
| 9.   | GA2094   | 2                 | Cable Assembly                   |

# ROW UNIT MOUNTED NO TILL COULTER


(D14398/RU102c/RU152)

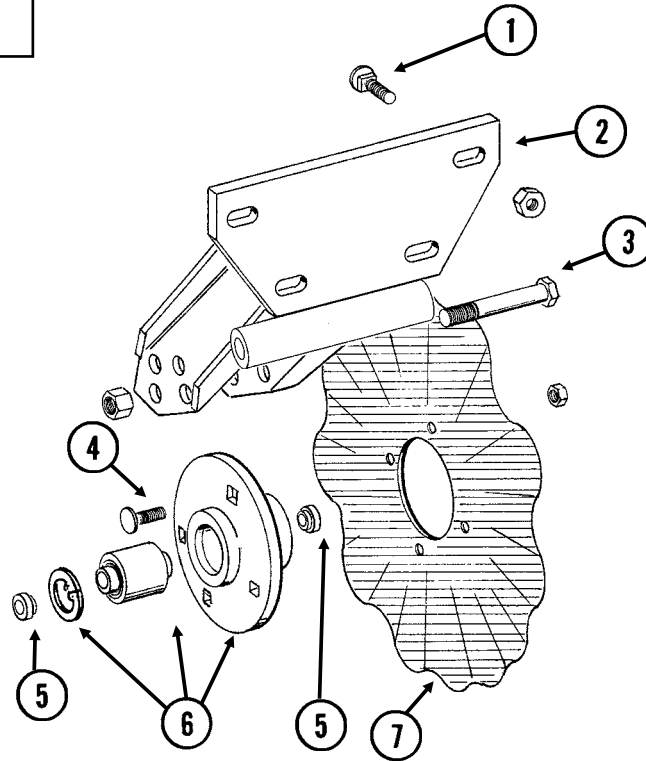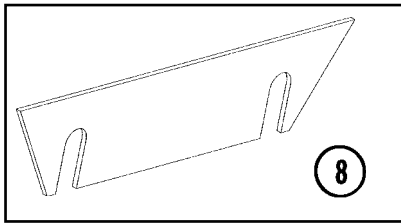

| ITEM | PART NO. | QTY.      | DESCRIPTION                              |
|------|----------|-----------|--|
|      |          | (Per Row) |  |
| 1.   | G10574   | 4         | Carriage Bolt, 1/2"-13 x 1 1/4"          |
|      | G10111   | 4         | Lock Nut, 1/2"-13                        |
| 2.   | GA11520  | 1         | Arm                                      |
| 3.   | G10036   | 1         | Hex Head Cap Screw, 5/8"-11 x 4"         |
|      | G10107   | 1         | Lock Nut, 5/8"-11                        |
| 4.   | G10574   | 4         | Carriage Bolt, 1/2"-13 x 1 1/4"          |
|      | G10111   | 4         | Lock Nut, 1/2"-13                        |
| 5.   | GD11677  | 2         | Adapter                                  |
| 6.   | GA8641   | 1         | Hub W/Bearing And Retaining Ring         |
|      | GA8603   | -         | Bearing, Double Row                      |
|      | GD11652  | -         | Retaining Ring, 2 7/16"                  |
| 7.   | GD7803   | -         | Disc Blade, Fluted, 1", 8 Flutes (Shown) |
|      | GD7804   | -         | Disc Blade, Bubbled, 1"                  |
|      | GD9254   | -         | Disc Blade, Fluted, 3/4", 13 Flutes      |
| 8.   | GD14398  | -         | Spacer                                   |

# ROW UNIT MOUNTED DISC FURROWER

RUA059/RUA058(RU99/RU98g)

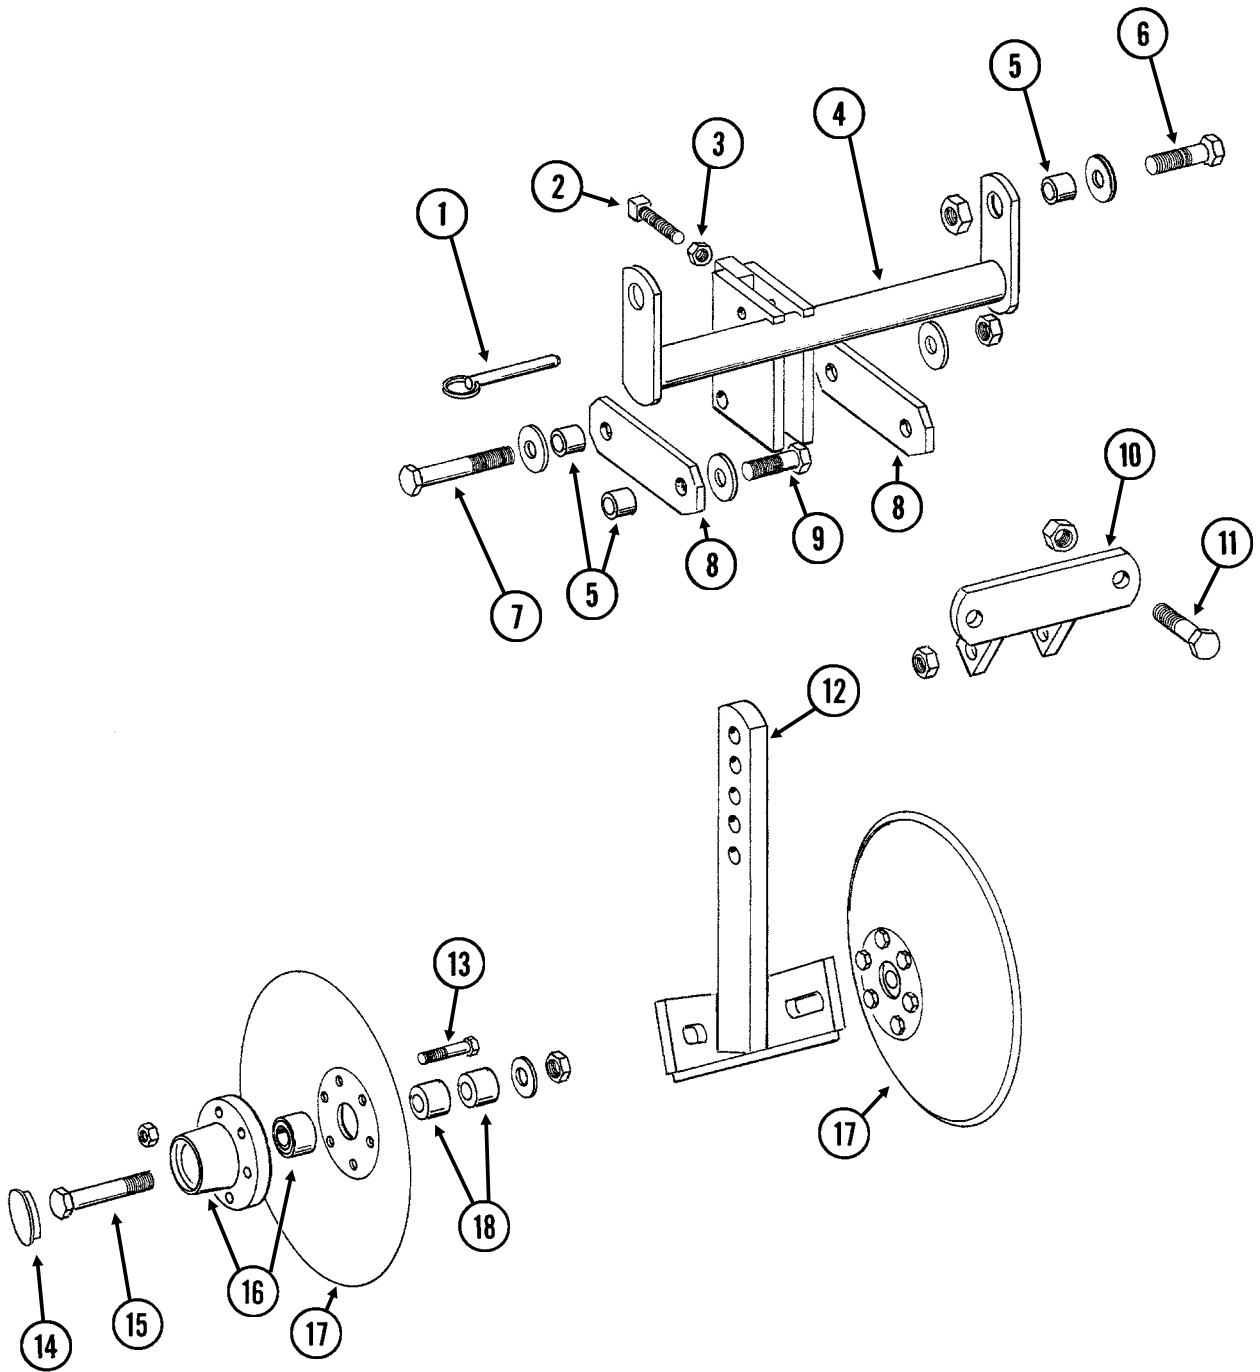




# ROW UNIT MOUNTED DISC FURROWER

| ITEM | PART NO.  | QTY.<br>(Per Row) | DESCRIPTION                                       |
|------|-----------|-------------------|---|
| 1.   | G10536    | 1                 | Detent Pin, 1/2" x 2 1/2" Grip                    |
| 2.   | G10597    | 1                 | Square Head Set Screw, 5/8"-11 x 2 1/4"           |
| 3.   | G10503    | 1                 | Hex Jam Nut, 5/8"-11, Grade 2                     |
| 4.   | GA5719    | 1                 | Mounting Bracket                                  |
| 5.   | GD7889    | 6                 | Bushing, 1" O.D. x 9/16" I.D. x 7/16" Long        |
| 6.   | G10039    | 2                 | Hex Head Cap Screw, 1/2"-13 x 1 3/4"              |
|      | GD14674   | 2                 | Special Washer, 1/2", Hardened                    |
|      | G10111    | 2                 | Lock Nut, 1/2"-13                                 |
| 7.   | G10585    | 1                 | Hex Head Cap Screw, 1/2"-13 x 3 1/4"              |
|      | G10216    | 2                 | Washer, 1/2" USS                                  |
|      | G10111    | 1                 | Lock Nut, 1/2"-13                                 |
| 8.   | GD7890    | 2                 | Link  |
| 9.   | G10017    | 2                 | Hex Head Cap Screw, 1/2"-13 x 1 1/2"              |
|      | G10216    | 2                 | Washer, 1/2" USS                                  |
|      | G10111    | 2                 | Lock Nut, 1/2"-13                                 |
| 10.  | GA5715    | 1                 | Anchor  |
| 11.  | G10017    | 2                 | Hex Head Cap Screw, 1/2"-13 x 1 1/2"              |
|      | G10111    | 2                 | Lock Nut, 1/2"-13                                 |
| 12.  | GA5718    | 1                 | Support Arm                                       |
| 13.  | G10572    | 6                 | Truss Head Slotted Machine Screw, 5/16"-18 x 7/8" |
|      | G10106    | 6                 | Hex Nut, 5/16"-18                                 |
| 14.  | GD1132    | 2                 | Dust Cap  |
| 15.  | G10318    | 2                 | Hex Head Cap Screw, 5/8"-11 x 4 1/2"              |
|      | GD7805    | 2                 | Special Washer, 5/8", Hardened                    |
|      | G10107    | 2                 | Lock Nut, 5/8"-11                                 |
| 16.  | GA5654    | 2                 | Hub W/Bearings                                    |
|      | GA2014    | -                 | Bearing   |
| 17.  | GD7823    | -                 | Disc Blade, Solid, 12" (Shown)                    |
|      | GD8307    | -                 | Disc Blade, Notched, 12"                          |
| 18.  | GD7817-01 | 2                 | Spacer, 1 1/16" I.D. x 3/4" Long                  |
|      | GD7817-04 | 2                 | Spacer, 1 1/16" I.D. x 1/2" Long                  |

# ROW UNIT MOUNTED RESIDUE WHEEL

(RU103dd)

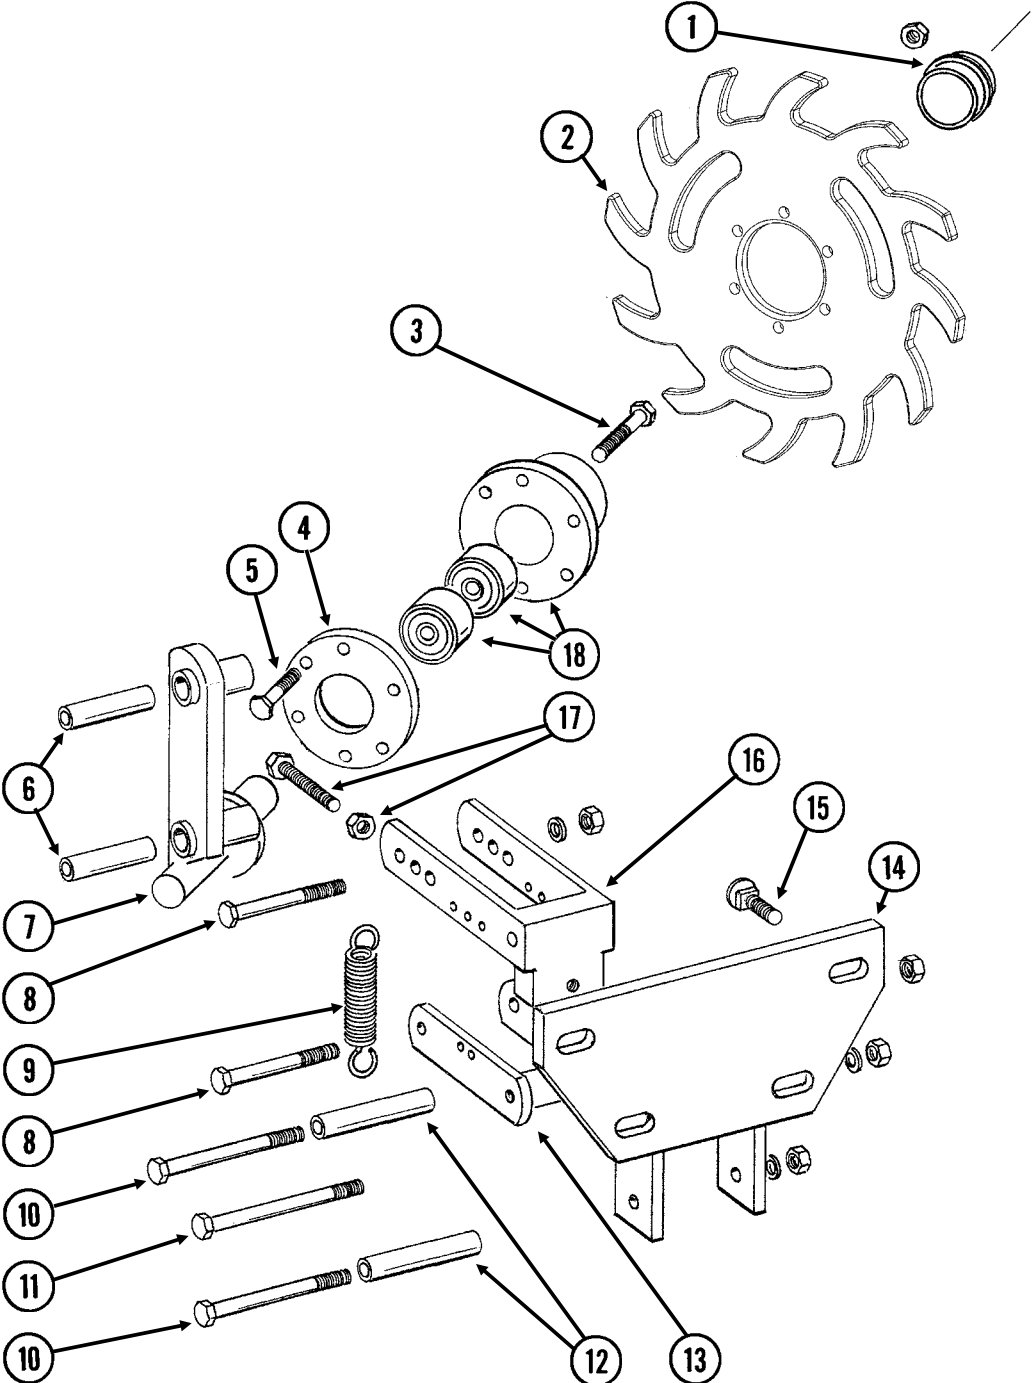


# ROW UNIT MOUNTED RESIDUE WHEEL

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION   |
|------|----------|-------------------|---|
| 1.   | GD1132   | 1                 | Dust Cap  |
| 2.   | GB0387   | 1                 | Wheel, 12 Tine, 3/8" x 12"                            |
| 3.   | G10006   | 1                 | Hex Head Cap Screw, 5/8"-11 x 2 1/4"                  |
| 4.   | GD9724   | 1                 | Backing Plate   |
| 5.   | G10133   | 6                 | Hex Head Cap Screw, 5/16"-18 x 1 1/2"                 |
|      | G10109   | 6                 | Lock Nut, 5/16"-18, Grade 8                           |
| 6.   | GD9720   | 2                 | Spacer, 1/2" x 2 3/16" Long                           |
| 7.   | GA6838   | 1                 | Wheel Mount   |
| 8.   | G10033   | 2                 | Hex Head Cap Screw, 1/2"-13 x 3 1/2"                  |
|      | G10228   | 2                 | Lock Washer, 1/2"                                     |
|      | G10102   | 2                 | Hex Nut, 1/2"-13                                      |
| 9.   | GD5857   | 2                 | Spring  |
| 10.  | G10045   | 2                 | Hex Head Cap Screw, 1/2"-13 x 4 1/2"                  |
|      | G10228   | 2                 | Lock Washer, 1/2"                                     |
|      | G10102   | 2                 | Hex Nut, 1/2"-13                                      |
| 11.  | G10348   | 1                 | Hex Head Cap Screw, 1/2"-13 x 5" (Lockup Bolt)        |
|      | G10111   | 1                 | Lock Nut, 1/2"-13                                     |
| 12.  | GD9715   | 2                 | Spacer, 1/2" x 3" Long                                |
| 13.  | GA6834   | 1                 | Lower Link  |
| 14.  | GA6832   | 1                 | Mount   |
| 15.  | G10574   | 4                 | Carriage Bolt, 1/2"-13 x 1 1/4"                       |
|      | G10111   | 4                 | Lock Nut, 1/2"-13                                     |
| 16.  | GA6833   | 1                 | Upper Link  |
| 17.  | G10371   | 1                 | Hex Head Cap Screw, 1/2"-13 x 3", Full Thread         |
|      | G10501   | 1                 | Hex Jam Nut, 1/2"-13, Grade 2                         |
| 18.  | GA5654   | 1                 | Hub W/Bearings  |
|      | GA2014   | -                 | Bearing   |
| A.   | GA12236  | -                 | Wheel Assembly, 12 Tine, R.H. (Items 2, 4, 5, And 18) |

# COULTER MOUNTED RESIDUE WHEELS

(RU153)

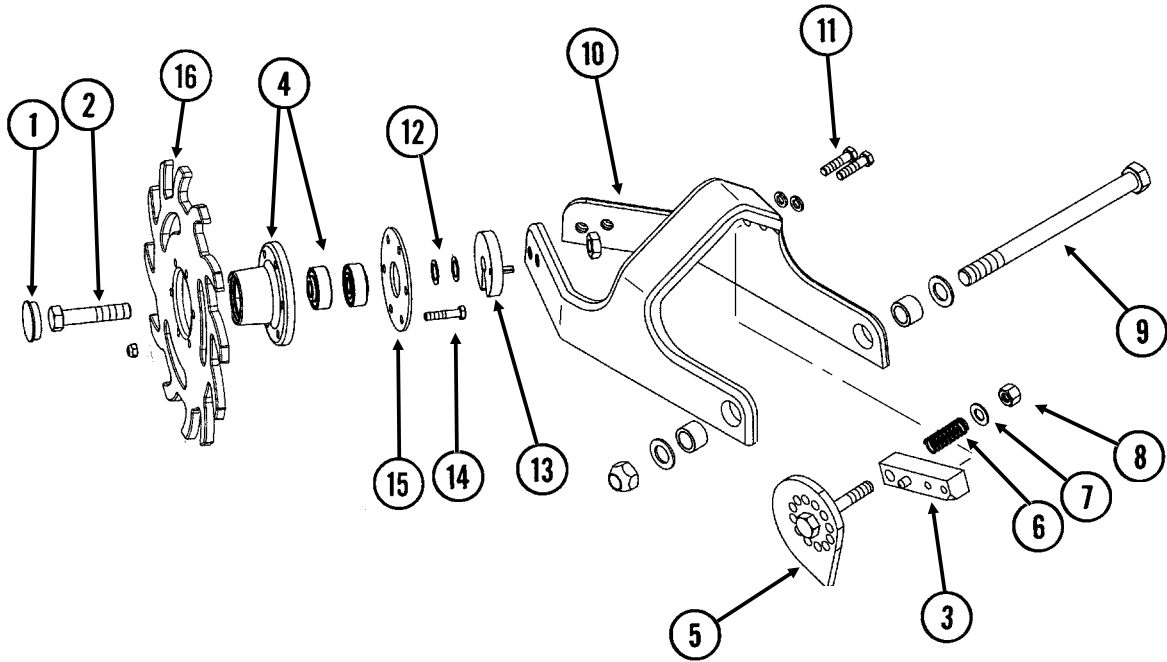


# COULTER MOUNTED RESIDUE WHEELS

---

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION  |
|------|----------|-------------------|--|
| 1.   | GD1132   | 2                 | Dust Cap   |
| 2.   | G10010   | 2                 | Hex Head Cap Screw, 5/8"-11 x 3"                               |
|      | G10503   | 2                 | Hex Jam Nut, 5/8"-11, Grade 2                                  |
| 3.   | GA12256  | 1                 | Locking Pin  |
| 4.   | GA5654   | 2                 | Hub W/Bearings   |
|      | GA2014   | -                 | Bearing  |
| 5.   | GA7412   | 1                 | Cam  |
| 6.   | GD10519  | 1                 | Spring   |
| 7.   | G10206   | 1                 | Washer, 1/2" SAE   |
| 8.   | G10974   | 1                 | Lock Nut W/Nylon Insert, 1/2"-13                               |
| 9.   | G11236   | 1                 | Hex Head Cap Screw, 3/4"-10 x 10 1/2"                          |
|      | GB0383   | 2                 | Bushing, 1 1/8" O.D. x 25/32" I.D. x 3/4" Long                 |
|      | G10194   | 2                 | Washer, 3/4" SAE   |
|      | G11228   | 1                 | Lock Nut, 3/4"-10  |
| 10.  | GB0401   | 1                 | Mount  |
| 11.  | G10003   | 2                 | Hex Head Cap Screw, 3/8"-16 x 1 1/2"                           |
|      | G10229   | 2                 | Lock Washer, 3/8"  |
| 12.  | G10213   | 2-4               | Machine Bushing, 5/8" (.030" Thick)                            |
| 13.  | GA8760   | 2                 | Weed Guard W/Spring Pin  |
|      | G10765   | -                 | Spring Pin, 1/4" x 1"  |
| 14.  | G10133   | 12                | Hex Head Cap Screw, 5/16"-18 x 1 1/2"                          |
|      | G10109   | 12                | Lock Nut, 5/16"-18, Grade 8                                    |
| 15.  | GD9724   | 2                 | Backing Plate  |
| 16.  | GB0387   | 2                 | Wheel, 12 Tine, 3/8" x 12"                                     |
| A.   | GA12236  | -                 | Wheel Assembly, 12 Tine, R.H. (Items 3, 4, 14, And 15) (Shown) |
|      | GA12235  | -                 | Wheel Assembly, 12 Tine, L.H. (Items 3, 4, 14, And 15)         |
| B.   | G1K467   | -                 | Residue Wheel Mount Kit (Items 17-20)                          |

# FRAME MOUNTED COULTER W/RESIDUE WHEELS

(RU135c/RU135g/RU153b/RU135hh)

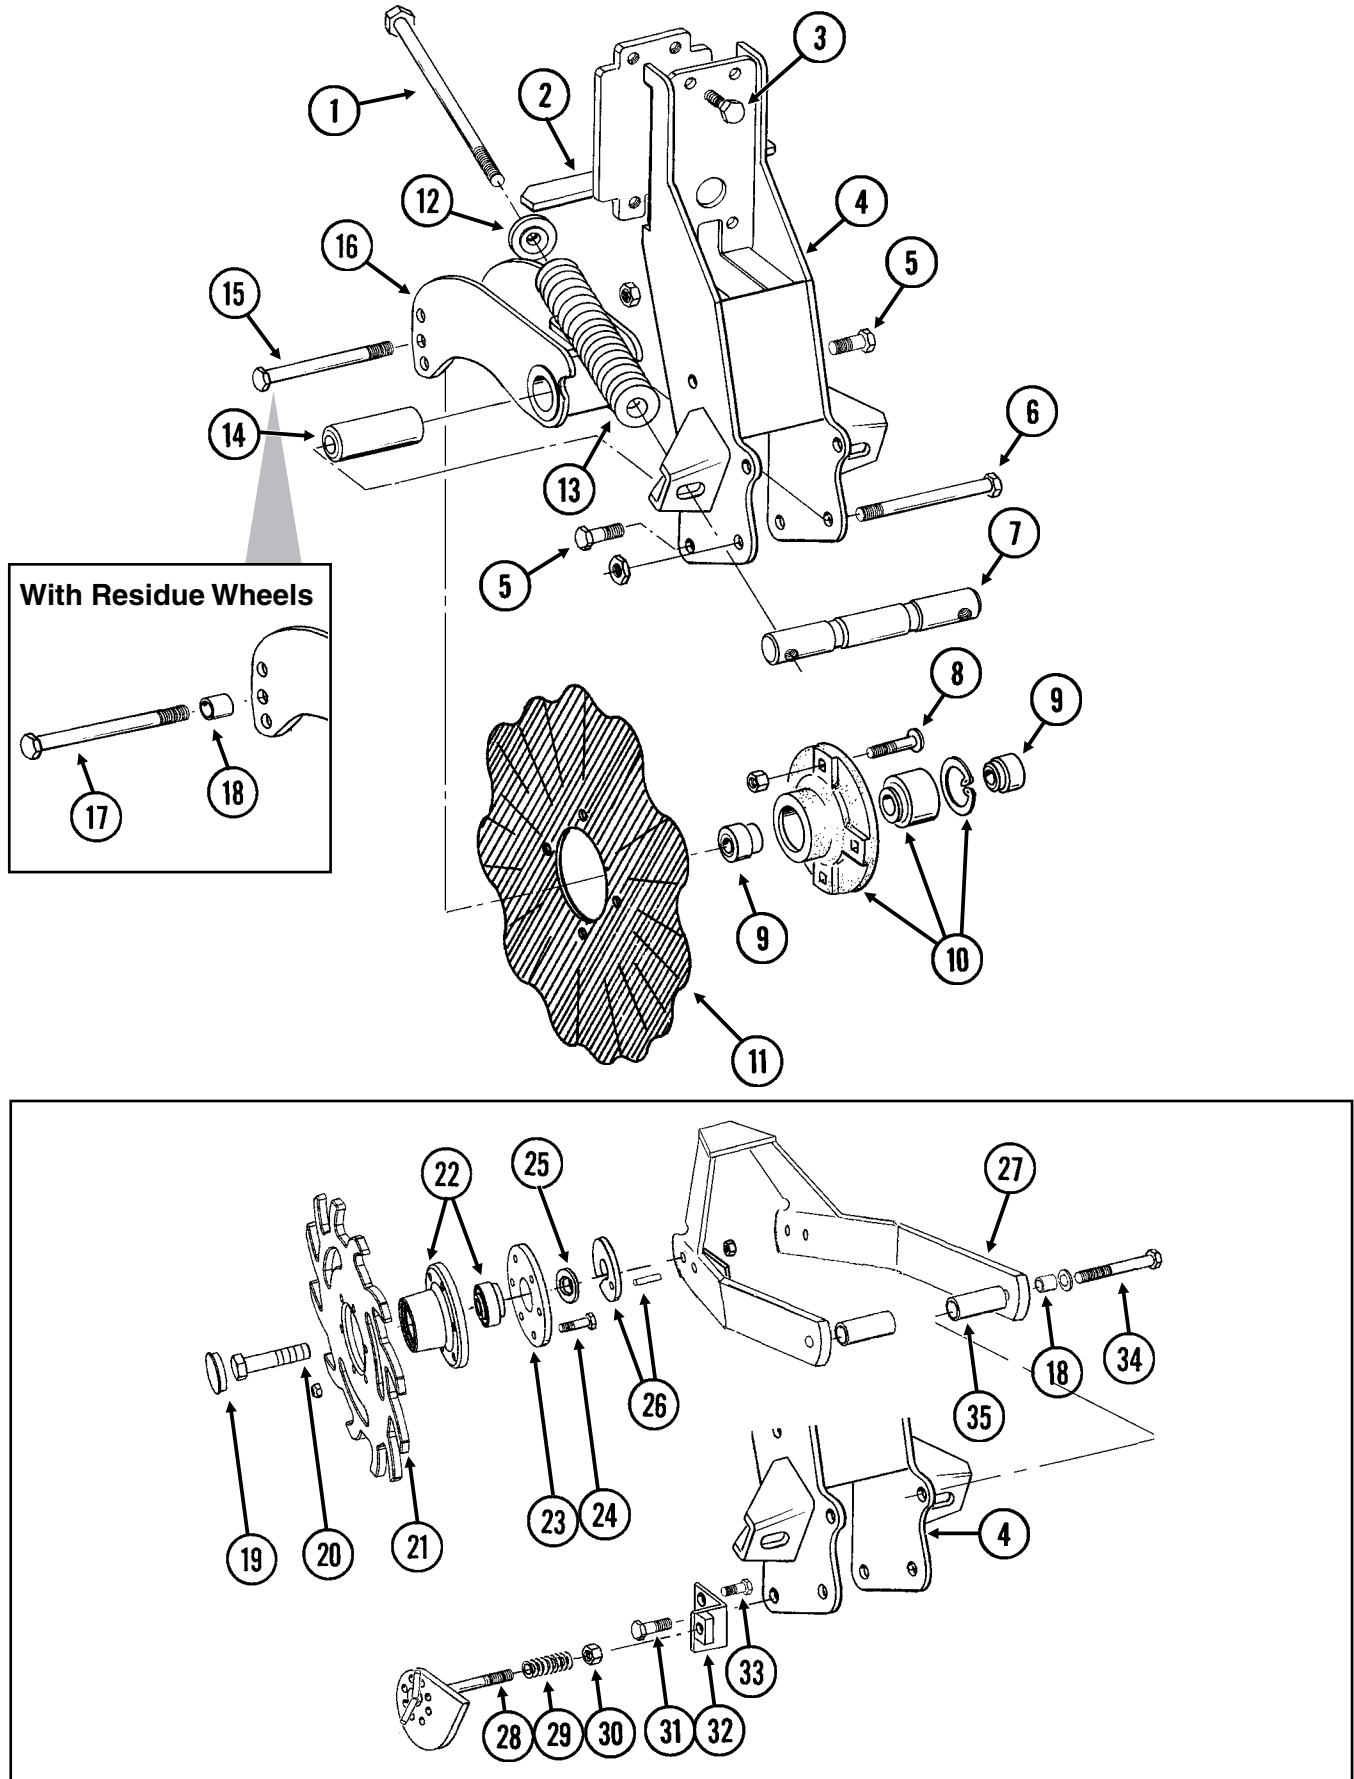


# FRAME MOUNTED COULTER W/RESIDUE WHEELS

| ITEM | PART NO. | QTY.<br>(Per Row) | DESCRIPTION  |
|------|----------|-------------------|--|
| 1.   | G11010   | 2                 | Hex Head Cap Screw, 3/4"-10 x 12"                                |
| 2.   | GA9844   | 1                 | Plate W/Angle  |
| 3.   | G10039   | 4                 | Hex Head Cap Screw, 1/2"-13 x 1 3/4"                             |
| 4.   | GA9131   | 1                 | Coulter Frame  |
| 5.   | G10007   | 4                 | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                             |
|      | G10107   | 4                 | Lock Nut, 5/8"-11  |
| 6.   | G10400   | 1                 | Hex Head Cap Screw, 3/4"-10 x 6 1/2"                             |
|      | G10112   | 1                 | Lock Nut, 3/4"-10  |
| 7.   | GD12826  | 1                 | Spring Anchor Bar  |
| 8.   | G10574   | 4                 | Carriage Bolt, 1/2"-13 x 1 1/4"                                  |
|      | G10111   | 4                 | Lock Nut, 1/2"-13  |
| 9.   | GD12827  | 2                 | Adapter  |
| 10.  | GA8641   | 1                 | Hub W/Bearing And Retaining Ring                                 |
|      | GA8603   | 1                 | Bearing, Double Row  |
|      | GD11652  | 1                 | Retaining Ring, 2 7/16"  |
| 11.  | GD7803   | 1                 | Disc Blade, Fluted, 1", 8 Flutes (Shown)                         |
|      | GD7804   | -                 | Disc Blade, Bubbled, 1"  |
|      | GD9254   | -                 | Disc Blade, Fluted, 3/4", 13 Flutes                              |
| 12.  | GB0213   | 2                 | Spring Seat  |
| 13.  | GD12817  | 2                 | Compression Spring   |
| 14.  | GD12829  | 1                 | Sleeve   |
| 15.  | G10046   | 1                 | Hex Head Cap Screw, 5/8"-11 x 5"                                 |
|      | G10107   | 1                 | Lock Nut, 5/8"-11  |
| 16.  | GA9845   | 1                 | Coulter Arm W/Grease Fitting                                     |
|      | G10643   | -                 | Grease Fitting, 45°, 1/4"-28                                     |
| 17.  | G10011   | 1                 | Hex Head Cap Screw, 5/8"-11 x 5 1/2"                             |
|      | G10107   | 1                 | Lock Nut, 5/8"-11  |
| 18.  | GB0218   | 3                 | Bushing, 2 1/32" I.D. x 7/8" O.D. x 1 9/32" Long                 |
| 19.  | GD1132   | 2                 | Dust Cap   |
| 20.  | G10010   | 2                 | Hex Head Cap Screw, 5/8"-11 x 3"                                 |
|      | G10503   | 2                 | Hex Jam Nut, 5/8"-11, Grade 2                                    |
| 21.  | GB0386   | 2                 | Wheel, 12 Tine, 3/8" x 12"                                       |
| 22.  | GA5654   | 2                 | Hub W/Bearings   |
|      | GA2014   | -                 | Bearing  |
| 23.  | GD9724   | 2                 | Backing Plate  |
| 24.  | G10133   | 12                | Hex Head Cap Screw, 5/16"-18 x 1 1/2"                            |
|      | G10109   | 12                | Lock Nut, 5/16"-18, Grade 8                                      |
| 25.  | G10213   | 2                 | Machine Bushing, 5/8" (.030" Thick)                              |
| 26.  | GA9862   | 2                 | Weed Guard W/Spring Pin  |
|      | G10765   | -                 | Spring Pin, 1/4" x 1"  |
| 27.  | GA9865   | 1                 | Mount  |
| 28.  | GA9861   | 1                 | Cam  |
| 29.  | GD10519  | 1                 | Spring   |
| 30.  | G10974   | 1                 | Lock Nut W/Nylon Insert, 1/2"-13                                 |
| 31.  | G10005   | 1                 | Hex Head Cap Screw, 5/8"-11 x 1 3/4"                             |
|      | G10107   | 4                 | Lock Nut, 5/8"-11  |
| 32.  | GA9864   | 1                 | Support  |
| 33.  | G10014   | 1                 | Hex Head Cap Screw, 1/2"-13 x 1"                                 |
|      | G10102   | 1                 | Hex Nut, 1/2"-13   |
| 34.  | G10011   | 2                 | Hex Head Cap Screw, 5/8"-11 x 5 1/2"                             |
|      | G10205   | 2                 | Washer, 5/8" SAE   |
|      | G10730   | 2                 | Lock Nut W/Nylon Insert, 5/8"-11                                 |
| 35.  | GD14170  | 2                 | Sleeve, 3"   |
| A.   | GA12236  | -                 | Wheel Assembly, 12 Tine, R.H. (Items 21, 22, 23, And 24) (Shown) |
|      | GA12235  | -                 | Wheel Assembly, 12 Tine, L.H. (Items 21, 22, 23, And 24)         |


# PTO ASSEMBLY

(A13248/A13249/A13250/FWD165)


24 1/2" TO 27"

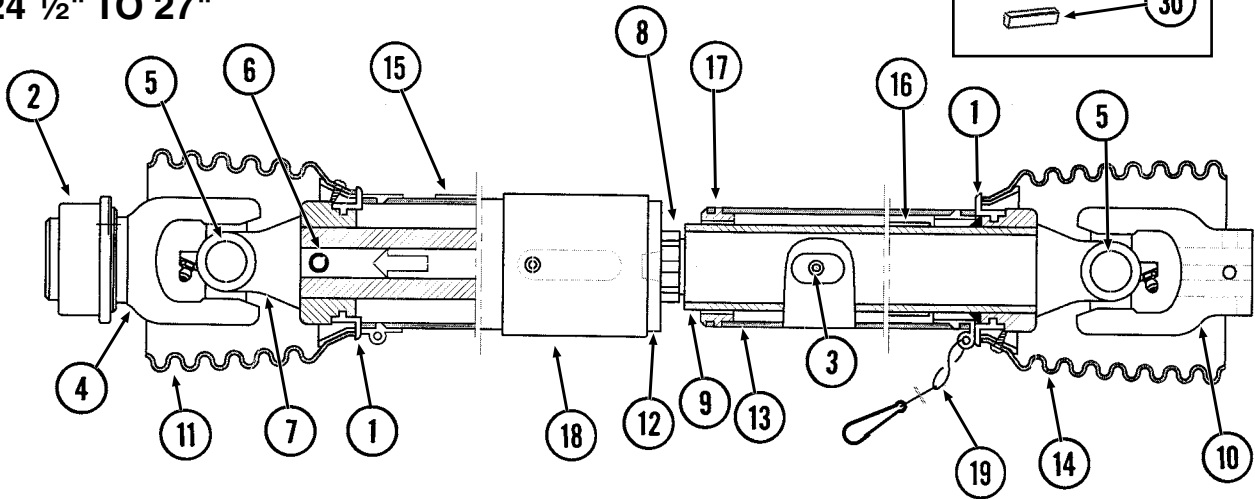

31 1/2" TO 34 1/2"

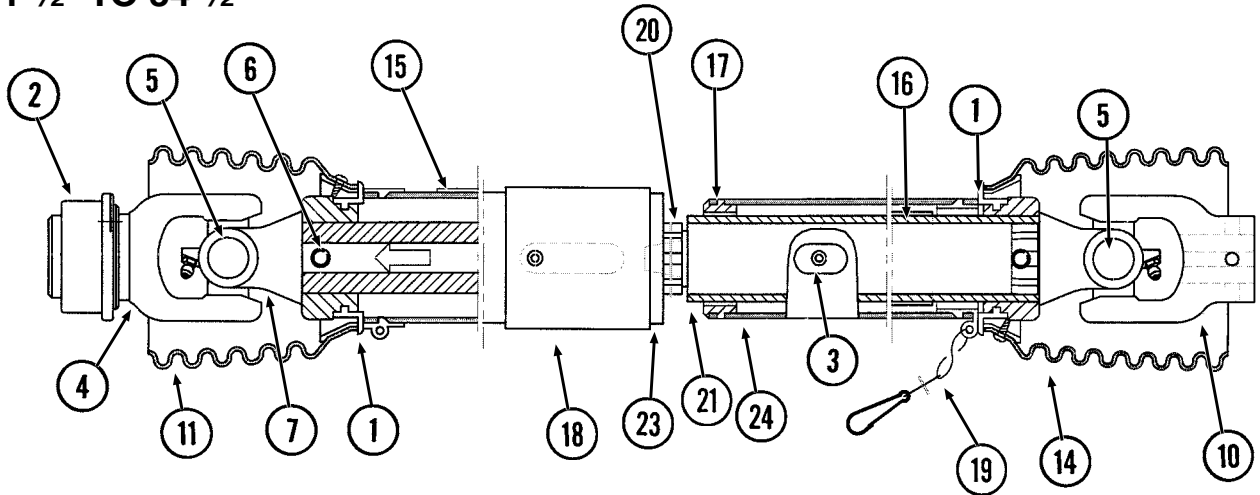

OVER 34 1/2"

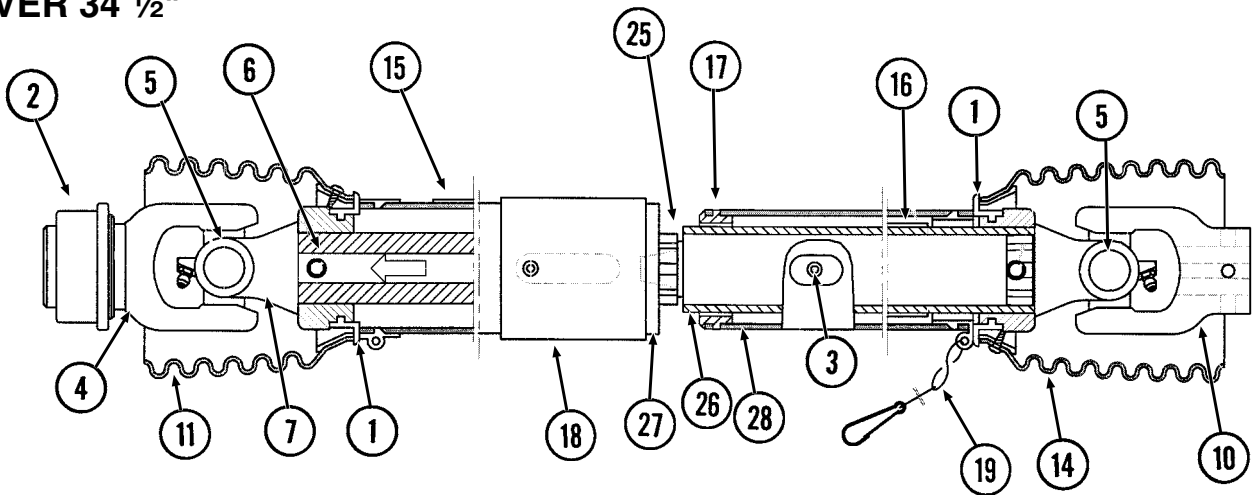




# PTO ASSEMBLY

---

| ITEM | PART NO.   | QTY. | DESCRIPTION                      |
|------|------------|------|----------------------------------|
| 1.   | GR1220     | 2    | Bearing Ring                     |
| 2.   | GR1246     | 1    | Quick Disconnect Kit             |
| 3.   | GR1430     | 1    | Grease Fitting, 3/16" Drive-In   |
| 4.   | GR1850     | 1    | Yoke, 1 3/4"-20 Spline           |
| 5.   | GR1851     | 2    | Cross & Bearing Kit              |
| 6.   | GR1852     | 1    | Spring Pin, 10mm x 80mm          |
| 7.   | GR1853     | 1    | Inboard Yoke                     |
| 8.   | GR1855     | 1    | Inner Profile                    |
| 9.   | GR1858     | 1    | Outer Profile                    |
| 10.  | GR1861     | 1    | Yoke, 1 3/8"                     |
| 11.  | GR1862     | 1    | Shield Cone                      |
| 12.  | GR1864     | 1    | Outer Shield Tube                |
| 13.  | GR1867     | 1    | Inner Shield Tube                |
| 14.  | GR1869     | 1    | Shield Cone                      |
| 15.  | GR1870     | 1    | Outer Decal                      |
| 16.  | GR1871     | 1    | Inner Decal                      |
| 17.  | GR1872     | 1    | Support Bearing                  |
| 18.  | GR1874     | 1    | Cover                            |
| 19.  | GR1875     | 1    | Safety Chain                     |
| 20.  | GR1856     | 1    | Inner Profile                    |
| 21.  | GR1859     | 1    | Outer Profile                    |
| 22.  | GR1960     | 1    | Inboard Yoke                     |
| 23.  | GR1865     | 1    | Outer Shield Tube                |
| 24.  | GR1868     | 1    | Inner Shield Tube                |
| 25.  | GR1854     | 1    | Inner Profile                    |
| 26.  | GR1857     | 1    | Outer Profile                    |
| 27.  | GR1863     | 1    | Outer Shield Tube                |
| 28.  | GR1866     | 1    | Inner Shield Tube                |
| 29.  | G10062     | 1    | Hex Head Cap Screw, 3/8"-16 x 3" |
|      | G10108     | 1    | Lock Nut, 3/8"-16                |
| 30.  | GD13226-02 | 1    | Key, 5/16" Square x 1 3/4"       |

# VACUUM FAN HYDRAULIC COMPONENTS

(A12484-2a)

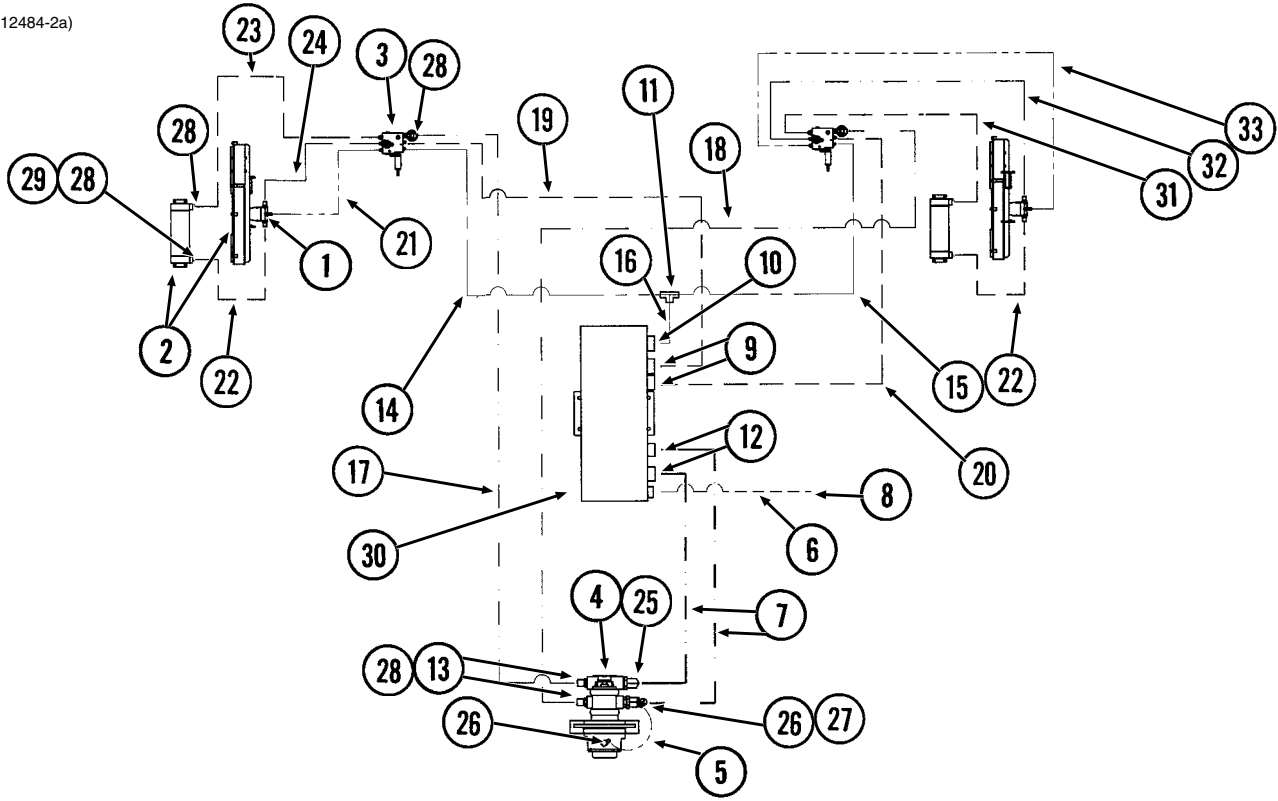

# VACUUM FAN HYDRAULIC COMPONENTS


---

| ITEM | PART NO.   | QTY. | DESCRIPTION   |
|------|------------|------|---|
| 1.   |            | -    | See "Vacuum Fan Hydraulic Motor Assembly", Page P56   |
| 2.   |            | -    | See "Vacuum Gauges, Control Console And Vacuum Fan Assembly With Oil Cooler", Pages P58 And P59 |
| 3.   |            | -    | See "Vacuum Fan Motor Valve Block Assembly (Located On Both Sides Of Planter)", Page P57        |
| 4.   |            |      | See PTO Pump Assembly, Page P54   |
| 5.   | *A3292     | 1    | Hose Assembly, 3/8" x 22"   |
| 6.   | *A12704    | 1    | Hose Assembly, 1/2" x 32"   |
| 7.   | *A11805    | 2    | Hose Assembly, 1 1/4" x 24"   |
| 8.   | G304-C-10  | 1    | Cap Nut, 7/8"-14  |
| 9.   | G6801-12   | 2    | Elbow W/O-Ring, 90°, 1 1/16"-12 Male JIC To O-Ring  |
|      | GR1467     | -    | O-Ring  |
| 10.  | G6801-10   | 1    | Elbow W/O-Ring, 90°, 7/8"-14 Male JIC To O-Ring   |
|      | GR1466     | -    | O-Ring  |
| 11.  | G2603-08   | 1    | Tee, 3/4"-16 Male JIC   |
| 12.  | G6400-20   | 2    | Adapter, 1 5/8"-12 JIC To O-Ring  |
|      | GR1787     | -    | O-Ring  |
| 13.  | G6701-L-12 | 2    | Tube L, 90°, 1 1/16"-12 JIC To Swivel   |
| 14.  | *A3201     | 1    | Hose Assembly, 3/8" x 176"  |
| 15.  | *A3283     | 1    | Hose Assembly, 3/8" x 108"  |
| 16.  | *A12048    | 1    | Hose Assembly, 3/8" x 76"   |
| 17.  | GA11427    | 1    | Hose Assembly, 5/8" x 218"  |
| 18.  | *A11426    | 1    | Hose Assembly, 5/8" x 224"  |
| 19.  | *A12903    | 1    | Hose Assembly, 3/4" x 246"  |
| 20.  | *A12902    | 1    | Hose Assembly, 3/4" x 262"  |
| 21.  | *A3290     | 1    | Hose Assembly, 3/8" x 98"   |
| 22.  | *A3381     | 2    | Hose Assembly, 3/4" x 26"   |
| 23.  | *A3384     | 1    | Hose Assembly, 3/4" x 122"  |
| 24.  | *A11410    | 1    | Hose Assembly, 5/8" x 98"   |
| 25.  | G6801-20   | 1    | Elbow W/O-Ring, 90°, 1 5/8"-12 Male JIC To O-Ring   |
|      | GR1787     | -    | O-Ring  |
| 26.  | G6801-06   | 2    | Elbow W/O-Ring, 90°, 9/16"-18 Male JIC To O-Ring  |
|      | GR1045     | -    | O-Ring  |
| 27.  | GD16994    | 1    | Special Elbow W/O-Ring, 90°, 1 5/8"-12 Male JIC To O-Ring                                       |
|      | GR1787     | -    | O-Ring  |
| 28.  | G6400-12   | 8    | Connector W/O-Ring, 1 1/16"-12 Male JIC To O-Ring   |
|      | GR1467     | -    | O-Ring  |
| 29.  | G6502-12   | 2    | Swivel Elbow, 45°, 1 1/16"-12 Male JIC To Female  |
| 30.  | GA12845    | 1    | Tank, 8 Gallon  |
| 31.  | *A3385     | 1    | Hose Assembly, 3/4" x 182"  |
| 32.  | *A11409    | 1    | Hose Assembly, 5/8" x 170"  |
| 33.  | *A3291     | 1    | Hose Assembly, 3/8" x 168"  |

\* Hydraulic hose is not stocked by KINZE® Repair Parts, but can be made available on a special order basis. Call for quote.

# PTO PUMP ASSEMBLY

(FWD123)

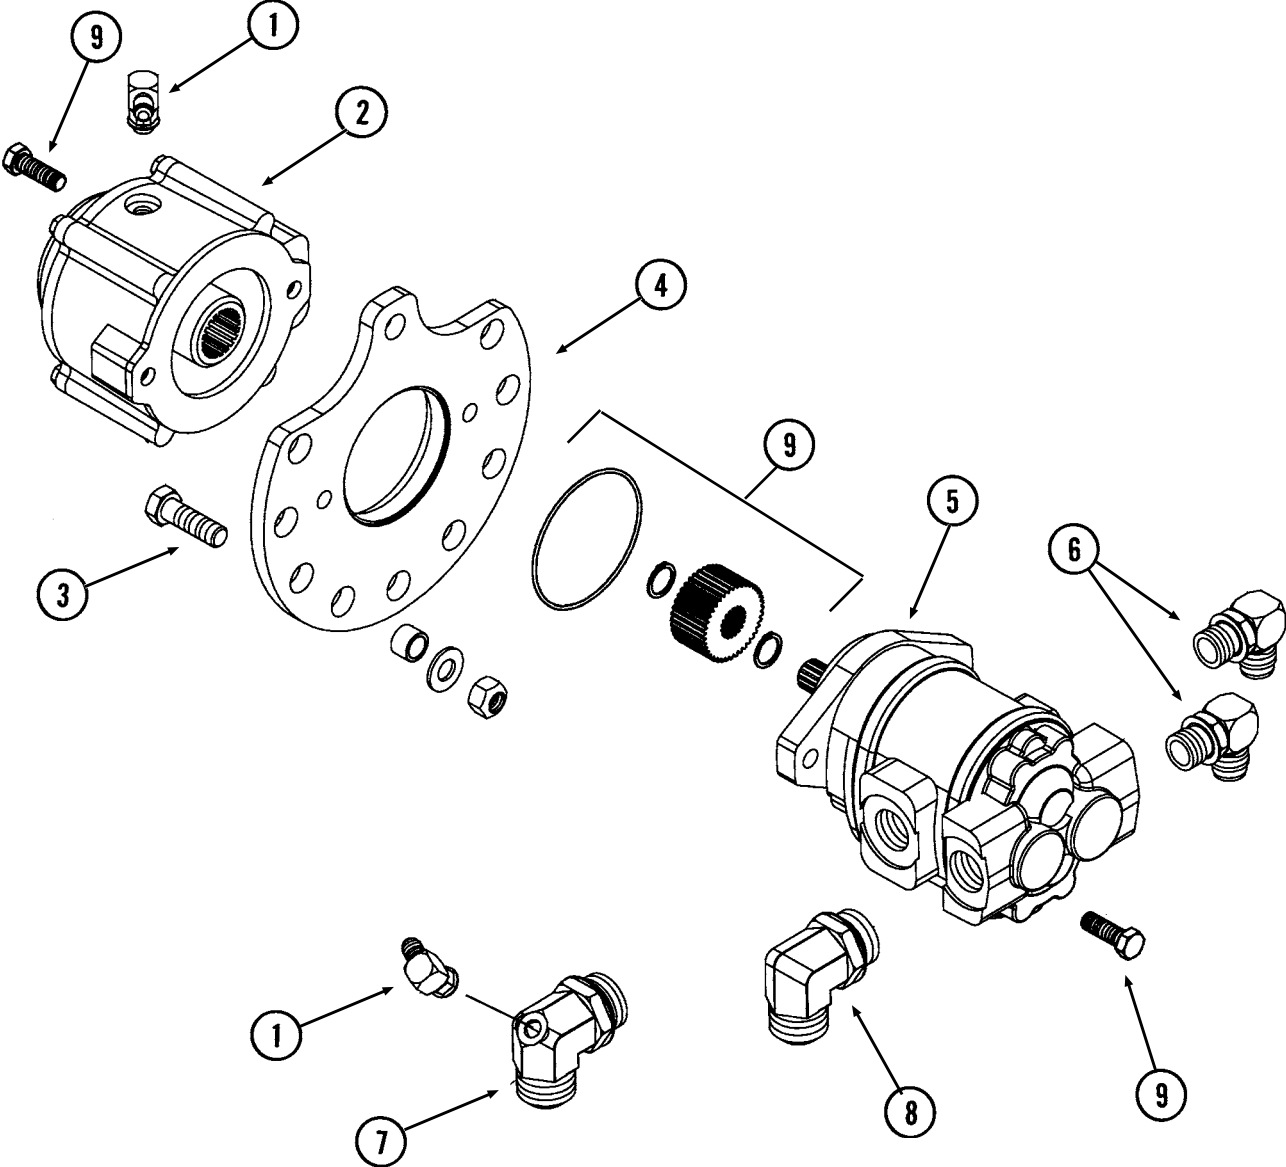


# PTO PUMP ASSEMBLY

---

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | G6801-06 | 2    | Elbow W/O-Ring, 90°, 9/16"-18 Male JIC To O-Ring                               |
|      | GR1045   | -    | O-Ring   |
| 2.   | GA11677  | 1    | Planetary Gearbox  |
| 3.   | G10008   | 5    | Hex Head Cap Screw, 5/8"-11 x 2"   |
|      | GB0218   | 5    | Bushing, 2 1/32" I.D. x 7/8" O.D. x 1 9/32" Long                               |
|      | GD7805   | 5    | Special Washer, 5/8", Hardened   |
|      | G10107   | 5    | Lock Nut, 5/8"-11  |
| 4.   | GD17215  | 1    | Plate  |
| 5.   | GA11676  | 1    | PTO Pump   |
| 6.   | G6801-12 | 2    | Elbow W/O-Ring, 90°, 1 1/16"-12 Male JIC To O-Ring                             |
|      | GR1467   | -    | O-Ring   |
| 7.   | GD16994  | 1    | Special Elbow W/O-Ring, 90°, 1 5/8"-12 Male JIC To O-Ring                      |
|      | GR1787   | -    | O-Ring   |
| 8.   | G6801-20 | 1    | Elbow W/O-Ring, 90°, 1 5/8"-12 Male JIC To O-Ring                              |
|      | GR1787   | -    | O-Ring   |
| 9.   | GA11678  | 1    | Gearbox Mounting Kit, Includes: (4) Bolts, (1) O-Ring, (2) Retainers, (1) Gear |

# VACUUM FAN HYDRAULIC MOTOR ASSEMBLY


(METR21b)

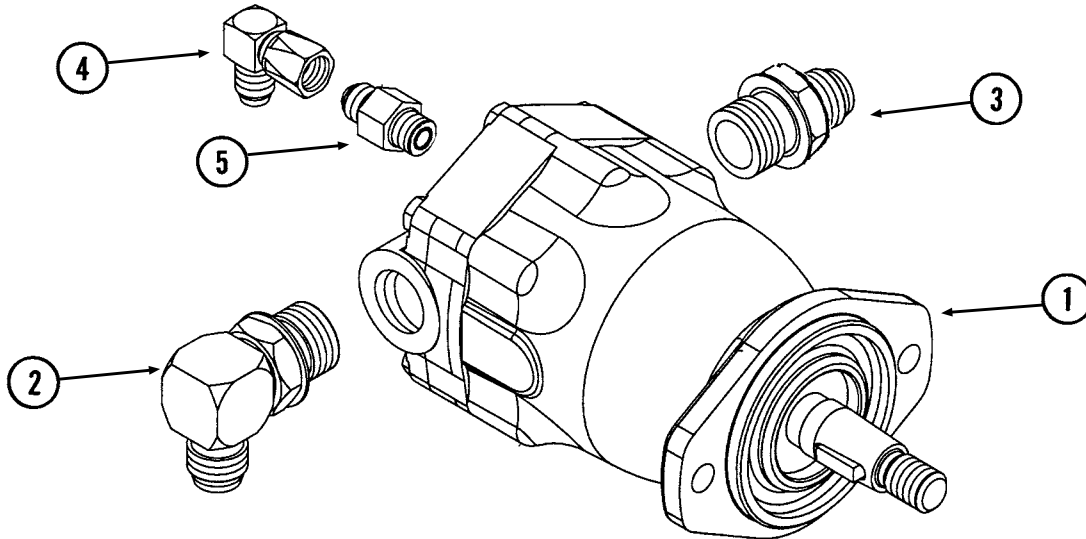

| ITEM | PART NO.              | QTY.   | DESCRIPTION  |
|------|-----------------------|--------|--|
| 1.   | GA10149<br>GR1734     | 1<br>- | Hydraulic Motor<br>Seal Kit  |
| 2.   | G6801-10-12<br>GR1467 | 1<br>- | Elbow W/O-Ring, 90°, 7/8"-14 Male JIC To 1 1/16"-12 O-Ring<br>O-Ring |
| 3.   | G6400-12<br>GR1467    | 2<br>- | Connector W/O-Ring, 1 1/16"-12 Male JIC To O-Ring<br>O-Ring          |
| 4.   | G6500-06              | 1      | Swivel Elbow, 90°, 9/16"-18 Male JIC To Female                       |
| 5.   | G6400-06<br>GR1045    | 1<br>- | Connector W/O-Ring, 9/16"-18 Male JIC To O-Ring<br>O-Ring            |

# VACUUM FAN MOTOR VALVE BLOCK ASSEMBLY (Located On Both Sides Of Planter)



(FWD126a)

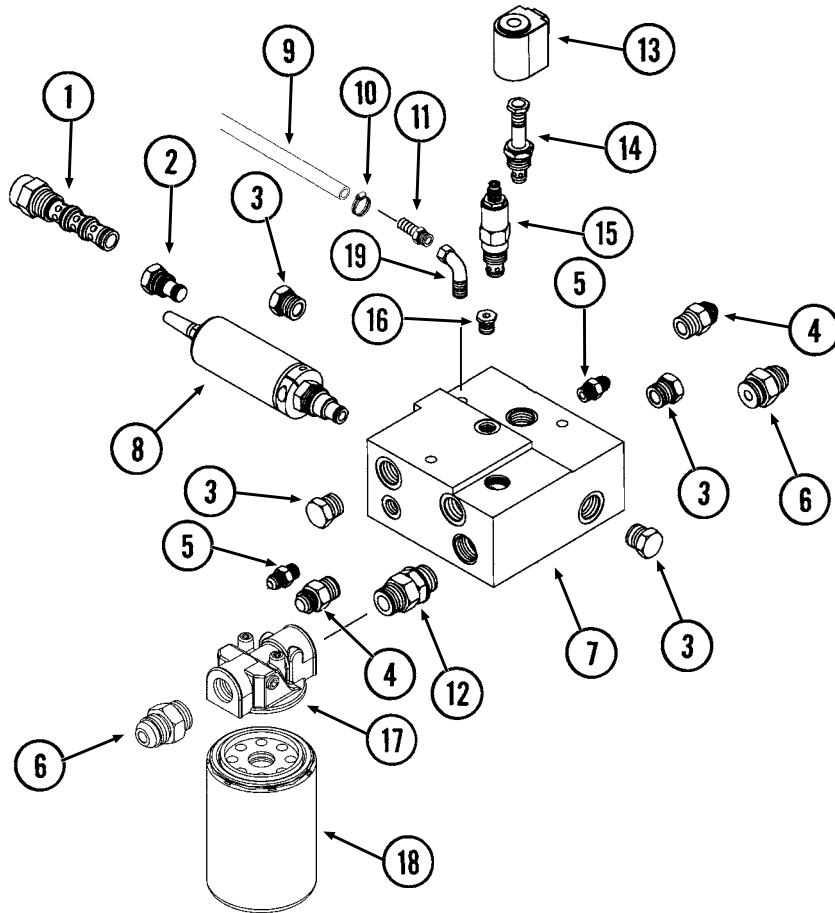

| ITEM | PART NO.     | QTY. | DESCRIPTION                                       |
|------|--------------|------|---|
| 1.   | GA11682      | 1    | Pressure Compensating Element                     |
| 2.   | GA11934      | 1    | Relief Valve Cartridge                            |
| 3.   | G6408-10     | 4    | Plug W/O-Ring, 7/8"-14 O-Ring                     |
|      | GR1466       | -    | O-Ring  |
| 4.   | G6400-10     | 2    | Connector W/O-Ring, 7/8"-14 Male JIC To O-Ring    |
|      | GR1466       | -    | O-Ring  |
| 5.   | G6400-06     | 2    | Connector W/O-Ring, 9/16"-18 Male JIC To O-Ring   |
|      | GR1045       | -    | O-Ring  |
| 6.   | G6400-12     | 2    | Connector W/O-Ring, 1 1/16"-12 Male JIC To O-Ring |
|      | GR1467       | -    | O-Ring  |
| 7.   | GD16873      | 1    | Valve Block                                       |
| 8.   | GA11799      | 1    | Flow Control Cartridge W/Terminals                |
| 9.   | GD6279-05    | 1    | Clear Plastic Tubing, 9/16" O.D. x 60"            |
| 10.  | G10681       | 1    | Hose Clamp, No. 6                                 |
| 11.  | GD11700      | 1    | Adapter, 1/4" NPT To 3/8" Barb                    |
| 12.  | G6403-NWO-12 | 1    | Adjustable Union, 1 1/16"-12 O-Ring               |
|      | GR1467       | -    | O-Ring  |
| 13.  | GA11900      | 1    | Coil W/Terminals                                  |
| 14.  | GA11680      | 1    | Cartridge   |
| 15.  | GA11679      | 1    | Relief Valve                                      |
| 16.  | G6408-H06-O  | 1    | Hex Socket Head Plug W/O-Ring, 9/16"-18 O-Ring    |
|      | GR1045       | -    | O-Ring  |
| 17.  | GD16038      | 1    | Filter Head                                       |
| 18.  | GD16037      | 1    | Oil Filter, 10 Micron                             |
| 19.  | G11260       | 1    | Elbow, 1/4" NPT Male To Female                    |

# VACUUM GAUGES, CONTROL CONSOLE AND VACUUM FAN ASSEMBLY WITH OIL COOLER

(A11692/A11156/GR1736/A10765/A11158/A11699/A7856/A11155/A8329/FWD127)

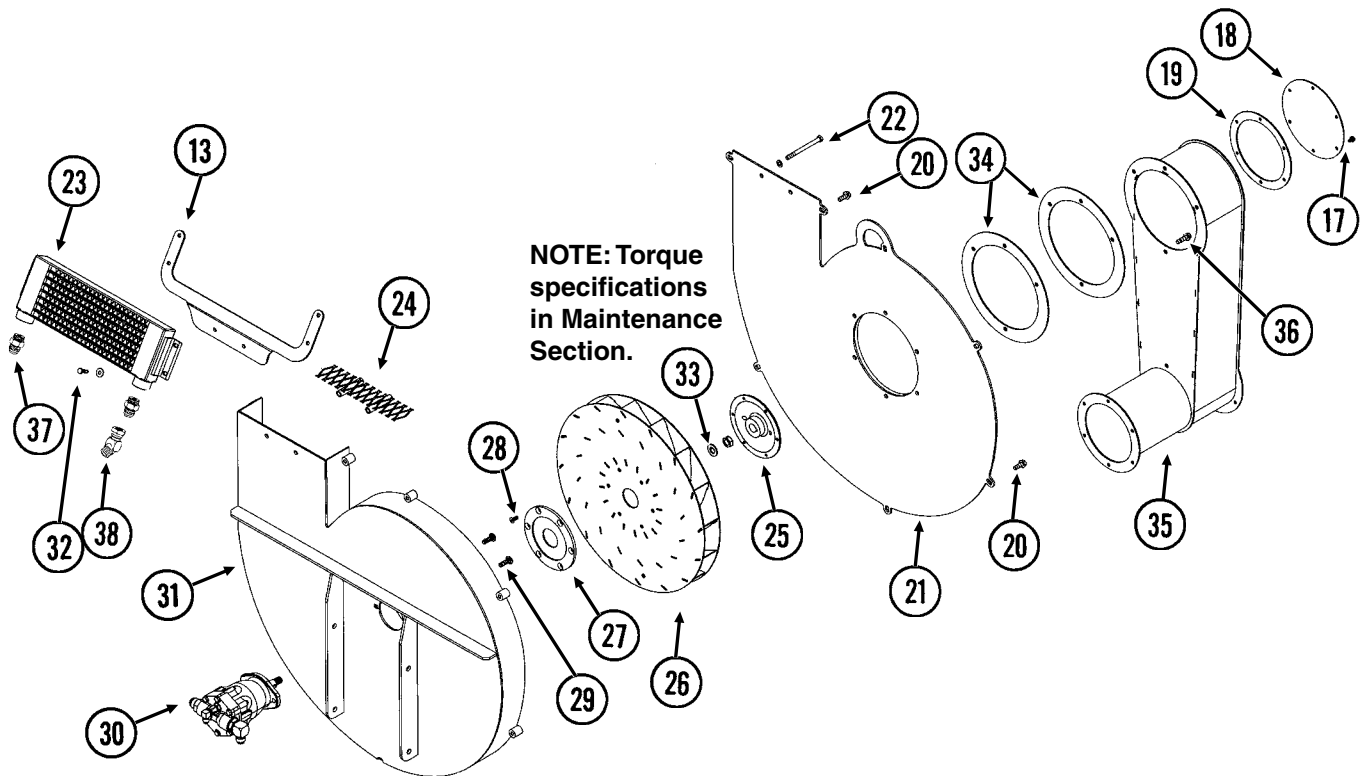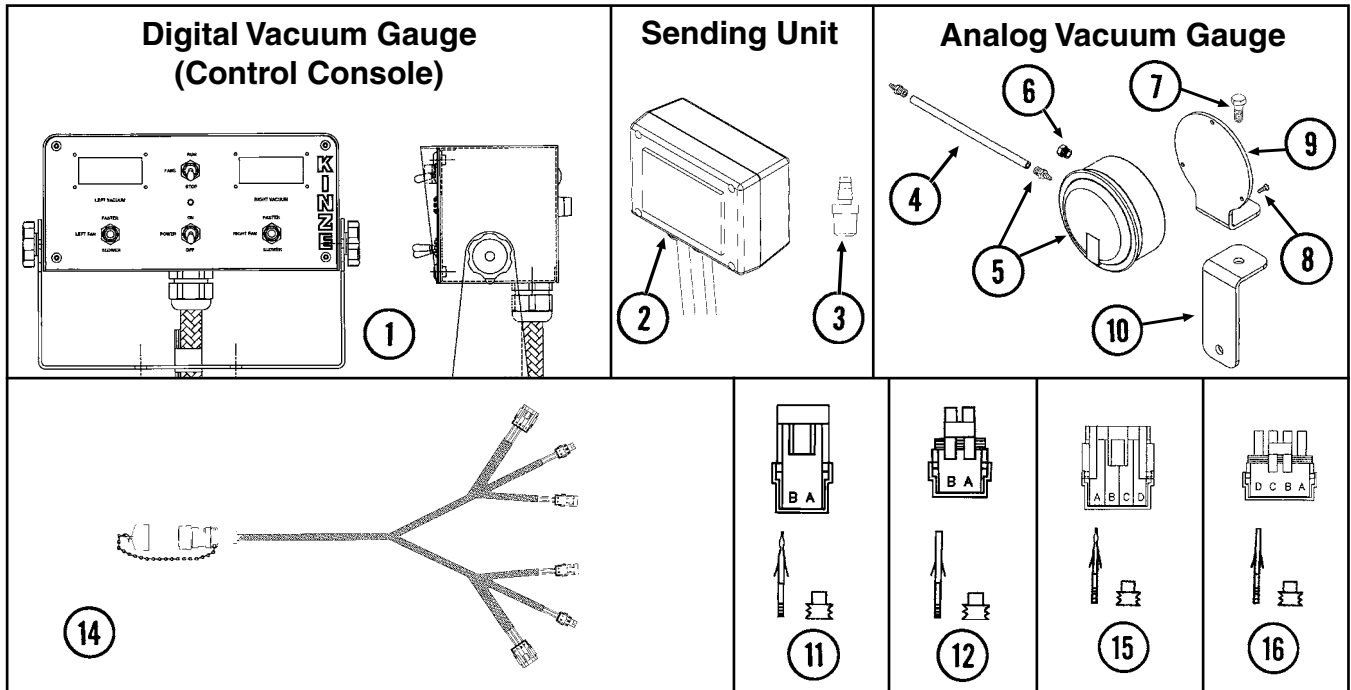




# VACUUM GAUGES, CONTROL CONSOLE AND VACUUM FAN ASSEMBLY WITH OIL COOLER

| ITEM | PART NO.   | QTY.<br>(Per Assy.) | DESCRIPTION   |
|------|------------|---------------------|---|
| 1.   | G8081X     | 1                   | Backlit Control Console Assembly W/Mounting Brackets, Harness<br>W/Dust Cap And Power Cable             |
|      | GD14640    | -                   | Mounting Bracket  |
|      | GA6975     | -                   | Knob  |
|      | GD2829     | -                   | Fuse, 15 Amp, Type AGC  |
| 2.   | GA11156    | 1                   | Sending Unit W/1/4" Tubing And Harness  |
|      | GD16324-01 | -                   | Clear Plastic Tubing, 1/4" x 45"  |
|      | GA9964     | -                   | Strain Relief   |
| 3.   | GR1736     | 1                   | Hose Barb, 1/8" Male NPT To Barb  |
| 4.   | GD15849-02 | 1                   | Clear Plastic Tubing, 5/16" O.D. x 120"   |
| 5.   | GA10765    | 1                   | Analog Vacuum Gauge W/Hose Barb   |
|      | GR1777     | -                   | Hose Barb, 1/8" Male NPT To 3/16" Barb  |
| 6.   | GA10799    | 1                   | Breather, 1/8" Male NPT   |
| 7.   | G10001     | 1                   | Hex Head Cap Screw, 3/8"-16 x 1"  |
|      | G10210     | 1                   | Washer, 3/8" USS  |
|      | G10108     | 1                   | Lock Nut, 3/8"-16   |
| 8.   | G11138     | 3                   | Hex Socket Head Cap Screw, No. 6-32 x 1/2", Grade 8   |
| 9.   | GD15804    | 1                   | Mount   |
| 10.  | GD15803    | 1                   | Support   |
| 11.  | G1K321     | -                   | 2-Pin Female Connector Kit (Black), Includes: (3) 2-Pin Female Housings,<br>(6) Pin Contacts, (6) Seals |
| 12.  | G1K320     | -                   | 2-Pin Male Connector Kit (Black), Includes: (3) 2-Pin Male Housings,<br>(6) Socket Contacts, (6) Seals  |
| 13.  | GD16608    | 1                   | Bracket   |
| 14.  | GA11689    | 1                   | Harness, 432"   |
| 15.  | GA8328     | -                   | 4-Pin Female Connector Kit, Includes: (1) 4-Pin Female Housing,<br>(4) Seals, (4) Pin Contacts          |
| 16.  | GA8329     | -                   | 4-Pin Male Connector Kit, Includes: (1) 4-Pin Male Housing,<br>(4) Seals, (4) Sockets                   |
| 17.  | G11166     | 6                   | Whiz Lock Bolt, 1/4"-20 x 3/4"  |
| 18.  | GD16840    | 1                   | Cover   |
| 19.  | GD16991    | 1                   | Cover Gasket, 1/8" x 8 3/8" (6 1/2" I.D.)   |
| 20.  | G11124     | 7                   | Whiz Lock Bolt, 3/8"-18 x 1"  |
| 21.  | GA10752    | 1                   | Cover   |
| 22.  | G10063     | 2                   | Hex Head Cap Screw, 3/8"-16 x 4"  |
|      | G10203     | 2                   | Washer, 3/8" SAE  |
|      | G10108     | 2                   | Lock Nut, 3/8"-16   |
| 23.  | GA10917    | 1                   | Oil Cooler  |
| 24.  | GA11987    | 2                   | Screen  |
| 25.  | GD15790    | 1                   | Hub   |
| 26.  | GA10635    | 1                   | Impeller  |
| 27.  | GD15789    | 1                   | Backing Plate   |
| 28.  | G11133     | 6                   | Hex Socket Head Cap Screw, 5/16"-18 x 3/4", Grade 8   |
| 29.  | G10599     | 2                   | Carriage Bolt, 3/8"-16 x 1 1/4"   |
|      | G10229     | 2                   | Lock Washer, 3/8"   |
|      | G10101     | 2                   | Hex Nut, 3/8"-16  |
| 30.  |            | -                   | See "Vacuum Fan Hydraulic Motor Assembly", Page P56   |
| 31.  | GA10148    | 1                   | Shroud  |
| 32.  | G10019     | 4                   | Hex Head Cap Screw, 5/16"-18 x 1"   |
|      | G10219     | 4                   | Washer, 5/16" USS   |
|      | G10109     | 4                   | Lock Nut, 5/16"-18, Grade B   |
| 33.  | G10205     | 1                   | Washer, 5/8" SAE  |
|      | G10499     | 1                   | Hex Jam Nut, 5/8"-18, Grade 2   |
| 34.  | GD16992    | 2                   | Gasket, 1/8" x 11 7/8"  |
| 35.  | GA11651    | 1                   | Outlet  |
| 36.  | G11204     | 4                   | Hex Head Cap Screw, 3/8"-16 x 1 1/4"  |
| 37.  | G6400-12   | 2                   | Connector W/O-Ring, 1 1/16"-12 Male JIC To O-Ring   |
|      | GR1467     | -                   | O-Ring  |
| 38.  | G6502-12   | 1                   | Swivel Elbow, 45°, 1 1/16"-12 Male JIC To Female  |
| A.   | GA11757    | -                   | Vacuum Fan Assembly (Items 13, 20-31 And 33)  |

# MANIFOLDS AND DISTRIBUTION HOSES

(FWD134)

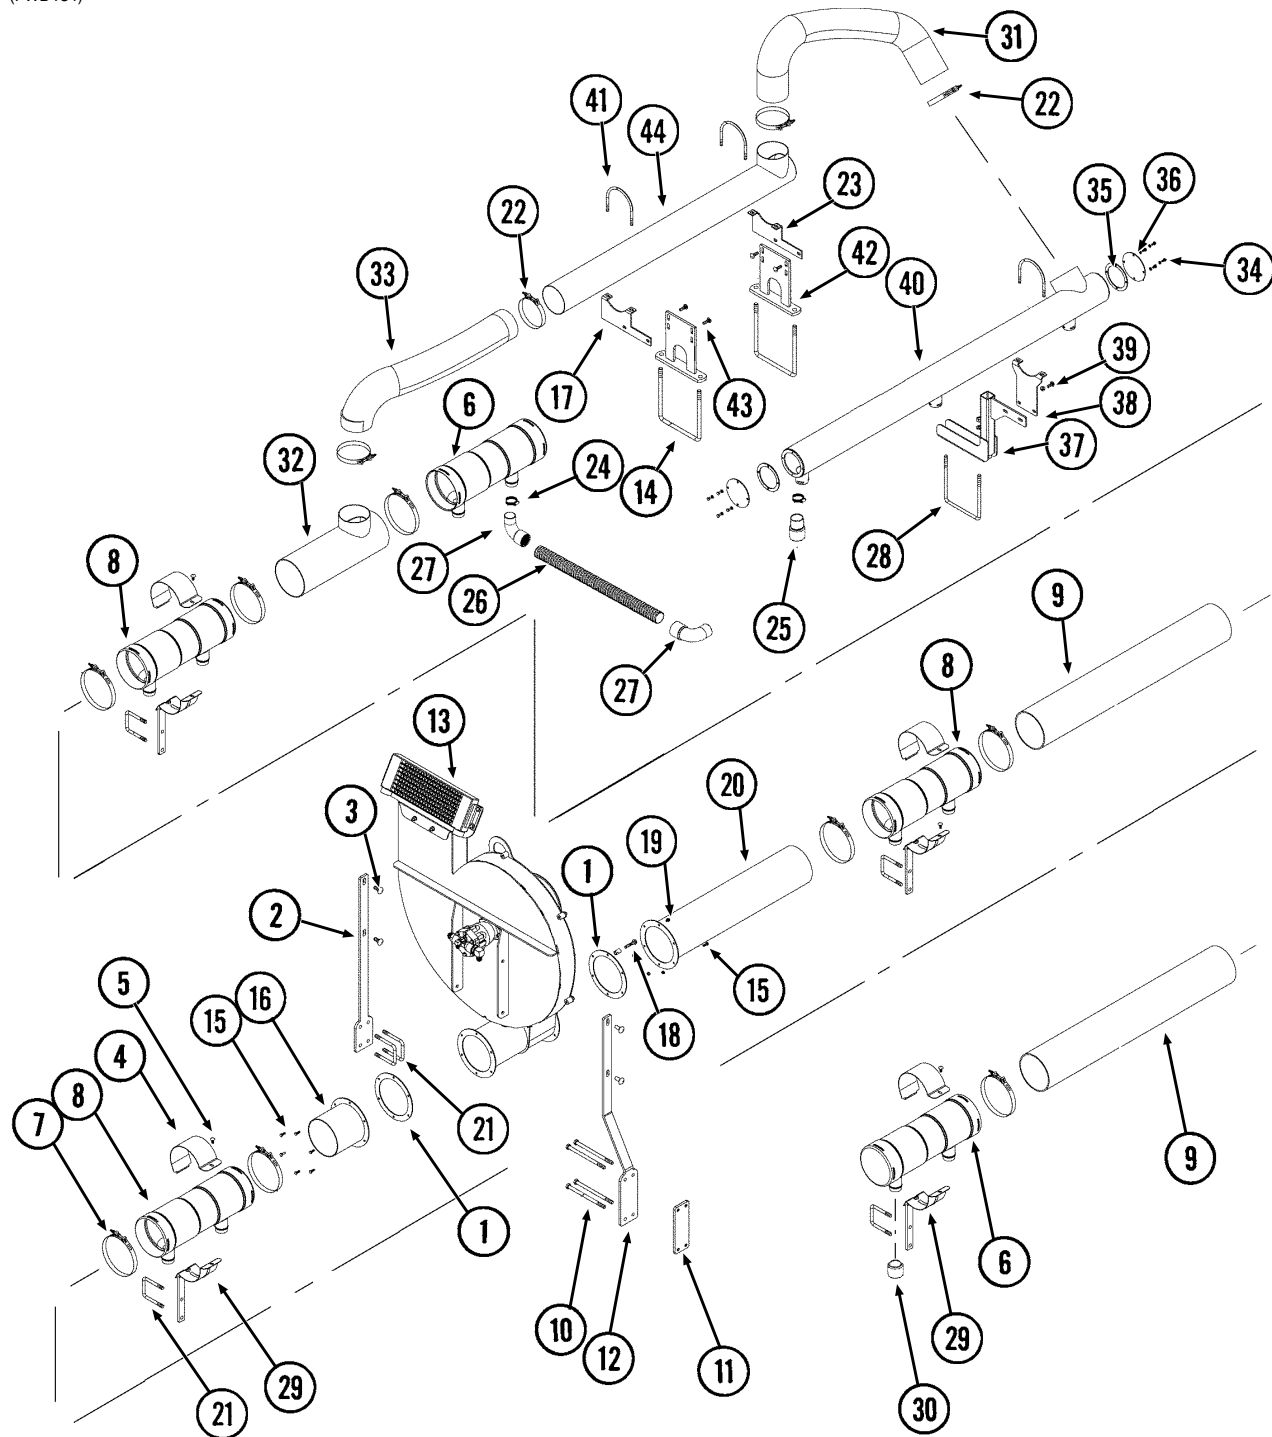



| ITEM | PART NO. | QTY. | DESCRIPTION                                  |
|------|----------|------|--|
| 1.   | GD16842  | 4    | Manifold Gasket, 1/8" x 8 3/8" (6 5/8" I.D.) |
| 2.   | GD16844  | -    | Support                                      |
| 3.   | G10574   | -    | Carriage Bolt, 1/2"-13 x 1 1/4"              |
|      | G10071   | -    | Serrated Flange Nut, 1/2"-13                 |
| 4.   | GD15854  | 10   | Clamp  |
| 5.   | G10312   | -    | Carriage Bolt, 5/16"-18 x 3/4"               |
|      | G10620   | -    | Serrated Flange Nut, 5/16"-18                |
| 6.   | GD15850  | 4    | Manifold, 21" (Open One End)                 |
| 7.   | G11145   | -    | T-Bolt Clamp, 7"                             |

# MANIFOLDS AND DISTRIBUTION HOSES

| ITEM | PART NO.   | QTY. | DESCRIPTION   |
|------|------------|------|---|
| 8.   | GD15799    | 6    | Manifold, 21" (Open Both Ends)  |
| 9.   | GD15856-07 | 2    | Pipe, 6" x 42"  |
| 10.  | G11200     | 8    | Hex Head Cap Screw, 1/2"-13 x 8"  |
| 11.  | GD16843    | 2    | Tap Block   |
| 12.  | GD16845    | 2    | Support   |
| 13.  |            | -    | See "Vacuum Gauges, Control Console And Vacuum Fan Assembly With Oil Cooler", Pages P58 And P59 |
| 14.  | GD16320    | -    | U-Bolt, 8" x 8" x 5/8"-11   |
|      | G10230     | -    | Lock Washer, 5/8"   |
|      | G10104     | -    | Hex Nut, 5/8"-11  |
| 15.  | G10023     | -    | Hex Head Cap Screw, 1/4"-20 x 3/4"  |
|      | G10110     | -    | Lock Nut, 1/4"-20, Grade B  |
| 16.  | GA11653    | 2    | Manifold Flange, 6"   |
| 17.  | GD16862    | 2    | Support, R.H.   |
| 18.  | G11199     | 2    | Whiz Lock Bolt, 3/8"-16 x 2"  |
|      | GD8893-07  | 2    | Sleeve, 1" Long   |
| 19.  | G11166     | -    | Whiz Lock Bolt, 1/4"-20 x 3/4"  |
| 20.  | GA11655    | 1    | Manifold Flange, 31"  |
|      | GA11654    | -    | Manifold Flange, 26"  |
| 21.  | GD4743     | -    | U-Bolt, 3" x 3" x 1/2"-13   |
|      | G10228     | -    | Lock Washer, 1/2"   |
|      | G10102     | -    | Hex Nut, 1/2"-13  |
| 22.  | G11188     | 4    | T-Bolt Clamp, 5 1/4"  |
| 23.  | GD16863    | 2    | Support, L.H.   |
|      | GD16862    | -    | Support, R.H.   |
| 24.  | G10676     | 24   | Hose Clamp, No. 36, Stainless Steel   |
| 25.  | GD14627    | 6    | Coupler   |
| 26.  | GD15792-03 | 1    | Hose, 2" x 28"  |
|      | GD15792-05 | 1    | Hose, 2" x 38"  |
|      | GD15792-06 | 7    | Hose, 2" x 42"  |
|      | GD15792-12 | 11   | Hose, 2" x 44"  |
|      | GD15792-19 | 4    | Hose, 2" x 26"  |
| 27.  | GD14626    | 42   | Elbow, 90°, 2"  |
| 28.  | GD7145     | -    | U-Bolt, 7" x 7" x 1/2"-13   |
|      | G10228     | -    | Lock Washer, 1/2"   |
|      | G10102     | -    | Hex Nut, 1/2"-13  |
| 29.  | GA11656    | 10   | Support   |
| 30.  | G11147     | -    | Cap, 2"   |
| 31.  | GD15867-05 | 2    | Hose, 5" x 55"  |
| 32.  | GA11204    | 2    | Manifold, 19"   |
| 33.  | GD15867-02 | 2    | Hose, 5" x 50"  |
| 34.  | G10022     | -    | Hex Head Cap Screw, 1/4"-20 x 1/2"  |
|      | G10227     | -    | Lock Washer, 1/4"   |
| 35.  | GD16864    | 4    | Gasket, 1/8"  |
| 36.  | GD16854    | 4    | Cover   |
| 37.  | GA11660    | 4    | Support   |
| 38.  | GD16855    | 4    | Support   |
| 39.  | G10305     | -    | Carriage Bolt, 3/8"-16 x 1"   |
|      | G10622     | -    | Serrated Flange Nut, 3/8"-16  |
| 40.  | GA11659    | 1    | Manifold, 68 55/64", L.H.   |
|      | GA11658    | 1    | Manifold, 53 23/64", R.H.   |
| 41.  | GD15833    | -    | U-Bolt, 5" Diameter x 3/8"-16   |
|      | G10622     | -    | Serrated Flange Nut, 3/8"-16  |
| 42.  | GA11531    | 4    | Mount   |
| 43.  | G10599     | -    | Carriage Bolt, 3/8"-16 x 1 1/4"   |
|      | G10622     | -    | Serrated Flange Nut, 3/8"-16  |
| 44.  | GA11657    | 2    | Manifold, 52 7/64"  |

# PTO ASSEMBLY ON HITCH

(FWD166/FWD170a)

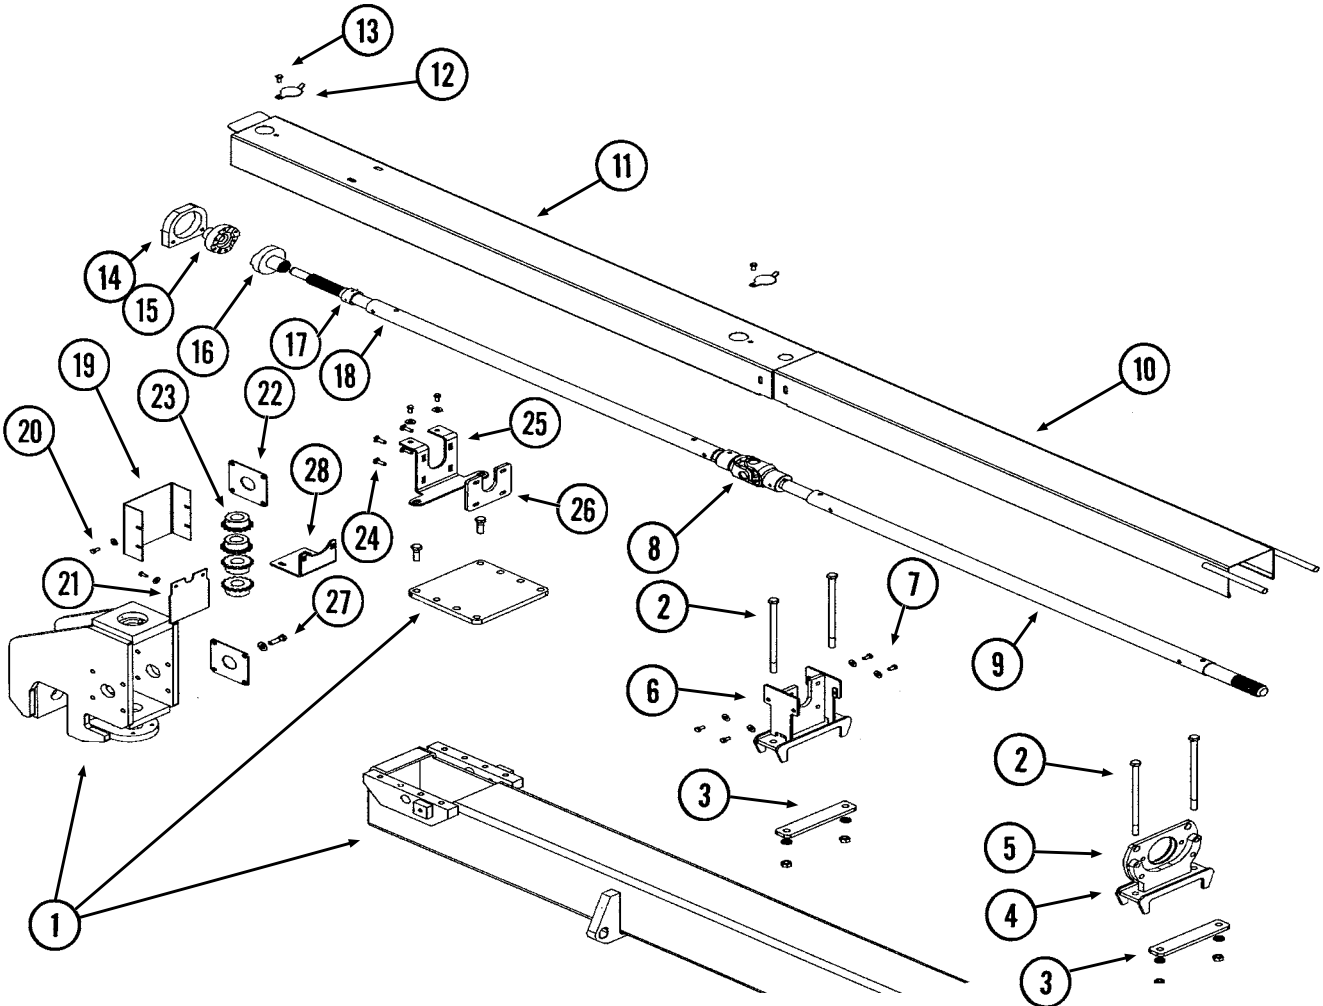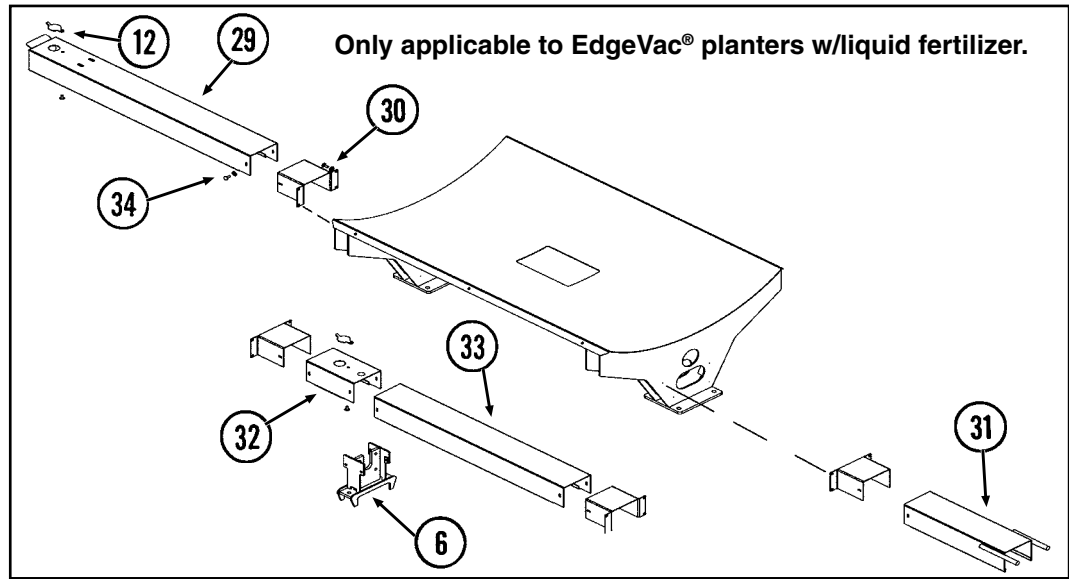


**NOTE:** See "Vacuum Fan Hydraulic Components, pages P52 and P53 for PTO pump and planetary gearbox.

# PTO ASSEMBLY ON HITCH

| ITEM | PART NO. | QTY. | DESCRIPTION                                     |
|------|----------|------|---|
| 1.   |          | -    | See "Inner/Outer Fixed Hitch, Pages P64 And P65 |
| 2.   | G11122   | 2    | Hex Head Cap Screw, 5/8"-11 x 12"               |
|      | GD7805   | 2    | Special Washer, 5/8", Hardened                  |
|      | G10107   | 2    | Lock Nut, 5/8"-11                               |
| 3.   | GD18279  | -    | Plate   |
| 4.   | GA12843  | -    | Pump Mount                                      |
| 5.   | GD18282  | -    | Plate   |
| 6.   | GA12844  | 1    | Bearing Mount                                   |
| 7.   | G10002   | 8    | Hex Head Cap Screw, 3/8"-16 x 3/4"              |
|      | G10210   | 8    | Washer, 3/8" USS                                |
| 8.   | GA12863  | 1    | PTO Knuckle Assembly                            |
| 9.   | GA12850  | 1    | Rear PTO Shaft                                  |
| 10.  | GA12819  | 1    | Rear Shaft Cover                                |
| 11.  | GD18193  | 1    | Front PTO Shaft                                 |
| 12.  | GD18194  | 2    | Door  |
| 13.  | G10002   | 8    | Hex Head Cap Screw, 3/8"-16 x 3/4"              |
|      | G10108   | 5    | Lock Nut, 3/8"-16                               |
| 14.  | GD18319  | 1    | Guide Pad                                       |
| 15.  | GD18190  | 1    | Coupler   |
| 16.  | GD18191  | 1    | Coupler   |
| 17.  | GD18324  | 1    | Lock Sleeve                                     |
| 18.  | GA12849  | 1    | Front PTO Shaft                                 |
| 19.  | GD18309  | 1    | Upper Front PTO Cover                           |
| 20.  | G10043   | 4    | Hex Head Cap Screw, 5/16"-18 x 3/4"             |
|      | G10219   | 4    | Washer, 5/16" USS                               |
| 21.  | GD18308  | 1    | Lower Front PTO Cover                           |
| 22.  | GD18307  | 2    | Shim  |
| 23.  | GD18318  | 4    | Coupling  |
| 24.  | G10599   | 4    | Carriage Bolt, 3/8"-16 x 1 1/4"                 |
|      | G10622   | 6    | Serrated Flange Nut, 3/8"-16                    |
| 25.  | GA12851  | 1    | Shaft Guide Mount                               |
| 26.  | GD18321  | 1    | Pad   |
| 27.  | G10039   | 12   | Hex Head Cap Screw, 1/2"-13 x 1 3/4"            |
|      | G10216   | 8    | Washer, 1/2" USS                                |
| 28.  | GD18320  | 1    | Mount   |
| 29.  | GD19180  | 1    | PTO Shield, 54 1/2"                             |
| 30.  | GD19187  | 4    | PTO Flange Shield, 16"                          |
| 31.  | GD19183  | 1    | PTO Shield, 20 1/4"                             |
| 32.  | GD19181  | 1    | PTO Shield, 14 3/8"                             |
| 33.  | GD19182  | 1    | PTO Shield, 35 7/8"                             |
| 34.  | G10305   | 24   | Carriage Bolt, 3/8"-16 x 1"                     |
|      | G10622   | 24   | Serrated Flange Nut, 3/8"-16                    |

# INNER/OUTER FIXED HITCH

(FWD9b/D14812/FWD153/FWD164/FWD112)

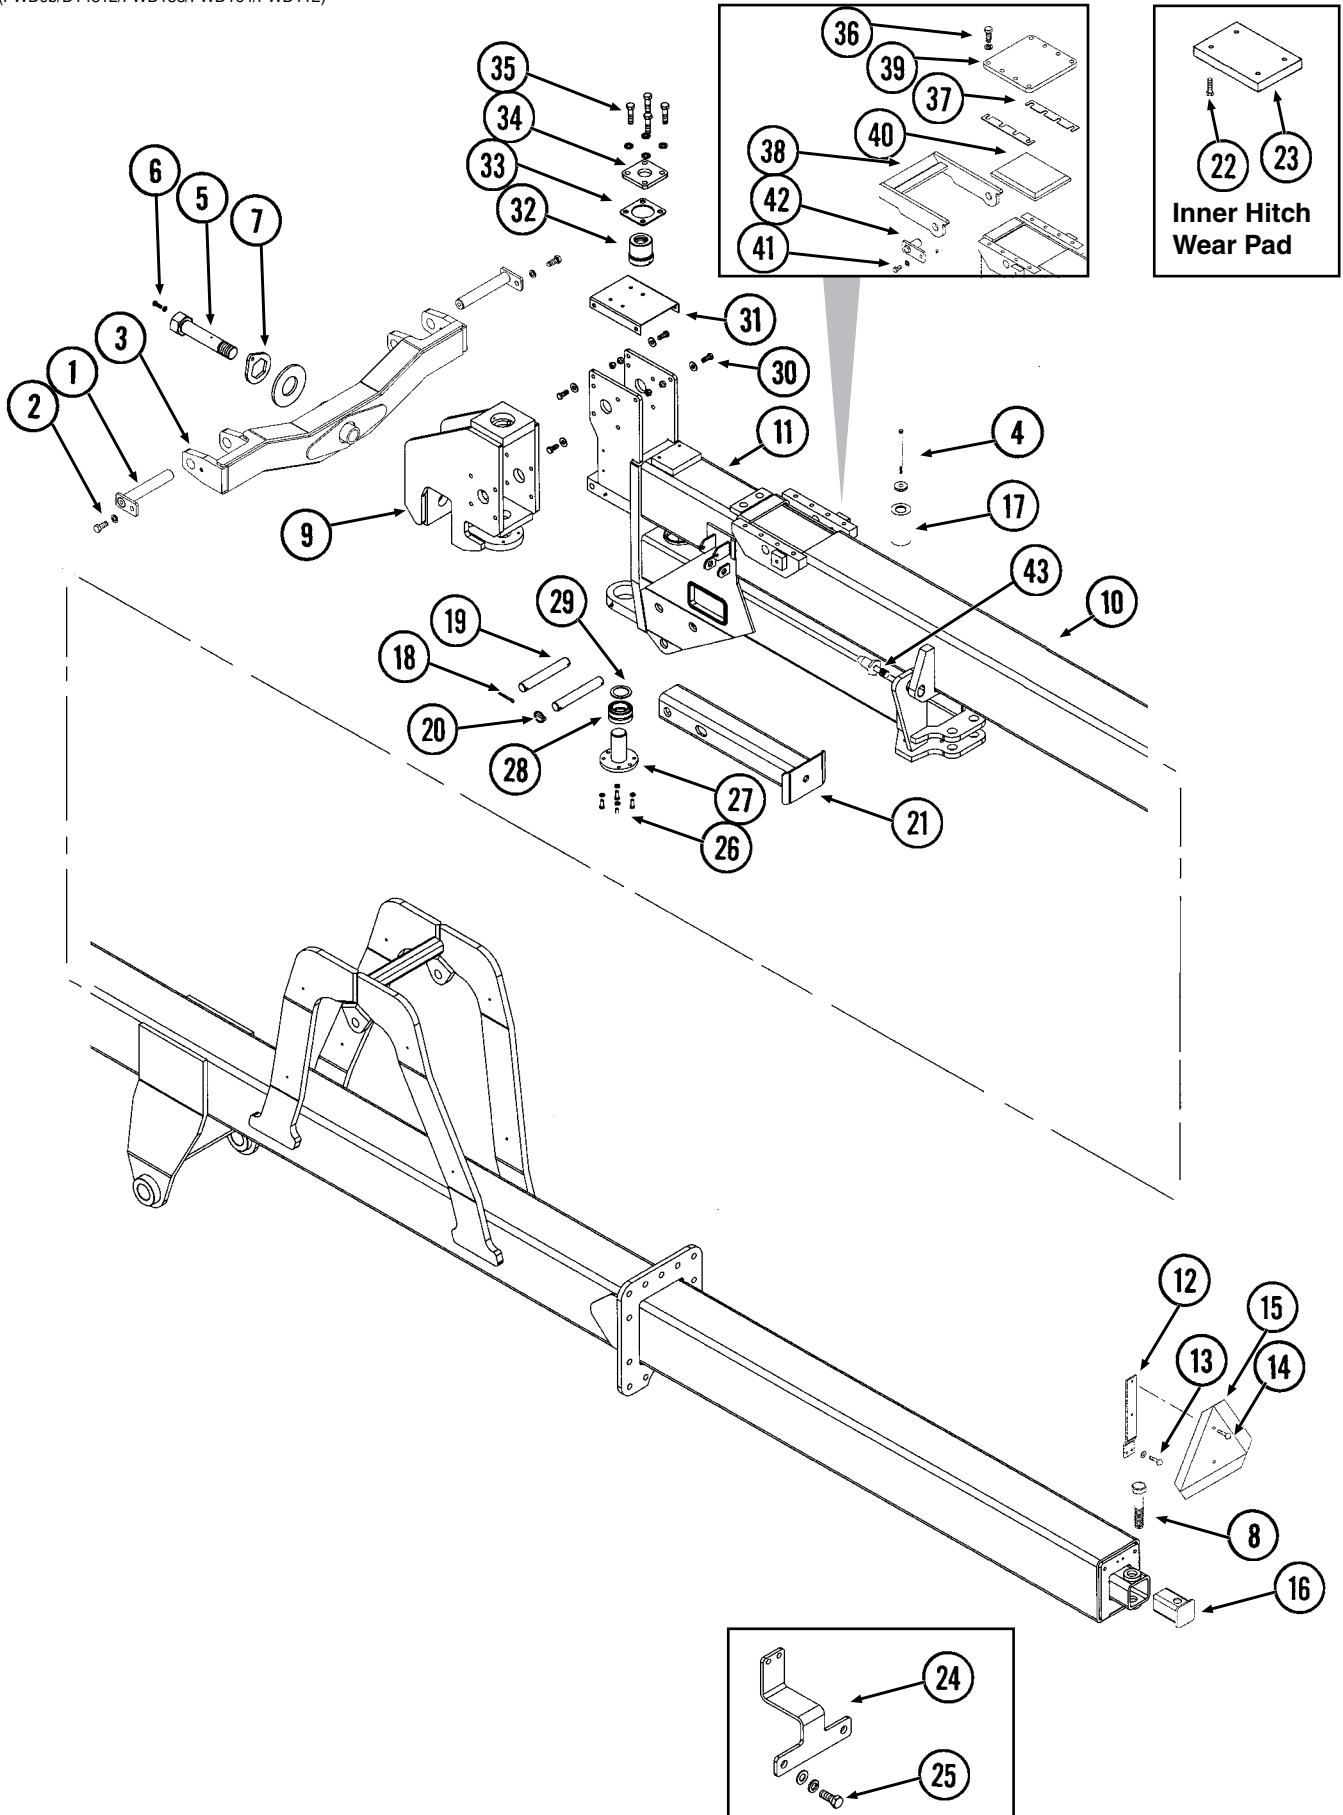


# INNER/OUTER FIXED HITCH

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA11079  | 2    | Hammer Strap, Category 3N And 3                              |
| 2.   | G10007   | 2    | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                         |
|      | G10230   | 2    | Lock Washer, 5/8"  |
| 3.   | GA12657  | 1    | Hitch Bar  |
| 4.   | G11048   | 2    | Hex Head Cap Screw, 3/8"-16 x 7 1/2"                         |
|      | GB0212   | 2    | Spring Washer  |
|      | G10210   | 2    | Washer, 3/8" USS   |
|      | G10108   | 2    | Lock Nut, 3/8"-16  |
| 5.   | GA11082  | 1    | Pivot Bolt W/Grease Fitting, 1 3/4" x 10 3/8" (Total Length) |
|      | G10640   | -    | Grease Fitting, 1/4"-28                                      |
|      | GD18170  | 1    | Spacer   |
| 6.   | G10001   | 1    | Hex Head Cap Screw, 3/8"-16 x 1"                             |
|      | G10229   | 1    | Lock Washer, 3/8"  |
| 7.   | GD18143  | 1    | Pivot Lock Nut   |
| 8.   | G10042   | 1    | Hex Head Cap Screw, 1 1/4"-7 x 6 1/2"                        |
|      | G10157   | 1    | Lock Nut, 1 1/4"-7   |
| 9.   | GA12679  | 1    | Hitch Pivot  |
| 10.  | GA12455  | 1    | Outer Hitch  |
| 11.  | GA12687  | 1    | Inner Hitch  |
| 12.  | GD15624  | 1    | SMV Bracket, Conventional                                    |
| 13.  | G10043   | 2    | Hex Head Cap Screw, 5/16"-18 x 3/4"                          |
|      | G10232   | 2    | Lock Washer, 5/16"   |
| 14.  | G10020   | 2    | Hex Head Cap Screw, 1/4"-20 x 5/8"                           |
|      | G10227   | 2    | Lock Washer, 1/4"  |
|      | G10103   | 2    | Hex Nut, 1/4"-20   |
| 15.  | GD2199   | 1    | SMV Sign   |
| 16.  | GA10483  | 1    | Hitch Endcap   |
| 17.  | GD16227  | 2    | Bushing, 2" O.D. x 1 29/64" I.D. x 5 5/8", Category 4        |
| 18.  | G10460   | 3    | Cotter Pin, 1/4" x 2"  |
| 19.  | GD3737   | 2    | Pin, 1 1/4" x 8 1/2"   |
| 20.  | GD2558   | 1    | Lynch Pin, 1/4"  |
| 21.  | GA10280  | 1    | Hitch Stand  |
| 22.  | G11099   | 4    | Hex Socket Head Cap Screw, 3/8"-16 x 1 1/2", Grade 8         |
| 23.  | GD14812  | 1    | Wear Pad, 5 7/8" x 6 1/2" x 1"                               |
| 24.  | GD16786  | 1    | SMV Extension Bracket, 9 3/4", SDS                           |
| 25.  | G10037   | 2    | Hex Head Cap Screw, 1/2"-13 x 1 1/4"                         |
|      | G10228   | 2    | Lock Washer, 1/2"  |
|      | G10206   | 2    | Washer, 1/2" SAE   |
| 26.  | G10001   | 4    | Hex Head Cap Screw, 3/8"-16 x 1"                             |
|      | G10229   | 4    | Lock Washer, 3/8"  |
| 27.  | GA12681  | 1    | Pivot Pin  |
| 28.  | GA12689  | 1    | Spherical Bearing  |
| 29.  | GD18175  | 1    | Shim   |
| 30.  | G10037   | 4    | Hex Head Cap Screw, 1/2"-13 x 1 1/4"                         |
|      | G10216   | 4    | Washer, 1/2" USS   |
|      | G10111   | 4    | Lock Nut, 1/2"-13  |
| 31.  | GD18171  | 1    | Cover  |
| 32.  | GA12688  | 1    | Special Spherical Bearing                                    |
| 33.  | GD18151  | 1    | Spacer   |
| 34.  | GD18152  | 1    | Cap  |
| 35.  | G10009   | 4    | Hex Head Cap Screw, 5/8"-11 x 2 1/2"                         |
|      | G10239   | 4    | Hex Nut, 1 1/4"-7  |
| 36.  | G10008   | 8    | Hex Head Cap Screw, 5/8"-11 x 2"                             |
|      | G10230   | 12   | Lock Washer, 5/8"  |
| 37.  | GD14842  | 4    | Shim, 1 1/2" x 10 1/2", 10 Gauge                             |
| 38.  | GA10281  | 1    | Catch W/Grease Fittings                                      |
|      | G10640   | -    | Grease Fitting, 1/4"-28                                      |
| 39.  | GD14841  | 1    | Cover, 10 1/2" x 11" x 3/4"                                  |
| 40.  | GD14843  | 1    | Wear Pad   |
| 41.  | G10014   | 2    | Hex Head Cap Screw, 1/2"-13 x 1"                             |
|      | G10228   | 2    | Lock Washer, 1/2"  |
| 42.  | GA10282  | 2    | Pin, 2 1/4"  |
| 43.  | GD18004  | 2    | Hitch Lock Pin   |
|      | G11132   | 2    | Washer, 1 1/8" SAE   |
|      | G11097   | 2    | Hex Nut, 1 1/8"-12   |

# CENTER TOOLBAR/REAR H-FRAME ASSEMBLY

(FWD10b/FWD115)

24 Row 30" SDS Only

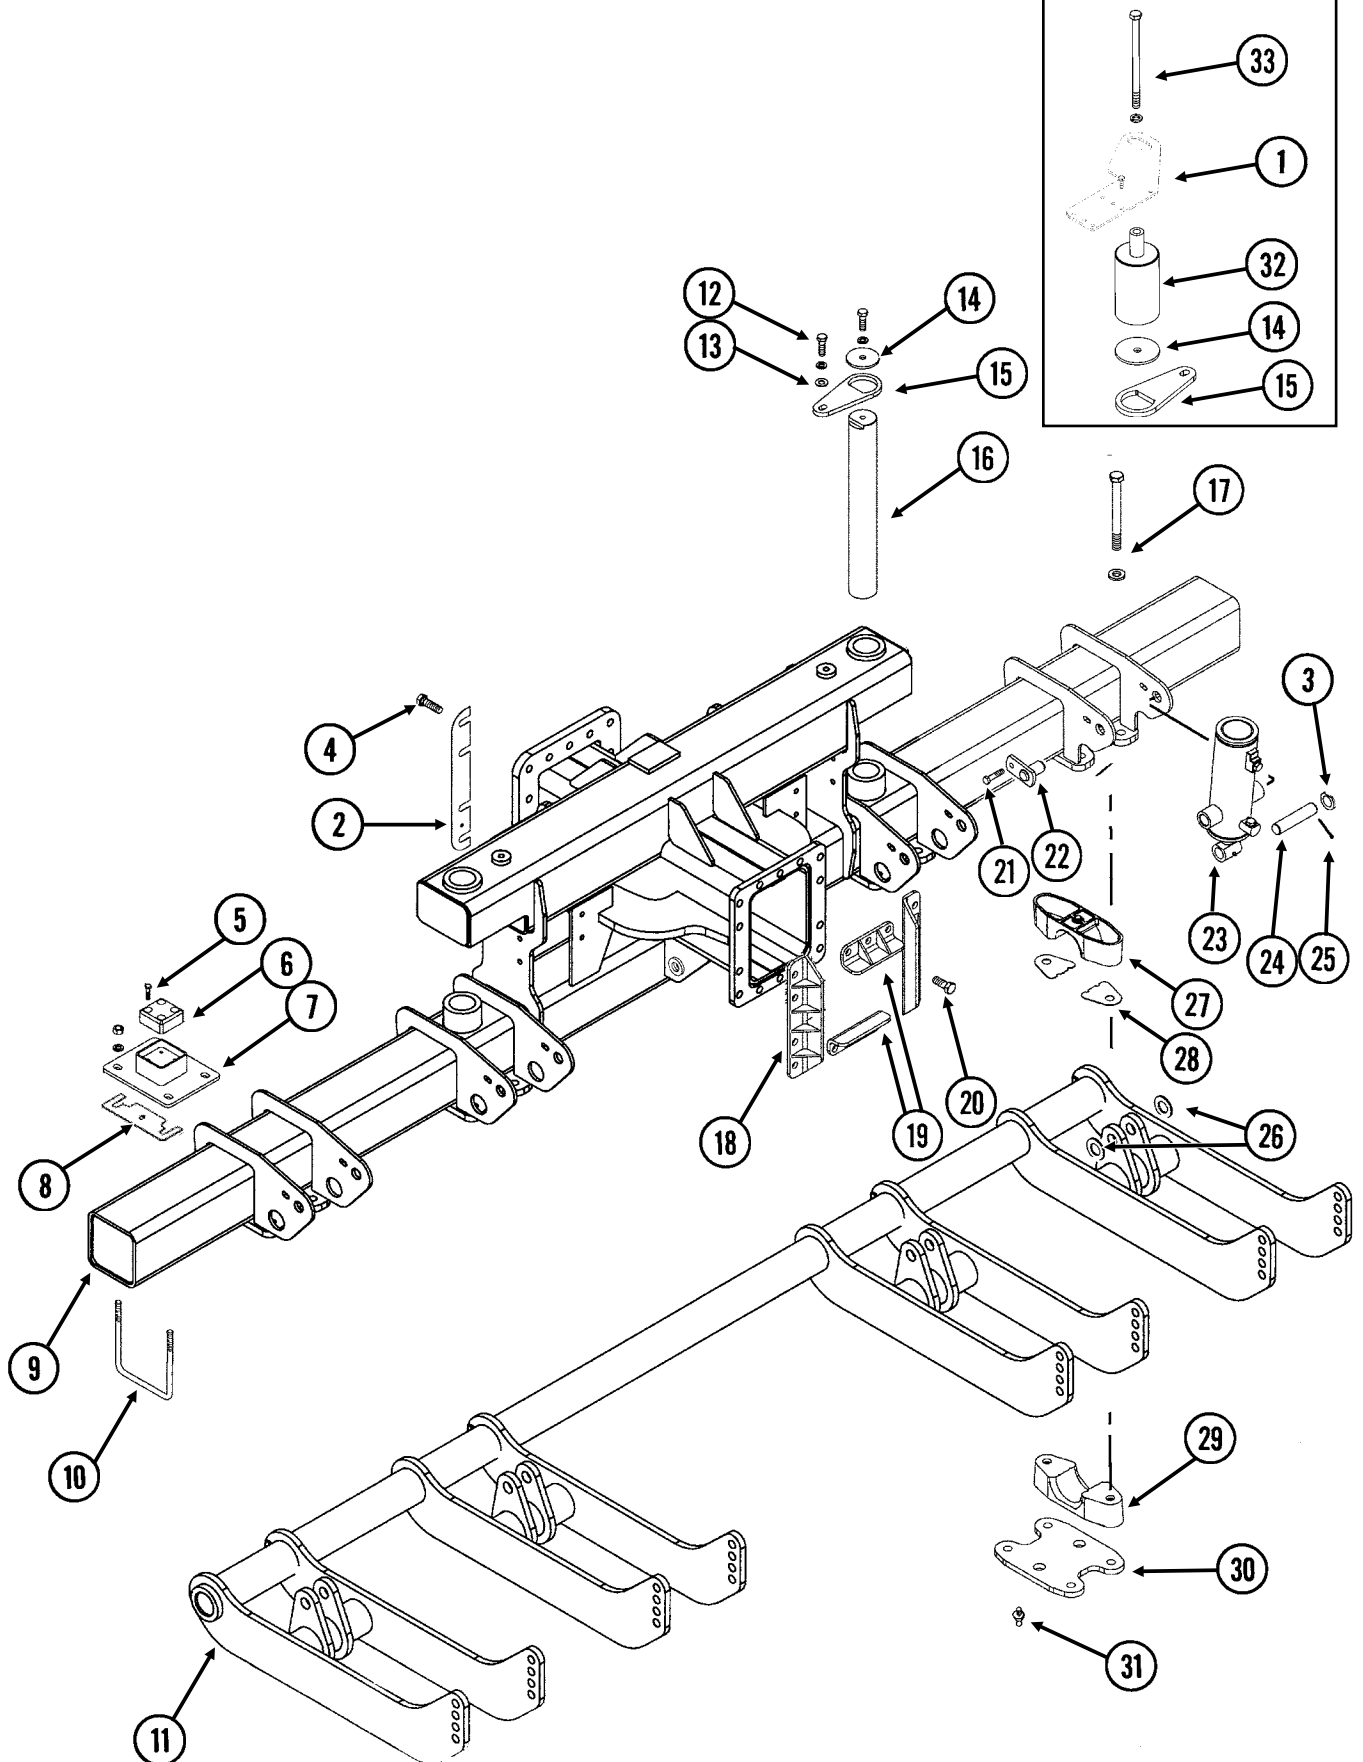




# CENTER TOOLBAR/REAR H-FRAME ASSEMBLY

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   |          | -    | See "Wing Auger Assemblies (SDS)", Pages P28 And P29         |
| 2.   | GD15451  | 3    | Shim, 2 3/4" x 18", 16 Gauge                                 |
|      | GD15780  | 3    | Shim, 1 7/8" x 18", 22 Gauge                                 |
| 3.   | G10139   | 8    | Washer, 1 1/4" USS   |
| 4.   | G10027   | 8    | Hex Head Cap Screw, 3/4"-10 x 2 1/2"                         |
|      | G10026   | -    | Hex Head Cap Screw, 3/4"-10 x 2"                             |
|      | G10025   | -    | Hex Head Cap Screw, 3/4"-10 x 1 1/2"                         |
|      | G10231   | 8    | Lock Washer, 3/4"  |
|      | G10105   | 8    | Hex Nut, 3/4"-10   |
| 5.   | G11099   | 8    | Hex Socket Head Cap Screw, 3/8"-16 x 1 1/2", Grade 8         |
| 6.   | GD15169  | 2    | Wear Block   |
| 7.   | GA10343  | 2    | Mount, 8" x 10"  |
| 8.   | GD15170  | -    | Shim, 3 1/4" x 10", 16 Gauge (As Required)                   |
| 9.   | GA11210  | 1    | H-Frame Assembly   |
| 10.  | GD17039  | 4    | U-Bolt, 7" x 7" x 5/8"-11                                    |
|      | G10230   | 8    | Lock Washer, 5/8"  |
|      | G10104   | 8    | Hex Nut, 5/8"-11   |
| 11.  |          |      | See "Rock Shaft Axle Assembly And Wheels", Pages P68 And P69 |
| 12.  | G10008   | 4    | Hex Head Cap Screw, 5/8"-11 x 2"                             |
|      | G10230   | 4    | Lock Washer, 5/8"  |
| 13.  | G10217   | 2    | Washer, 5/8" USS   |
| 14.  | GD15046  | 2    | Washer, 2 1/32" I.D. x 4" O.D. x 1/4"                        |
| 15.  | GD15045  | 2    | Capture Plate  |
| 16.  | GD15369  | 2    | Pivot Pin, 3" x 22 1/2"                                      |
| 17.  | G11095   | 16   | Hex Head Cap Screw, 7/8"-9 x 9"                              |
|      | GD10063  | 16   | Hardened Washer, 7/8"  |
|      | G10418   | 16   | Lock Nut, 7/8"-9   |
| 18.  | GB0357   | 2    | Keeper   |
| 19.  | GB0355   | 2    | Keeper   |
| 20.  | G10026   | 14   | Hex Head Cap Screw, 3/4"-10 x 2"                             |
|      | G10231   | 14   | Lock Washer, 3/4"  |
|      | G10105   | 14   | Hex Nut, 3/4"-10   |
| 21.  | G10016   | 8    | Hex Head Cap Screw, 1/2"-13 x 2"                             |
|      | G10216   | 8    | Washer, 1/2" USS   |
|      | G10111   | 8    | Lock Nut, 1/2"-13  |
| 22.  | GA6761   | 8    | Pin, 1 3/4"  |
|      | GA5121   | -    | Pin, 2 1/8"  |
| 23.  |          | -    | See "Master Cylinder", Pages P94                             |
| 24.  | GD5841   | 4    | Pin, 1 1/4" x 5 5/8"   |
| 25.  | G10460   | 8    | Cotter Pin, 1/4" x 2"  |
| 26.  | G10226   | 8    | Washer, 1 1/4" SAE   |
| 27.  | GB0332   | 8    | Bearing  |
| 28.  | GD15172  | 16   | Shim   |
| 29.  | GD14941  | 8    | Bearing  |
| 30.  | GD14926  | 4    | Clamp Plate  |
| 31.  | G10640   | 8    | Grease Fitting, 1/4"-28                                      |
| 32.  | GA11385  | 1    | Pivot Post   |
| 33.  | G10953   | 1    | Hex Head Cap Screw, 5/8"-11 x 10"                            |
|      | G10230   | 1    | Lock Washer, 5/8"  |

# ROCK SHAFT AXLE ASSEMBLY AND WHEELS

(FWD10c)

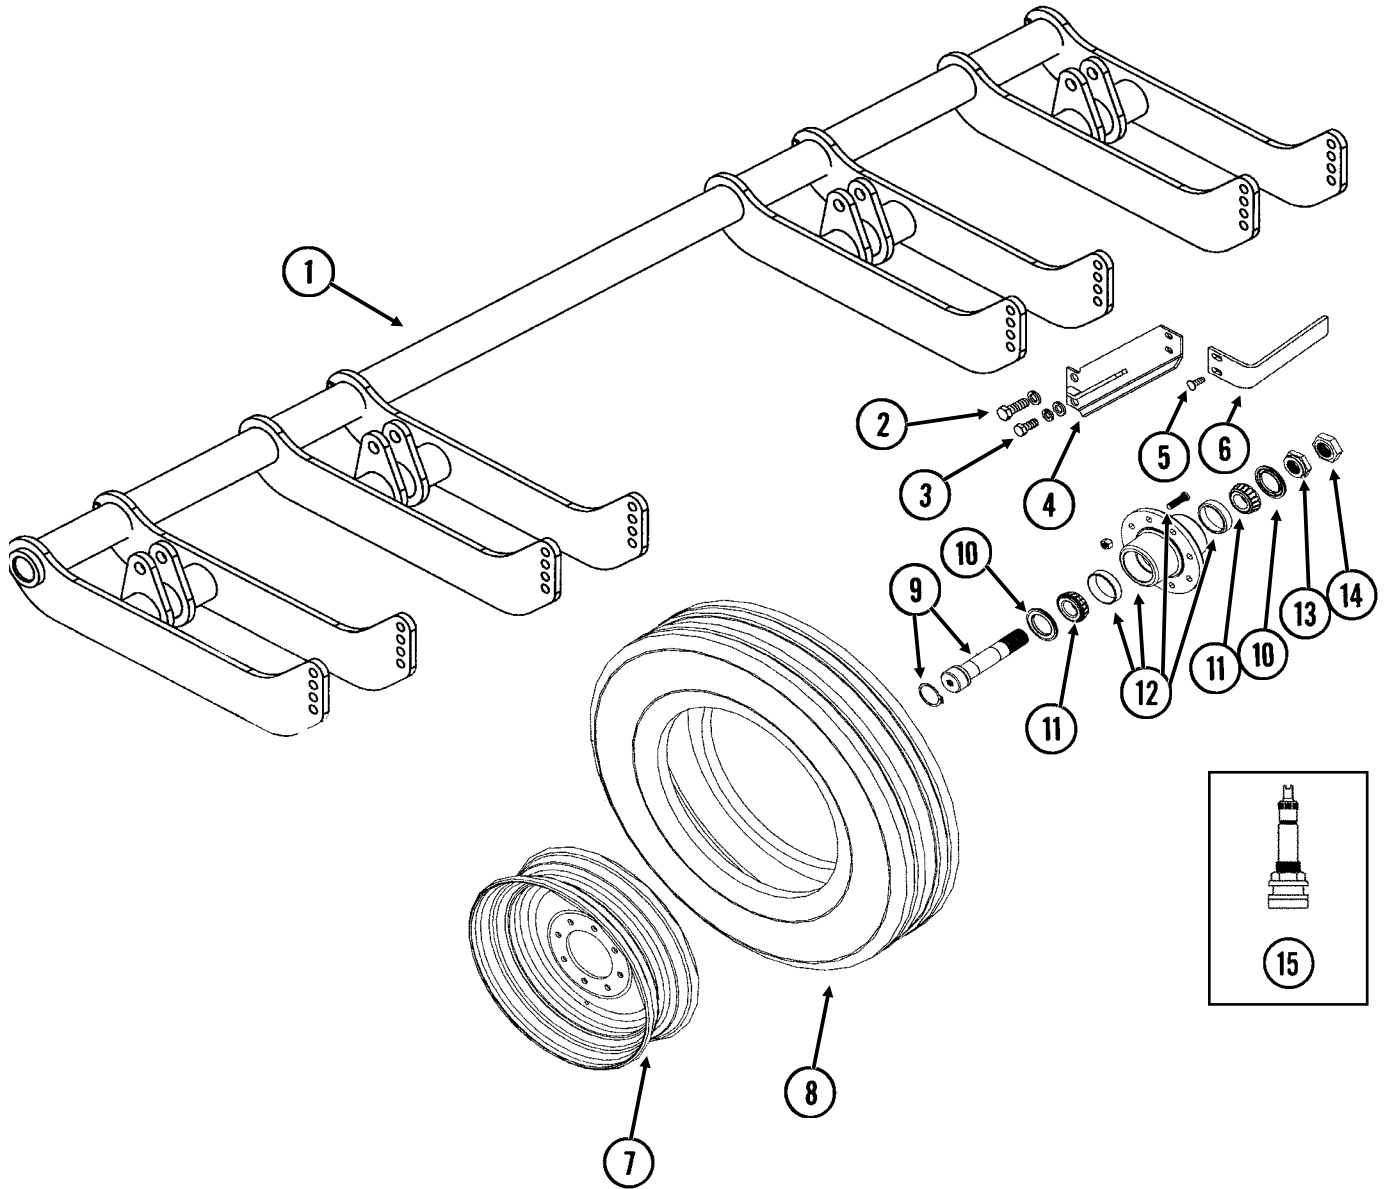

# ROCK SHAFT AXLE ASSEMBLY AND WHEELS




---

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GA11174  | 1    | Rock Shaft Axle, 133 1/2"                                       |
| 2.   | G10448   | 8    | Hex Head Cap Screw, 7/8"-9 x 2 1/2", Grade 8                    |
|      | G10330   | 8    | Lock Washer, 7/8"   |
| 3.   | G11071   | 4    | Hex Head Cap Screw, 3/4"-10 x 2 1/4"                            |
|      | G10194   | 8    | Washer, 3/4" SAE  |
|      | G10231   | 4    | Lock Washer, 3/4"   |
|      | G10105   | 4    | Hex Nut, 3/4"-10  |
| 4.   | GA11227  | 4    | Scraper Mount   |
| 5.   | G10636   | 8    | Carriage Bolt, 1/2"-13 x 1 1/2"                                 |
|      | G10216   | 8    | Washer, 1/2" USS  |
|      | G10228   | 8    | Lock Washer, 1/2"   |
|      | G10102   | 8    | Hex Nut, 1/2"-13  |
| 6.   | GD12543  | 4    | Scraper   |
| 7.   | GA9544   | 4    | Rim, 5.5" x 22.5"   |
| 8.   | GD15406  | 4    | Tire, 41 x 11 R22.5" W/O Center Rib (Specify Brand*)            |
| 9.   | GA10139  | 4    | Spindle W/Retaining Ring, 1 3/4"                                |
|      | G10913   | -    | External Retaining Ring, 2 1/2"                                 |
| 10.  | GA4722   | 8    | Seal  |
| 11.  | GA4723   | 8    | Bearing   |
| 12.  | GA4729   | 4    | Hub W/Cups, Bolts, Nuts And Grease Fitting, 8 Bolt, 1 3/4" Bore |
|      | G10640   | -    | Grease Fitting, 1/4"-28   |
|      | GD7079   | -    | Cup   |
|      | GR0528   | -    | Stud, 5/8"-12 x 2 1/4", Grade 8                                 |
|      | GR0531   | -    | Lug Nut, 5/8"-18 UNF  |
| 13.  | GD7089   | 4    | Special Nut, 1 3/4"-12 UNF                                      |
| 14.  | GD7864   | 4    | Special Hex Nut, 1 3/4"-12 UNF                                  |
| 15.  | GA7434   | 4    | Valve Stem  |
| A.   | GA10553  | -    | Tire And Rim Assembly (Items 7, 8 And 15) (Specify Brand*)      |

\* Specific brand requests will be supplied only as available from current KINZE® Repair Parts stock. If a specific brand requested is not in stock, the brand available will be supplied.

# TRANSPORT AXLE ASSEMBLY AND WHEELS

(A12501/FWD60d/FWD61/A7434)

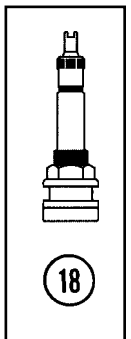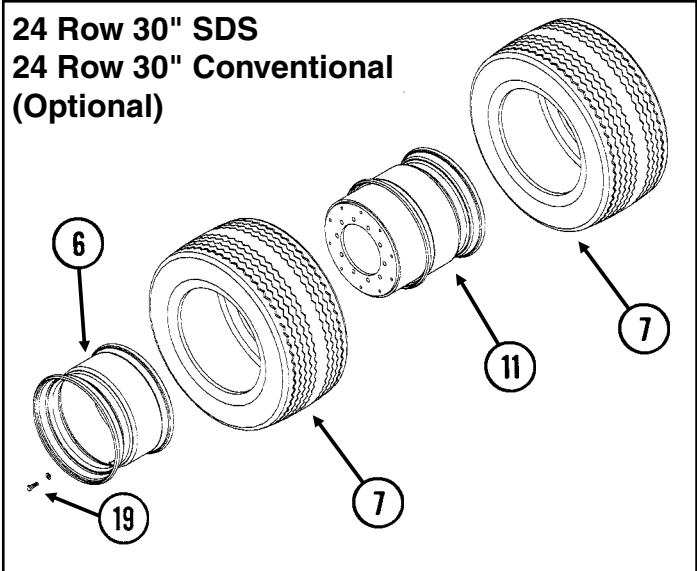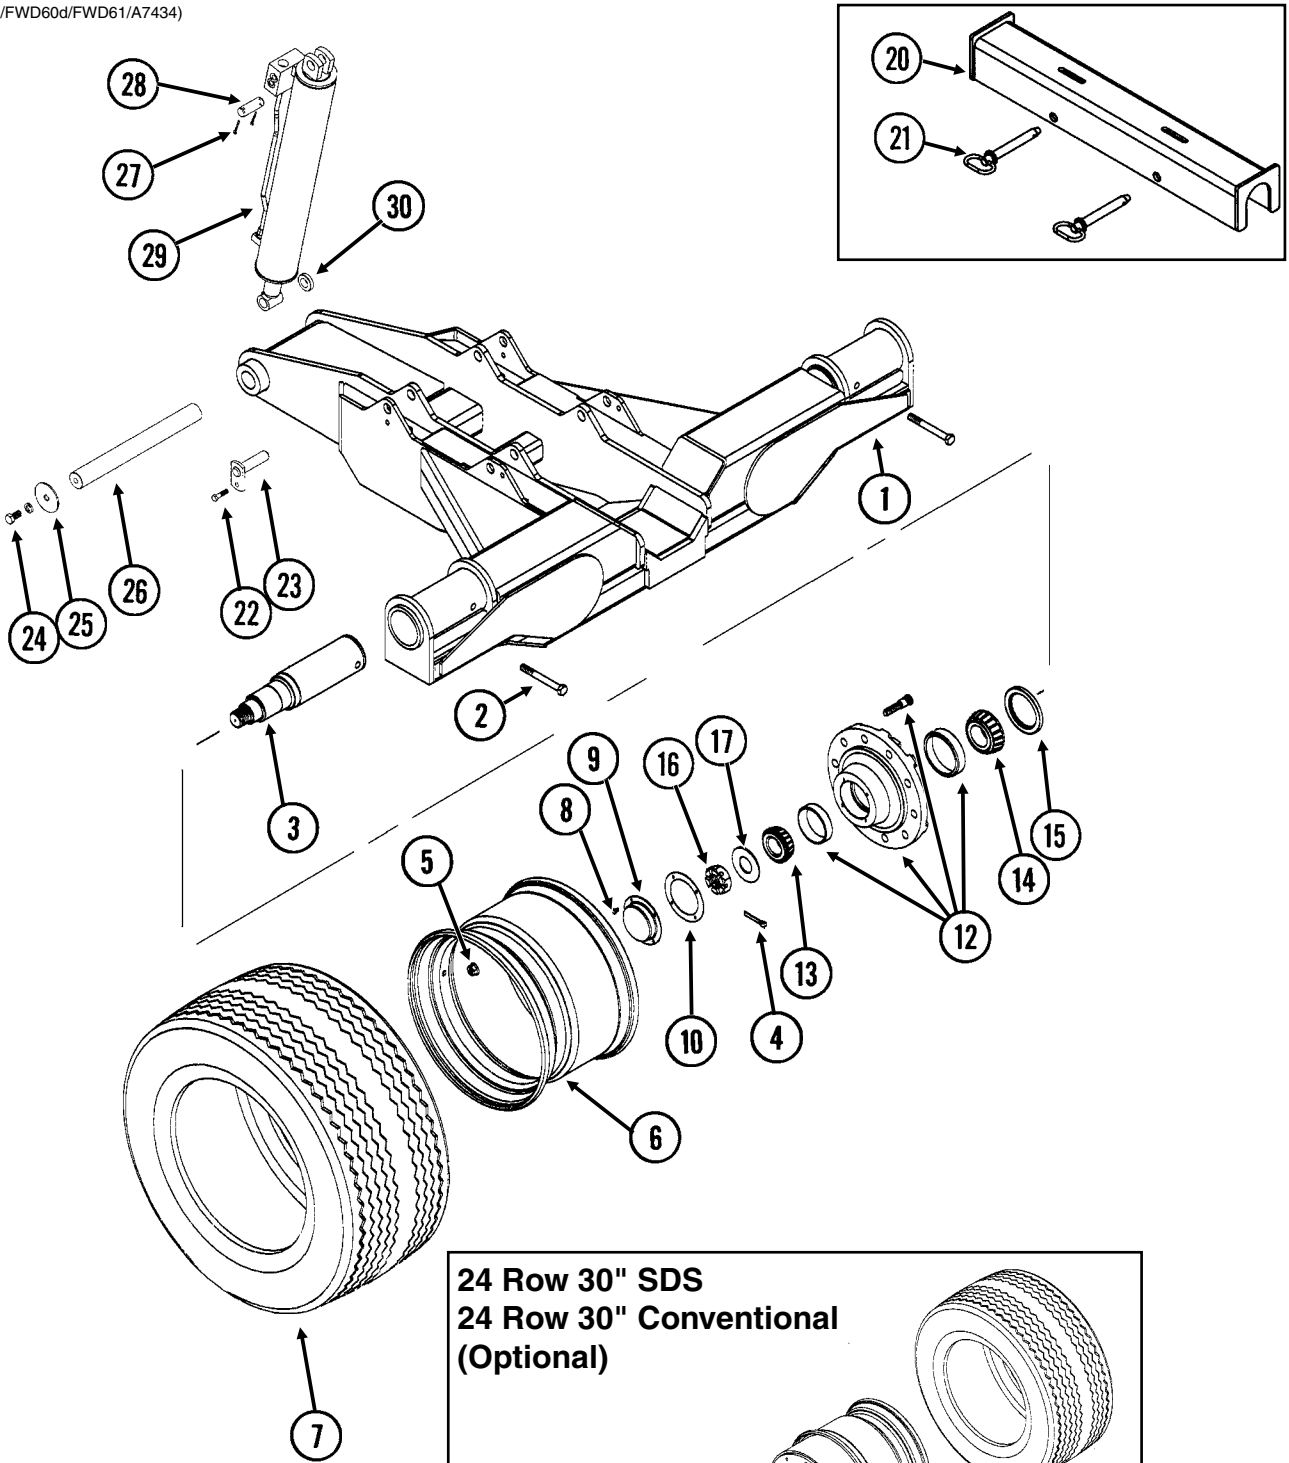


# TRANSPORT AXLE ASSEMBLY AND WHEELS

| ITEM | PART NO.  | QTY. | DESCRIPTION   |
|------|-----------|------|---|
| 1.   | GA12460   | 1    | Axle W/Grease Fittings  |
|      | G10640    | 2    | Grease Fitting, 1/4"-28   |
| 2.   | G10400    | 2    | Hex Head Cap Screw, 3/4"-10 x 6 1/2"                              |
|      | G10112    | 2    | Lock Nut, 3/4"-10   |
| 3.   | GD13740   | 2    | Spindle, 4 1/2"   |
| 4.   | G10471    | 2    | Cotter Pin, 3/8" x 2 1/2"   |
| 5.   | G10625    | 20   | Flange Nut, 3/4"-16   |
| 6.   | GA11277   | 2    | Rim, 14" x 22.5"  |
| 7.   | GD16058   | 2-4  | Tire, 445-50R22.5 Radial Load Range H (Specify Brand*)            |
| 8.   | G10054    | 8    | Hex Head Cap Screw, 5/16"-18 x 1/2"                               |
| 9.   | GD1360    | 2    | Dust Cap  |
| 10.  | GD1359    | 2    | Seal  |
| 11.  | GA11265   | 2    | Rim, 14" x 22.5", Offset  |
| 12.  | GA9306    | 2    | Hub W/Cups, Grease Fitting And Stud Bolts (10 Bolt High Strength) |
|      | GR0192    | -    | Outer Cup   |
|      | GR0191    | -    | Inner Cup   |
|      | G10373    | -    | Grease Fitting, 45°, 1/8"-27                                      |
|      | GR1681    | -    | Stud Bolt, 3/4"-16 x 3 7/8"                                       |
| 13.  | GA0530    | 2    | Outer Bearing   |
| 14.  | GA0531    | 2    | Inner Bearing   |
| 15.  | GA0532    | 2    | Seal  |
| 16.  | G10726    | 2    | Slotted Hex Nut, 2"-12  |
| 17.  | G10198    | 2    | Washer, 2" USS  |
| 18.  | GA7434    | -    | Valve Stem  |
| 19.  | G11174    | 10   | Hex Head Cap Screw, 5/8"-11 x 2"                                  |
|      | GD7805    | 10   | Special Washer, 5/8", Hardened                                    |
| 20.  | GA12501   | 2    | Cylinder Lockup   |
| 21.  | GA6189    | 2    | Hitch Pin W/Lynch Pin   |
| 22.  | G10017    | 4    | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                              |
|      | G10111    | 4    | Lock Nut, 1/2"-13   |
| 23.  | GA10279   | 4    | Pin, 5 1/4"   |
| 24.  | G10025    | 2    | Hex Head Cap Screw, 3/4"-10 x 1 1/2"                              |
|      | G10231    | 2    | Lock Washer, 3/4"   |
| 25.  | GD15041   | 2    | Washer, 13/16" I.D. x 4" O.D., 7 Gauge                            |
| 26.  | GD15042   | 1    | Pin, 2 1/4" x 20 1/16"  |
| 27.  | G10460    | 4    | Cotter Pin, 1/4" x 2"   |
| 28.  | GD12790   | 2    | Pin, 1 1/4" x 3 1/2"  |
| 29.  |           | -    | See "Transport Axle Cylinder", Page P96                           |
| 30.  | GD0752-53 | 2    | Sleeve, 3/8"  |
| A.   | GA11278   | -    | Tire And Rim Assembly (Items 6, 7, And 18)                        |
|      | GA11266   | -    | Tire And Rim Assembly (Items 7, 11 And 18)                        |
| B.   | GA9315    | -    | Hub And Spindle Assembly (Items 3, 4, 5, 8, 9, 10 And 12-17)      |

\* Specific brand requests will be supplied only as available from current KINZE® Repair Parts stock. If a specific brand requested is not in stock, the brand available will be supplied.

# STUB WING

(FWD13/FWD47a)

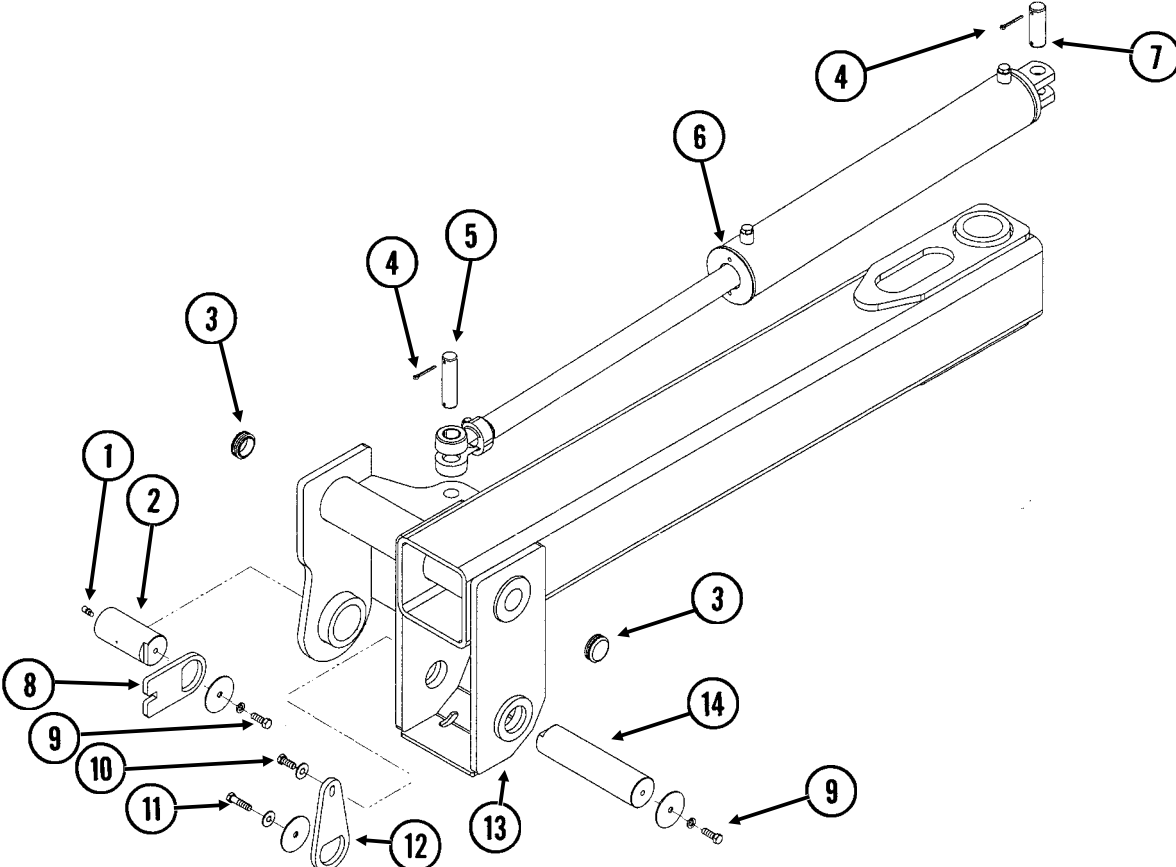



# STUB WING

| ITEM | PART NO. | QTY.        | DESCRIPTION  |
|------|----------|-------------|--|
|      |          | (Per Assy.) |  |
| 1.   | G10640   | 1           | Grease Fitting, 1/4"-28                                |
| 2.   | GD15067  | 1           | Pin, 2 3/4" x 5 13/16"                                 |
| 3.   | G11105   | 2           | Cap  |
| 4.   | G10460   | 4           | Cotter Pin, 1/4" x 2"                                  |
| 5.   | GD15048  | 1-2         | Pin, 1 1/4" x 5 1/16"                                  |
| 6.   |          | -           | See "Wing Fold Cylinder", Page P94                     |
| 7.   | GD15049  | 1-2         | Pin, 1 1/4" x 4 5/16"                                  |
| 8.   | GD15069  | 1           | Capture Plate  |
| 9.   | G10017   | 2           | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                   |
|      | G10228   | 2           | Lock Washer, 1/2"                                      |
|      | GD15068  | 2           | Washer, 3 3/4" O.D. x 1/2" I.D. x 1/4"                 |
| 10.  | G10037   | 1           | Hex Head Cap Screw, 1/2"-13 x 1 1/4"                   |
|      | G10216   | 1           | Washer, 1/2" USS                                       |
| 11.  | G10016   | 1           | Hex Head Cap Screw, 1/2"-13 x 2"                       |
|      | G10216   | 1           | Washer, 1/2" USS                                       |
|      | GD15068  | 1           | Washer, 3 3/4" O.D. x 1/2" I.D. x 1/4"                 |
| 12.  | GD15072  | 1           | Capture Plate  |
| 13.  | GA11219  | 1           | Stub Wing W/Bushings And Grease Fittings, L.H. (Shown) |
|      | GA11220  | -           | Stub Wing W/Bushings And Grease Fittings, R.H.         |
|      | GD14565  | -           | Hardened Bushing, 3 1/2" O.D. x 3" I.D. x 4"           |
|      | GD14563  | -           | Hardened Bushing, 3 1/4" O.D. x 2 3/4" I.D. x 3"       |
|      | G10640   | -           | Grease Fitting, 1/4"-28                                |
| 14.  | GD15070  | 1           | Pin, 2 3/4" x 11 1/4"                                  |

# OUTER WING

(FWD63/FWD63a)

## L.H. Wing

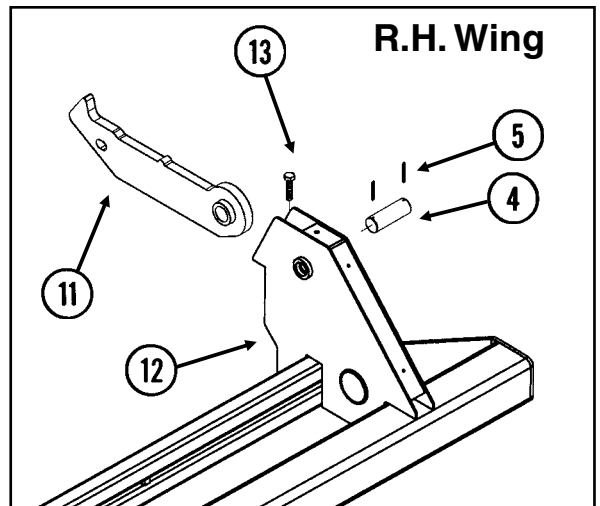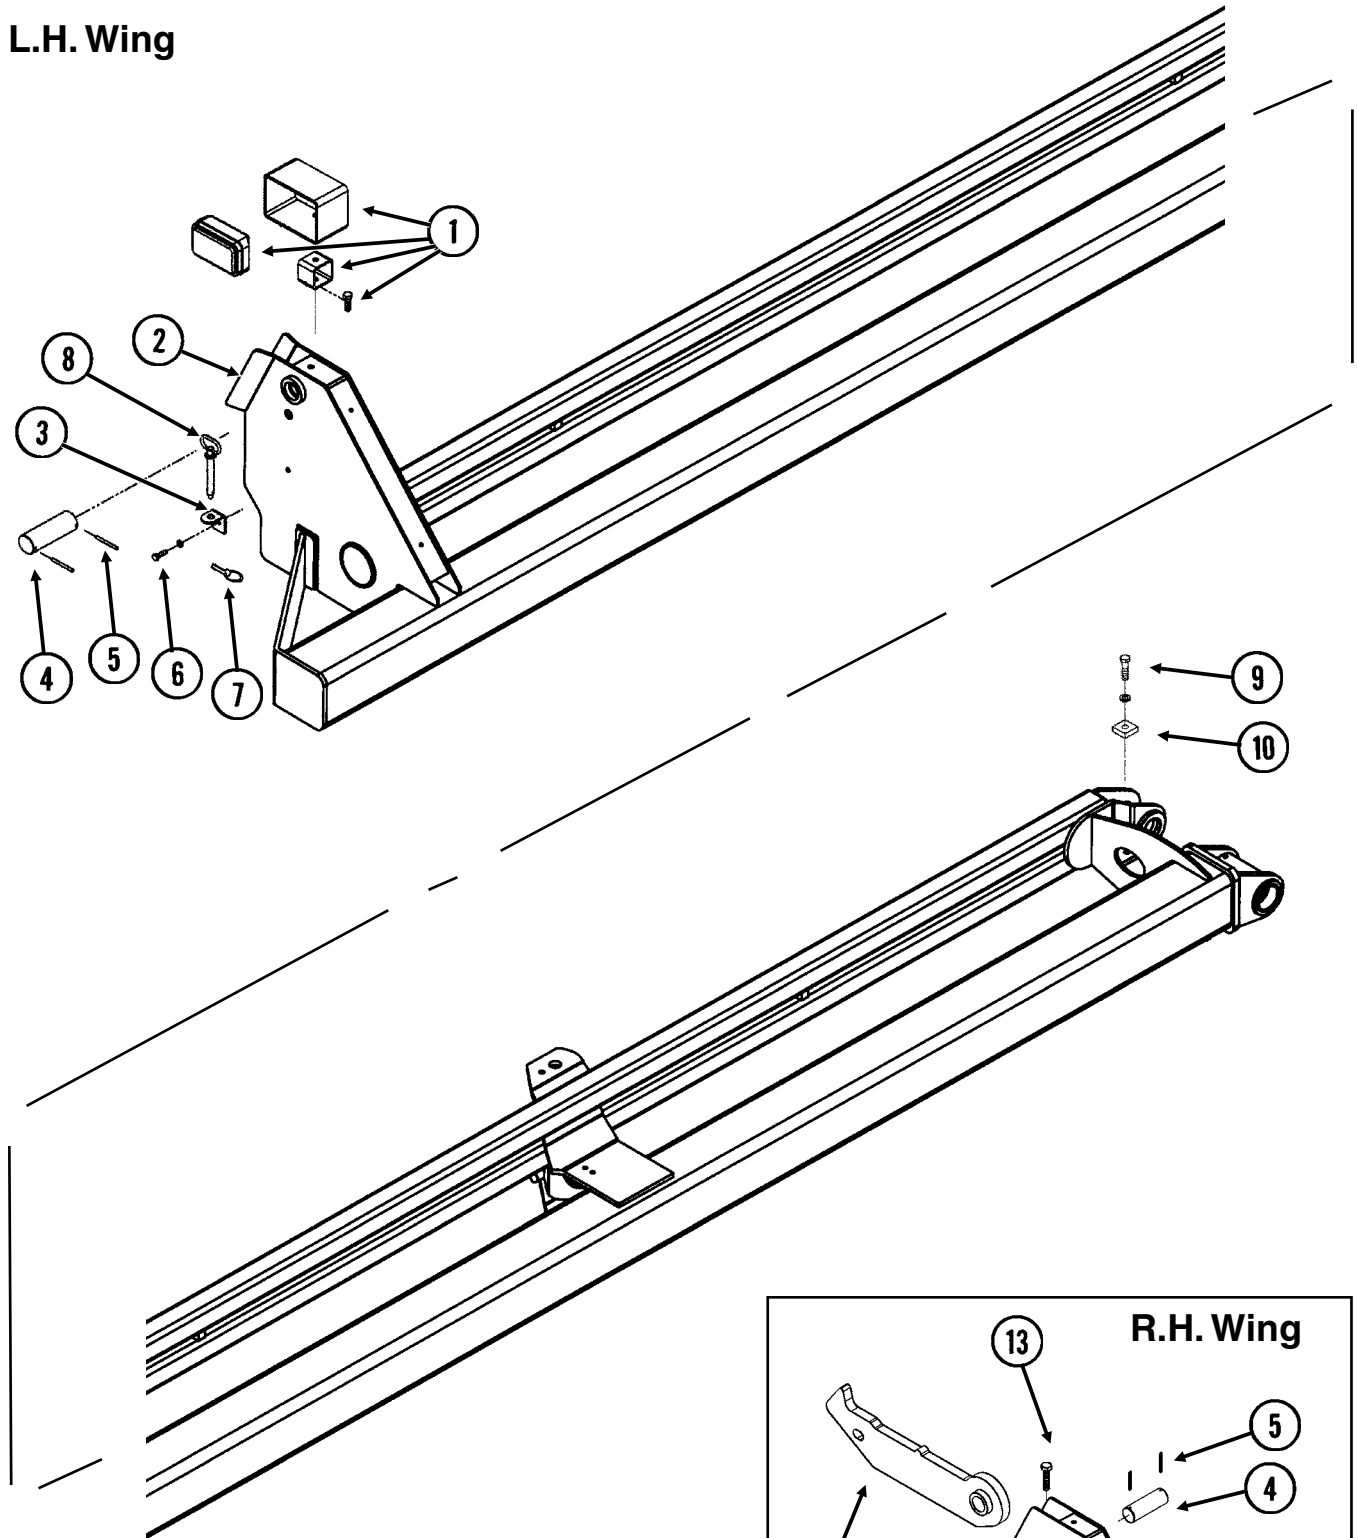




# OUTER WING

| ITEM | PART NO. | QTY.        | DESCRIPTION   |
|------|----------|-------------|---|
|      |          | (Per Assy.) |   |
| 1.   |          | -           | See "Light Assemblies And Brackets", Pages P118 And P119          |
| 2.   | GA11225  | 1           | Outer Wing W/Grease Fittings, Bushings And Sleeve, L.H., 284 1/8" |
|      | G10640   | -           | Grease Fitting, 1/4"-28   |
|      | GD14563  | -           | Hardened Bushing, 3 1/4" O.D. x 2 3/4" I.D. x 3"                  |
|      | GD15110  | -           | Sleeve, 3 1/4" I.D. x 2 7/8" O.D. x 1 7/8" Long                   |
| 3.   | GD15285  | 1           | Storage Bracket   |
| 4.   | GD15074  | 1           | Pin, 2" x 5 3/4"  |
| 5.   | G10191   | 2           | Spring Pin, 1/4" x 2 3/4"   |
| 6.   | G10004   | 1           | Hex Head Cap Screw, 3/8"-16 x 1 1/4"                              |
|      | G10229   | 1           | Lock Washer, 3/8"   |
|      | G10101   | 1           | Hex Nut, 3/8"-16  |
| 7.   | GD5625   | 1           | Lynch Pin, 3/16"  |
| 8.   | GD15282  | 1           | Pin, 5/8" x 4"  |
| 9.   | G10016   | 1           | Hex Head Cap Screw, 1/2"-13 x 2"                                  |
|      | G10228   | 1           | Lock Washer, 1/2"   |
|      | G10111   | 1           | Lock Nut, 1/2"-13   |
| 10.  | GD15066  | 1           | Stop  |
| 11.  | GA10404  | 1           | Outer Hook, 29 13/16" Long  |
| 12.  | GA11226  | 1           | Outer Wing W/Grease Fittings, Bushings And Sleeve, R.H., 284 1/8" |
|      | G10640   | -           | Grease Fitting, 1/4"-28   |
|      | GD14563  | -           | Hardened Bushing, 3 1/4" O.D. x 2 3/4" I.D. x 3"                  |
|      | GD15110  | -           | Sleeve, 3 1/4" I.D. x 2 7/8" O.D. x 1 7/8" Long                   |
| 13.  | G10543   | 1           | Hex Head Cap Screw, 3/4"-10 x 3", Full Thread                     |
|      | G10105   | 1           | Hex Nut, 3/4"-10  |

# DRAFT LINK

(FWD129/D16890/FWD16aaa/FWD128/FWD74)

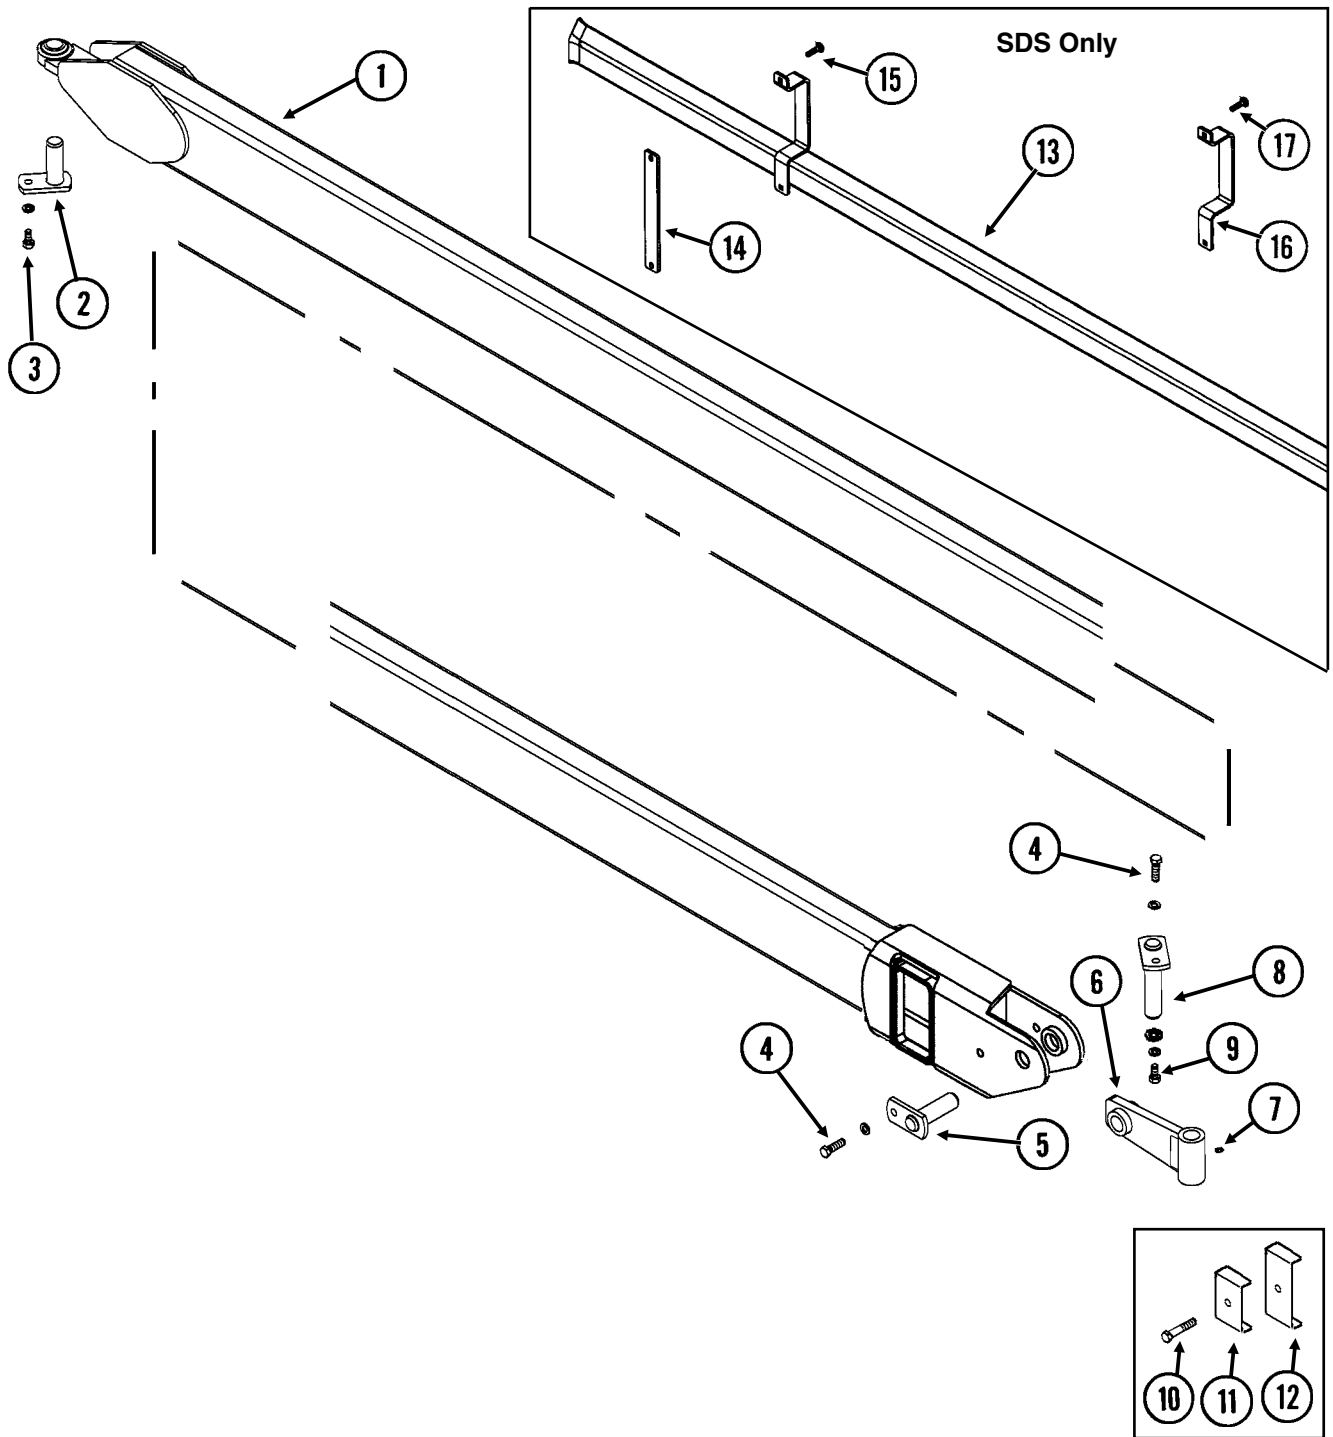


# DRAFT LINK

| ITEM | PART NO. | QTY.<br>(Per Assy.) | DESCRIPTION                            |
|------|----------|---------------------|--|
| 1.   | GA11015  | 1                   | Draft Link, L.H., 202 3/8"             |
|      | GA11016  | 1                   | Draft Link, R.H., 202 3/8"             |
| 2.   | GA10276  | 1                   | Pin, 3 5/8"                            |
| 3.   | G10014   | 1                   | Hex Head Cap Screw, 1/2"-13 x 1"       |
|      | G10228   | 1                   | Lock Washer, 1/2"                      |
| 4.   | G10039   | 1                   | Hex Head Cap Screw, 1/2"-13 x 1 3/4"   |
|      | G10228   | 1                   | Lock Washer, 1/2"                      |
|      | G10102   | 1                   | Hex Nut, 1/2"-13                       |
| 5.   | GA10277  | 1                   | Pin, 4"                                |
| 6.   | GA10275  | 1                   | Link Yoke                              |
| 7.   | G10640   | 1                   | Grease Fitting, 1/4"-28                |
| 8.   | GA10278  | 1                   | Pin, 6"                                |
| 9.   | G10039   | 1                   | Hex Head Cap Screw, 1/2"-13 x 1 3/4"   |
|      | G10228   | 1                   | Lock Washer, 1/2"                      |
|      | GD15235  | 1                   | Washer, 2 1/4" O.D. x 1/2" I.D. x 1/4" |
| 10.  | G10585   | -                   | Hex Head Cap Screw, 1/2"-13 x 3 1/4"   |
|      | G10111   | -                   | Lock Nut, 1/2"-13                      |
| 11.  | GD0740   | -                   | Hose Clamp, 3/4" x 4" x 3 1/2"         |
| 12.  | GD8188   | -                   | Hose Clamp, 7/8" x 3" x 5 3/8"         |
| 13.  | GA11667  | 1                   | Hose Tube, 168"                        |
| 14.  | GD16887  | 2-4                 | Support                                |
| 15.  | G10301   | 8                   | Carriage Bolt, 3/8"-16 x 1 1/2"        |
|      | G10210   | 8                   | Washer, 3/8" USS                       |
|      | G10108   | 8                   | Lock Nut, 3/8"-16                      |
| 16.  | GD16890  | -                   | Clamp                                  |
| 17.  | G10599   | -                   | Carriage Bolt, 3/8"-16 x 1 1/4"        |
|      | G10622   | -                   | Serrated Flange Nut, 3/8"-16           |

# LIFT/GAUGE WHEEL

(FWD64)

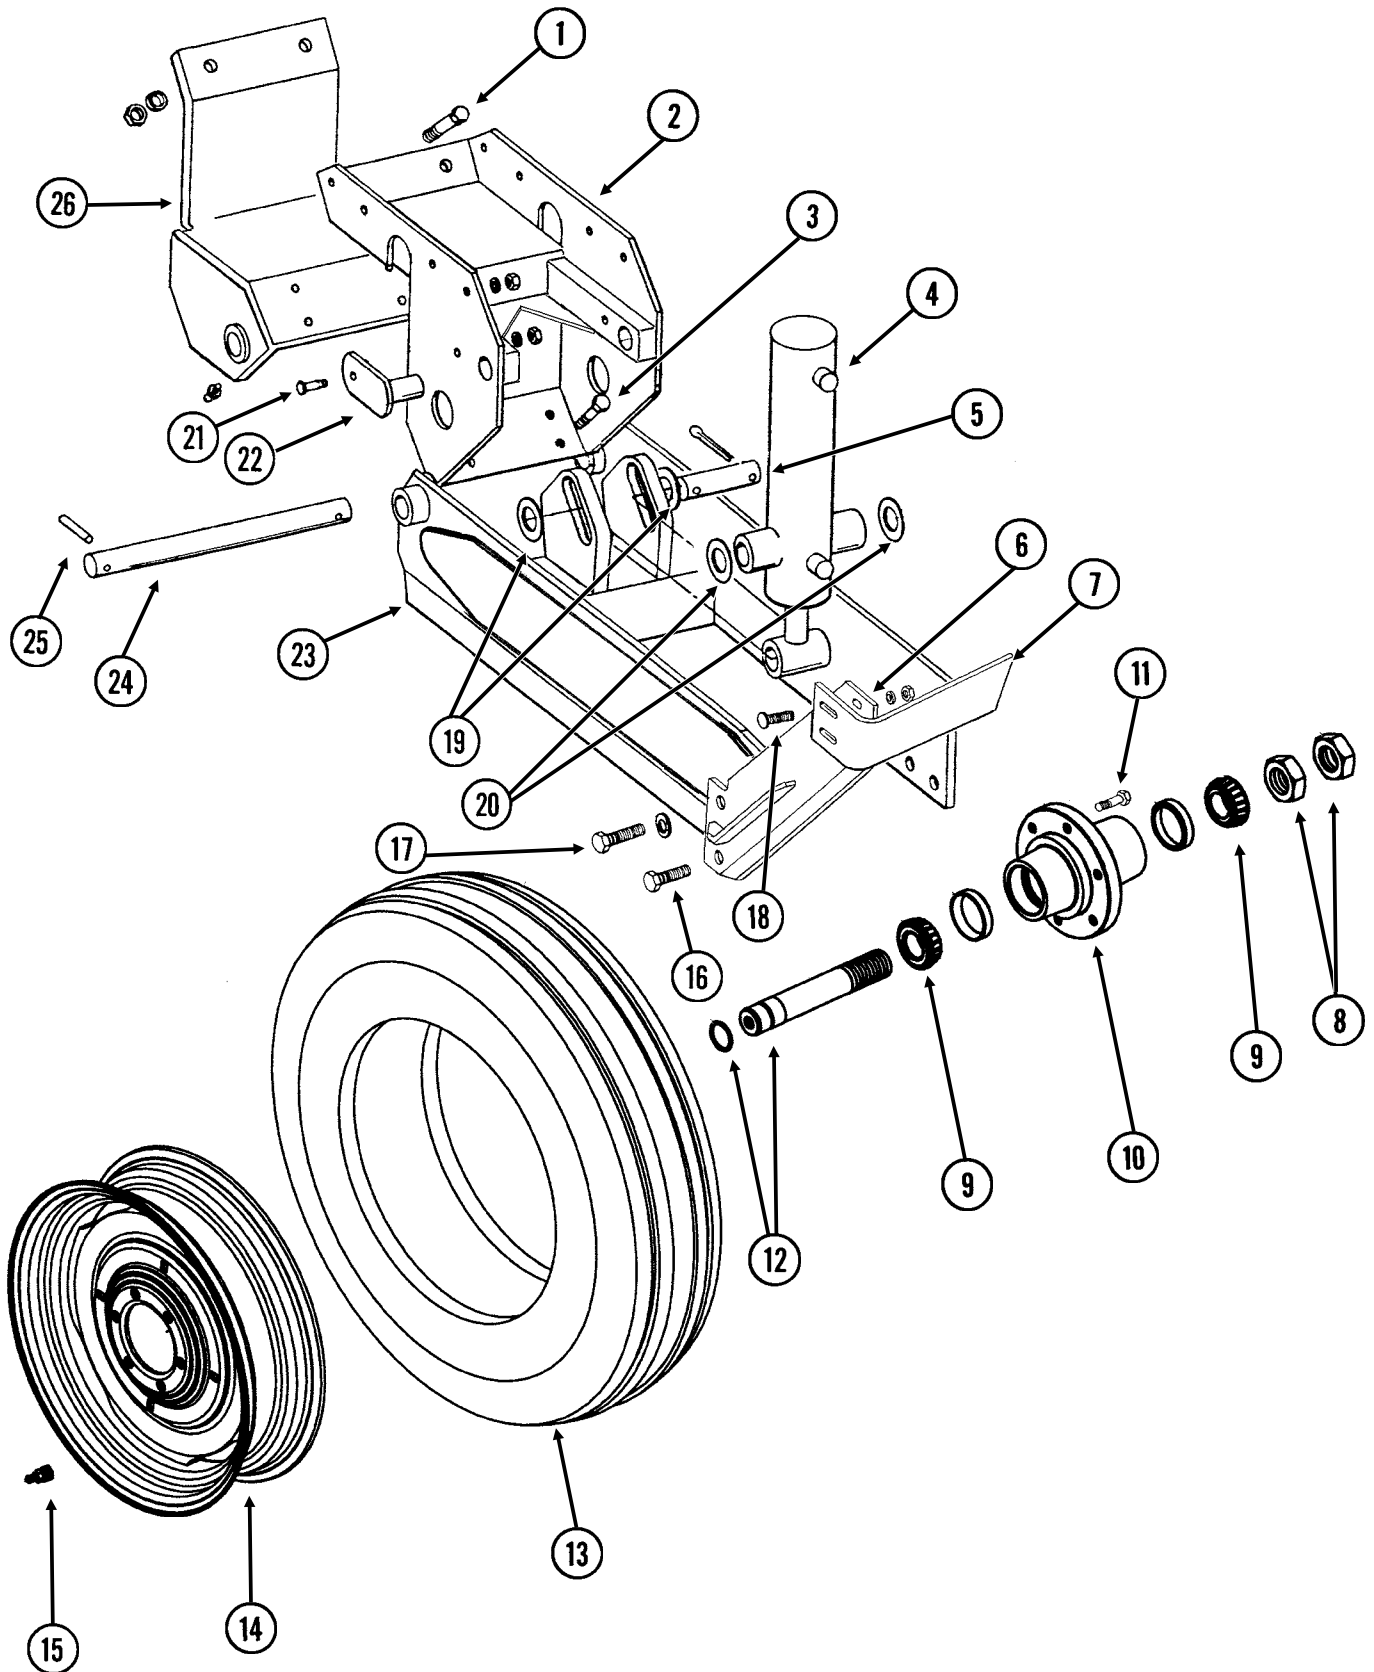


# LIFT/GAUGE WHEEL

| ITEM | PART NO. | QTY.        | DESCRIPTION  |
|------|----------|-------------|--|
|      |          | (Per Assy.) |  |
| 1.   | G10009   | 2           | Hex Head Cap Screw, 5/8"-11 x 2 1/2"                               |
|      | G10230   | 2           | Lock Washer, 5/8"  |
|      | G10104   | 2           | Hex Nut, 5/8"-11   |
| 2.   | GA5122   | 1           | Wheel Tower Clamp  |
| 3.   | G10008   | 4           | Hex Head Cap Screw, 5/8"-11 x 2"                                   |
|      | GD7805   | 6           | Special Washer, 5/8", Hardened                                     |
|      | G10230   | 4           | Lock Washer, 5/8"  |
|      | G10104   | 4           | Hex Nut, 5/8"-11   |
| 4.   |          | -           | See "Master/Slave/Lift Assist Cylinders", Pages P92 And P93        |
| 5.   | GD5841   | 1           | Pin, 1 1/4" x 5 5/8"   |
|      | G10460   | 2           | Cotter Pin, 1/4" x 2"  |
| 6.   | GA7376   | 1           | Scraper Mount  |
| 7.   | GD12543  | 1           | Scraper  |
| 8.   | G11081   | 2           | Hex Jam Nut, 1 1/2"-12, Grade 2                                    |
| 9.   | GA0895   | 2           | Bearing  |
| 10.  | GA2148   | 1           | Hub W/Cups, 6 Bolt   |
|      | GR0434   | -           | Cup  |
| 11.  | GR0270   | 6           | Lug Bolt, 9/16"-18   |
| 12.  | GA2558   | 1           | Spindle W/Round External Retaining Ring, 9 1/2"                    |
|      | GD11490  | -           | Round External Retaining Ring                                      |
| 13.  | GD13401  | -           | Tire, 7.50" x 20", 8 Ply, Tubeless W/O Center Rib (Specify Brand*) |
| 14.  | GA2142   | 1           | Rim, 5.50" x 20"   |
| 15.  | GA7434   | 1           | Valve Stem   |
| 16.  | G10025   | 2           | Hex Head Cap Screw, 3/4"-10 x 1 1/2"                               |
|      | G10231   | 2           | Lock Washer, 3/4"  |
|      | G10105   | 2           | Hex Nut, 3/4"-10   |
| 17.  | G10026   | 2           | Hex Head Cap Screw, 3/4"-10 x 2"                                   |
|      | G10231   | 2           | Lock Washer, 3/4"  |
| 18.  | G10636   | 4           | Carriage Bolt, 1/2"-13 x 1 1/2"                                    |
|      | G10228   | 4           | Lock Washer, 1/2"  |
|      | G10216   | 4           | Washer, 1/2" USS   |
|      | G10102   | 4           | Hex Nut, 1/2"-13   |
| 19.  | G10139   | 2           | Washer, 1 1/4" USS   |
| 20.  | G10159   | -           | Machine Bushing, 1 1/4", 10 Gauge (As Required)                    |
| 21.  | G10581   | 2           | Hex Head Cap Screw, 1/2"-13 x 2 1/4"                               |
|      | G10111   | 2           | Lock Nut, 1/2"-13  |
| 22.  | GA5121   | 2           | Pin, 2 1/8"  |
| 23.  | GA11276  | 1           | Arm  |
| 24.  | GD11695  | 1           | Pin, 1 1/4" x 13 1/4"  |
| 25.  | G10610   | 2           | Spring Pin, 3/8" x 2"  |
| 26.  | GA9877   | 1           | Clamp W/Grease Fittings  |
|      | G10640   | 2           | Grease Fitting, 1/4"-28  |
| A.   | GA2147   | -           | Hub And Spindle Assembly (Items 8-10 And 12)                       |
| B.   | GA7409   | -           | Scraper Assembly (Items 6, 7, 16 And 18)                           |

\* Specific brand requests will be supplied only as available from current KINZE® Repair Parts stock. If a specific brand requested is not in stock, the brand available will be supplied.

# R.H. HYDRAULIC DRIVELINE ASSEMBLY

(FWD176)

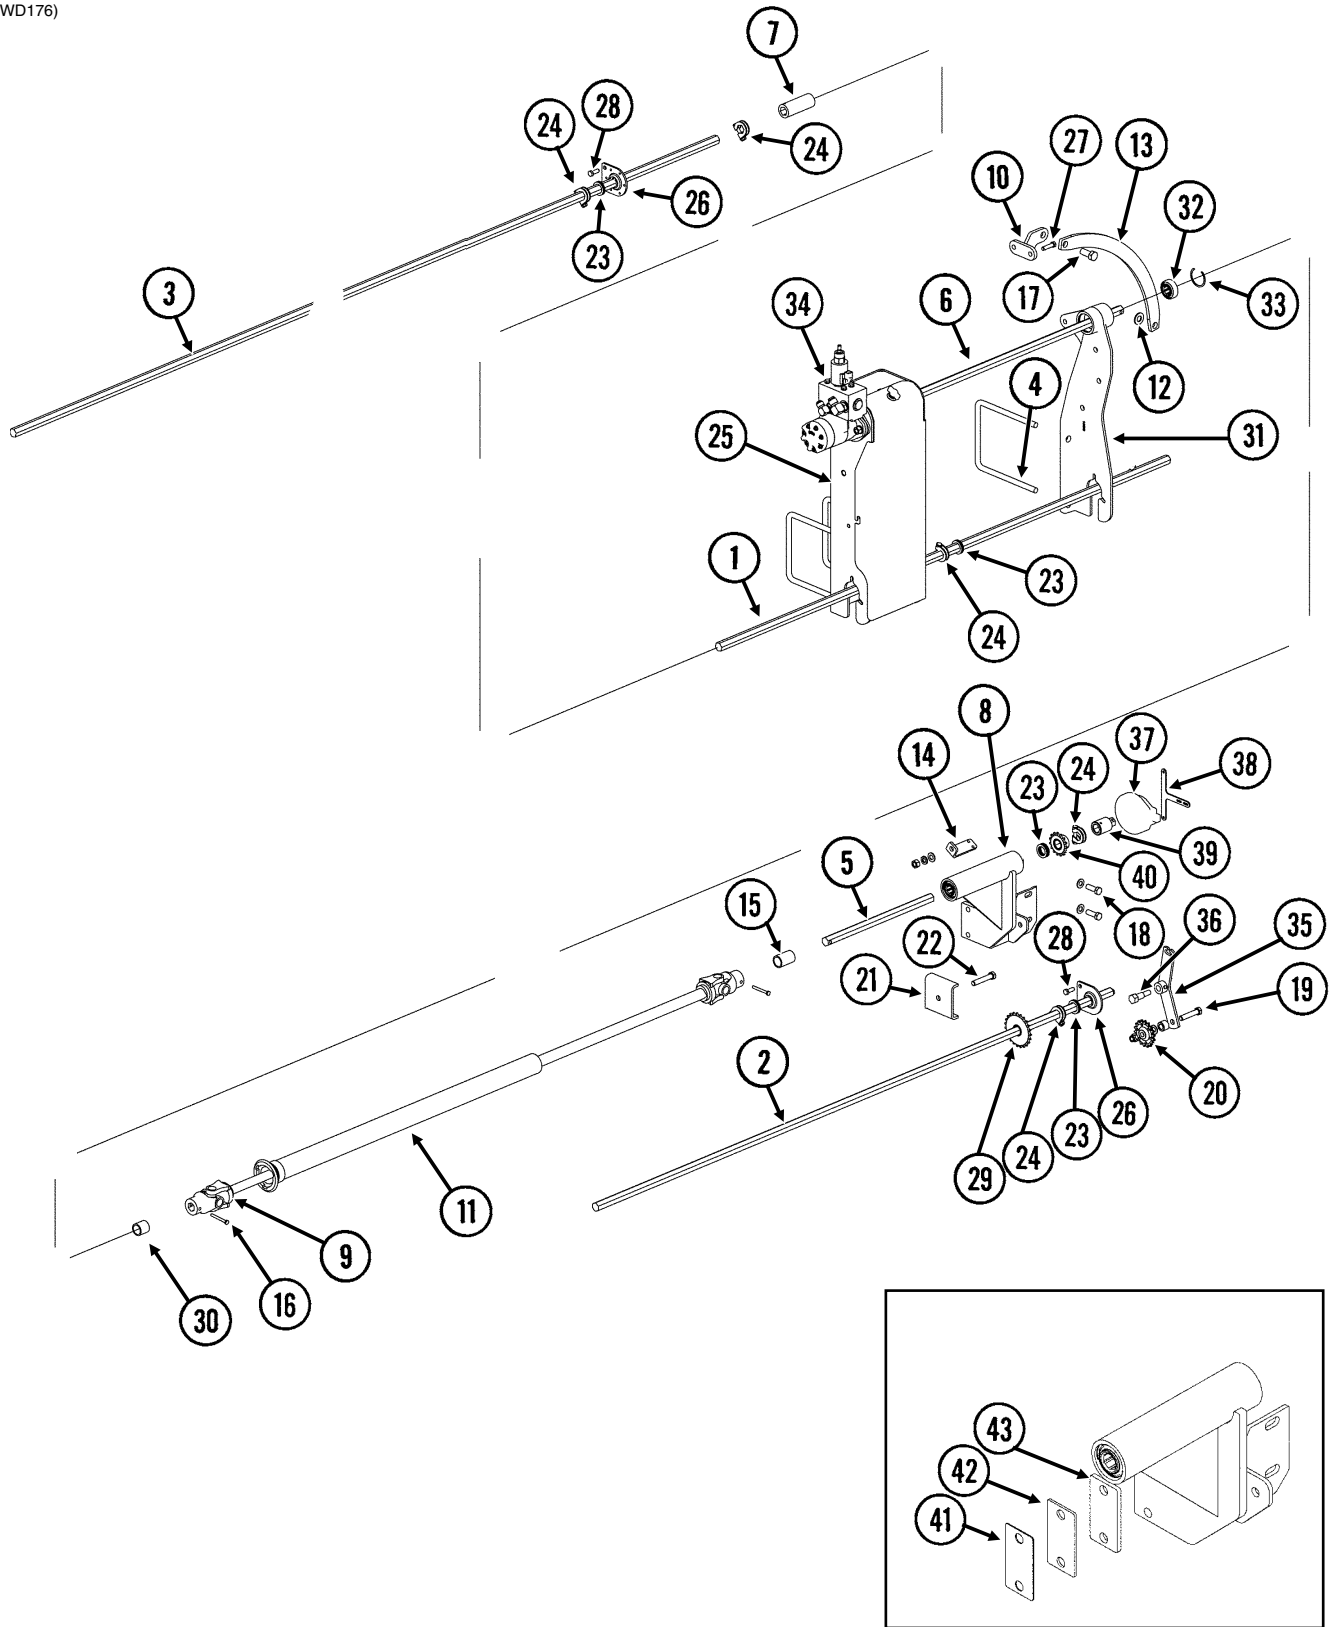


# R.H. HYDRAULIC DRIVELINE ASSEMBLY

| ITEM | PART NO.   | QTY. | DESCRIPTION   |
|------|------------|------|---|
| 1.   | GD0914-68  | 1    | Hex Shaft, 7/8" x 68" (No Holes)                            |
| 2.   | GD0914-78  | 1    | Hex Shaft, 7/8" x 78" (No Holes)                            |
| 3.   | GD0914-180 | 1    | Hex Shaft, 7/8" x 180" (No Holes)                           |
| 4.   | GD1114     | 1    | U-Bolt, 7" x 7" x 5/8"-11                                   |
|      | G10104     | 1    | Hex Nut, 5/8"-11  |
|      | G10230     | 1    | Lock Washer, 5/8"   |
| 5.   | GD2548-16  | 1    | Hex Shaft, 7/8" x 16" (1 Hole)                              |
| 6.   | GD2548-39  | 1    | Hex Shaft, 7/8" x 39"                                       |
| 7.   | GD10126    | 1    | Coupler, 4"   |
| 8.   | GA11187    | 1    | Mount W/Bearings And Rings, L.H. Side                       |
| 9.   | GA11176    | 1    | U-Joint Assembly  |
| 10.  | GA11964    | 1    | Brace Mount   |
| 11.  | GA12114    | 1    | Drive Shaft Cover Assembly                                  |
| 12.  | GD7805     | 1    | Special Washer, 5/8", Hardened                              |
| 13.  | GD17095    | 1    | Brace Bar, 21", L.H.  |
| 14.  | GD18070    | 1    | Spring Mount Bracket  |
| 15.  | GD1199-04  | 1    | Spacer  |
| 16.  | G10880     | 2    | Hex Head Cap Screw, 1/4"-20 x 2 1/4"                        |
|      | G10110     | 2    | Lock Nut, 1/4"-20, Grade B                                  |
| 17.  | G10007     | 1    | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                        |
|      | G10230     | 1    | Lock Washer, 5/8"   |
|      | G10104     | 1    | Hex Nut, 5/8"-11  |
| 18.  | G10017     | 2    | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                        |
|      | G10228     | 2    | Lock Washer, 1/2"   |
|      | G10206     | 2    | Washer, 1/2" SAE  |
|      | G10102     | 2    | Hex Nut, 1/2"-13  |
| 19.  | G10053     | 1    | Hex Head Cap Screw, 1/2"-13 x 2 1/2"                        |
| 20.  | GA7154     | 1    | Sprocket W/Bearing, 18 Tooth                                |
| 21.  | GD0740     | 1    | Hose Clamp, 3/4" x 4" x 3 1/2"                              |
| 22.  | G10397     | 1    | Hex Head Cap Screw, 1/2"-13 x 2 3/4"                        |
|      | G10228     | 1    | Lock Washer, 1/2"   |
|      | G10102     | 1    | Hex Nut, 1/2"-13  |
|      | G10206     | 1    | Washer, 1/2" SAE  |
| 23.  | G10233     | 5    | Machine Bushing, 1 1/2" x 1/32", 10 Gauge                   |
| 24.  | GA11331    | 5    | Hex Lock Clamp Assembly                                     |
| 25.  | GA13524    | 1    | Motor Mount Bracket   |
| 26.  | GA2180     | 2    | Hanger Bearing, 7/8" Hex Bore                               |
| 27.  | G10003     | 2    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"                        |
|      | G10229     | 2    | Lock Washer, 3/8"   |
|      | G10101     | 2    | Hex Nut, 3/8"-16  |
| 28.  | G10001     | -    | Hex Head Cap Screw, 3/8"-16 x 1"                            |
|      | G10229     | -    | Lock Washer, 3/8"   |
|      | G10101     | -    | Hex Nut, 3/8"-16  |
| 29.  | GA5108     | 1    | Sprocket, 23 Tooth  |
|      | G3310-100  | 1    | Chain, No. 40, 100 Pitch Including Connector Link           |
|      | GR0912     | 1    | Connector Link, No. 40                                      |
| 30.  | GD1199-06  | 1    | Spacer  |
| 31.  | GB0374     | 1    | Chain Mount   |
| 32.  | GA5116     | 1    | Bearing, 7/8" Hex Bore, Cylindrical                         |
| 33.  | GD6551     | 1    | Ring  |
| 34.  |            |      | See "Hydraulic Motor - Located On R.H. Driveline", Page P98 |
| 35.  | GA13235    | 1    | Idler Arm (L.H.)  |
| 36.  | GD18699    | 1    | Shoulder Bolt, 1/2"-13                                      |
|      | G10206     | 1    | Washer, 1/2" SAE  |
|      | G10111     | 1    | Lock Nut, 1/2"-13   |
| 37.  | GA12565    | 1    | Encoder Module  |
| 38.  | GD19248    | 1    | Anti-Rotation Encoder Bracket                               |
| 39.  | GA12661    | 1    | Hex Adapter Encoder   |
|      | G11242     | -    | Hex Socket Set Screw, 1/4"-20 x 3/8"                        |
| 40.  | GA5105     | 1    | Sprocket, 15 Tooth  |
| 41.  | GD16355-01 | 1    | Shim, 2" x 4" x 16 Gauge                                    |
| 42.  | GD16355-02 | 1    | Shim, 2" x 4" x 10 Gauge                                    |
| 43.  | GD16355-03 | 1    | Shim, 2" x 4" x 1/4"  |

# L.H. HYDRAULIC DRIVELINE ASSEMBLY

(FWD177)

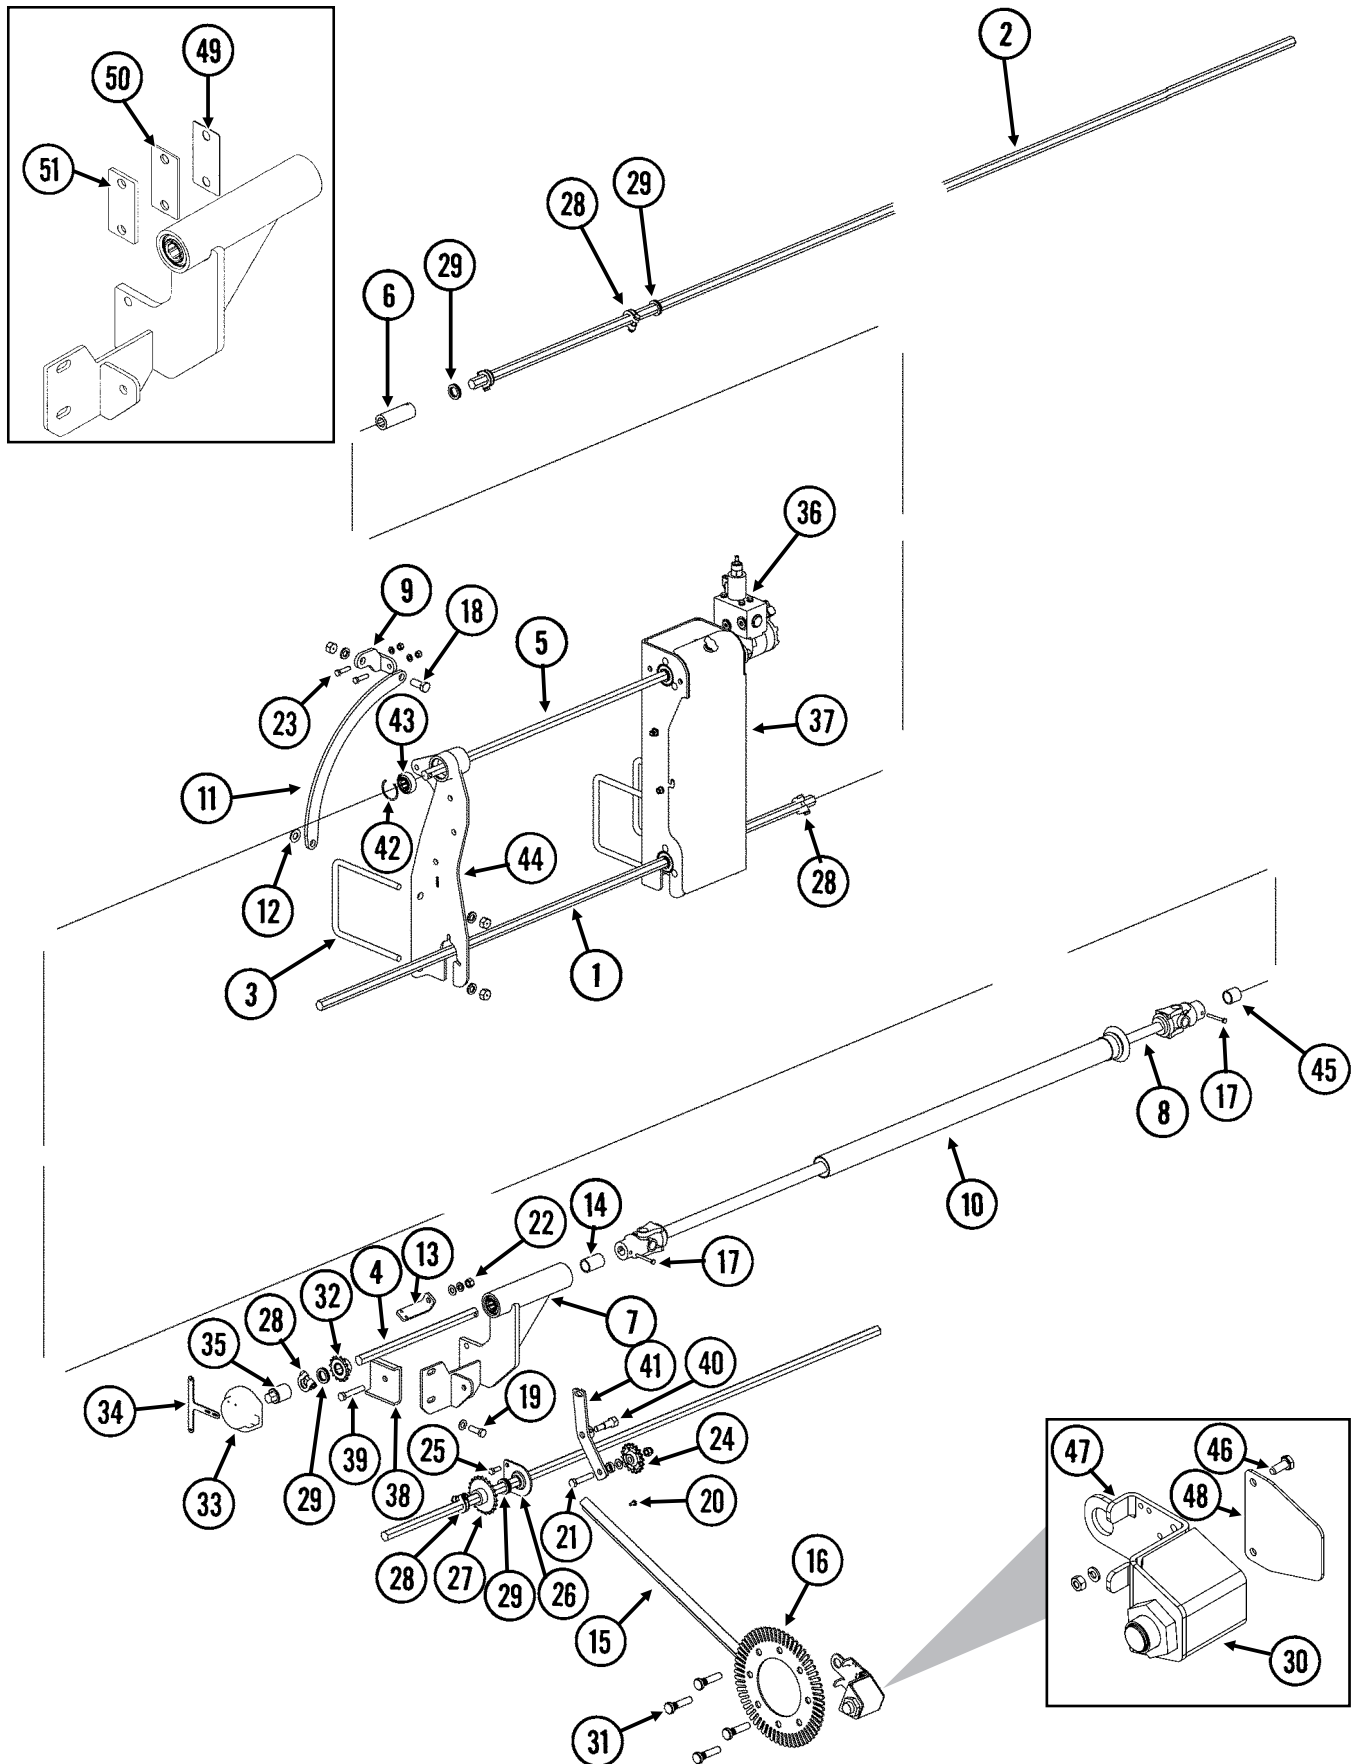




# L.H. HYDRAULIC DRIVELINE ASSEMBLY

| ITEM | PART NO.   | QTY. | DESCRIPTION   |
|------|------------|------|---|
| 1.   | GD0914-68  | 2    | Hex Shaft, 7/8" x 68" (No Holes)                            |
| 2.   | GD0914-180 | 1    | Hex Shaft, 7/8" x 180" (No Holes)                           |
| 3.   | GD1114     | 1    | U-Bolt, 7" x 7" x 5/8"-11                                   |
|      | G10104     | 2    | Hex Nut, 5/8"-11  |
|      | G10230     | 2    | Lock Washer, 5/8"   |
| 4.   | GD2548-16  | 1    | Hex Shaft, 7/8" x 16" (1 Hole)                              |
| 5.   | GD2548-39  | 1    | Hex Shaft, 7/8" x 39"                                       |
| 6.   | GD10126    | 1    | Coupler, 4"   |
| 7.   | GA11186    | 1    | Mount W/Bearings And Rings, R.H. Side                       |
| 8.   | GA11176    | 1    | U-Joint Assembly  |
| 9.   | GA11964    | 1    | Brace Mount   |
| 10.  | GA12114    | 1    | Drive Shaft Cover Assembly                                  |
| 11.  | GD17094    | 1    | Brace Bar, 19 3/4", R.H.                                    |
| 12.  | GD7805     | 1    | Special Washer, 5/8", Hardened                              |
| 13.  | GD18070    | 1    | Spring Mount Bracket  |
| 14.  | GD1199-04  | 1    | Spacer  |
| 15.  | GD19252    | 1    | Cable Guard Bracket   |
| 16.  | GD18643    | 1    | Jump Start Wheel  |
| 17.  | G10880     | 2    | Hex Head Cap Screw, 1/4"-20 x 2 1/4"                        |
|      | G10110     | 2    | Lock Nut, 1/4"-20, Grade B                                  |
| 18.  | G10007     | 1    | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                        |
|      | G10230     | 1    | Lock Washer, 5/8"   |
|      | G10104     | 1    | Hex Nut, 5/8"-11  |
| 19.  | G10017     | 2    | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                        |
|      | G10206     | 2    | Washer, 1/2" SAE  |
|      | G10228     | 2    | Lock Washer, 1/2"   |
|      | G10102     | 2    | Hex Nut, 1/2"-13  |
| 20.  | G10022     | 2    | Hex Head Cap Screw, 1/4"-20 x 1/2"                          |
|      | G10227     | 2    | Lock Washer, 1/4"   |
| 21.  | G10053     | 1    | Hex Head Cap Screw, 1/2"-13 x 2 1/2"                        |
|      | G10111     | 1    | Lock Nut, 1/2"-13   |
|      | G10206     | 1    | Washer, 1/2" SAE  |
|      | GD10161    | 1    | Spacer, 3/8"  |
| 22.  | G10228     | 1    | Lock Washer, 1/2"   |
|      | G10206     | 1    | Washer, 1/2" SAE  |
|      | G10102     | 1    | Hex Nut, 1/2"-13  |
| 23.  | G10003     | 2    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"                        |
|      | G10229     | 2    | Lock Washer, 3/8"   |
|      | G10101     | 2    | Hex Nut, 3/8"-16  |
| 24.  | GA7154     | 1    | Sprocket W/Bearing, 18 Tooth                                |
| 25.  | G10001     | -    | Hex Head Cap Screw, 3/8"-16 x 1"                            |
|      | G10229     | -    | Lock Washer, 3/8"   |
|      | G10101     | -    | Hex Nut, 3/8"-16  |
| 26.  | GA2180     | 1    | Hanger Bearing, 7/8" Hex Bore                               |
| 27.  | GA5108     | 1    | Sprocket, 23 Tooth  |
|      | G3310-100  | 1    | Chain, No. 40, 100 Pitch Including Connector Link           |
|      | GR0912     | 1    | Connector Link, No. 40                                      |
| 28.  | GA11331    | 4    | Hex Lock Clamp Assembly                                     |
| 29.  | G10233     | -    | Machine Bushing, 1 1/2" x 1/32", 10 Gauge                   |
| 30.  | GA13204    | 1    | Hall Effect Sensor  |
| 31.  | GD18676    | 4    | Lug Bolt, 5/8"-18 x 2 3/4"                                  |
|      | G11254     | 4    | Serrated Flange Nut, 5/8"-18                                |
| 32.  | GA5105     | 1    | Sprocket, 15 Tooth  |
| 33.  | GA12565    | 1    | Encoder Module  |
| 34.  | GD19248    | 1    | Anti-Rotation Encoder Bracket                               |
| 35.  | GA12661    | 1    | Hex Adapter Encoder   |
|      | G11242     | -    | Hex Socket Set Screw, 1/4"-20 x 3/8"                        |
| 36.  |            |      | See "Hydraulic Motor - Located On L.H. Driveline", Page P99 |
| 37.  | GA13524    | 1    | Motor Mount Bracket   |
| 38.  | GD0740     | 1    | Hose Clamp, 3/4" x 4" x 3 1/2"                              |
| 39.  | G10397     | 1    | Hex Head Cap Screw, 1/2"-13 x 2 3/4"                        |
|      | G10206     | 1    | Washer, 1/2" SAE  |
|      | G10111     | 1    | Lock Nut, 1/2"-13   |
|      | GD5857     | 1    | Spring  |
| 40.  | GD18699    | 1    | Shoulder Bolt, 1/2"-13                                      |
|      | G10206     | 1    | Washer, 1/2" SAE  |
|      | G10111     | 1    | Lock Nut, 1/2"-13   |
|      | GD5857     | 1    | Spring  |
| 41.  | GA13234    | 1    | Idler Arm (R.H.)  |
| 42.  | GD6551     | 1    | Ring  |
| 43.  | GA5116     | 1    | Bearing, 7/8" Hex Bore, Cylindrical                         |
| 44.  | GB0374     | 1    | Chain Mount   |
| 45.  | GD1199-06  | 1    | Spacer  |
| 46.  | G10020     | 2    | Hex Head Cap Screw, 1/4"-20 x 5/8"                          |
|      | G10227     | 2    | Lock Washer, 1/4"   |
|      | G10103     | 2    | Hex Nut, 1/4"-20  |
| 47.  | GA13227    | 1    | Sensor Bracket  |
| 48.  | GD18646    | 1    | Sensor Bracket Cover  |
| 49.  | GD16355-01 | 1    | Shim, 2" x 4" x 16 Gauge                                    |
| 50.  | GD16355-02 | 1    | Shim, 2" x 4" x 10 Gauge                                    |
| 51.  | GD16355-03 | 1    | Shim, 2" x 4" x 1/4"  |
| A.   | GA13214    | 1    | Sensor Bracket Assembly (Items 30, And 46-48)               |

# R.H. HYDRAULIC MOTOR DRIVELINE ASSEMBLY

(IP1003)

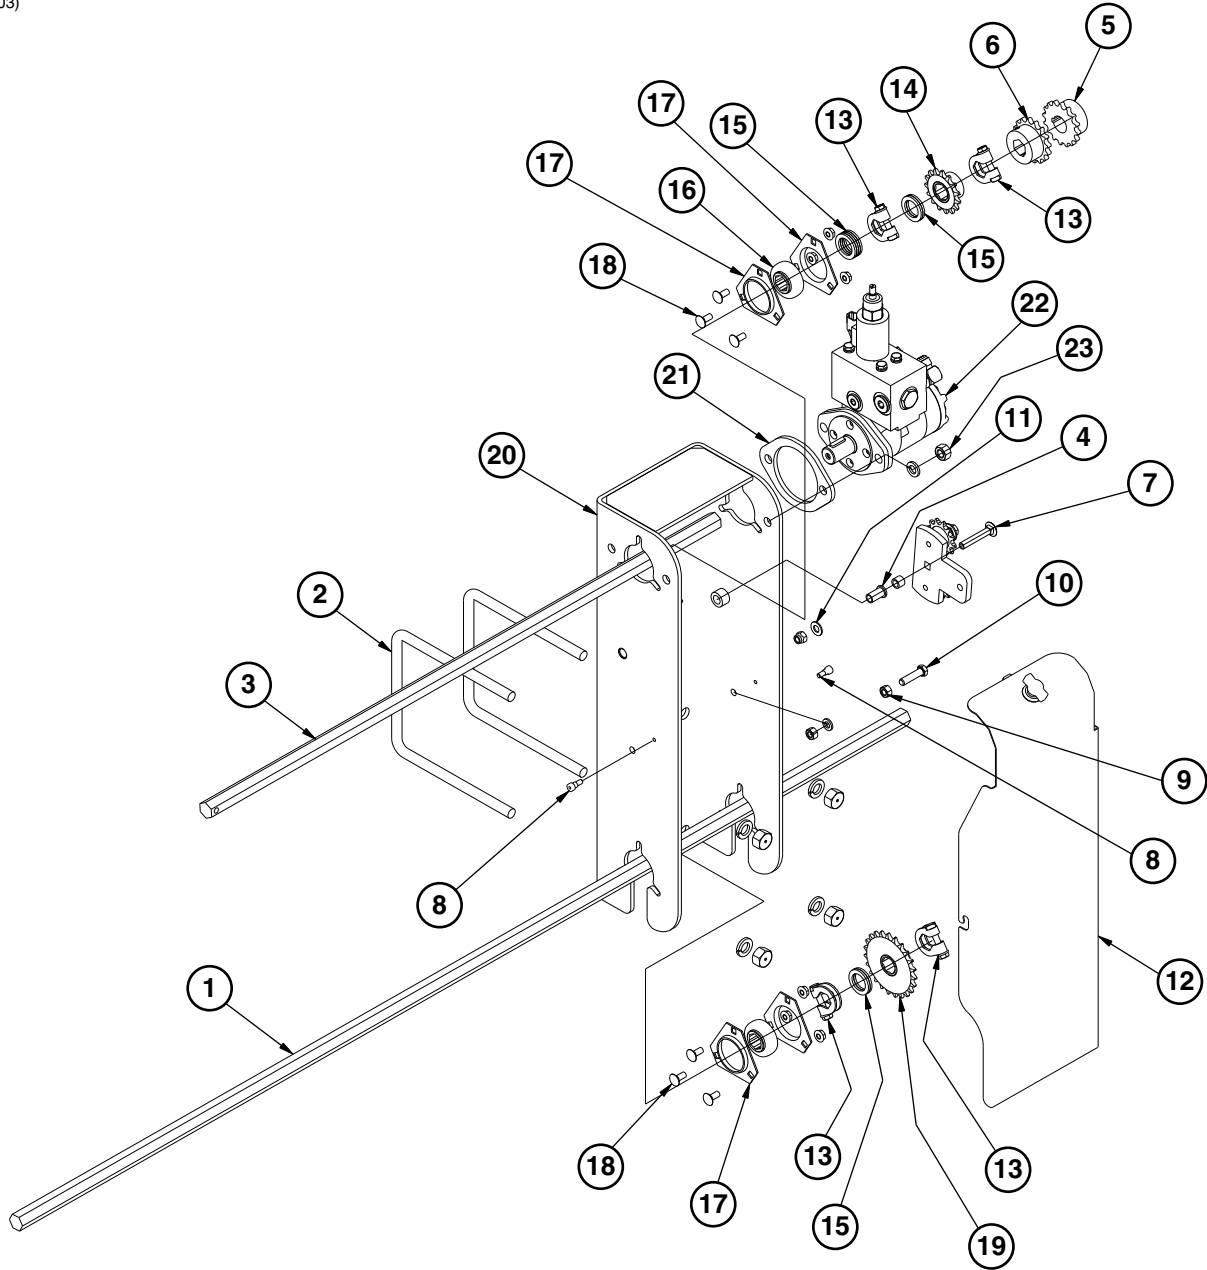


# R.H. HYDRAULIC MOTOR DRIVELINE ASSEMBLY

| ITEM | PART NO.  | QTY. | DESCRIPTION   |
|------|-----------|------|---|
| 1.   | GD0914-68 | 1    | Hex Shaft, 7/8" x 68" (No Holes)                            |
| 2.   | GD1114    | 2    | U-Bolt, 7" x 7" x 5/8"-11                                   |
|      | G10230    | 4    | Lock Washer, 5/8"   |
|      | G10104    | 4    | Hex Nut, 5/8"-11  |
| 3.   | GD2548-39 | 1    | Hex Shaft, 7/8" x 39"                                       |
| 4.   | GD2971-03 | 1    | Tube  |
|      | GD15532   | 1    | Bronze Bushing, 1"  |
| 5.   | GD16490   | 1    | Coupler, 1" I.D.  |
|      | G3317-16  | 1    | Chain, Double No. 40, 16 Pitches                            |
|      | GR1790    | -    | Connector Link, Double No. 40                               |
| 6.   | GD16489   | 1    | Coupler, 7/8" Hex   |
| 7.   | G11119    | 1    | Carriage Bolt, 3/8"-16 x 2 1/4"                             |
|      | GD5857    | 1    | Spring  |
|      | GA11287   | 1    | Idler W/Sprockets, Sleeves And Hardware                     |
|      | G11118    | 1    | Clevis Pin, 3/8" x 3/4"                                     |
|      | G10860    | 1    | Retaining Ring, 3/8"  |
| 8.   | G11293    | 2    | Hex Socket Head Shoulder Screw, 5/16"-20 x 1/4"             |
| 9.   | G10229    | 2    | Lock Washer, 3/8"   |
|      | G10101    | 1    | Hex Nut, 3/8"-16  |
| 10.  | G10003    | 1    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"                        |
| 11.  | G10203    | 1    | Washer, 3/8" SAE  |
|      | G10108    | 1    | Lock Nut, 3/8"-16   |
| 12.  | GA13525   | 1    | Hydraulic Drive Cover                                       |
| 13.  | GA11331   | 4    | Hex Lock Clamp Assembly                                     |
| 14.  | GA5105    | 1    | Sprocket, 15 Tooth  |
| 15.  | G10233    | 8    | Machine Bushing, 1 1/2" x 1/32", 10 Gauge                   |
| 16.  | G2100-03  | 2    | Bearing, 7/8" Hex Bore, Spherical                           |
| 17.  | G3400-01  | 4    | Flangette   |
| 18.  | G10620    | 6    | Serrated Flange Nut, 5/16"-18                               |
|      | G10312    | 6    | Carriage Bolt, 5/16"-18 x 3/4"                              |
| 19.  | GA5108    | 1    | Sprocket, 23 Tooth  |
|      | G3310-100 | 1    | Chain, No. 40, 100 Pitch Including Connector Link           |
|      | GR0912    | -    | Connector Link, No. 40                                      |
| 20.  | GA13524   | 1    | Motor Mount Bracket   |
| 21.  | GD19242   | 1    | Adapter Plate   |
| 22.  |           |      | See "Hydraulic Motor - Located On R.H. Driveline", Page P98 |
| 23.  | G10102    | 2    | Hex Nut, 1/2"-13  |
|      | G10016    | 2    | Hex Head Cap Screw, 1/2"-13 x 2"                            |
|      | G10228    | 2    | Lock Washer, 1/2"   |

# L.H. HYDRAULIC MOTOR DRIVELINE ASSEMBLY

(IP1001)

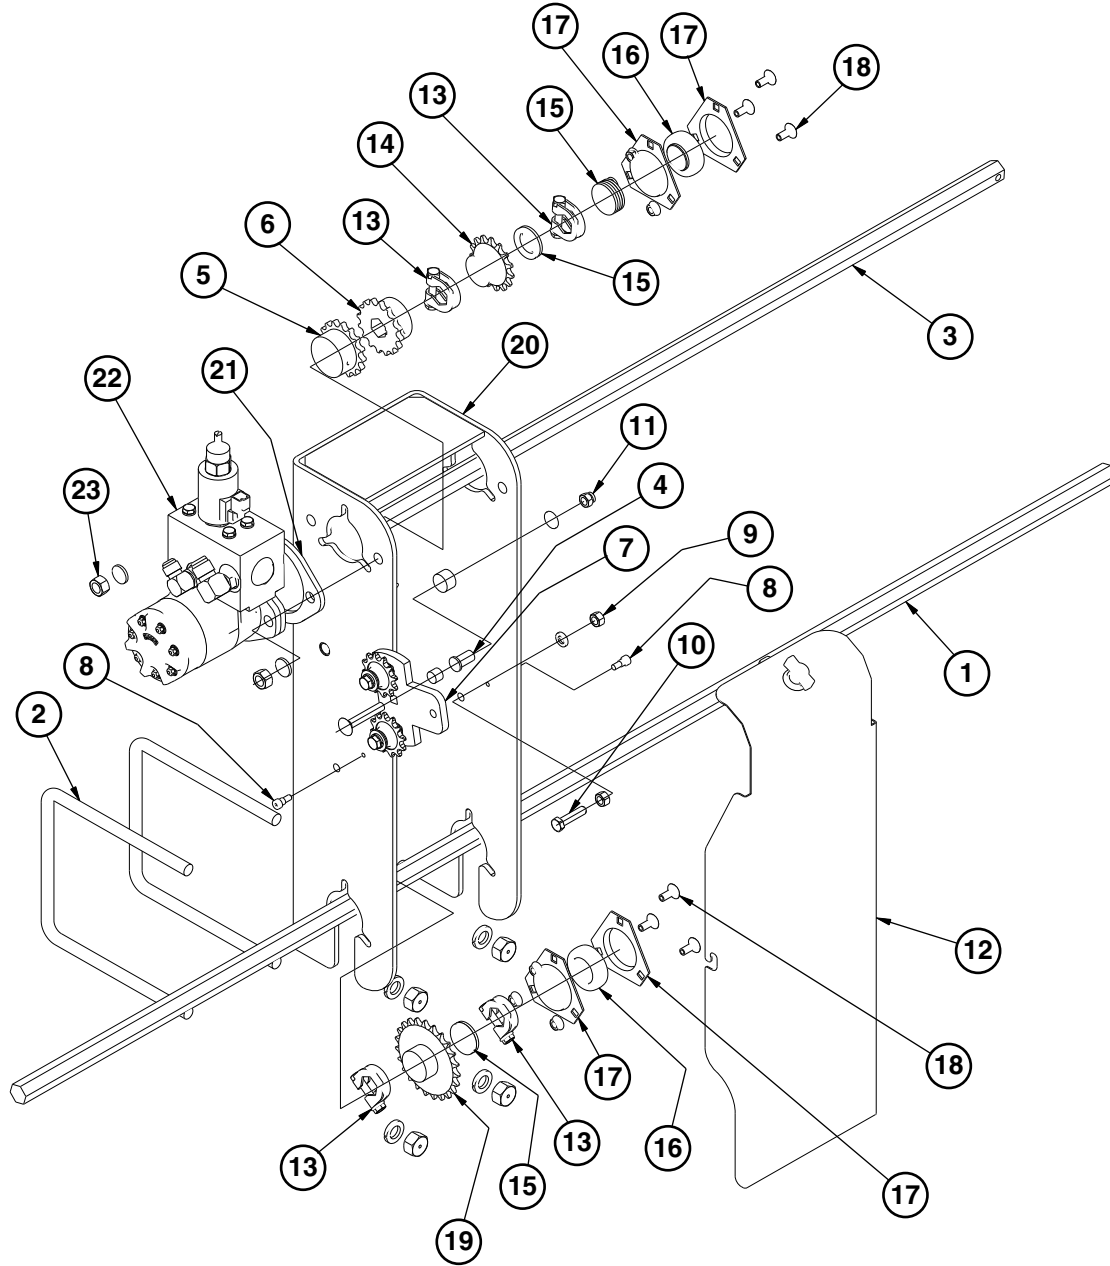


# L.H. HYDRAULIC MOTOR DRIVELINE ASSEMBLY

| ITEM | PART NO.  | QTY. | DESCRIPTION   |
|------|-----------|------|---|
| 1.   | GD0914-68 | 1    | Hex Shaft, 7/8" x 68" (No Holes)                            |
| 2.   | GD1114    | 2    | U-Bolt, 7" x 7" x 5/8"-11                                   |
|      | G10230    | 4    | Lock Washer, 5/8"   |
|      | G10104    | 4    | Hex Nut, 5/8"-11  |
| 3.   | GD2548-39 | 1    | Hex Shaft, 7/8" x 39"                                       |
| 4.   | GD15532   | 1    | Bronze Bushing, 1"  |
|      | GD2971-03 | 1    | Tube  |
| 5.   | GD16490   | 1    | Coupler, 1" I.D.  |
|      | G3317-16  | 1    | Chain, Double No. 40, 16 Pitches                            |
|      | GR1790    | -    | Connector Link, Double No. 40                               |
| 6.   | GD16489   | 1    | Coupler, 7/8" Hex   |
| 7.   | GA11287   | 1    | Idler W/Sprockets, Sleeves And Hardware                     |
|      | GD5857    | 1    | Spring  |
|      | G11119    | 1    | Carriage Bolt, 3/8"-16 x 2 1/4"                             |
|      | G11118    | 1    | Clevis Pin, 3/8" x 3/4"                                     |
|      | G10860    | 1    | Retaining Ring, 3/8"  |
| 8.   | G11293    | 2    | Hex Socket Head Shoulder Screw, 5/16"-20 x 1/4"             |
| 9.   | G10101    | 2    | Hex Nut, 3/8"-16  |
|      | G10229    | 1    | Lock Washer, 3/8"   |
| 10.  | G10003    | 1    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"                        |
| 11.  | G10108    | 1    | Lock Nut, 3/8"-16   |
|      | G10203    | 1    | Washer, 3/8" SAE  |
| 12.  | GA13525   | 1    | Hydraulic Drive Cover                                       |
| 13.  | GA11331   | 4    | Hex Lock Clamp Assembly                                     |
| 14.  | GA5105    | 1    | Sprocket, 15 Tooth  |
| 15.  | G10233    | 8    | Machine Bushing, 1 1/2" x 1/32", 10 Gauge                   |
| 16.  | G2100-03  | 2    | Bearing, 7/8" Hex Bore, Spherical                           |
| 17.  | G3400-01  | 4    | Flangette   |
| 18.  | G10312    | 6    | Carriage Bolt, 5/16"-18 x 3/4"                              |
|      | G10620    | 6    | Serrated Flange Nut, 5/16"-18                               |
| 19.  | GA5108    | 1    | Sprocket, 23 Tooth  |
|      | G3310-100 | 1    | Chain, No. 40, 100 Pitch Including Connector Link           |
|      | GR0912    | -    | Connector Link, No. 40                                      |
| 20.  | GA13524   | 1    | Motor Mount Bracket   |
| 21.  | GD19242   | 1    | Adapter Plate   |
| 22.  |           |      | See "Hydraulic Motor - Located On L.H. Driveline", Page P99 |
| 23.  | G10102    | 2    | Hex Nut, 1/2"-13  |
|      | G10228    | 2    | Lock Washer, 1/2"   |
|      | G10016    | 2    | Hex Head Cap Screw, 1/2"-13 x 2"                            |

# CLUTCH VALVE ASSEMBLIES


(IP1017)

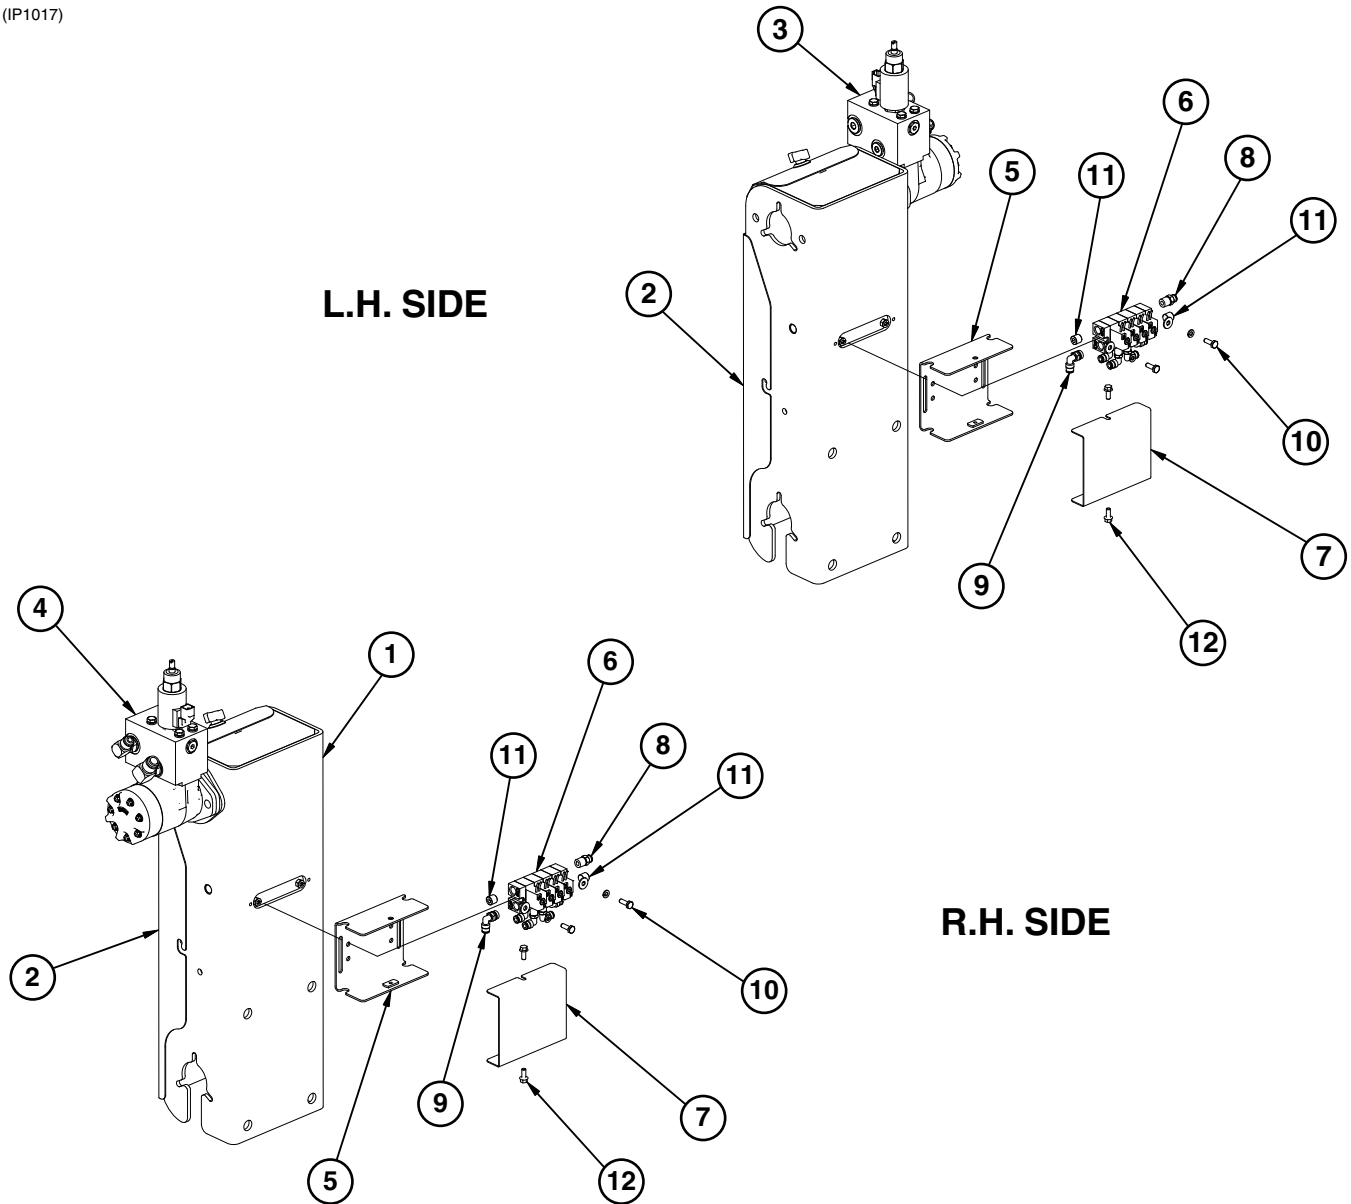

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   |          | -    | See "Hydraulic Motor Driveline Assemblies ", Pages P84-P87 |
| 2.   |          | -    | See "Hydraulic Motor Driveline Assemblies ", Pages P84-P87 |
| 3.   |          | -    | See "Hydraulic Motor Located On R.H. Driveline", Pages P98 |
| 4.   |          | -    | See "Hydraulic Motor Located On L.H. Driveline", Pages P99 |
| 5.   | GA13574  | 2    | Clutch Valve Bracket                                       |
| 6.   | GA13529  | 2    | Clutch Valve Assembly                                      |
|      | G11276   | 4    | Hex Socket Head Cap Screw, ¼"-20 X 1 ¼"                    |
|      | G10103   | 4    | Hex Nut, ¼"-20   |
| 7.   | GD19190  | 2    | Clutch Valve Cover   |
| 8.   | GD18085  | 2    | Male Connector, ¼"   |
| 9.   | GD17148  | 2    | Male Connector, ¼"   |
| 10.  | G10023   | 4    | Hex Head Cap Screw, ¼"-20 x ¾"                             |
|      | G10227   | 8    | Lock Washer, ¼"  |
|      | G10209   | 4    | Washer, ¼" USS   |
| 11.  | GD17156  | 4    | Plug, ¼" NPT   |
| 12.  | G10960   | 4    | Flanged Whiz Lock Screw, ¼"-20 x ⅝", No Serration          |

# ROW MARKER SPINDLE/HUB/BLADE

MKR020(MKR4)

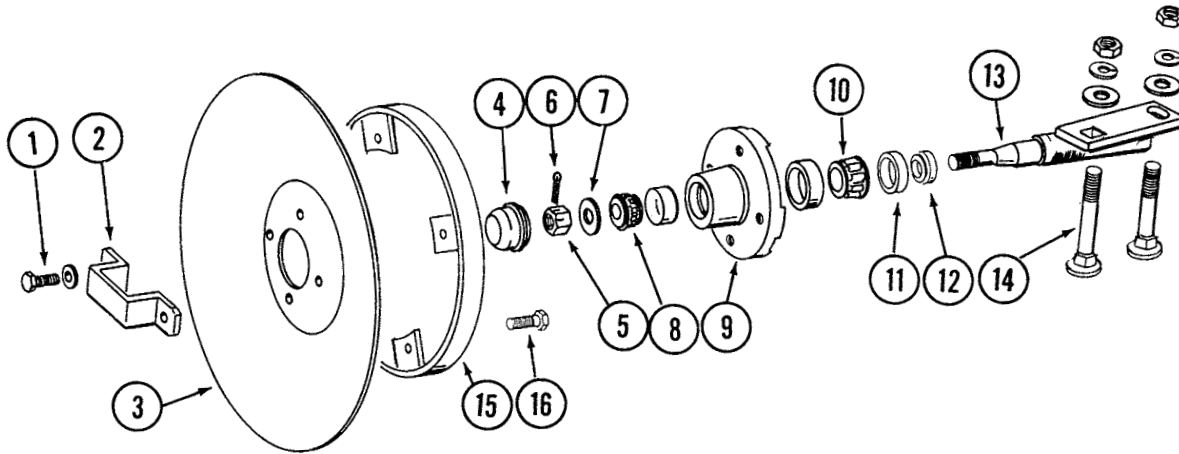


| ITEM | PART NO. | QTY.        | DESCRIPTION  |
|------|----------|-------------|--|
|      |          | (Per Assy.) |  |
| 1.   | G10722   | 4           | Hex Head Cap Screw, 1/2"-20 x 1"                     |
|      | G10228   | 4           | Lock Washer, 1/2"                                    |
| 2.   | GD2597   | 1           | Retainer   |
| 3.   | GD0746   | 1           | Disc Blade, Solid, 16" (Shown)                       |
|      | GD10283  | -           | Disc Blade, Notched, 16" (Optional)                  |
| 4.   | GD0840   | 1           | Dust Cap   |
| 5.   | G10725   | 1           | Slotted Hex Nut, 5/8"-18                             |
| 6.   | G10544   | 1           | Cotter Pin, 5/32" x 1"                               |
| 7.   | G10724   | 1           | Washer, 5/8" SAE                                     |
| 8.   | GA0257   | 1           | Bearing  |
| 9.   | GA0167   | 1           | Hub W/Cups, 4 Bolt                                   |
|      | GR0151   | -           | Outer Cup  |
|      | GR0150   | -           | Inner Cup  |
| 10.  | GA0245   | 1           | Bearing  |
| 11.  | GA0243   | 1           | Grease Seal  |
| 12.  | GA0899   | 1           | Rubber Seal  |
| 13.  | GA1676   | 1           | Spindle, R.H.  |
|      | GA1677   | -           | Spindle, L.H. (Shown)                                |
| 14.  | G10844   | 2           | Carriage Bolt, 1/2"-13 x 3 1/2"                      |
|      | G11162   | -           | Carriage Bolt, 1/2"-13 x 1 3/4"                      |
|      | G10168   | 2           | Machine Bushing, 1/2", 7 Gauge                       |
|      | G10228   | 2           | Lock Washer, 1/2"                                    |
|      | G10102   | 2           | Hex Nut, 1/2"-13                                     |
| 15.  | GA5853   | 1           | Depth Band   |
| 16.  | G10019   | 4           | Hex Head Cap Screw, 5/16"-18 x 1"                    |
|      | G10109   | 4           | Lock Nut, 5/16"-18, Grade 8                          |
| A.   | GA1679   | -           | Hub And Spindle Assembly, L.H. (Items 1, 2 And 4-13) |
|      | GA1678   | -           | Hub And Spindle Assembly, R.H. (Items 1, 2 And 4-13) |

# ROW MARKER ASSEMBLY

(FF18h/A10458)

L.H. SIDE SHOWN

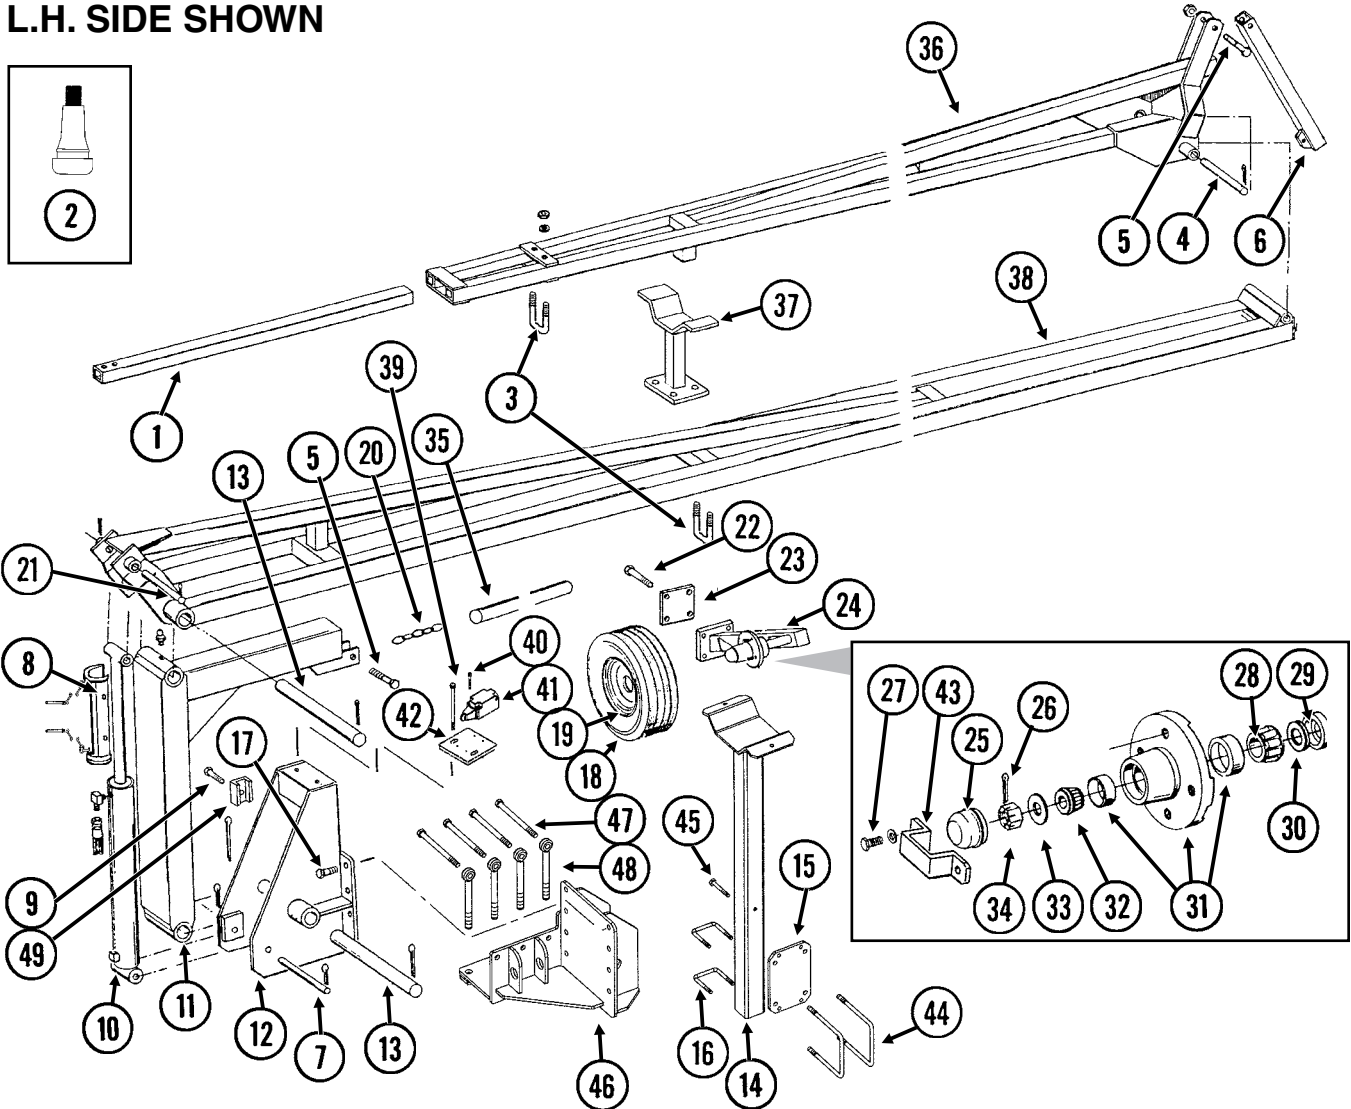

| ITEM | PART NO.  | QTY.<br>(Per Assy.) | DESCRIPTION                            |
|------|-----------|---------------------|--|
| 1.   | GD0453-07 | 1                   | Extension Tube, 45"                    |
| 2.   | GA10458   | 1                   | Valve Stem                             |
| 3.   | GD2721    | 1-3                 | U-Bolt, 2" x 2" x 1/2"-13              |
|      | G10228    | 2-6                 | Lock Washer, 1/2"                      |
|      | G10102    | 2-6                 | Hex Nut, 1/2"-13                       |
| 4.   | GD0704    | 1                   | Pin, 1 1/4" x 14"                      |
|      | G10460    | 2                   | Cotter Pin, 1/4" x 2"                  |
| 5.   | G10033    | 3                   | Hex Head Cap Screw, 1/2"-13 x 3 1/2"   |
|      | G10038    | -                   | Hex Head Cap Screw, 1/2"-13 x 3"       |
|      | G10581    | -                   | Hex Head Cap Screw, 1/2"-13 x 2 1/4"   |
|      | G10111    | 3                   | Lock Nut, 1/2"-13                      |
| 6.   | GA6860    | 1                   | Bracket                                |
| 7.   | GD10186   | 1                   | Pin, 1 1/4" x 9 1/2"                   |
|      | G10979    | -                   | Special Washer, 1 1/4" (If Applicable) |
|      | G10460    | 2                   | Cotter Pin, 1/4" x 2"                  |
| 8.   | GA8172    | 1                   | Safety Lockup W/Detent Pins, 20"       |
|      | G10536    | -                   | Detent Pin, 1/2" x 2 1/2" Grip         |
| 9.   | G10047    | 1                   | Hex Head Cap Screw, 3/8"-16 x 1 3/4"   |
|      | G10108    | 1                   | Lock Nut, 3/8"-16                      |
| 10.  | -         | -                   | See "Row Marker Cylinder", Page P97    |
| 11.  | GA6870    | 1                   | Arm, First Stage                       |




# ROW MARKER ASSEMBLY

| ITEM | PART NO.   | QTY.<br>(Per Assy.) | DESCRIPTION  |
|------|------------|---------------------|--|
| 12.  | GA4031     | 1                   | Mount W/Grease Fittings                                |
|      | G10640     | -                   | Grease Fitting, 1/4"-28                                |
| 13.  | GD0677     | 2                   | Pin, 2 1/8" x 15 3/4"                                  |
|      | G10461     | 4                   | Cotter Pin, 3/8" x 3"                                  |
| 14.  | GA12476    | 1                   | Tire Support   |
| 15.  | GD17967    | 1                   | Plate, 7 1/2" x 11 1/4"                                |
| 16.  | GD16356    | 2                   | U-Bolt, 3 1/2" x 3 1/2" x 1/2"-13                      |
|      | G10228     | 4                   | Lock Washer, 1/2"                                      |
|      | G10102     | 4                   | Hex Nut, 1/2"-13                                       |
| 17.  | G10027     | 8                   | Hex Head Cap Screw, 3/4"-10 x 2 1/2"                   |
|      | G10194     | 8                   | Washer, 3/4" SAE                                       |
|      | G10112     | 8                   | Lock Nut, 3/4"-10                                      |
| 18.  | GD15489    | 1                   | Tire, 20.5 x 8.0-10 (Specify Brand*)                   |
| 19.  | GA10457    | 1                   | Rim, 6" x 10"  |
| 20.  | G3302-05   | 1                   | Coil Chain, No. 9/0, 79 Links                          |
| 21.  | GD9964     | 1                   | Pin, 1 1/4" x 10 1/2"                                  |
|      | G10979     | -                   | Special Washer, 1 1/4" (If Applicable)                 |
|      | G10460     | 2                   | Cotter Pin, 1/4" x 2"                                  |
| 22.  | G10063     | 8                   | Hex Head Cap Screw, 3/8"-16 x 4"                       |
|      | G10210     | -                   | Washer, 3/8" USS (As Required)                         |
|      | G10229     | 8                   | Lock Washer, 3/8"                                      |
|      | G10101     | 8                   | Hex Nut, 3/8"-16                                       |
| 23.  | GD0692     | 2                   | Mounting Plate, 5" x 4"                                |
| 24.  | GA0160R    | 1                   | Support, R.H.  |
|      | GA0160L    | -                   | Support, L.H. (Shown)                                  |
| 25.  | GD0840     | 1                   | Dust Cap   |
| 26.  | G10544     | 1                   | Cotter Pin, 5/32" x 1"                                 |
| 27.  | G10722     | 4                   | Hex Head Cap Screw, 1/2"-20 x 1"                       |
|      | G10228     | 4                   | Lock Washer, 1/2"                                      |
| 28.  | GA0245     | 1                   | Bearing  |
| 29.  | GA0243     | 1                   | Grease Seal  |
| 30.  | GA0899     | 1                   | Rubber Seal  |
| 31.  | GA0167     | 1                   | Hub W/Cups, 4 Bolt                                     |
|      | GR0151     | -                   | Outer Cup  |
|      | GR0150     | -                   | Inner Cup  |
| 32.  | GA0257     | 1                   | Bearing  |
| 33.  | G10724     | 1                   | Washer, 5/8" SAE                                       |
| 34.  | G10725     | 1                   | Slotted Hex Nut, 5/8"-18                               |
| 35.  | GD10674-01 | 1                   | Nylon Cover, 141"                                      |
| 36.  | GA9103     | -                   | Arm W/Grease Fittings, Third Stage, 117"               |
|      | G10640     | -                   | Grease Fitting, 1/4"-28                                |
| 37.  | GA9101     | 1                   | Stop Weld  |
| 38.  | GA9102     | 1                   | Arm W/Grease Fittings, Second Stage, 185"              |
|      | G10640     | -                   | Grease Fitting, 1/4"-28                                |
| 39.  | G10764     | 2                   | Hex Head Cap Screw, 5/16"-18 x 5"                      |
|      | G10221     | 2                   | Washer, 5/16" SAE                                      |
|      | G10109     | 2                   | Lock Nut, 5/16"-18, Grade 8                            |
| 40.  | G11167     | 4                   | Hex Socket Head Cap Screw, No. 10-32 x 1 1/2", Grade 8 |
| 41.  | GA13474    | 1                   | Limit Switch   |
| 42.  | GD16175    | 1                   | Mount  |
| 43.  | GD2597     | 1                   | Retainer   |
| 44.  | GD14559    | 2                   | U-Bolt, 7" x 7" x 5/8"-11 (9" Long)                    |
|      | G10230     | 4                   | Lock Washer, 5/8"                                      |
|      | G10104     | 4                   | Hex Nut, 5/8"-11                                       |
| 45.  | G10045     | 1                   | Hex Head Cap Screw, 1/2"-13 x 4 1/2"                   |
|      | G10111     | 1                   | Lock Nut, 1/2"-13                                      |
| 46.  | GA12475    | 1                   | Mount, L.H. (Shown)                                    |
|      | GA12474    | -                   | Mount, R.H.  |
| 47.  | G10477     | 4                   | Hex Head Cap Screw, 3/4"-10 x 10"                      |
|      | GD2169     | 4                   | Special Washer, 25/32" I.D. x 1 1/4" O.D., Hardened    |
|      | G10112     | 4                   | Lock Nut, 3/4"-10                                      |
| 48.  | GD15283    | 4                   | Eyebolt, 1"-14 x 10"                                   |
|      | GD10231    | 4                   | Special Washer, 1 1/16" I.D. x 2" O.D.                 |
|      | G11108     | 4                   | Lock Nut, 1"-14  |
| 49.  | GD5875     | 1                   | Hose Clamp, 3/16" x 2 1/2" x 2"                        |
| A.   | GA10409    | -                   | Tire And Rim Assembly (Items 2, 18 And 19)             |

\* Hydraulic hose is not stocked by KINZE® Repair Parts, but can be made available on a special order basis. Call for quote.

# MASTER CYLINDER


(CYL58)

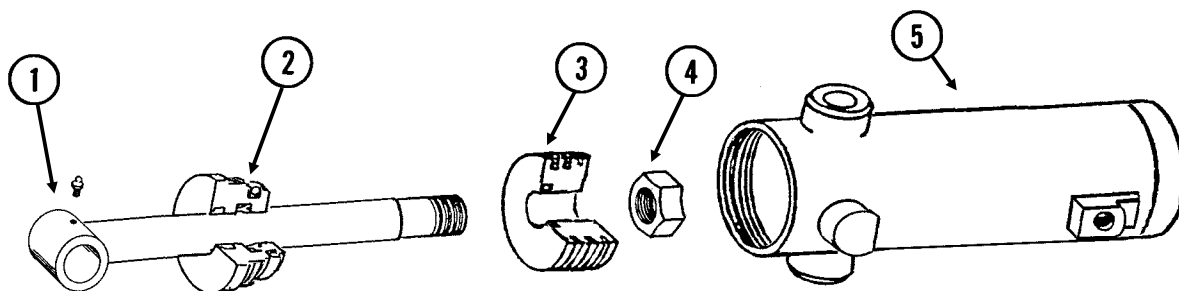

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA10359  | 1    | Rod Assembly W/Grease Fitting  |
|      | G10640   | -    | Grease Fitting, 1/4"-28  |
| 2.   | GD14898  | 1    | Gland  |
| 3.   | GD14897  | 1    | Piston   |
| 4.   | G10958   | 1    | Lock Nut, 1"-14  |
| 5.   | A10361   | 1    | Barrel ( <b>Non-Stock Item</b> )   |
| A.   | GA10362  | -    | Cylinder Complete, 4" x 8" ( <i>Part Number Stamped On Barrel</i> )  |
| B.   | GR1688   | -    | Seal Kit, Includes: (2) O-Rings, (1) U-Cup, (1) Wiper, (1) Expander, (2) Cast Iron Rings, (1) BU Ring, (1) Piston Seal |

# MASTER CYLINDER


(CYL58)

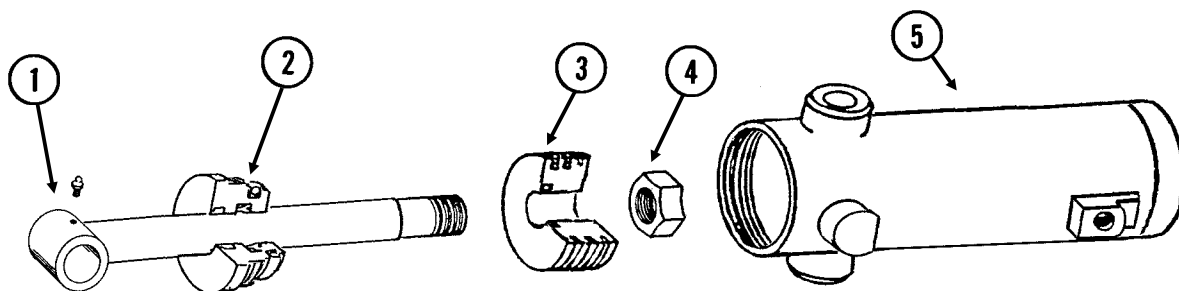

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA10359  | 1    | Rod Assembly W/Grease Fitting  |
|      | G10640   | -    | Grease Fitting, 1/4"-28  |
| 2.   | GD14898  | 1    | Gland  |
| 3.   | GD14897  | 1    | Piston   |
| 4.   | G10958   | 1    | Lock Nut, 1"-14  |
| 5.   | A13311   | 1    | Barrel ( <b>Non-Stock Item</b> )   |
| A.   | GA13312  | -    | Cylinder Complete, 4" x 8" ( <i>Part Number Stamped On Barrel</i> )  |
| B.   | GR1688   | -    | Seal Kit, Includes: (2) O-Rings, (1) U-Cup, (1) Wiper, (1) Expander, (2) Cast Iron Rings, (1) BU Ring, (1) Piston Seal |

# SLAVE/LIFT ASSIST CYLINDERS


(CYL59)

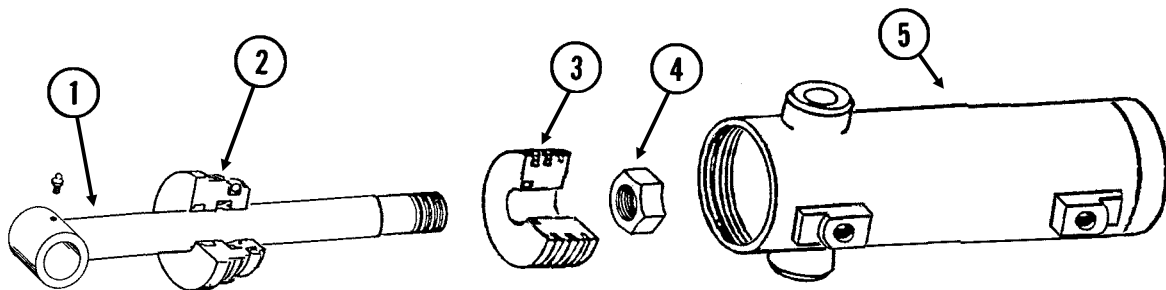

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GA10363  | 1    | Rod Assembly W/Grease Fitting   |
|      | G10640   | -    | Grease Fitting, 1/4"-28   |
| 2.   | GD14902  | 1    | Gland   |
| 3.   | GD14901  | 1    | Piston  |
| 4.   | G10958   | 1    | Lock Nut, 1"-14   |
| 5.   | A10365   | 1    | Barrel <b>(Non-Stock Item)</b>  |
| A.   | GA10366  | -    | Cylinder Complete, 3 3/4" x 8" <i>(Part Number Stamped On Barrel)</i>   |
| B.   | GR1689   | -    | Seal Kit, Includes: (2) O-Rings, (1) U-Cup, (1) Wiper, (1) Seal, (2) Cast Iron Rings, (1) BU Ring, (1) Expander |

# SLAVE/LIFT ASSIST CYLINDERS


CYL026(CYL4d)

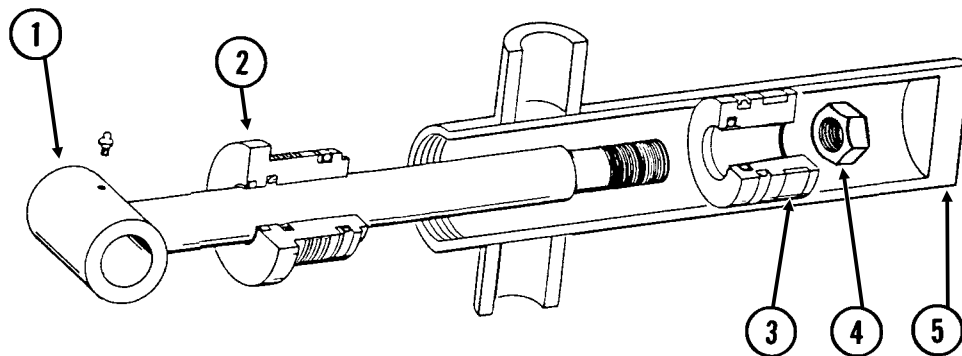

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA8831   | 1    | Rod Assembly W/Grease Fitting  |
|      | G10640   | -    | Grease Fitting, 1/4"-28  |
| 2.   | GD11985  | 1    | Gland  |
| 3.   | GD11986  | 1    | Piston   |
| 4.   | G10969   | 1    | Lock Nut, 7/8"-14  |
| 5.   | A8827    | 1    | Barrel <b>(Non-Stock Item)</b>   |
| A.   | GA8828   | -    | Cylinder Complete, 2 1/2" x 8" <i>(Part Number Stamped On Barrel)</i>          |
| B.   | GR1522   | -    | Seal Kit, Includes: (1) T-Seal, (2) O-Rings, (1) BU Ring, (1) U-Cup, (1) Wiper |

# WING FOLD CYLINDER


(CYL15e)

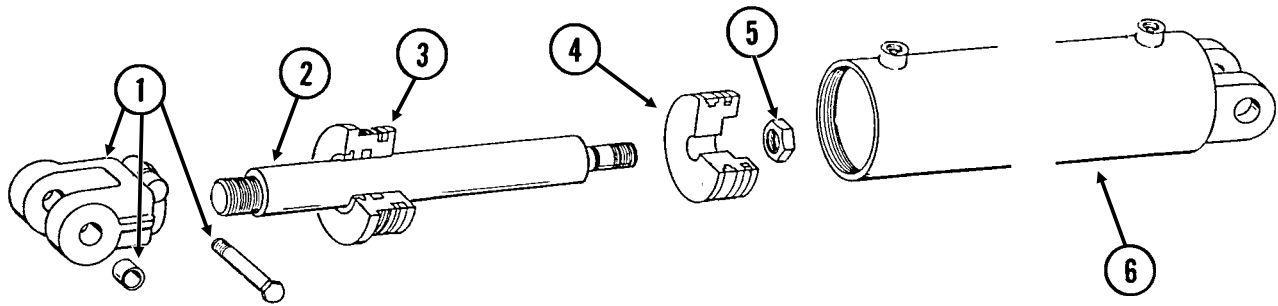

| ITEM | PART NO. | QTY | DESCRIPTION   |
|------|----------|-----|---|
| 1.   | GA8130   | 1   | Clevis W/Bushings, Hex Head Cap Screw And Hex Nut   |
|      | GD11751  | 2   | Steel Bushing, 1" Wide  |
|      | G10939   | 1   | Hex Head Cap Screw, 3/8"-16 x 2 1/4"  |
|      | G10101   | 1   | Hex Nut, 3/8"-16  |
| 2.   | GD14908  | 1   | Rod   |
| 3.   | GD12522  | 1   | Gland   |
| 4.   | GD14910  | 1   | Piston  |
| 5.   | G10972   | 1   | Lock Nut, 1 1/4"-12   |
| 6.   | A10372   | 1   | Barrel <b>(Non-Stock Item)</b>  |
| A.   | GA10373  | -   | Cylinder Complete, 4 1/2" x 30" <i>(Part Number Stamped On Barrel)</i>  |
| B.   | GR1691   | -   | Seal Kit (For Cylinder And Counter Balance Valve), Includes:<br>(1) Wiper, (1) U-Cup, (3) O-Rings, (1) BU Ring, (1) T-Seal, (1) Wear Ring |

# TONGUE LATCH AND SLIDE LATCH CYLINDER


CYL035(CYL9d)

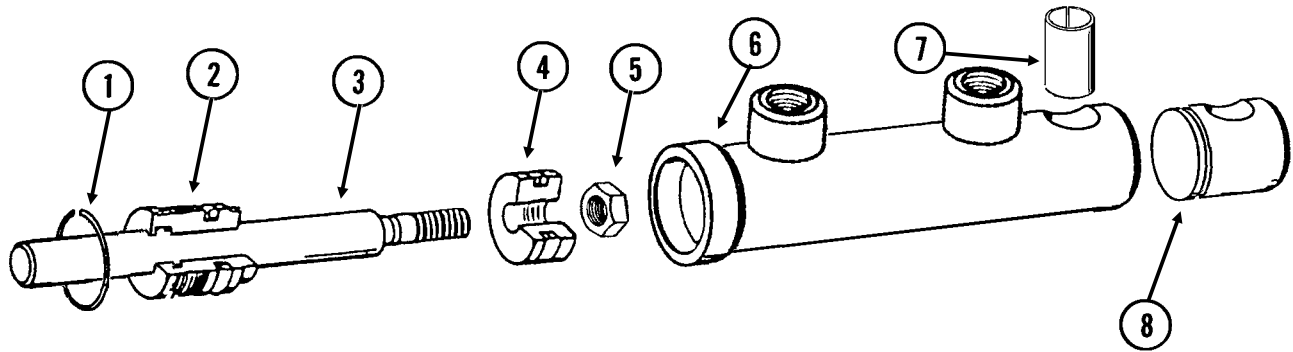

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | G10770   | 1    | Internal Retaining Ring, 1 1/16"  |
| 2.   | GD13170  | 1    | Gland   |
| 3.   | GD13171  | 1    | Rod   |
| 4.   | GD13172  | 1    | Piston  |
| 5.   | G11016   | 1    | Lock Nut, 1/2"-20   |
| 6.   | D13169   | 1    | Barrel ( <b>Non-Stock Item</b> )  |
| 7.   | GD13400  | 1    | Tension Bushing, 1" x 2" Long   |
| 8.   | GD13173  | 1    | End Cap   |
| A.   | GA9205   | -    | Cylinder Complete, 1 1/2" x 2 1/2" ( <i>Part Number Stamped On Barrel</i> )                         |
| B.   | GR1598   | -    | Seal Kit, Includes: (3) O-Rings, (2) BU Rings, (1) Wiper, (1) T-Seal, (1) Bronze Bushing, (1) U-Cup |

# TRANSPORT AXLE CYLINDER


(CYL54d/D12239)

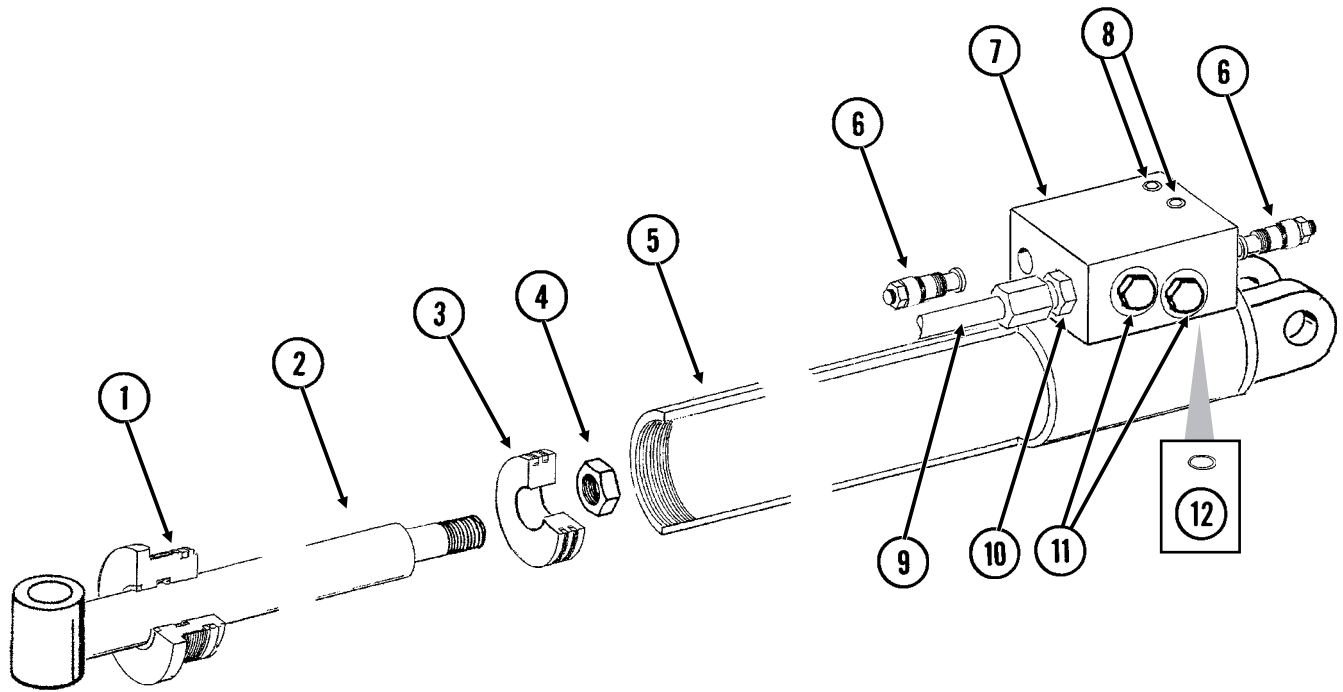

| ITEM           | PART NO. | QTY. | DESCRIPTION   |
|----------------|----------|------|---|
| (Per Cylinder) |          |      |   |
| 1.             | GD12522  | 1    | Gland   |
| 2.             | GA10253  | 1    | Rod Assembly  |
| 3.             | GD15774  | 1    | Piston  |
| 4.             | G10972   | 1    | Lock Nut, 1 1/4"-12   |
| 5.             | A10255   | 1    | Barrel ( <b>Non-Stock Item</b> )  |
| 6.             | GA10714  | 2    | Counter Balance Valve   |
| 7.             | GD15623  | 1    | Block   |
| 8.             | G10932   | 2    | Hex Socket Head Cap Screw, 5/16"-18 x 2", Grade 8   |
| 9.             | GA10623  | 1    | Steel Hydraulic Line, 23 1/4"   |
| 10.            | G6400-08 | 2    | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring  |
|                | GR1037   | -    | O-Ring  |
| 11.            | G6408-08 | -    | Plug W/O-Ring, 3/4"-16 O-Ring   |
|                | GR1037   | -    | O-Ring  |
| 12.            | GD12239  | 1    | O-Ring, No. 016   |
| A.             | GA10256  | -    | Cylinder Complete, 4 1/2" x 28" ( <i>Part Number Stamped On Barrel</i> )  |
| B.             | GR1691   | -    | Seal Kit (For Cylinder And Counter Balance Valve), Includes:<br>(1) Wiper, (1) U-Cup, (3) O-Rings, (1) BU Ring, (1) T-Seal, (1) Wear Ring |
| C.             | GR1517   | -    | Seal Kit For Counter Balance Valve, Includes: (3) O-Rings, (3) BU Rings   |

# ROW MARKER CYLINDER


(CYL032d)

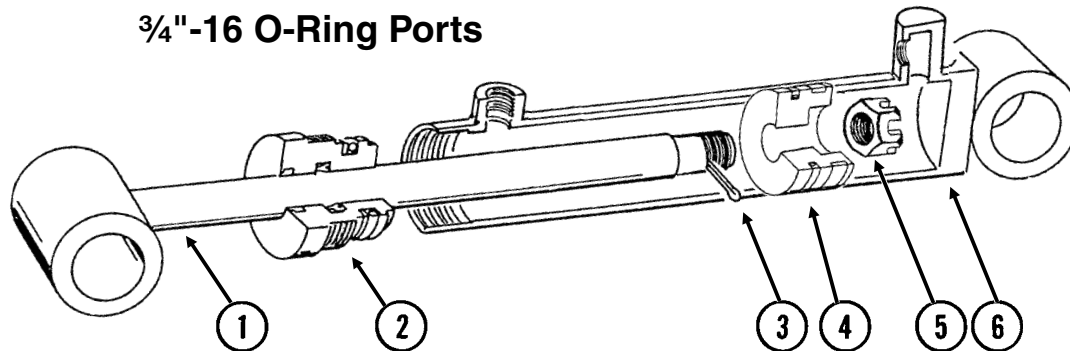

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA8948   | 1    | Rod Assembly   |
| 2.   | GD12548  | 1    | Gland  |
| 3.   | G10984   | 1    | Cotter Pin, 3/16" x 2 1/2"   |
| 4.   | GD12550  | 1    | Piston   |
| 5.   | G10983   | 1    | Slotted Hex Nut, 1 1/8"-12   |
| 6.   | A8950    | 1    | Barrel ( <b>Non-Stock Item</b> )   |
| A.   | GA8951   | -    | Cylinder Complete, 3 1/2" x 20" ( <i>Part Number Stamped On Barrel</i> )                           |
| B.   | GR1532   | -    | Seal Kit, Includes: (2) O-Rings, (1) U-Cup, (1) Wiper, (1) T-Seal, (1) BU Ring, (1) Cast Iron Ring |

# HYDRAULIC MOTOR - LOCATED ON R.H. DRIVELINE

(IP1008)

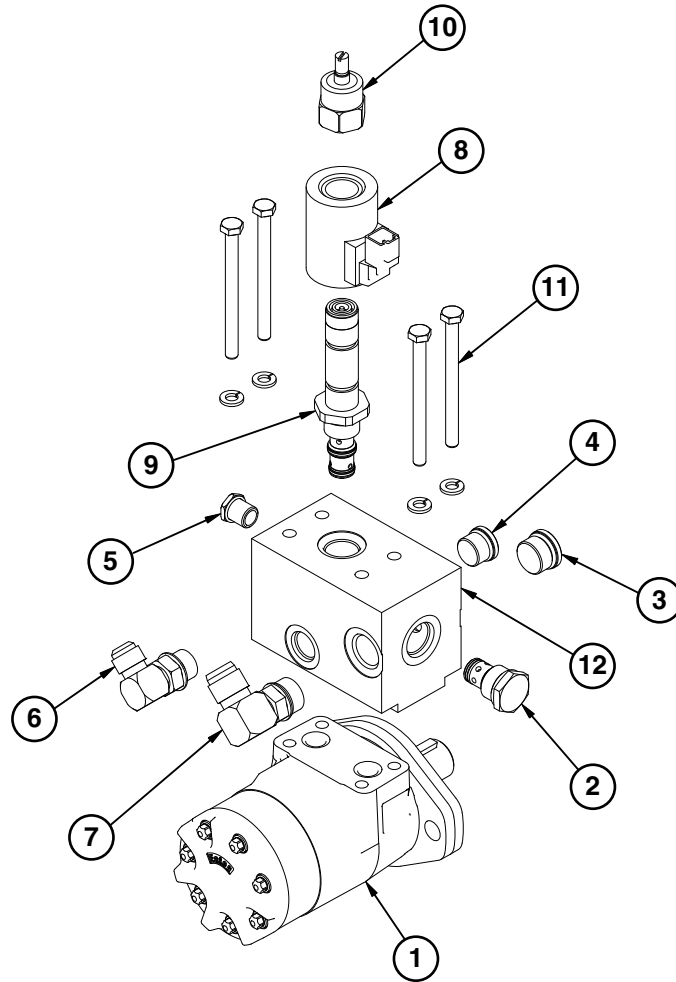


| ITEM | PART NO.    | QTY. | DESCRIPTION                                     |
|------|-------------|------|---|
| 1.   | GA13633     | 1    | Hydraulic Motor                                 |
| 2.   | GA4293      | 1    | Check Valve                                     |
| 3.   | G6408-H10-0 | 1    | Hex Socket Head Plug W/O-Ring, 7/8"-14 O-Ring   |
| 4.   | G6408-H08-0 | 1    | Hex Socket Head Plug W/O-Ring, 3/4"-16          |
| 5.   | G6408-H06-0 | 1    | Hex Socket Head Plug W/O-Ring, 9/16"-18         |
| 6.   | G6801-08    | 1    | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring |
| 7.   | G6801-10    | 1    | Elbow W/O-Ring, 90°, 7/8"-14 Male JIC To O-Ring |
|      | GR1466      | -    | O-Ring  |
| 8.   | GA13079     | 1    | Coil  |
| 9.   | GA13078     | 1    | Proportional Valve                              |
| 10.  | GR1846      | 1    | Manual Override                                 |
| 11.  | G11309      | 4    | Hex Head Cap Screw, 5/16"-18 x 3 3/4"           |
|      | G10232      | 4    | Lock Washer, 5/16"                              |
| 12.  | GD19440     | 1    | Valve Block                                     |



# HYDRAULIC MOTOR - LOCATED ON L.H. DRIVELINE


(IP1009)

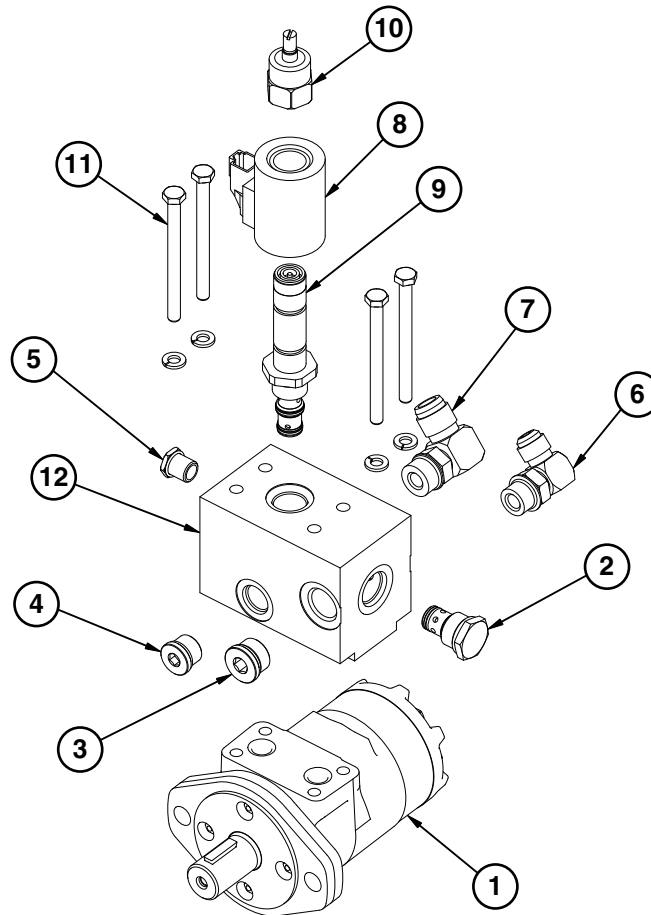

| ITEM | PART NO.    | QTY. | DESCRIPTION                                     |
|------|-------------|------|---|
| 1.   | GA13633     | 1    | Hydraulic Motor                                 |
| 2.   | GA4293      | 1    | Check Valve                                     |
| 3.   | G6408-H10-0 | 1    | Hex Socket Head Plug W/O-Ring, 7/8"-14 O-Ring   |
| 4.   | G6408-H08-0 | 1    | Hex Socket Head Plug W/O-Ring, 3/4"-16          |
| 5.   | G6408-H06-0 | 1    | Hex Socket Head Plug W/O-Ring, 5/16"-18         |
| 6.   | G6801-08    | 1    | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring |
| 7.   | G6801-10    | 1    | Elbow W/O-Ring, 90°, 7/8"-14 Male JIC To O-Ring |
|      | GR1466      | -    | O-Ring  |
| 8.   | GA13079     | 1    | Coil  |
| 9.   | GA13078     | 1    | Proportional Valve                              |
| 10.  | GR1846      | 1    | Manual Override                                 |
| 11.  | G11309      | 4    | Hex Head Cap Screw, 5/16"-18 x 3 3/4"           |
|      | G10232      | 4    | Lock Washer, 5/16"                              |
| 12.  | GD19440     | 1    | Valve Block                                     |

# VALVE BLOCKS - LOCATED ON HITCH

(FWD157)

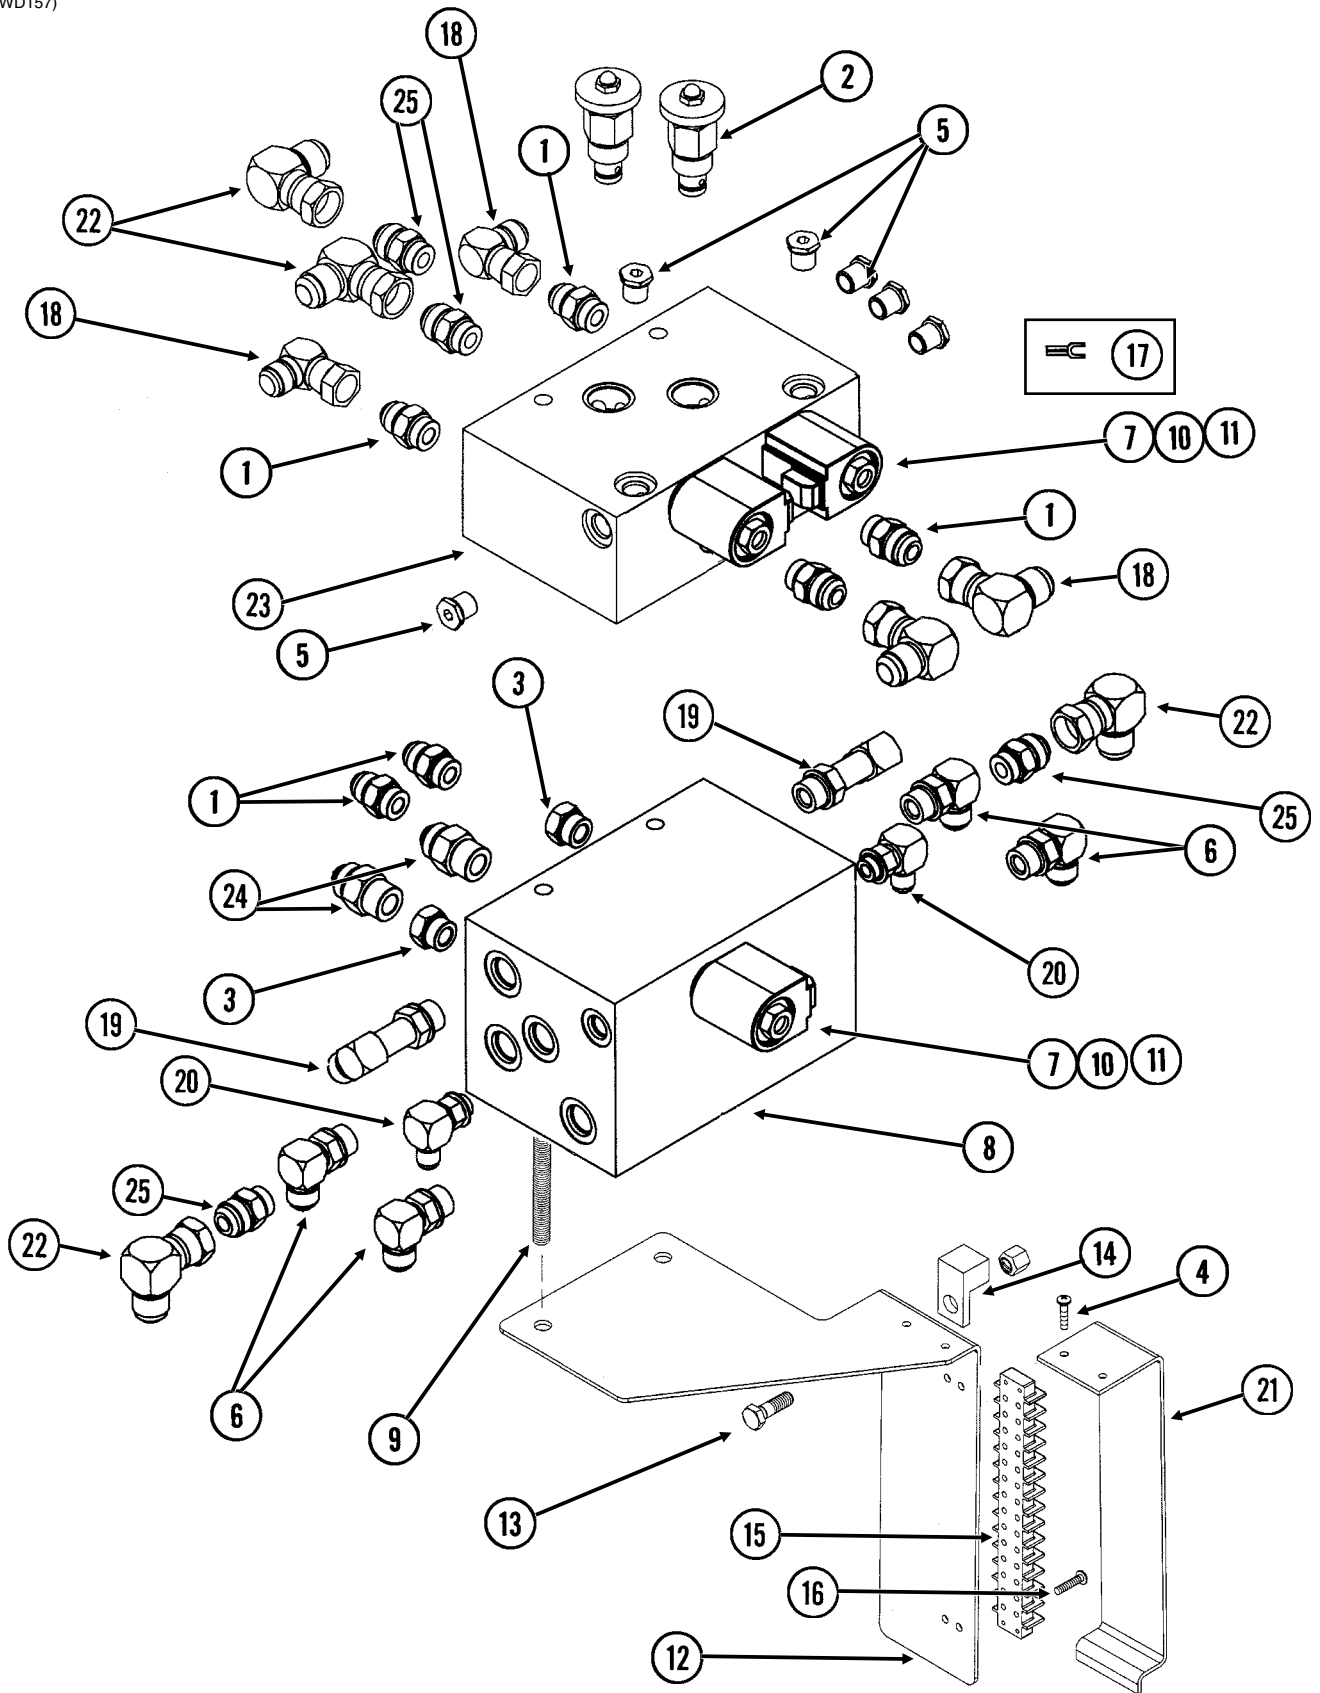


# VALVE BLOCKS - LOCATED ON HITCH

| ITEM | PART NO.    | QTY. | DESCRIPTION   |
|------|-------------|------|---|
| 1.   | G6400-08    | 6    | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring                    |
|      | GR1037      | -    | O-Ring  |
| 2.   | GA3413      | 2    | Flow Control Valve  |
|      | GR0764      | -    | Seal Kit, Includes: (2) O-Rings, (1) BU Ring                      |
| 3.   | G6408-08    | 2    | Plug W/O-Ring, 3/4"-16 O-Ring                                     |
|      | GR1037      | -    | O-Ring  |
| 4.   | G11067      | 2    | Phillips Pan Head Machine Screw, No. 8-32 x 3/4", Stainless Steel |
|      | G10928      | 2    | Hex Nut, No. 8-32, Stainless Steel                                |
| 5.   | G6408-H06-0 | 6    | Hex Socket Head Plug W/O-Ring, 9/16"-18 O-Ring                    |
|      | GR1045      | -    | O-Ring  |
| 6.   | G6801-08    | 6    | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring                   |
|      | GR1037      | -    | O-Ring  |
| 7.   | GR0761      | 3    | Special Hex Nut, 1/2"-20  |
| 8.   | GD18096     | 1    | Block   |
| 9.   | GD15187-01  | 2    | Threaded Rod, 3/8"-16 x 13"                                       |
|      | G10203      | 2    | Washer, 3/8" SAE  |
|      | G10108      | 2    | Lock Nut, 3/8"-16   |
| 10.  | GR0763      | 3    | Cartridge   |
| 11.  | GR1445      | 3    | Coil  |
| 12.  | GD15634     | 1    | Mount   |
| 13.  | G10002      | 1    | Hex Head Cap Screw, 3/8"-16 x 3/4"                                |
|      | G10622      | 1    | Serrated Flange Nut, 3/8"-16                                      |
| 14.  | GA3584      | 1    | Ground Clamp  |
| 15.  | GA9097      | 1    | Terminal Strip W/Screws, No. 6, 14 Terminal                       |
|      | GR1635      | -    | Screw, No. 6-32 x 1/4"  |
| 16.  | G11067      | 2    | Phillips Pan Head Machine Screw, No. 8-32 x 3/4", Stainless Steel |
| 17.  | G10996      | 3    | Fork Terminal   |
| 18.  | G6500-08    | 4    | Swivel Elbow, 90°, 3/4"-16 Male JIC To Female                     |
| 19.  | G6400-L-08  | 2    | Long Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring               |
|      | GR1037      | -    | O-Ring  |
| 20.  | G6801-06    | 2    | ElbowW/O-Ring, 90°, 9/16"-18 Male JIC To O-Ring                   |
|      | GR1045      | -    | O-Ring  |
| 21.  | GD16146     | 1    | Cover   |
| 22.  | G6500-10    | 4    | Swivel Elbow, 90°, 7/8"-14 Male JIC To Female                     |
| 23.  | GD14923     | 1    | Block   |
| 24.  | G6400-10    | 2    | Connector W/O-Ring, 7/8"-14 Male JIC To O-Ring                    |
|      | GR1466      | -    | O-Ring  |
| 25.  | G6400-10-08 | 4    | Connector W/O-Ring, 7/8"-14 Male JIC To 3/4"-16 O-Ring            |

# VALVE BLOCK - LOCATED AT CENTER OF REAR H-FRAME

(A12639a/A9481/D18137)

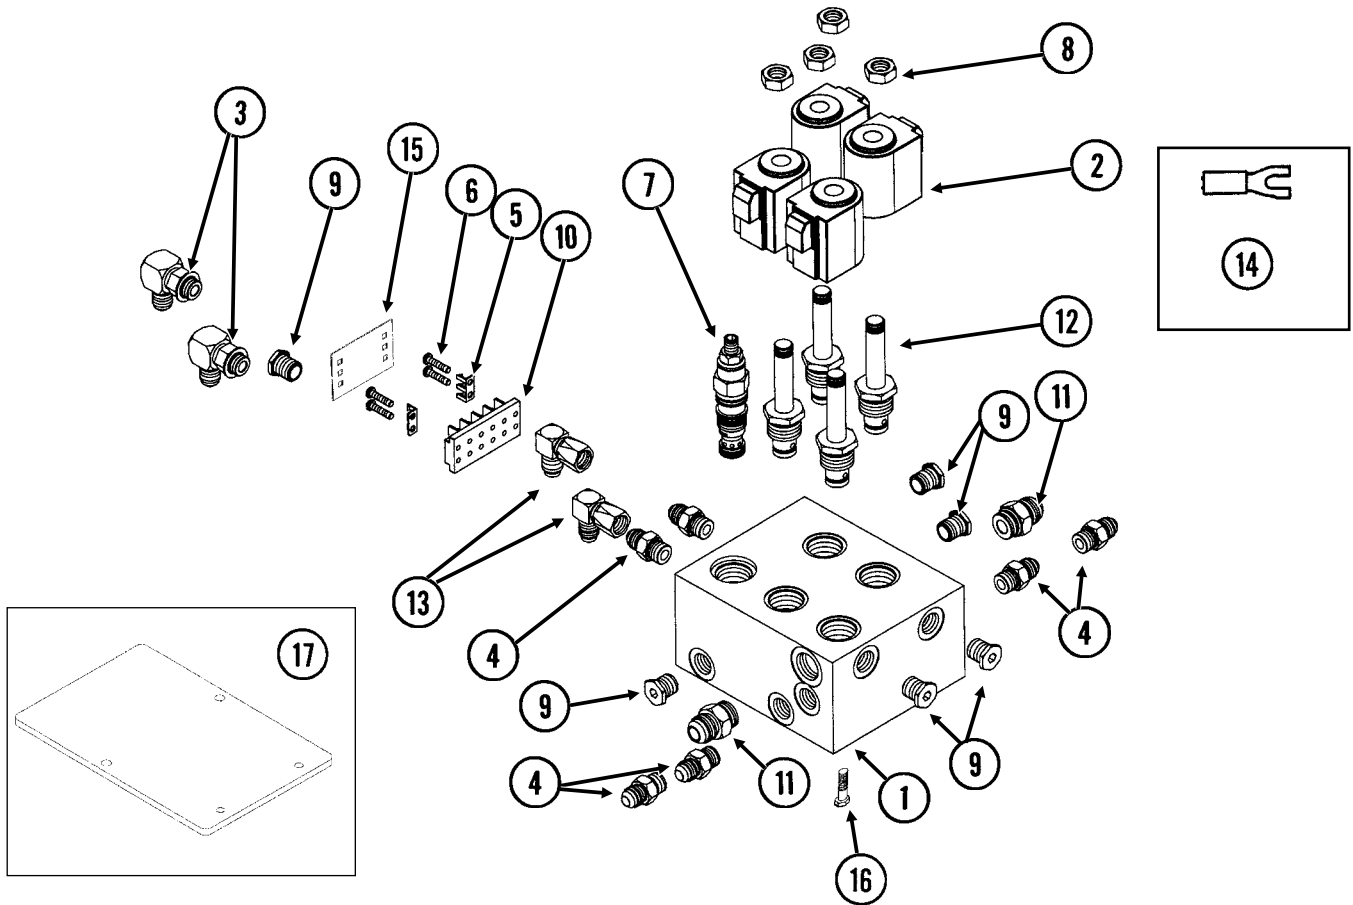


| ITEM | PART NO.    | QTY. | DESCRIPTION   |
|------|-------------|------|---|
| 1.   | GD18097     | 1    | Block   |
| 2.   | GR1445      | 4    | Coil  |
| 3.   | G6801-06    | 2    | Elbow W/O-Ring, 90°, 1/16"-18 Male JIC To O-Ring                        |
|      | GR1045      | -    | O-Ring  |
| 4.   | G6400-06    | 6    | Connector W/O-Ring, 1/16"-18 Male JIC To O-Ring                         |
|      | GR1045      | -    | O-Ring  |
| 5.   | GD18100     | 2    | Clip  |
| 6.   | G11067      | 4    | Phillips Pan Head Machine Screw, No. 8-32 x 3/4", Stainless Steel       |
| 7.   | GA10632     | 1    | Counter Balance Valve   |
| 8.   | GR0761      | 4    | Special Hex Nut, 1/2"-20  |
| 9.   | G6408-H06-0 | 6    | Hex Socket Head Plug W/O-Ring, 1/16"-18 O-Ring                          |
|      | GR1045      | -    | O-Ring  |
| 10.  | GA9510      | 1    | Terminal Strip W/Screws, No. 6, 4 Terminal                              |
|      | GR1635      | -    | Screw, No. 6-32 x 1/4"  |
| 11.  | G6400-08    | 2    | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring                          |
|      | GR1037      | -    | O-Ring  |
| 12.  | GR0763      | 4    | Cartridge   |
| 13.  | G6500-06    | 2    | Swivel Elbow, 90°, 1/16"-18 Male JIC To Female                          |
| 14.  | G10996      | 4    | Fork Terminal   |
| 15.  | GD18101     | 1    | Cover   |
| 16.  | G10171      | 2    | Hex Head Cap Screw, 5/16"-18 x 1 1/4"                                   |
|      | G10232      | 2    | Lock Washer, 5/16"  |
|      | G10221      | 2    | Washer, 5/16" SAE   |
| 17.  | GD18137     | 1    | Plate, 5" x 7 3/4"  |
| A.   | GR1517      | -    | Seal Kit For Counter Balance Valve, Includes: (3) O-Rings, (3) BU Rings |

# JUNCTION BLOCK - LOCATED ON EACH WING

(A12663/D18099)


## L.H. SIDE SHOWN

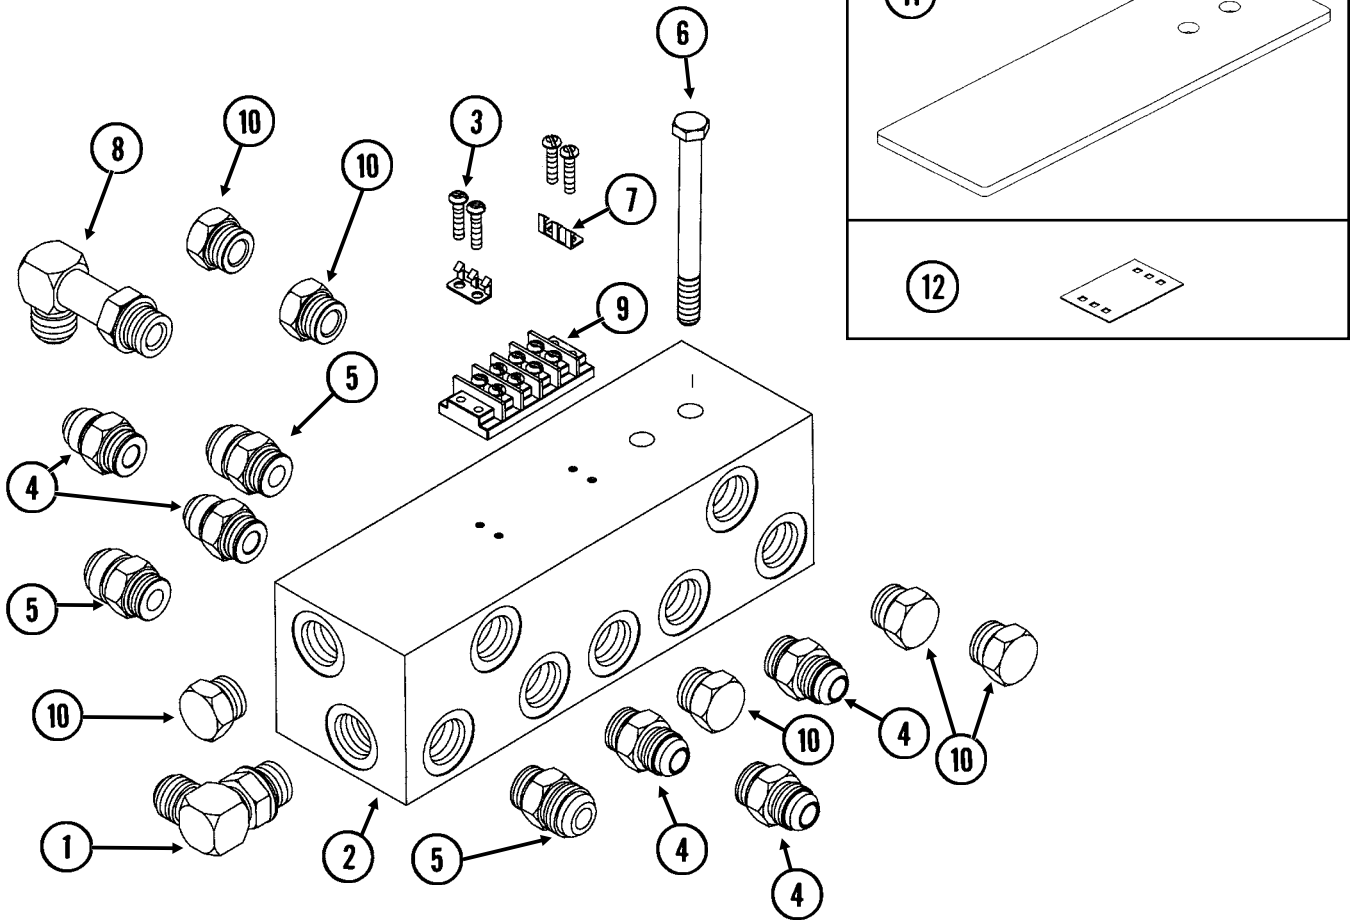

| ITEM | PART NO.              | QTY.        | DESCRIPTION  |
|------|-----------------------|-------------|--|
|      |                       | (Per Assy.) |  |
| 1.   | G6801-08<br>GR1037    | 1<br>-      | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring                      |
| 2.   | GD14925               | 1           | Block  |
| 3.   | G11067                | 4           | Phillips Pan Head Machine Screw, No. 8-32 x 3/4", Stainless Steel    |
| 4.   | G6400-08<br>GR1037    | 5<br>-      | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring                       |
| 5.   | G6400-10-08<br>GR1037 | 3<br>-      | Connector W/O-Ring, 7/8"-14 Male JIC To 3/4"-16 O-Ring               |
| 6.   | G10753<br>G10108      | 2<br>2      | Hex Head Cap Screw, 3/8"-16 x 4 1/2"<br>Lock Nut, 3/8"-16            |
| 7.   | GD18100               | 2           | Clip   |
| 8.   | G6801-L-08<br>GR1037  | 1<br>-      | Long Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring                 |
| 9.   | GA9510<br>GR1635      | 1<br>-      | Terminal Strip W/Screws, No. 6, 4 Terminal<br>Screw, No. 6-32 x 1/4" |
| 10.  | G6408-08<br>GR1037    | 6<br>-      | Plug W/O-Ring, 3/4"-16 O-Ring  |
| 11.  | GD18099               | 1           | Spacer Plate   |
| 12.  | GD18101               | 1           | Cover  |

# SDS MANIFOLD BLOCK

(FWD96/A9481)

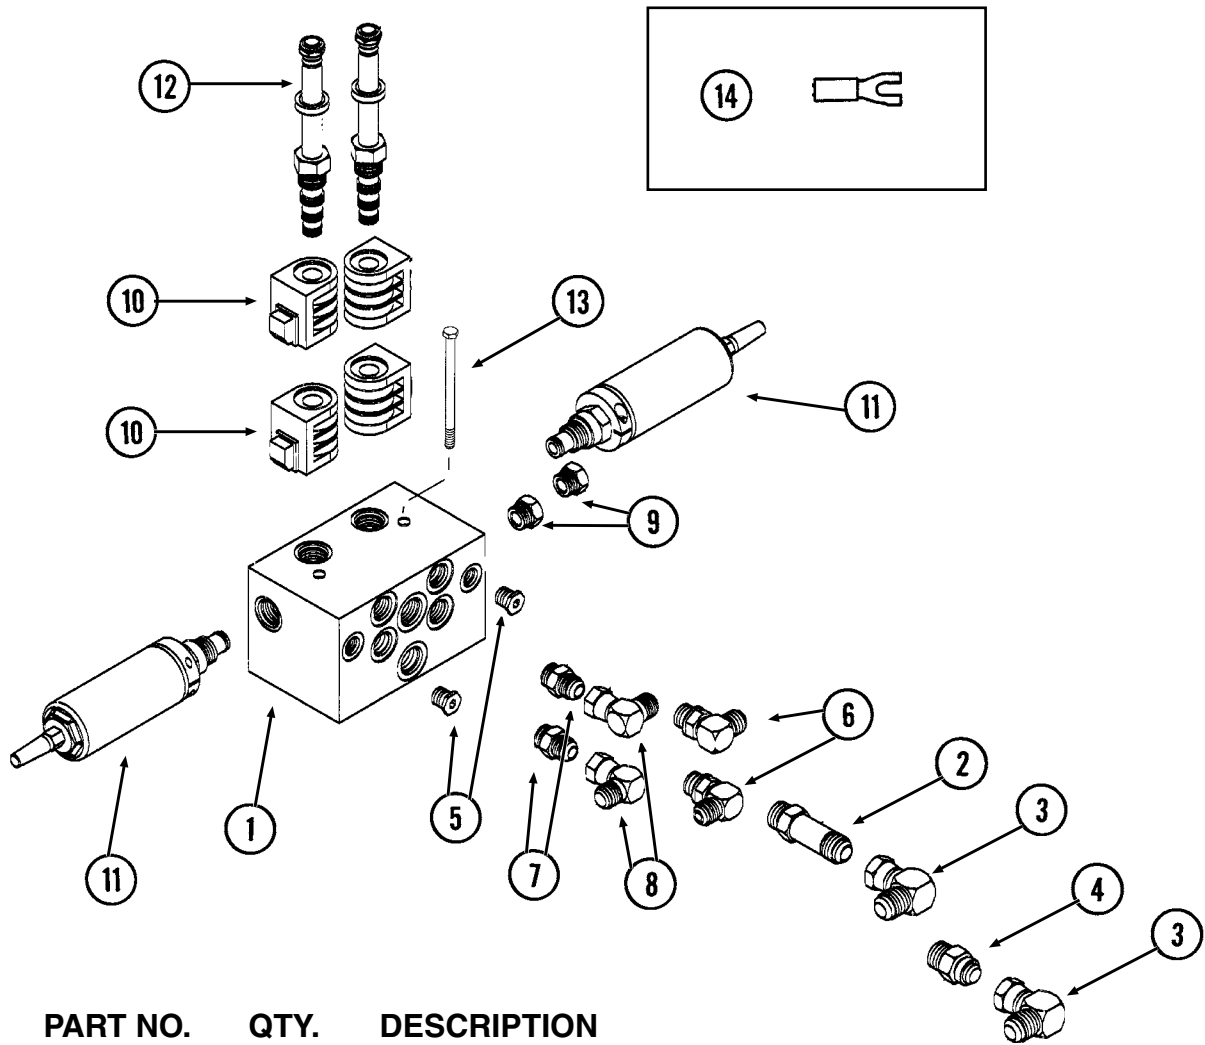


| ITEM | PART NO.    | QTY. | DESCRIPTION  |
|------|-------------|------|--|
| 1.   | GD16500     | 1    | Block  |
| 2.   | G6400-L-10  | 1    | Long Connector W/O-Ring, 7/8"-14 Male JIC To O-Ring    |
|      | GR1466      | -    | O-Ring   |
| 3.   | G6500-10    | 2    | Swivel Elbow, 90°, 7/8"-14 Male JIC To Female          |
| 4.   | GA11360     | 1    | Check Valve  |
| 5.   | G6408-H06-0 | 2    | Hex Socket Head Plug W/O-Ring, 9/16"-18 O-Ring         |
|      | GR1045      | -    | O-Ring   |
| 6.   | G6801-08    | 2    | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring        |
|      | GR1037      | -    | O-Ring   |
| 7.   | G6400-08    | 2    | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring         |
|      | GR1037      | -    | O-Ring   |
| 8.   | G6500-08    | 2    | Swivel Elbow, 90°, 3/4"-16 Male JIC To Female          |
| 9.   | G6408-08    | 2    | Plug W/O-Ring, 3/4"-16 O-Ring                          |
|      | GR1037      | -    | O-Ring   |
| 10.  | GR1748      | 4    | Coil   |
| 11.  | GA10987     | 2    | Flow Control Cartridge                                 |
| 12.  | GA11365     | 2    | Spool Valve  |
| 13.  | G11203      | 2    | Hex Head Cap Screw, 1/4"-20 x 4 1/2"                   |
|      | G10227      | 2    | Lock Washer, 1/4"                                      |
| 14.  | G10996      | -    | Fork Terminal  |
| A.   | GR1756      | -    | Seal Kit For Coil, Includes: (6) BU Rings, (4) O-Rings |

**Page intentionally left blank.**

# HYDRAULIC HOSES AND FITTINGS

(FWD154/D4086)

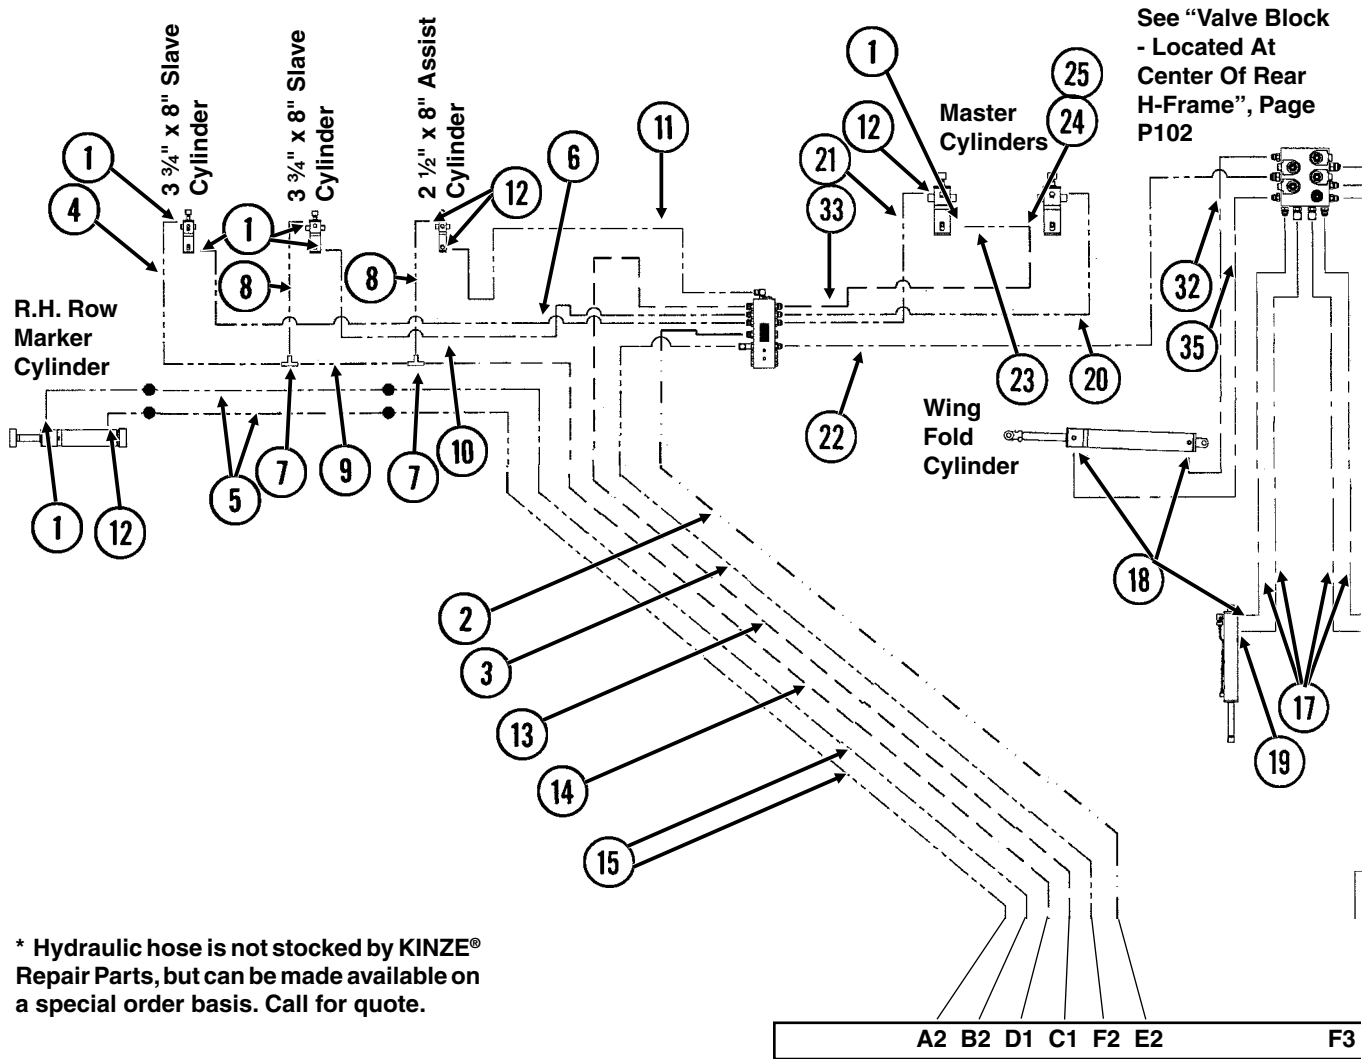


\* Hydraulic hose is not stocked by KINZE® Repair Parts, but can be made available on a special order basis. Call for quote.

| ITEM | PART NO.              | QTY.    | DESCRIPTION  |
|------|-----------------------|---------|--|
| 1.   | G6801-08<br>GR1037    | 10<br>- | Elbow W/O-Ring, 90°, 3/4"-16 Male JIC To O-Ring<br>O-Ring          |
| 2.   | *A11424               | 1       | Hose Assembly, 5/8" x 342"   |
| 3.   | *A12046               | 2       | Hose Assembly, 3/8" x 348"   |
| 4.   | *A1020                | 2       | Hose Assembly, 3/8" x 48"  |
| 5.   | *A3247                | 4       | Hose Assembly, 3/8" x 156" (Male To Female)                        |
| 6.   | *A1090                | 2       | Hose Assembly, 3/8" x 162"   |
| 7.   | G2603-08              | 4       | Tee, 3/4"-16 Male JIC  |
| 8.   | *A1079                | 4       | Hose Assembly, 3/8" x 24"  |
| 9.   | *A1086                | 2       | Hose Assembly, 3/8" x 28"  |
| 10.  | *A3249                | 2       | Hose Assembly, 3/8" x 132"   |
| 11.  | *A3136                | 2       | Hose Assembly, 3/8" x 100"   |
| 12.  | G6400-08<br>GR1037    | 8<br>-  | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring<br>O-Ring           |
| 13.  | *A12702               | 2       | Hose Assembly, 1/2" x 348"   |
| 14.  | *A12701               | 2       | Hose Assembly, 1/2" x 438"   |
| 15.  | *A12043               | 4       | Hose Assembly, 3/8" x 356"   |
| 16.  | *A12700               | 1       | Hose Assembly, 1/2" x 342"   |
| 17.  | *A1170                | 4       | Hose Assembly, 1/4" x 90"  |
| 18.  | G6801-06-08<br>GR1037 | 6<br>-  | Elbow W/O-Ring, 90°, 9/16"-18 Male JIC To 3/4"-16 O-Ring<br>O-Ring |




# HYDRAULIC HOSES AND FITTINGS

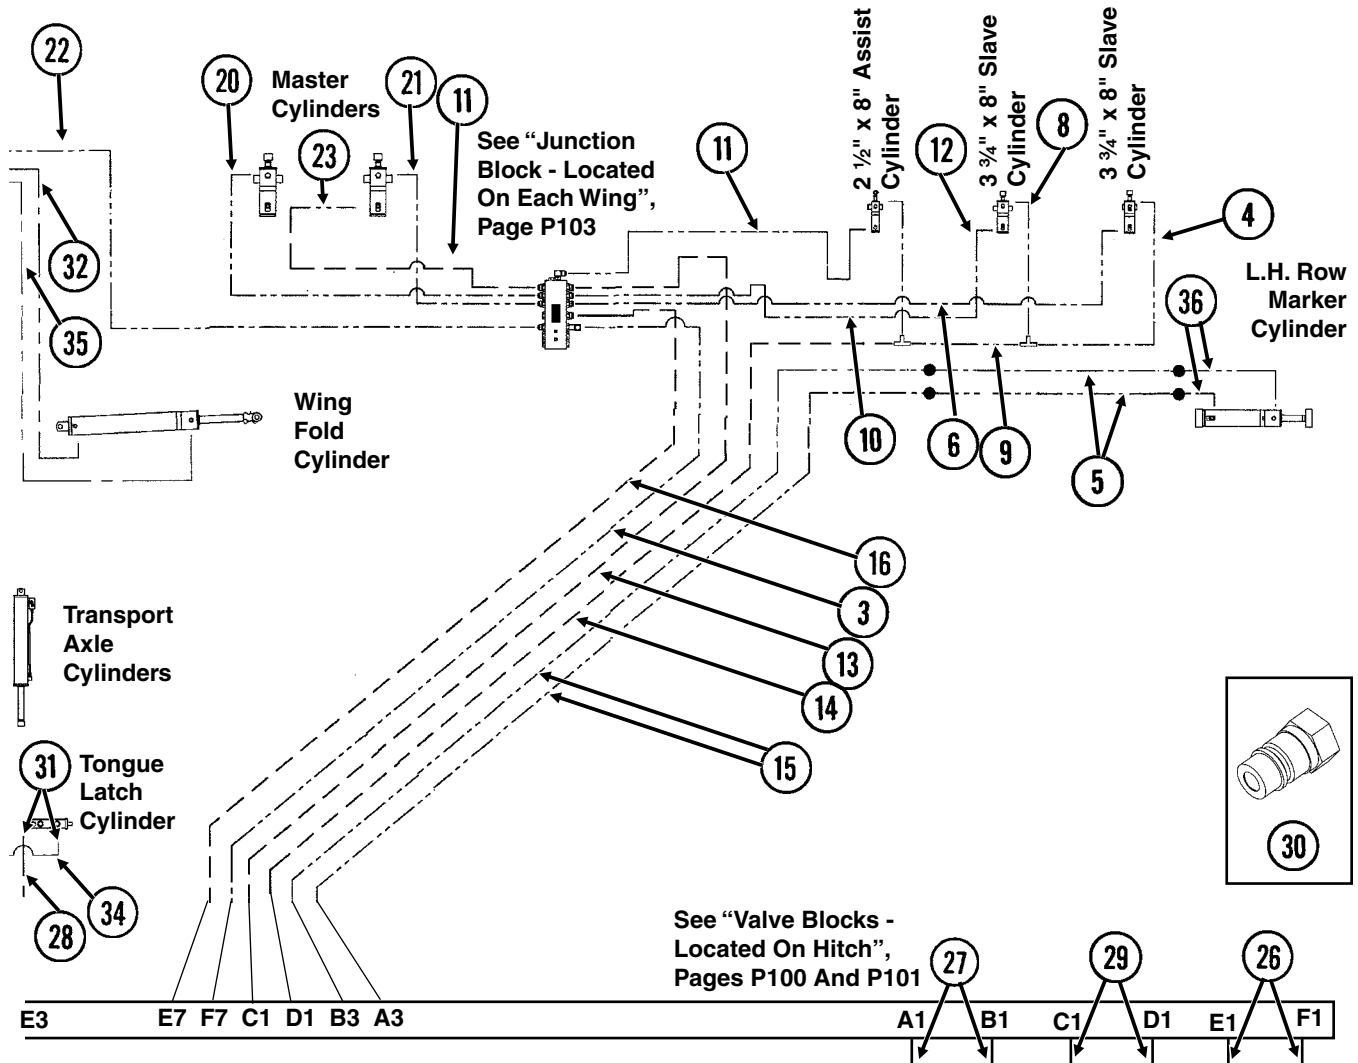

| ITEM | PART NO.                 | QTY.   | DESCRIPTION   |
|------|--------------------------|--------|---|
| 19.  | G6801-LL-06-08<br>GR1037 | 2<br>- | X-Long Elbow W/O-Ring, 90°, 1/16"-18 Male JIC To 3/4"-16 O-Ring<br>O-Ring |
| 20.  | *A3161                   | 2      | Hose Assembly, 3/8" x 210"  |
| 21.  | *A3139                   | 2      | Hose Assembly, 3/8" x 254"  |
| 22.  | *A3154                   | 2      | Hose Assembly, 3/8" x 196"  |
| 23.  | *A3158                   | 2      | Hose Assembly, 3/8" x 46"   |
| 24.  | G6803-08<br>GR1037       | 2<br>- | Tee, 3/4"-16 Male NPT To O-Ring<br>O-Ring                                 |
| 25.  | G6502-08                 | 2      | Swivel Elbow, 45°, 3/4"-16 Male JIC To Female                             |
| 26.  | *A8231                   | 2      | Hose Assembly, 1/2" x 72"   |
| 27.  | *A8230                   | 2      | Hose Assembly, 1/2" x 84" (Elbow End)                                     |
| 28.  | *A7613                   | 1      | Hose Assembly, 1/4" x 44" (Elbow End)                                     |
| 29.  | *A3236                   | 2      | Hose Assembly, 3/8" x 72"   |
| 30.  | GD4086                   | 6      | ISO Coupler   |
| 31.  | G6400-06-08<br>GR1037    | 8<br>- | Connector W/O-Ring, 1/16"-18 Male JIC To 3/4"-16 O-Ring<br>O-Ring         |
| 32.  | *A1138                   | 2      | Hose Assembly, 1/4" x 29"   |
| 33.  | *A8237                   | 2      | Hose Assembly, 1/2" x 202"  |
| 34.  | *A1132                   | 1      | Hose Assembly, 1/4" x 44"   |
| 35.  | *A1140                   | 2      | Hose Assembly, 1/4" x 52"   |
| 36.  | *A3220                   | 4      | Hose Assembly, 3/8" x 82"   |

# HYDRAULIC DRIVE HOSE ROUTINGS


(FWD181)

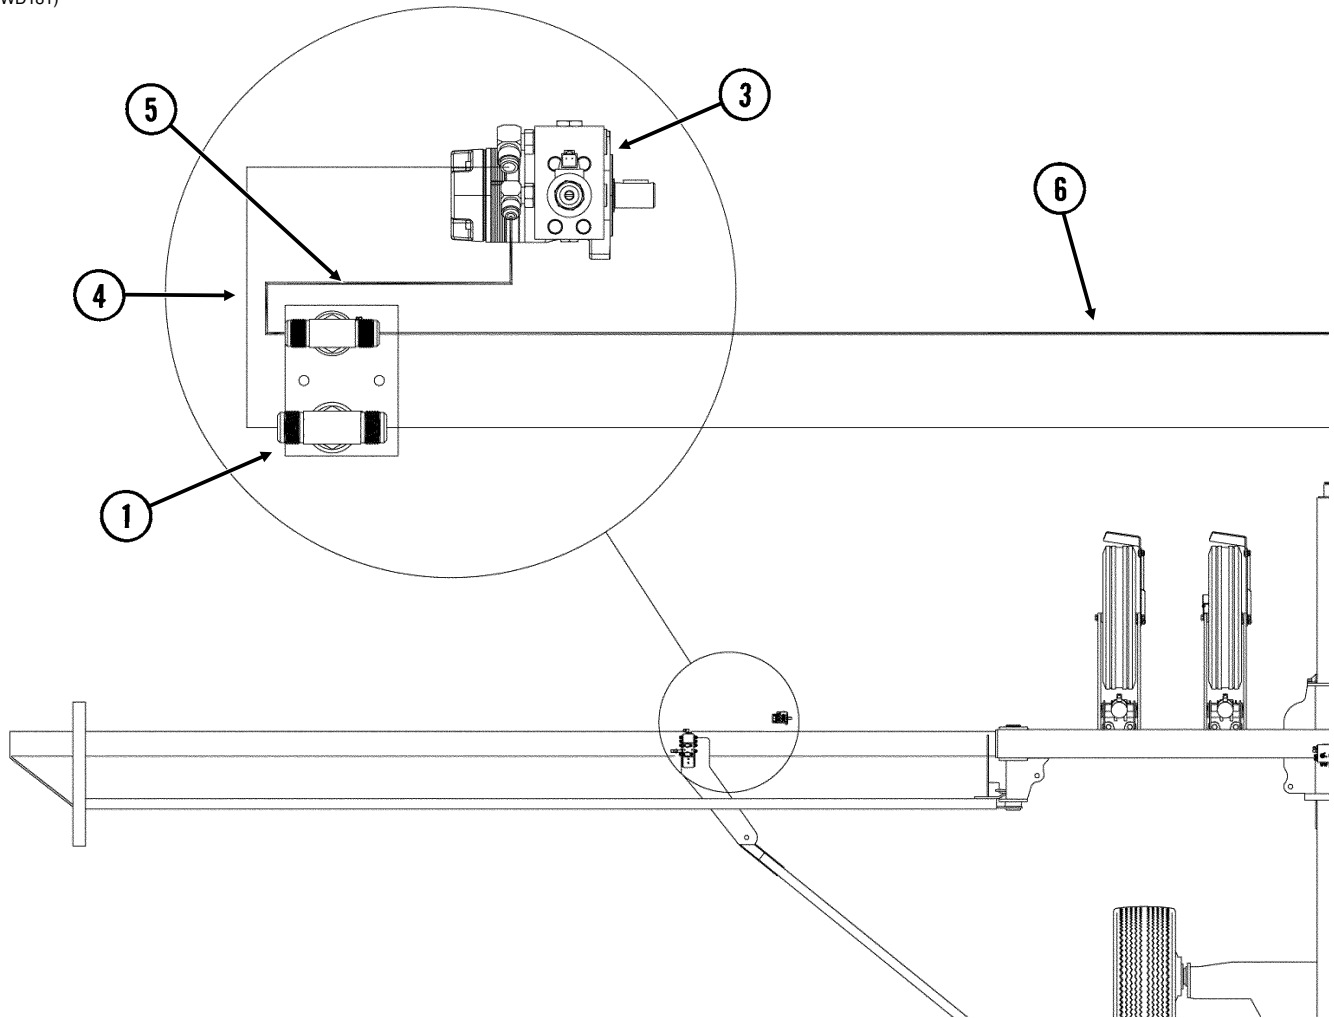

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   |          |      | See "Junction Block - Located On Each Wing", Pages P103    |
| 2.   |          |      | See "Hydraulic Motor Located On L.H. Driveline", Pages P99 |
| 3.   |          |      | See "Hydraulic Motor Located On R.H. Driveline", Pages P98 |
| 4.   | *A1460   | 1    | Hose Assembly, 1/2" x 62"                                  |
| 5.   | *A3152   | 1    | Hose Assembly, 3/8" x 62"                                  |
| 6.   | *A3271   | 1    | Hose Assembly, 3/8" x 402"                                 |
| 7.   | *A12735  | 1    | Hose Assembly, 1/2" x 402"                                 |



# HYDRAULIC DRIVE HOSE ROUTINGS

---

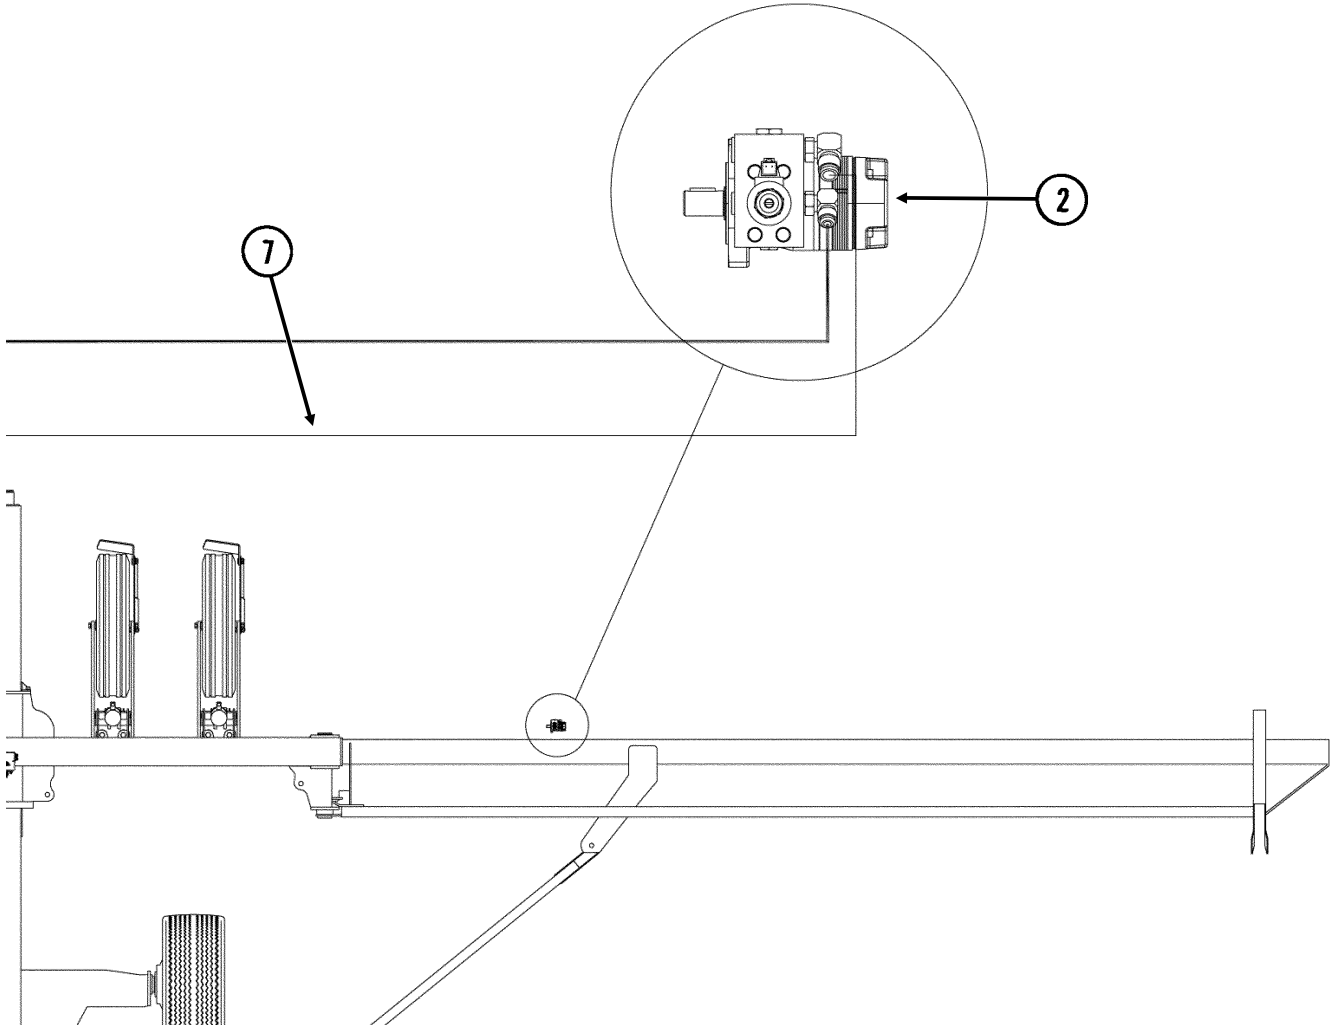

# SDS HYDRAULIC SYSTEM

(FWD105/FWD180)

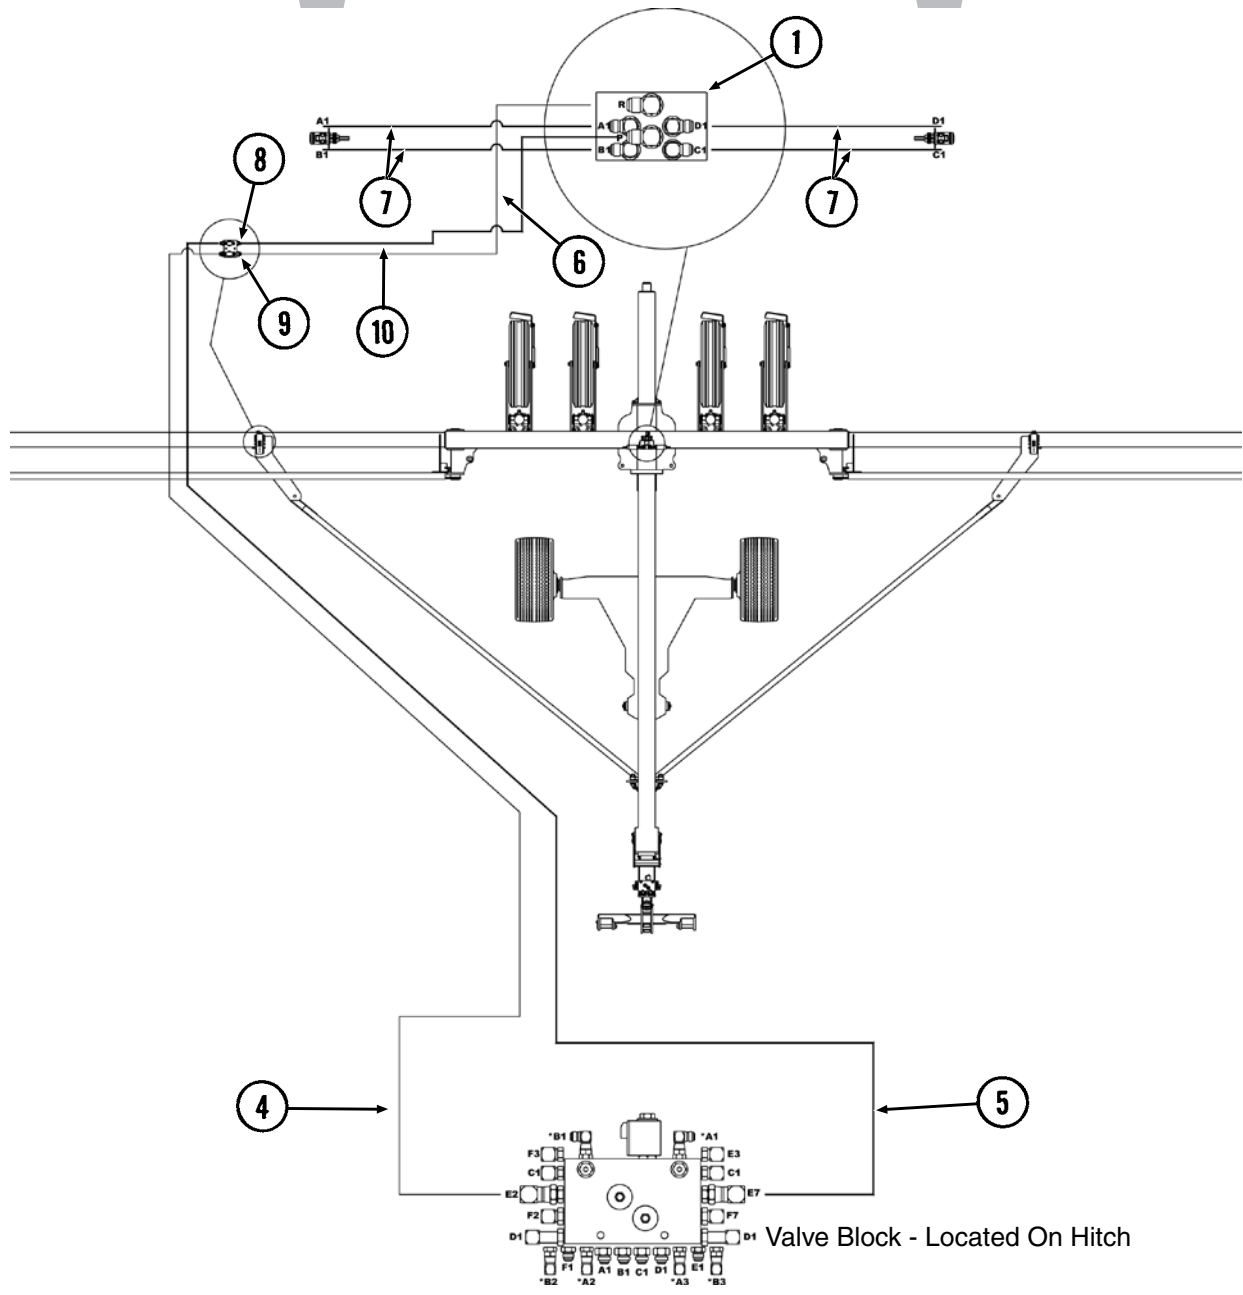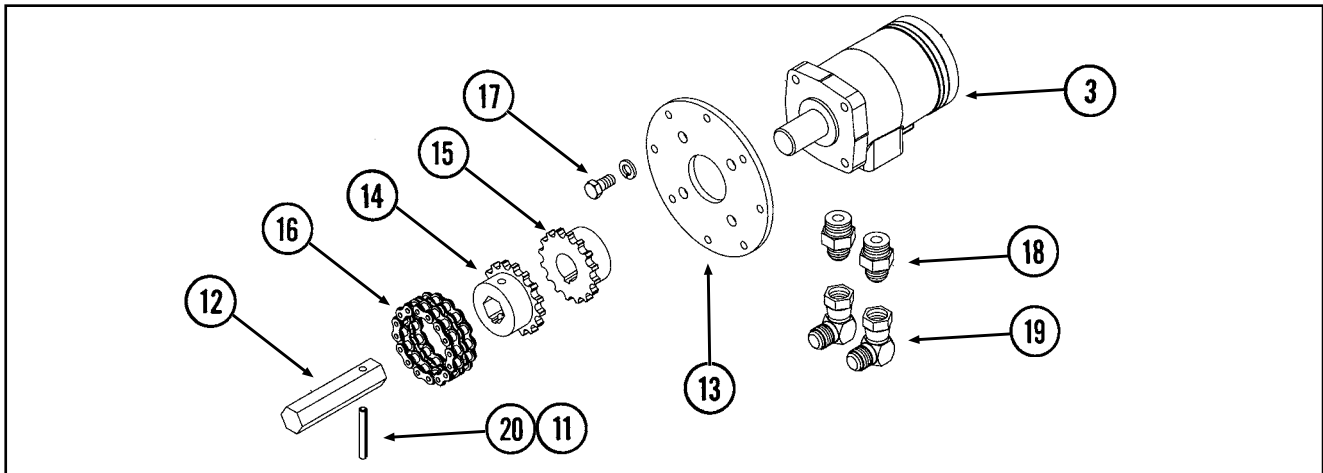

P110




# SDS HYDRAULIC SYSTEM

---

| ITEM | PART NO.    | QTY. | DESCRIPTION  |
|------|-------------|------|--|
| 1.   |             | -    | See "SDS Manifold Block", Page P104                              |
| 2.   |             | -    | See "Valve Blocks - Located On Hitch (SDS)", Pages P100 And P101 |
| 3.   | GA11774     | 2    | Hydraulic Motor  |
| 4.   | *A13918     | 1    | Hose Assembly, 3/4" x 342"                                       |
| 5.   | *A12700     | 1    | Hose Assembly, 1/2" x 342"                                       |
| 6.   | *A11425     | 1    | Hose Assembly, 5/8" x 194"                                       |
| 7.   | *A3159      | 4    | Hose Assembly, 3/8" x 97"  |
| 8.   | G6400-08    | 1    | Connector W/O-Ring, 3/4"-16 Male JIC To O-Ring                   |
|      | GR1037      | -    | O-Ring   |
| 9.   | G6400-10    | 1    | Connector W/O-Ring, 7/8"-14 Male JIC To O-Ring                   |
|      | GR1466      | -    | O-Ring   |
| 10.  | *A12703     | 1    | Hose Assembly, 1/2" x 194"                                       |
| 11.  | GD13524-01  | 1    | Lock Wire, 10", Stainless Steel                                  |
| 12.  | GD16538     | 1    | Shaft  |
| 13.  | GD16537     | 1    | Plate  |
| 14.  | GD16489     | 1    | Coupler, 7/8" Hex  |
| 15.  | GD16490     | 1    | Coupler, 1" I.D.   |
| 16.  | G3317-16    | 1    | Chain, Double No. 40, 16 Pitches                                 |
|      | GR1790      | -    | Connector Link, Double No. 40                                    |
| 17.  | G10002      | 4    | Hex Head Cap Screw, 3/8"-16 x 3/4"                               |
|      | G10229      | 4    | Lock Washer, 3/8"  |
| 18.  | G6400-08-10 | 2    | Connector W/O-Ring, 3/4"-16 Male JIC To 7/8"-14 O-Ring           |
|      | GR1466      | -    | O-Ring   |
| 19.  | G6500-08    | 2    | Swivel Elbow, 90°, 3/4"-16 Male JIC To Female                    |
| 20.  | G10606      | 1    | Spring Pin, 1/4" x 2"  |

# ELECTRICAL COMPONENTS (Planter Control Console)

(TWL19a/TWL18/ELC3a/ELC5c/ELC14/MTR27a/ELC39/TWL26e/MTR27a/MTR45/A9481/ELC8/A10310/A12652/A10308/ELC34/ELC35/FWD30b)

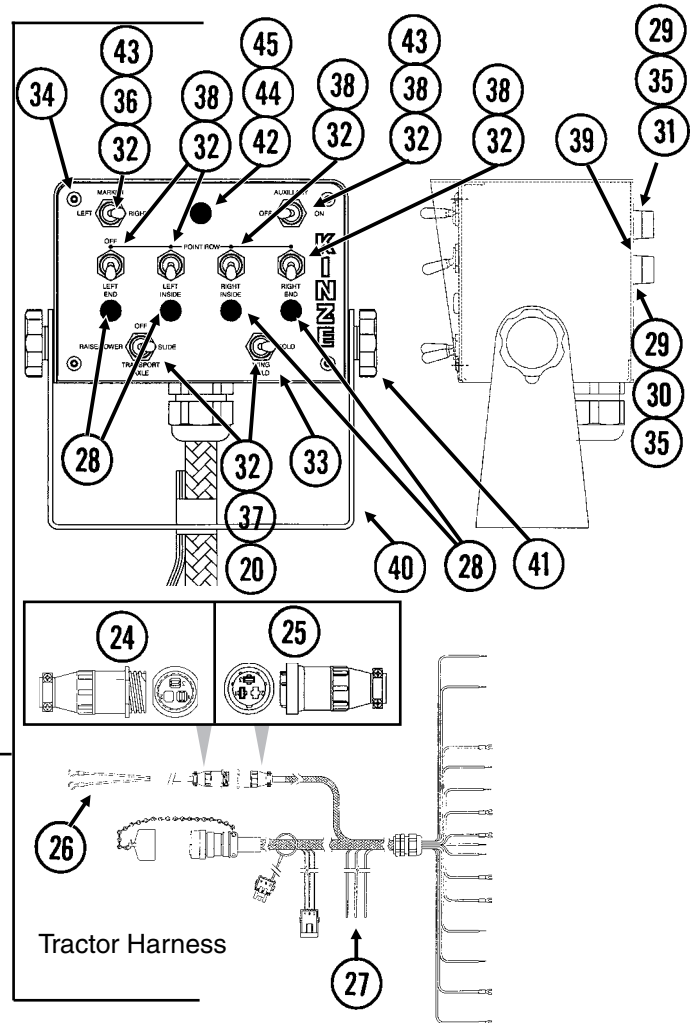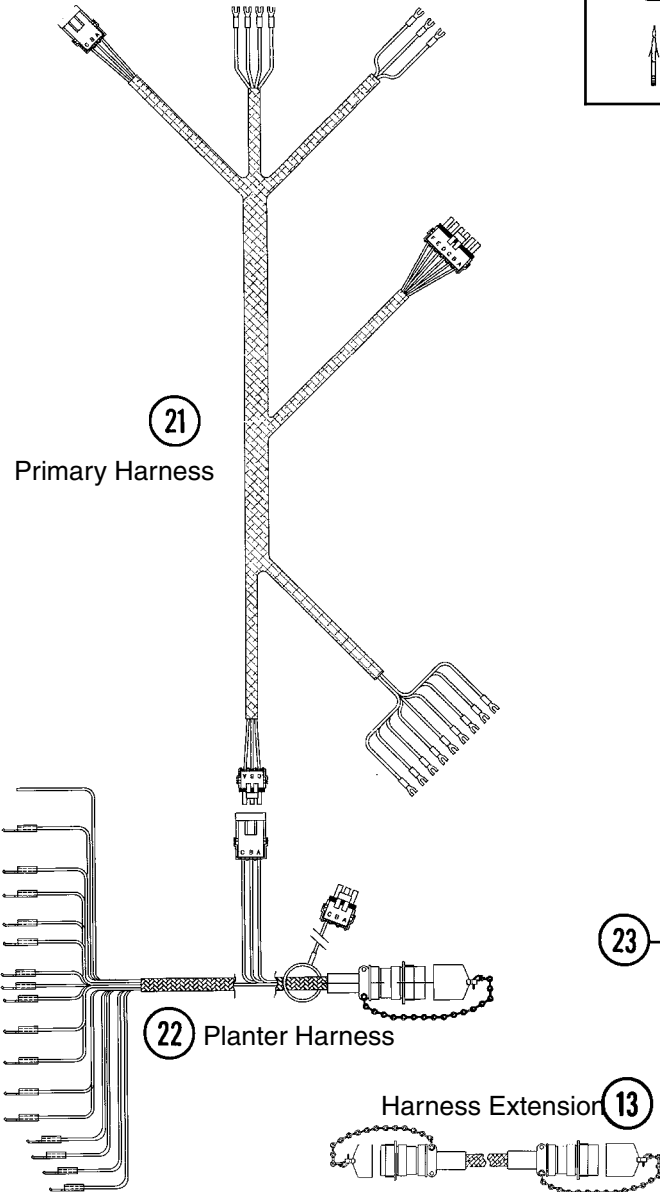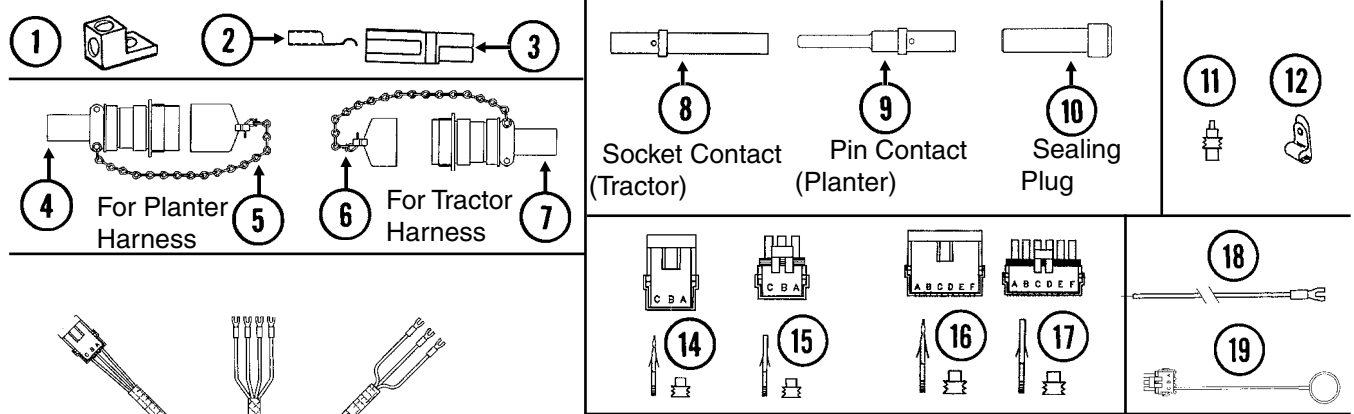


# ELECTRICAL COMPONENTS (Planter Control Console)

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA3584   | -    | Ground Clamp   |
| 2.   | GD9530   | -    | Contact  |
| 3.   | GD9529   | -    | Housing, Black   |
|      | GD12726  | -    | Housing, Red   |
| 4.   | GA6109   | 1    | Connector W/Cable Clamp, 23 Pin Capacity   |
| 5.   | GA7862   | -    | Dust Cap W/Chain   |
| 6.   | GA7863   | -    | Dust Cap W/Chain   |
| 7.   | GA6108   | 1    | Connector W/Cable Clamp, 23 Socket Capacity  |
| 8.   | GD8740   | -    | Socket Contact, No. 14   |
| 9.   | GD8741   | -    | Pin Contact, No. 14  |
| 10.  | GD8739   | -    | Sealing Plug, No. 12   |
| 11.  | GD11089  | -    | Sealing Plug   |
| 12.  | GD6291   | -    | Insulated Clamp, 3/8"  |
| 13.  | GA7399   | -    | Harness Extension W/Dust Caps, 180"  |
| 14.  | G1K248   | -    | 3-Pin Female Connector Kit (Black), Includes: (3) 3-Pin Female Housings, (9) Pin Contacts, (9) Seals                 |
| 15.  | G1K252   | -    | 3-Pin Male Connector Kit (Black), Includes: (3) 3-Pin Male Housings, (9) Socket Contacts, (9) Seals                  |
| 16.  | G1K396   | -    | 6-Pin Female Connector Kit (Black), Includes: (3) 6-Pin Female Housings, (18) Pin Contacts, (18) Seals               |
| 17.  | G1K395   | -    | 6-Pin Male Connector Kit (Black), Includes: (3) 6-Pin Male Housings, (18) Socket Contacts, (18) Seals                |
| 18.  | GA9481   | -    | Jumper Wire W/Fork Terminal, 13"   |
|      | G10996   | -    | Fork Terminal  |
| 19.  | GA8047   | -    | Dust Plug (Black)  |
| 20.  | GA10685  | 4    | Jumper Wire, 5", White   |
| 21.  | GA12652  | 1    | Wiring Harness, 392"   |
| 22.  | GA10308  | 1    | Wiring Harness W/Dust Cap, 96"   |
| 23.  | G7848X   | -    | Backlit Control Console Assembly W/Mounting Brackets, Short Harness W/Dust Cap And Power Cable                       |
| 24.  | G1K267   | -    | Console Cable Connector Kit, Includes: (1) 3-Pin Connector, (1) Cable Clamp, (3) Male Terminal Pins                  |
| 25.  | G1K268   | -    | Console Cable Connector Kit, Includes: (1) 3-Pin Connector, (1) Cable Clamp, (1) Lock Ring, (3) Female Terminal Pins |
| 26.  | GA7856   | 1    | Power Lead Adapter   |
| 27.  | GA10307  | 1    | Wiring Harness W/Dust Cap And Power Cable  |
| 28.  | GA10194  | 4    | Indicator Light, Red   |
| 29.  | GA2612   | 5    | Fuse Holder W/Spade, 1 33/50"  |
| 30.  | GD2829   | 1    | Fuse, 15 Amp, Type AGC   |
| 31.  | GD10243  | 4    | Fuse, MDL 10 Amp Delay Action  |
| 32.  | GR1363   | 8    | Hex Face Nut, 15/32"-32  |
|      | GR1364   | 8    | Internal Tooth Lock Washer, 15/32"   |
| 33.  | GA10686  | 1    | Cover Plate  |
| 34.  | GR1292   | 4    | Pan Head Screw, No. 8-32 x 1/2"  |
| 35.  | GD3860   | 5    | O-Ring (If Applicable)   |
| 36.  | GA2528   | 1    | Switch, 3 Position Toggle, On-Off-On   |
| 37.  | GA6978   | 2    | Switch, 3 Position Toggle, Momentary On-Off-Momentary On   |
| 38.  | GA6977   | 5    | Switch, 2 Position Toggle, On-Off  |
| 39.  | GA8731   | 1    | Switch, Push Button W/Transformer  |
| 40.  | GD9896   | 1    | Mounting Bracket   |
| 41.  | GA6975   | 2    | Knob   |
|      | G10211   | 4    | Washer, 1/4" SAE   |
|      | GR1290   | 2    | Cage Nut, 1/4"-20  |
| 42.  | GA10206  | 1    | Indicator Light, Green   |
| 43.  | GA10682  | 2    | Jumper Wire, 3", Gray  |
| 44.  | GA10683  | 1    | Jumper Wire, 5", White   |
| 45.  | GA10684  | 1    | Jumper Wire, 3", Red   |

# ELECTRICAL COMPONENTS (SDS Control Console)

(A11377/A9954/A11502/A11906/FWD102/A11376/A11378/A11348a/A11736)

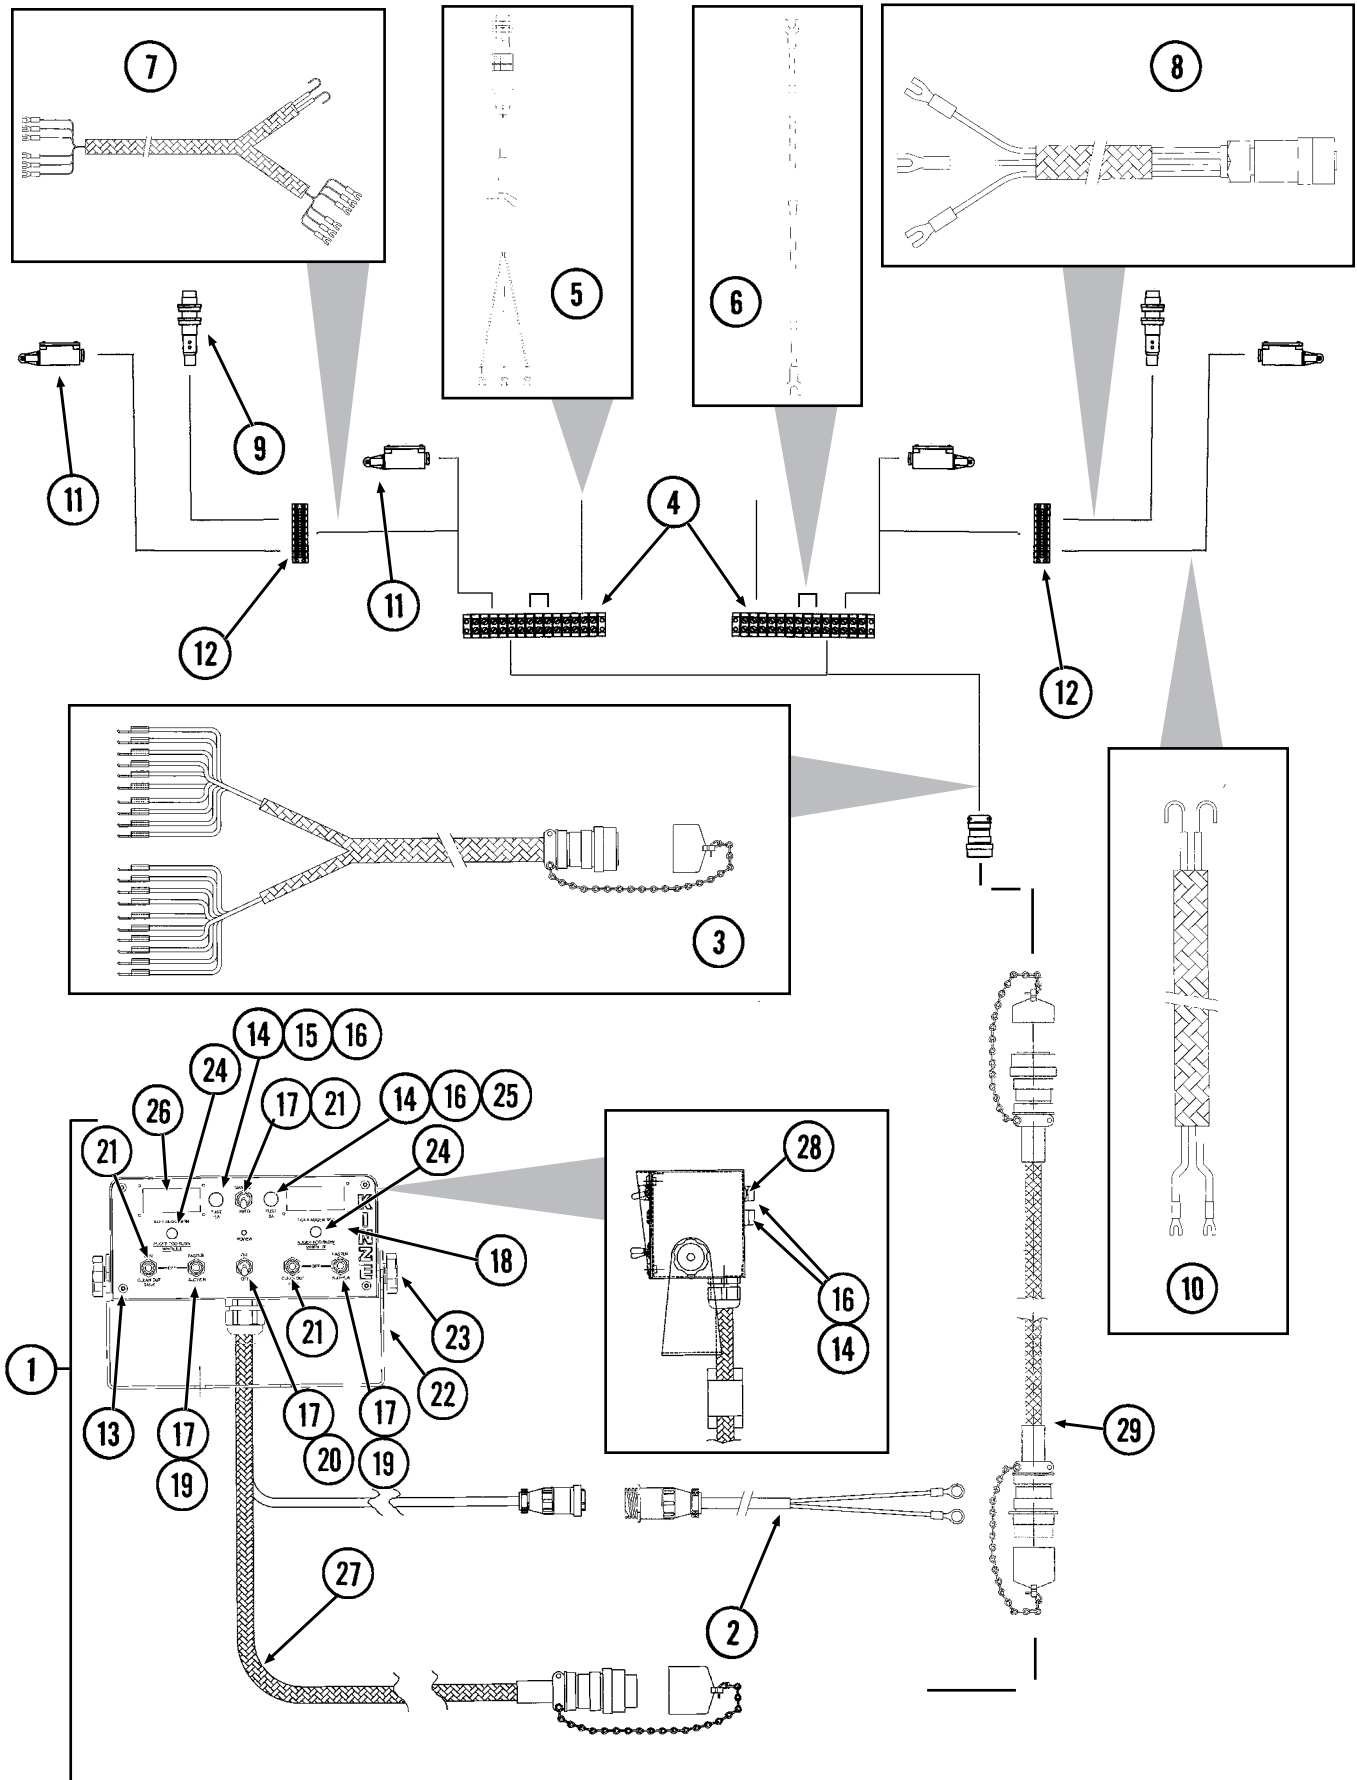





# ELECTRICAL COMPONENTS (SDS Control Console)

---

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GA11348  | 1    | SDS Control Console Assembly                             |
| 2.   | GA7856   | 1    | Power Lead Adapter                                       |
| 3.   | GA11376  | 1    | Wiring Harness, 648"                                     |
| 4.   | GA9097   | 2    | Terminal Strip W/Screws, No. 6, 14 Terminal              |
|      | GR1635   | -    | Screw, No. 6-32 x 1/4"                                   |
| 5.   | GA9954   | 2    | Speed Sensor Assembly                                    |
| 6.   | GA11502  | 2    | Voltage Stabilizer, 8 1/2"                               |
| 7.   | GA11377  | 2    | Wiring Harness, 360"                                     |
| 8.   | GA11906  | 2    | 4-Pin Connector, 48"                                     |
| 9.   | GA11387  | 2    | Proximity Sensor   |
| 10.  | GA11378  | 2    | Wiring Harness, 48"                                      |
| 11.  | GA11066  | 4    | Implement Switch   |
| 12.  | GA9098   | 2    | Terminal Strip W/Screws, No. 6, 8 Terminal               |
|      | GR1635   | -    | Screw, No. 6-32 x 1/4"                                   |
| 13.  | GR1292   | 4    | Pan Head Screw, No. 8-32 x 1/2"                          |
| 14.  | GA2612   | 3    | Fuse Holder W/Spade, 1 33/50"                            |
| 15.  | GD2829   | 1    | Fuse, 15 Amp, Type AGC                                   |
| 16.  | GD3860   | 3    | O-Ring   |
| 17.  | GR1363   | 4    | Hex Face Nut, 15/32"-32                                  |
|      | GR1364   | 4    | Internal Tooth Lock Washer, 15/32"                       |
| 18.  | GA12171  | 1    | Cover Plate  |
| 19.  | GA6978   | 2    | Switch, 3 Position Toggle, Momentary On-Off-Momentary On |
| 20.  | GA6977   | 1    | Switch, 2 Position Toggle, On-Off                        |
| 21.  | GA12173  | 2    | Switch, 2 Position Locking Toggle                        |
| 22.  | GD14640  | 1    | Mounting Bracket   |
| 23.  | GA6975   | 2    | Knob   |
|      | G10211   | 4    | Washer, 1/4" SAE   |
|      | GR1290   | 2    | Cage Nut, 1/4"-20  |
| 24.  | GA10195  | 2    | Indicator Light, Amber                                   |
| 25.  | GA12174  | 1    | Switch, 2 Position Toggle, Momentary-On                  |
| 26.  | GA9965   | 2    | Tachometer   |
| 27.  | GA12180  | 1    | Wiring Harness W/Dust Cap And Power Cable                |
| 28.  | G11112   | 1    | Plug, 3/8"   |
| 29.  | GA11736  | -    | Harness Extension W/Dust Caps, 180"                      |

# ELECTRICAL COMPONENTS (Lights)

(MTR27v/MTR27a/ELC27b/MTR27a/A10315/A10318/A10317/A10316/A10452/A11042)

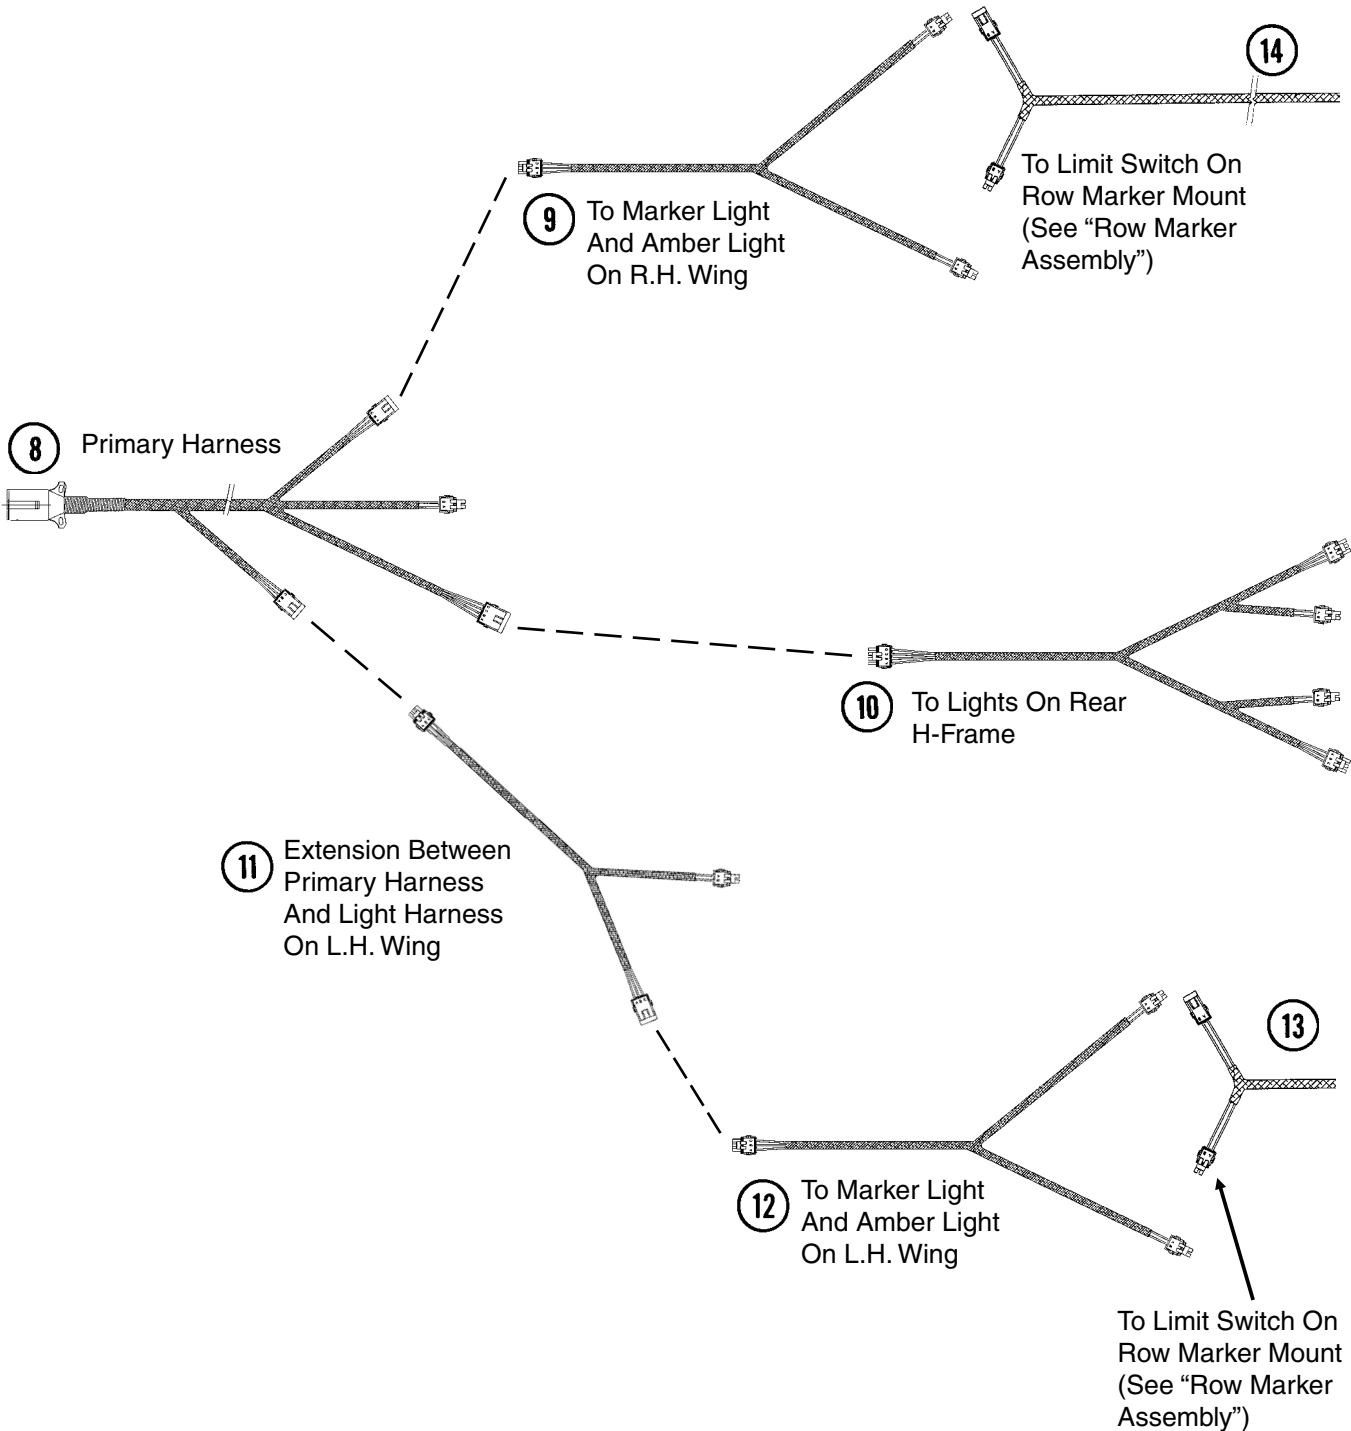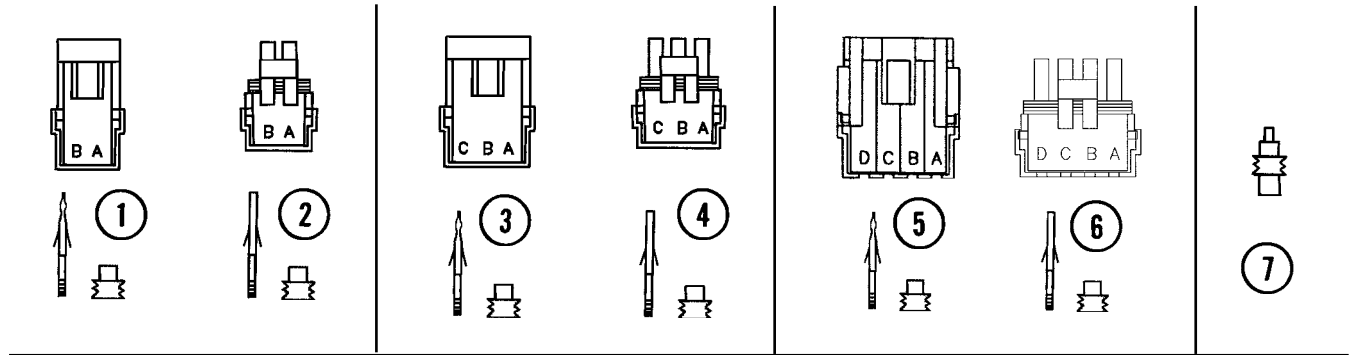


# ELECTRICAL COMPONENTS (Lights)

---




| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | G1K321   | -    | 2-Pin Female Connector Kit (Black), Includes: (3) 2-Pin Female Housings, (6) Pin Contacts, (6) Seals |
| 2.   | G1K320   | -    | 2-Pin Male Connector Kit (Black), Includes: (3) 2-Pin Male Housings, (6) Socket Contacts, (6) Seals  |
| 3.   | G1K248   | -    | 3-Pin Female Connector Kit (Black), Includes: (3) 3-Pin Female Housings, (9) Pin Contacts, (9) Seals |
| 4.   | G1K252   | -    | 3-Pin Male Connector Kit (Black), Includes: (3) 3-Pin Male Housings, (9) Socket Contacts, (9) Seals  |
| 5.   | GA8328   | -    | 4-Pin Female Connector Kit, Includes: (1) 4-Pin Female Housing, (4) Pin Contacts, (4) Seals          |
| 6.   | GA8329   | -    | 4-Pin Male Connector Kit, Includes: (1) 4-Pin Male Housing, (4) Socket Contacts, (4) Seals           |
| 7.   | GD11089  | -    | Sealing Plug   |
| 8.   | GA10315  | 1    | Wiring Harness, 414"   |
| 9.   | GA10318  | 1    | Wiring Harness, 156"   |
| 10.  | GA10317  | 1    | Wiring Harness, 198"   |
| 11.  | GA10316  | 1    | Wiring Harness, 254"   |
| 12.  | GA10319  | 1    | Wiring Harness, 156"   |
| 13.  | GA11299  | 2    | Wiring Harness, 63"  |

# LIGHT ASSEMBLIES AND BRACKETS

(FWD133/FWD14/RU130b/RU131f)

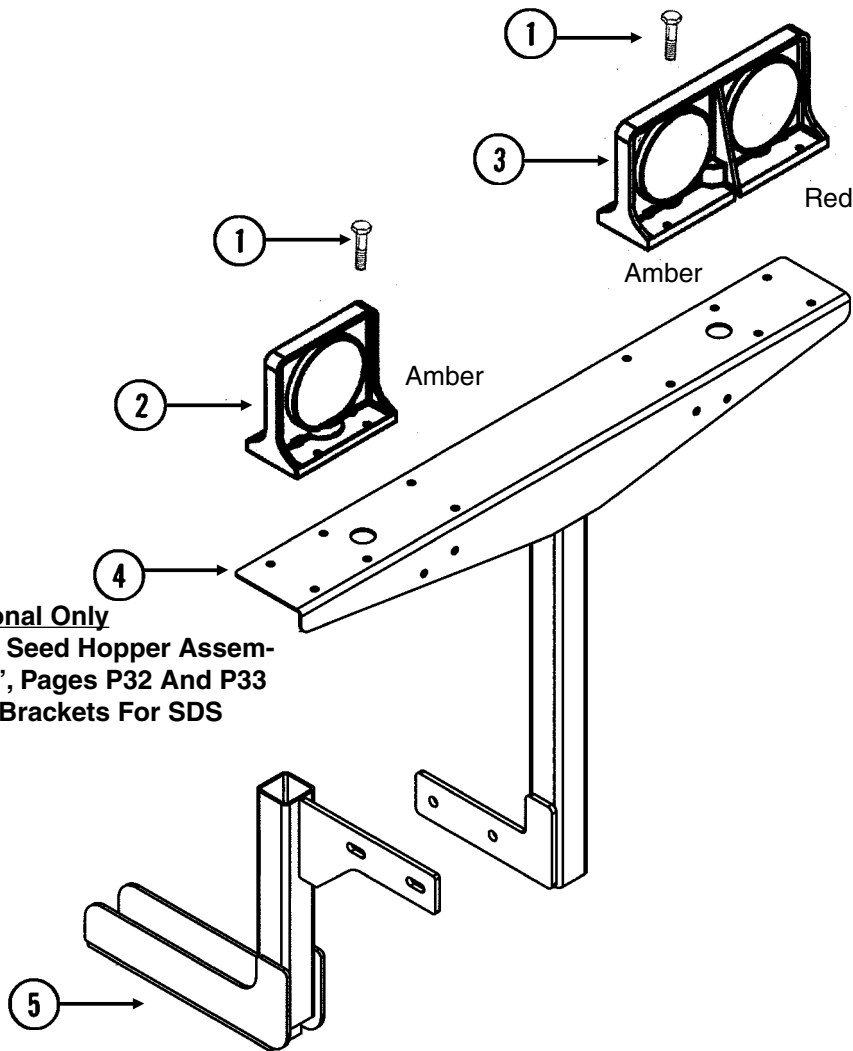

**Conventional Only**  
 See "Bulk Seed Hopper Assembly (SDS)", Pages P32 And P33  
 For Light Brackets For SDS  
 Planters

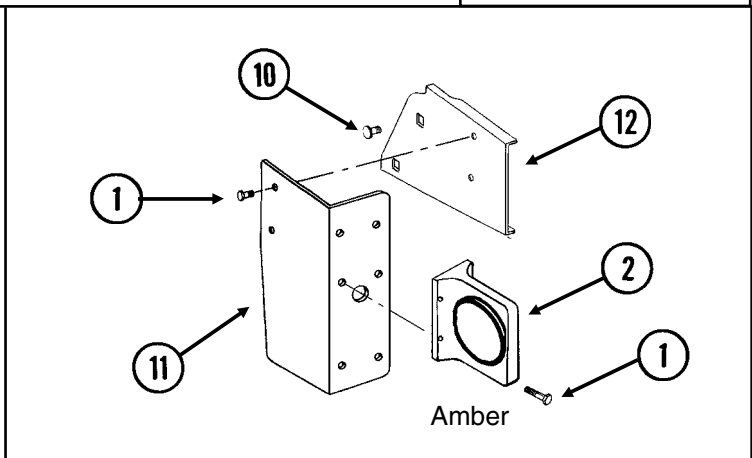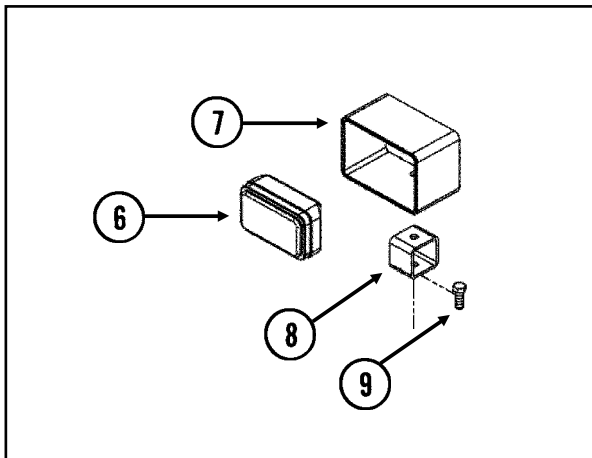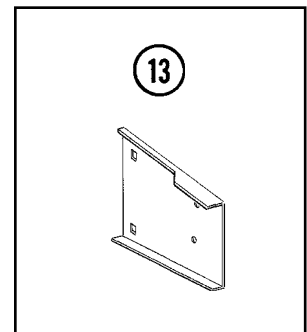



# LIGHT ASSEMBLIES AND BRACKETS

---

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | G10064   | -    | Hex Head Cap Screw, 1/4"-20 x 1"                      |
|      | G10227   | -    | Lock Washer, 1/4"                                     |
|      | G10103   | -    | Hex Nut, 1/4"-20                                      |
| 2.   | GA10576  | 4    | Single Amber Light Assembly                           |
|      | GR1731   | -    | Amber Lens  |
|      | GR1208   | -    | Bulb  |
| 3.   | GA10571  | 1    | Double Light Assembly                                 |
|      | GA10572  | -    | Double Light Assembly (Shown)                         |
|      | GR1733   | -    | Red Lens  |
|      | GR1731   | -    | Amber Lens  |
|      | GR1732   | -    | Cover   |
| 4.   | GR1208   | -    | Bulb  |
|      | GA11771  | 1    | Light Bracket, L.H. (Conventional Planters) (Shown)   |
|      | GA11772  | -    | Light Bracket, R.H. (Conventional Planters)           |
| 5.   |          | -    | See "Manifolds And Distribution Hoses", Pages P60-P61 |
| 6.   | GA10297  | 2    | Work Light Assembly W/Halogen Lamp                    |
|      | GR1707   | -    | Halogen Lamp, 3" x 5"                                 |
| 7.   | GD15582  | 1    | Light Protector                                       |
| 8.   | GD14987  | 1    | Light Bracket   |
| 9.   | G10017   | 1    | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                  |
|      | G10228   | 1    | Lock Washer, 1/2"                                     |
|      | G10102   | 1    | Hex Nut, 1/2"-13                                      |
| 10.  | G10312   | -    | Carriage Bolt, 5/16"-18 x 3/4"                        |
|      | G10620   | -    | Serrated Flange Nut, 5/16"-18                         |
| 11.  | GD12725  | 1    | Bracket (Shown)                                       |
|      | GD12724  | 1    | Bracket   |
| 12.  | GD15968  | 1    | Light Mount Extension                                 |
| 13.  | GD12723  | 1    | Light Mount Extension                                 |

# KINZE VISION® DISPLAY

(VI50b/VI18/VI21/A12553/GR1916/GR1839/A12852/A12853)

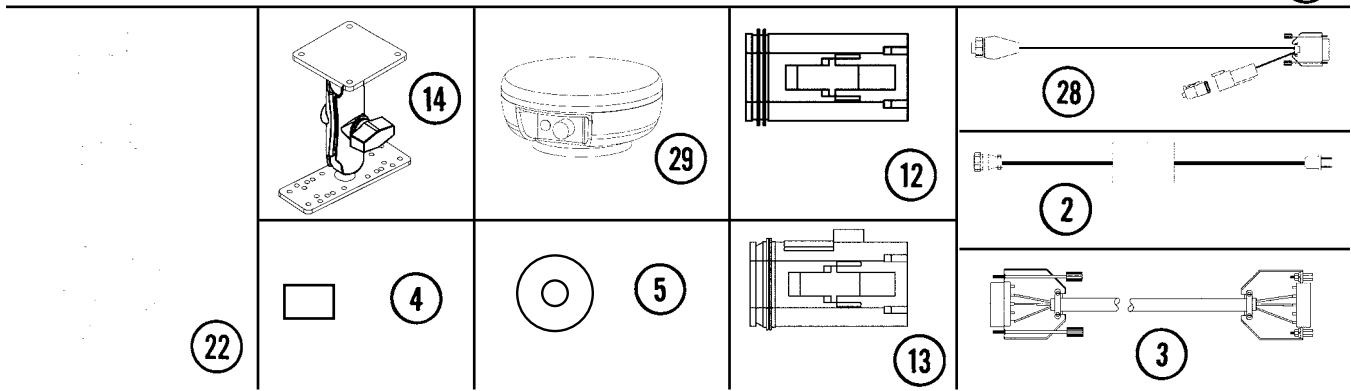
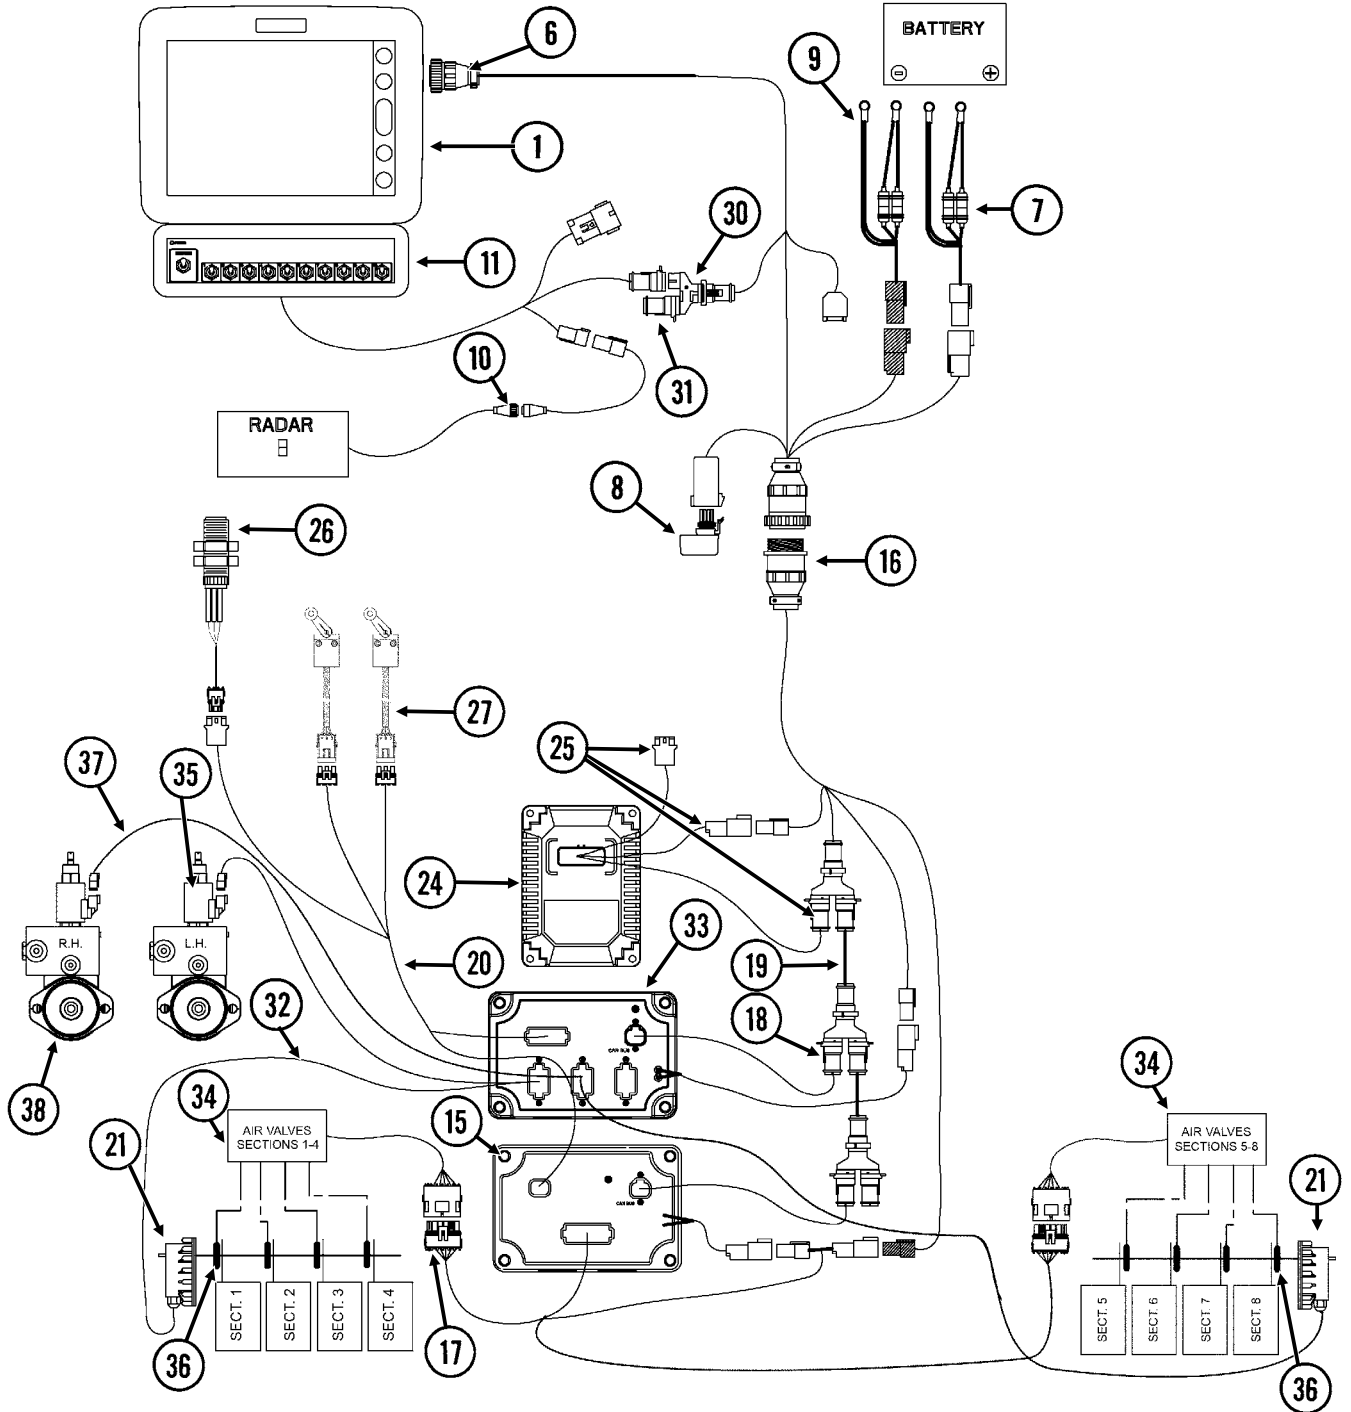


# KINZE VISION® DISPLAY

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GA12536  | 1    | Vision Display  |
| 2.   | GA12852  | 1    | Power Supply  |
| 3.   | GA12853  | 1    | Null Modem Cable  |
| 4.   | GR1835   | 1    | Flash Card  |
| 5.   | GR1836   | 1    | SMS CD  |
| 6.   | GA12551  | 1    | Display Cable   |
| 7.   | GA12562  | 1    | Power Cable   |
| 8.   | GA12540  | 1    | Power Control Relay   |
| 9.   | GA12598  | 1    | Seed Rate Power Cable   |
| 10.  | GA12596  | 1    | Radar Adapter Cable   |
| 11.  | GA12539  | 1    | Switch Box Module   |
| 12.  | GR1838   | 1    | Dust Plug   |
| 13.  | GR1839   | 1    | Dust Plug   |
| 14.  | GA12868  | 1    | Mounting Bracket Assembly   |
|      | GD18407  | 1    | Ram Base  |
|      | GD18408  | 1    | Ram Vesa Base   |
| 15.  | GA12537  | 1    | Clutch Control Module   |
| 16.  | GA12655  | -    | Implement Cable (16 Row)  |
| 17.  | GA13530  | 1    | Clutch Control Cable  |
| 18.  | GA12558  | 1    | Can Stub Cable, 8"  |
| 19.  | GA12559  | 1    | Can Extension, 5"   |
| 20.  | GA13531  | 1    | Implement Switch Extension Cable                                      |
| 21.  | GA12565  | 1    | Encoder Module  |
| 22.  | GR1916   | 1    | Switch Box Bracket  |
| 24.  |          | -    | See "Planter Monitor Module (PMM)", Pages P124 And P125               |
| 25.  |          | -    | See "Planter Monitor Module (PMM)", Pages P124 And P125               |
| 26.  | GA13204  | 1    | Hall Effect Sensor  |
| 27.  |          |      | See "Shank Assembly, Seed Tube And Depth Adjustment", Pages P2 And P3 |
| 28.  | GA12553  | 1    | GPS Cable   |
| 29.  | GA12552  | 1    | GPS Antenna   |
| 30.  | GD18176  | -    | Y-Splice Connector  |
| 31.  | GD18177  | -    | Terminator  |
| 32.  | GA13533  | 1    | Seed Rate Cable (L.H.)  |
| 33.  | GA12564  | 1    | Seed Rate Control Module  |
| 34.  |          | -    | See "Hydraulic Driveline Assemblies", Pages P80-P83                   |
| 35.  |          | -    | See "Hydraulic Motor - Located On L.H. Driveline", Page P99           |
| 36.  |          | -    | See "Pneumatic Down Pressure Package Option", Pages P4 And P5         |
| 37.  | GA13532  | 1    | Seed Rate Cable (R.H.)  |
| 38.  |          |      | See "Hydraulic Motor - Located On R.H. Driveline" Page P98            |

# KINZE COBALT™ DISPLAY

(CO1a/VI18/VI21/A12553/GR1916/GR1839/A12852/A12853)

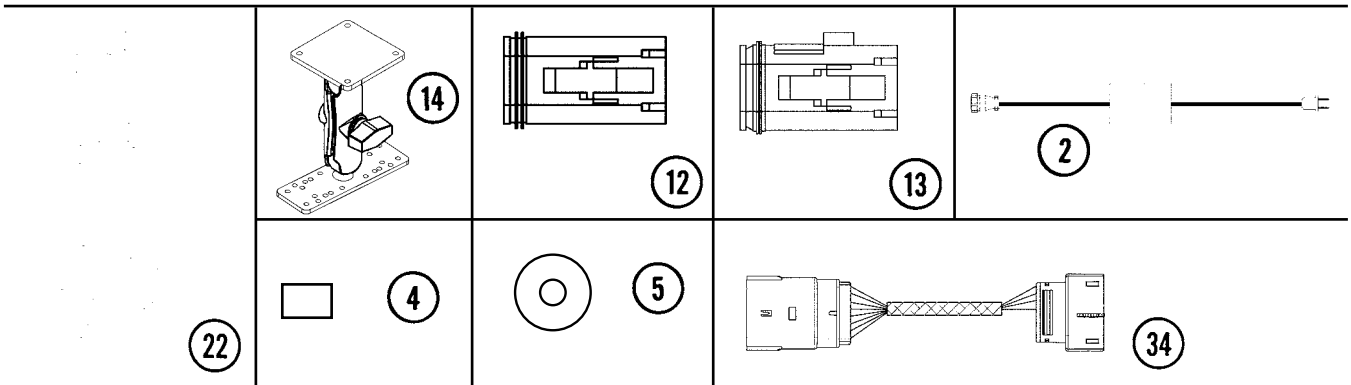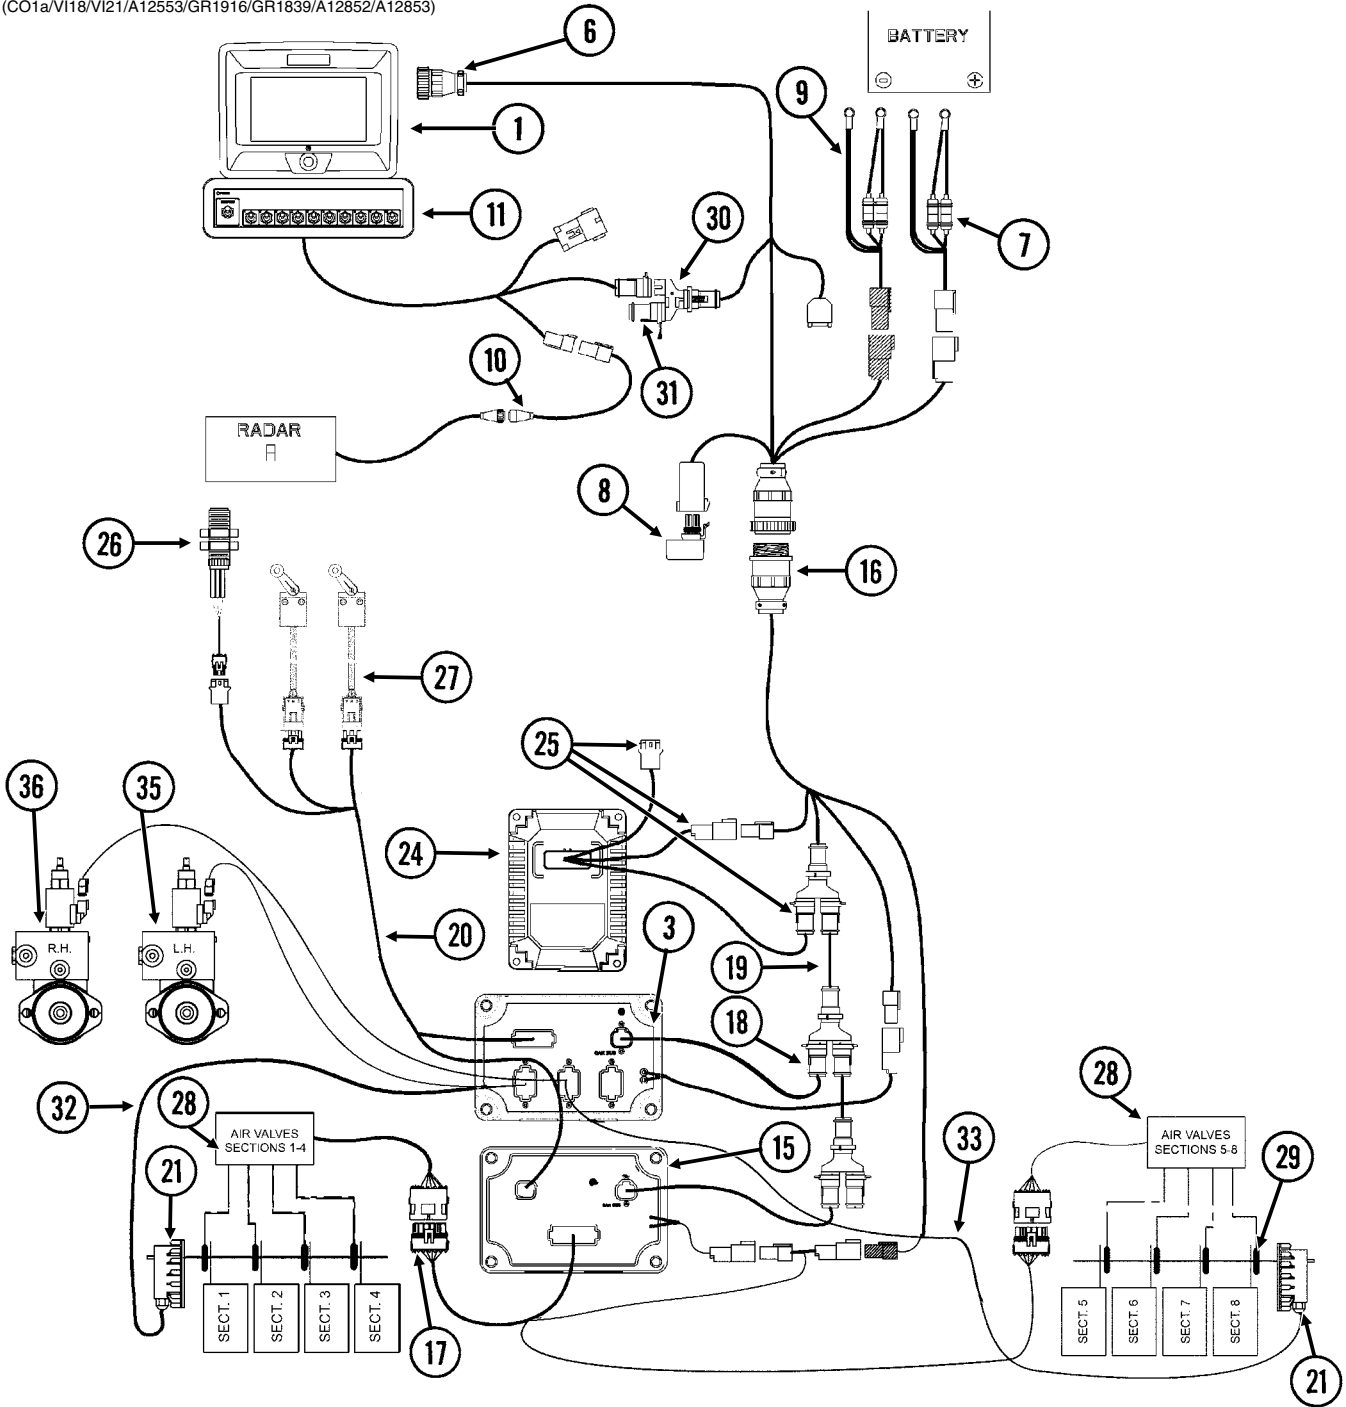



# KINZE COBALT™ DISPLAY









---

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GA13554  | 1    | Cobalt Display  |
| 2.   | GA12852  | 1    | Power Supply  |
| 3.   | GA12564  | 1    | Seed Rate Control Module  |
| 4.   | GR1835   | 1    | Flash Card  |
| 5.   | GR1836   | 1    | SMS CD  |
| 6.   | GA12551  | 1    | Display Cable   |
| 7.   | GA12562  | 1    | Power Cable   |
| 8.   | GA12540  | 1    | Power Control Relay   |
| 9.   | GA12598  | 1    | Seed Rate Power Cable   |
| 10.  | GA12596  | 1    | Radar Adapter Cable   |
| 11.  | GA12539  | 1    | Switch Box Module   |
| 12.  | GR1838   | 1    | Dust Plug   |
| 13.  | GR1839   | 1    | Dust Plug   |
| 14.  | GA12868  | 1    | Mounting Bracket Assembly   |
|      | GD18407  | 1    | Ram Base  |
|      | GD18408  | 1    | Ram Vesa Base   |
| 15.  | GA12537  | 1    | Clutch Control Module   |
| 16.  | GA12555  | 1    | Implement Cable (12 Row)  |
|      | GA12655  | -    | Implement Cable (16 Row)  |
| 17.  | GA13530  | 1    | Clutch Control Cable  |
| 18.  | GA12558  | 1    | Can Stub Cable, 8"  |
| 19.  | GA12559  | 1    | Can Extension, 5"   |
| 20.  | GA13531  | 1    | Implement Switch Extension Cable                                      |
| 21.  | GA12565  | 1    | Encoder Module  |
| 22.  | GR1916   | 1    | Switch Box Bracket  |
| 24.  |          | -    | See "Planter Monitor Module (PMM)", Pages P124 And P125               |
| 25.  |          | -    | See "Planter Monitor Module (PMM)", Pages P124 And P125               |
| 26.  | GA13204  | 1    | Hall Effect Sensor  |
| 27.  |          |      | See "Shank Assembly, Seed Tube And Depth Adjustment", Pages P2 And P3 |
| 28.  |          |      | See "Hydraulic Driveline Assemblies", Pages P80-P83                   |
| 29.  |          |      | See "Pneumatic Down Pressure Package Option", Pages P4 And P5         |
| 30.  | GD18176  | -    | Y-Splice Connector  |
| 31.  | GD18177  | -    | Terminator  |
| 32.  | GA13533  | 1    | Seed Rate Cable (L.H.)  |
| 33.  | GA13532  | 1    | Seed Rate Cable (R.H.)  |
| 34.  | GA13654  | -    | Adapter Cable   |
| 35.  |          |      | See "Hydraulic Motor - Located On L.H. Driveline", Page P99           |
| 36.  |          |      | See "Hydraulic Motor - Located On R.H. Driveline", Page P98           |

# PLANTER MONITOR MODULE (PMM)

(MTR60/PMM01/MTR65/MTR61/MTR64/MTR62/PMM02/A7849)

## Shaft Rotation Sensor

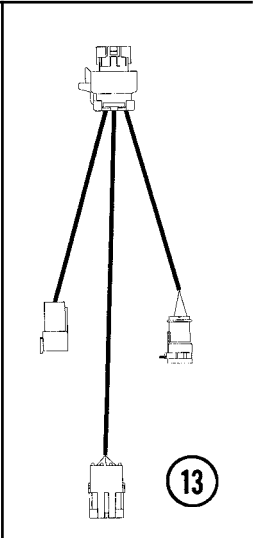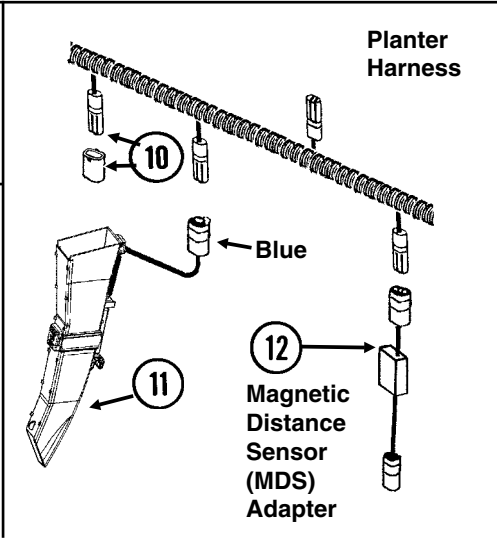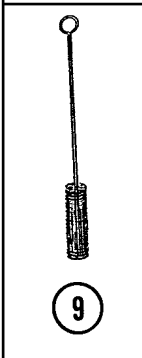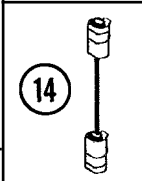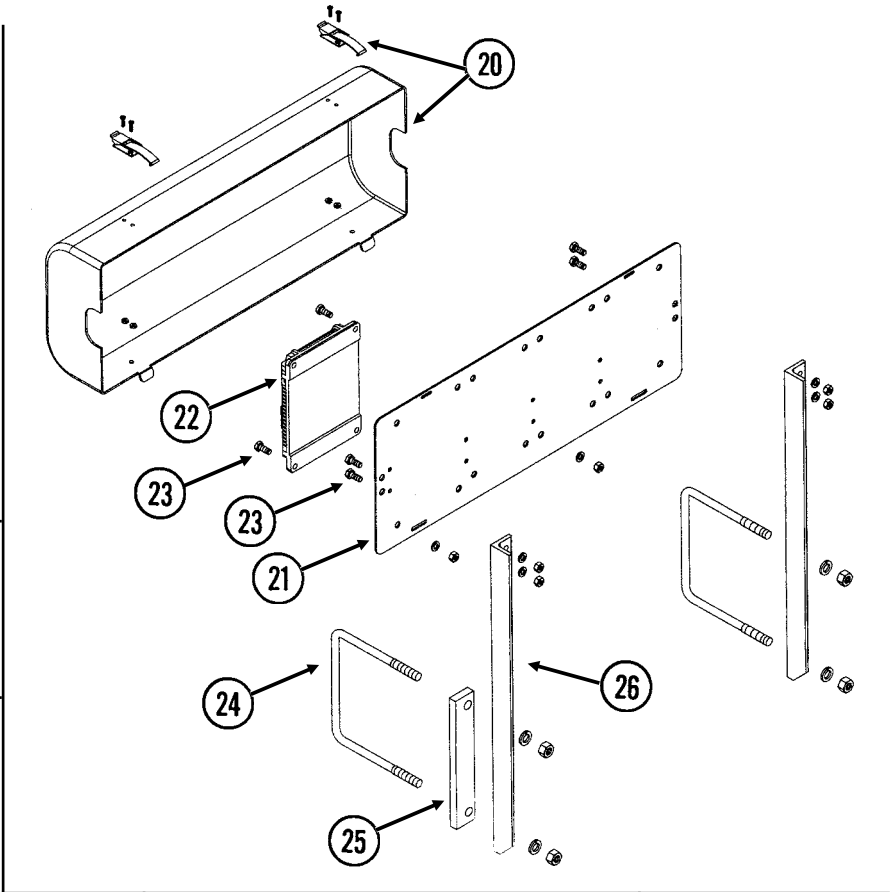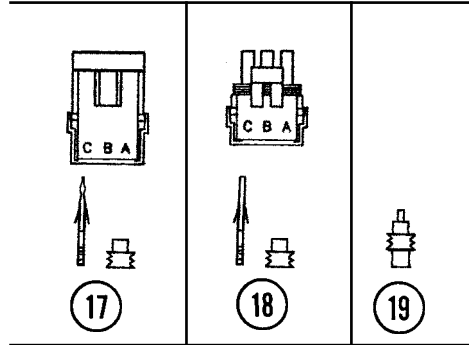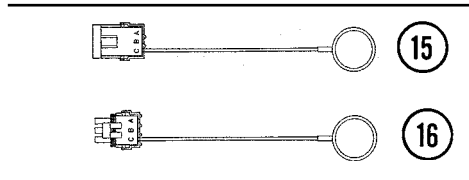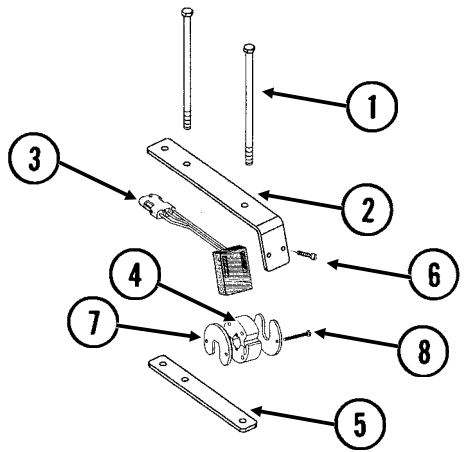



# PLANTER MONITOR MODULE (PMM)

**NOTE: See Ag Leader manual for Ag Leader Insight display and associated cab harness components.**

| TEM | PART NO. | QTY.   | DESCRIPTION   |  |
|-----|----------|--------|---|--|
| 1.  | G10686   | 4      | Hex Head Cap Screw, 3/8"-16 x 8"  |  |
|     | G10229   | 4      | Lock Washer, 3/8"   |  |
|     | G10101   | 4      | Hex Nut, 3/8"-16  |  |
| 2.  | GD18118  | 2      | Shaft Sensor Mount  |  |
| 3.  | GR1415   | 1      | Rotation Sensor   |  |
| 4.  | GR1414   | 1      | Actuator  |  |
| 5.  | GD18168  | 2      | Mount   |  |
| 6.  | G11288   | 2      | Pan Head Screw, No. 10-32 x 1 1/4"  |  |
|     | G10243   | 2      | Washer, No. 10 SAE  |  |
|     | G10758   | 2      | Hex Nut, No. 10-32  |  |
| 7.  | GD11474  | 4      | Cover   |  |
| 8.  | G10927   | 4      | Pan Head Machine Screw, No. 8-32 x 1 1/4", Stainless Steel  |  |
|     | G10931   | 4      | Lock Washer, No. 8, Internal/External, Stainless Steel  |  |
|     | G10928   | 4      | Hex Nut, No. 8-32, Stainless Steel  |  |
| 9.  | GR0594   | -      | Brush   |  |
| 10. | GA8022   | -      | Planter Harness W/Dust Caps, 6 Row (9 Connectors)   |  |
|     | GA7851   | -      | Planter Harness W/Dust Caps, 12 Row (16 Connectors)   |  |
|     | GD11993  | -      | Dust Cap  |  |
| 11. | GA12650  | -      | Seed Tube W/Computerized Sensor, EdgeVac®   |  |
|     | GR1737   | -      | Sensor Only, EdgeVac®   |  |
|     | GA12636  | -      | Seed Tube (With Holes For Sensor Installation), EdgeVac®  |  |
| 12. | GA7859   | 1      | Magnetic Distance Sensor Adapter (Analog To Digital)  |  |
| 13. | GA12557  | 1      | Planter Monitor Module Cable  |  |
| 14. | GA7849   | 1      | Extension Harness, 15'  |  |
| 15. | GA8046   | -      | Dust Plug (Black)   |  |
|     | GA9978   | -      | Dust Plug (Blue)  |  |
|     | GA8047   | -      | Dust Plug (Black)   |  |
| 16. | GA9979   | -      | Dust Plug (Blue)  |  |
|     | 17.      | G1K248 | -   | 3-Pin Female Connector Kit (Black), Includes: (3) 3-Pin Female Housings, (9) Pin Contacts, (9) Seals |
|     |          | G1K362 | -   | 3-Pin Female Connector Kit (Blue), Includes: (3) 3-Pin Female Housings, (9) Pin Contacts, (9) Seals  |
| 18. | G1K252   | -      | 3-Pin Male Connector Kit (Black), Includes: (3) 3-Pin Male Housings, (9) Socket Contacts, (9) Seals |  |
|     | G1K363   | -      | 3-Pin Male Connector Kit (Blue), Includes: (3) 3-Pin Male Housings, (9) Socket Contacts, (9) Seals  |  |
| 19. | GD11089  | -      | Sealing Plug  |  |
| 20. | GA12563  | 1      | Module Cover Assembly W/Lock Clamps   |  |
|     | GD18642  | 1      | Module Cover  |  |
|     | GA12641  | -      | Lock Clamp  |  |
|     | G11065   | -      | Phillips Pan Head Machine Screw, No. 8-32 x 5/8", Stainless Steel                                   |  |
|     | G11241   | -      | Serrated Flange Nut   |  |
| 21. | GD18013  | 1      | Bracket   |  |
| 22. | GA12538  | 1      | Planter Monitor Module  |  |
| 23. | G10043   | 4      | Hex Head Cap Screw, 5/16"-18 x 3/4"   |  |
|     | G10232   | 4      | Lock Washer, 5/16"  |  |
|     | G10106   | 4      | Hex Nut, 5/16"-18   |  |
| 24. | GD7145   | 2      | U-Bolt, 7" x 7" x 1/2"-13   |  |
|     | G10228   | 4      | Lock Washer, 1/2"   |  |
|     | G10102   | 4      | Hex Nut, 1/2"-13  |  |
| 25. | GD16316  | 2      | Spacer, 1 1/2" x 9"   |  |
| 26. | GD16315  | 2      | Support, 21 1/2"  |  |

# NOTCHED SINGLE DISC FERTILIZER OPENER

(A10216aa)

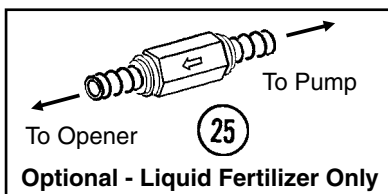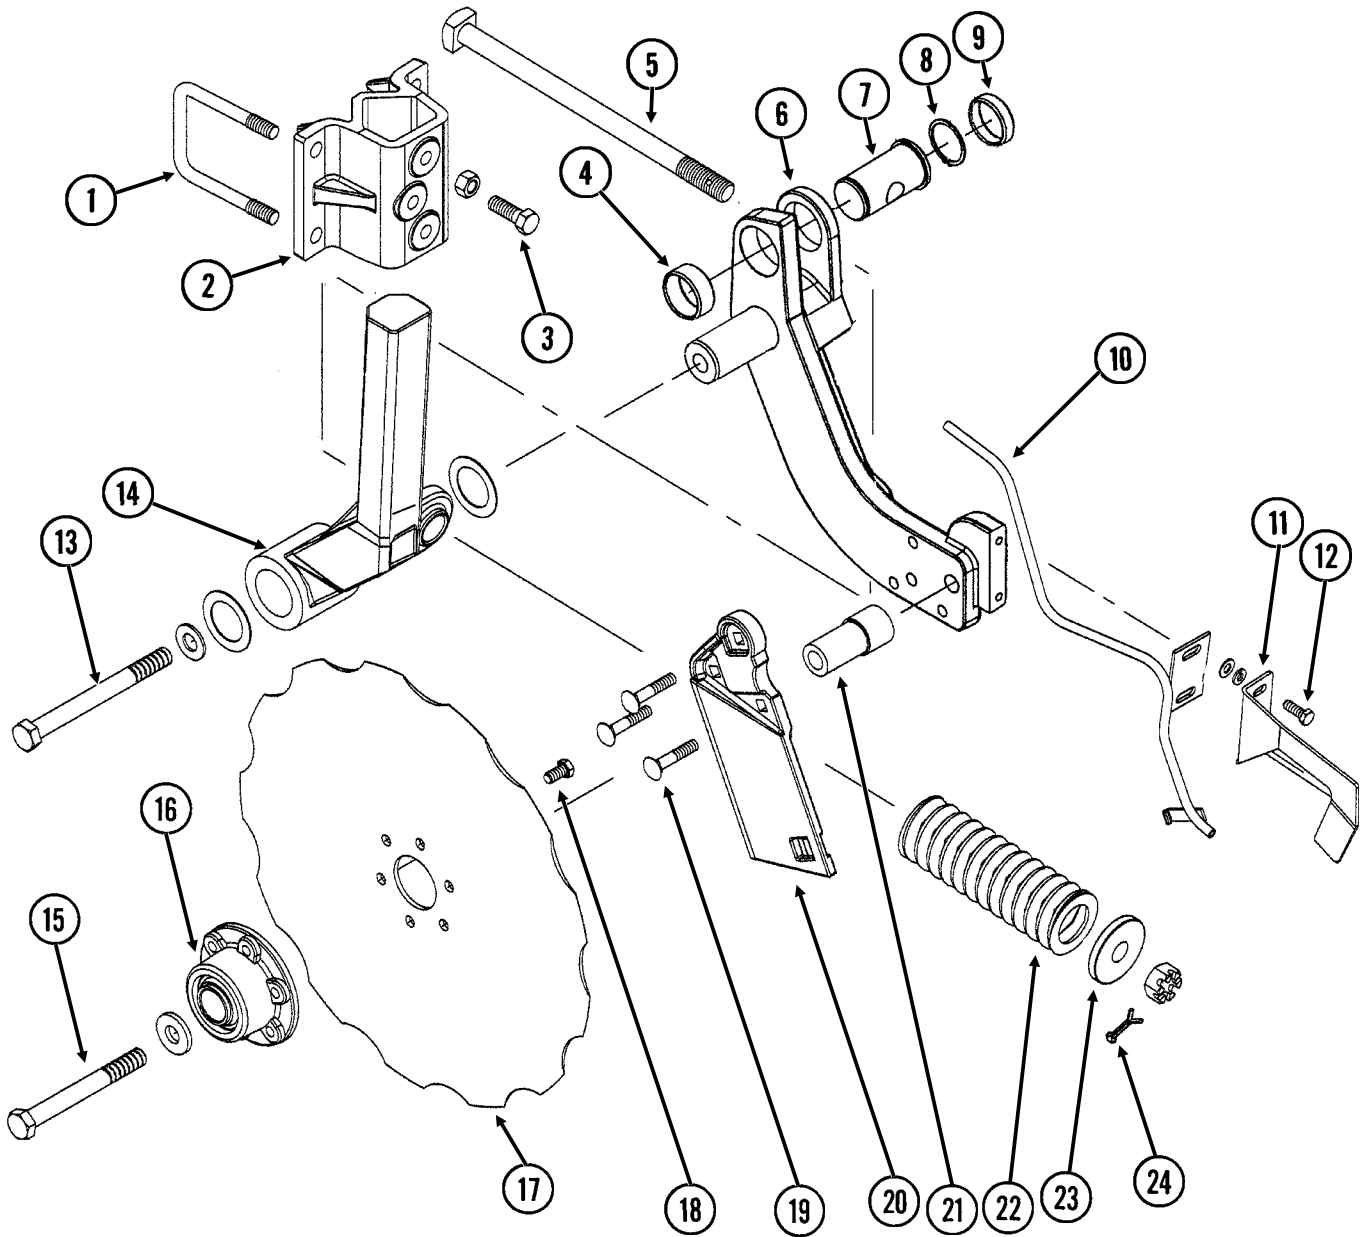


# NOTCHED SINGLE DISC FERTILIZER OPENER

| ITEM | PART NO. | QTY.        | DESCRIPTION  |
|------|----------|-------------|--|
|      |          | (Per Assy.) |  |
| 1.   | GD17006  | 2           | U-Bolt, 3" x 3" x 1/2"-13                                  |
|      | G10228   | 4           | Lock Washer, 1/2"  |
|      | G10102   | 4           | Hex Nut, 1/2"-13   |
| 2.   | GB0343   | 1           | Mount  |
| 3.   | G10017   | 3           | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                       |
|      | G10102   | 3           | Hex Nut, 1/2"-13   |
| 4.   | GD14672  | 1           | Spring Bushing, 3/4"                                       |
| 5.   | GD15226  | 1           | Special Bolt, 3/4"-10 x 12"                                |
|      | G11116   | 1           | Slotted Hex Nut, 3/4"-10                                   |
| 6.   | GA10704  | 1           | Pivot Arm W/Shaft, R.H. (Shown)                            |
|      | GA10705  | -           | Pivot Arm W/Shaft, L.H.                                    |
|      | GD14651  | -           | Shaft  |
| 7.   | GD14649  | -           | Pin  |
| 8.   | G10283   | 1           | External Retaining Ring, 1 1/2"                            |
| 9.   | GD14673  | 1           | Spring Bushing, 1/2"                                       |
| 10.  | GA11760  | 1           | Drop Tube, R.H., Liquid Fertilizer (Shown)                 |
|      | GA11759  | -           | Drop Tube, L.H., Liquid Fertilizer                         |
| 11.  | GD11558  | -           | Scraper, R.H. (Shown)                                      |
|      | GD11557  | 1           | Scraper, L.H.  |
| 12.  | G10991   | 2           | Hex Head Cap Screw, 5/16"-18 x 7/8"                        |
|      | G10232   | 2           | Lock Washer, 5/16"   |
|      | G10219   | 2           | Washer, 5/16" USS  |
| 13.  | G10012   | 1           | Hex Head Cap Screw, 5/8"-11 x 6 1/2"                       |
|      | G10450   | 2           | Machine Bushing, 1 1/2", 18 Gauge                          |
|      | G10217   | 1           | Washer, 5/8" USS   |
|      | G10107   | 1           | Lock Nut, 5/8"-11  |
| 14.  | GA10646  | 1           | Arm Mount W/Grease Fitting, Bushing And Seal, R.H. (Shown) |
|      | GA10647  | -           | Arm Mount W/Grease Fitting, Bushing And Seal, L.H.         |
|      | G10640   | -           | Grease Fitting, 1/4"-28                                    |
|      | GD15600  | -           | Bushing  |
|      | GD15568  | -           | Seal   |
| 15.  | G10011   | 1           | Hex Head Cap Screw, 5/8"-11 x 5 1/2"                       |
|      | GD12677  | 1           | Washer, 1 1/2" O.D., 7 Gauge, Hardened                     |
|      | G10107   | 1           | Lock Nut, 5/8"-11  |
| 16.  | GA9437   | 1           | Hub W/Bearing  |
|      | GA8603   | -           | Bearing, Double Row  |
| 17.  | GD12676  | 1           | Disc Blade, Notched, 16 3/4"                               |
| 18.  | G10002   | 6           | Hex Head Cap Screw, 3/8"-16 x 3/4"                         |
| 19.  | G10306   | 3           | Carriage Bolt, 3/8"-16 x 2"                                |
|      | G10108   | 3           | Lock Nut, 3/8"-16  |
| 20.  | GB0322   | -           | Knife, R.H. (Shown)  |
|      | GB0323   | 1           | Knife, L.H.  |
| 21.  | GD12679  | 1           | Stepped Spacer, 3" Long                                    |
| 22.  | GD12817  | 1           | Compression Spring   |
| 23.  | GB0213   | 1           | Spring Seat  |
| 24.  | G10462   | 1           | Cotter Pin, 3/16" x 2"                                     |
| 25.  | GA8983   | -           | Check Valve, Low Rate                                      |

# DEPTH/GAUGE WHEEL ATTACHMENT FOR NOTCHED SINGLE DISC FERTILIZER OPENER


(FRTZ257)

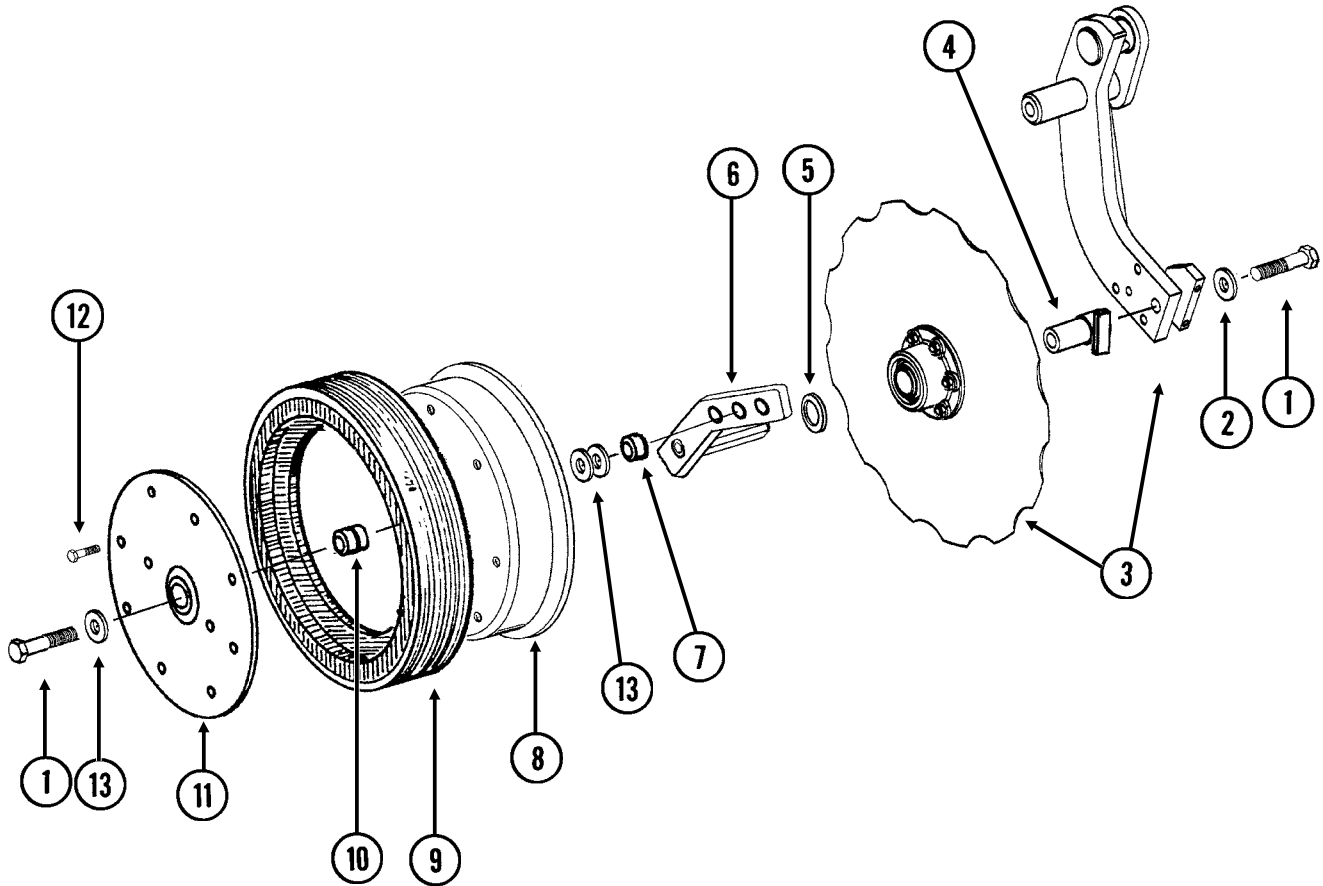

| ITEM | PART NO. | QTY.        | DESCRIPTION  |
|------|----------|-------------|--|
|      |          | (Per Assy.) |  |
| 1.   | G10010   | 2           | Hex Head Cap Screw, 5/8"-11 x 3"                                 |
| 2.   | GD7805   | 1           | Special Washer, 5/8", Hardened                                   |
| 3.   |          | -           | See "Notched Single Disc Fertilizer Opener", Pages P126 And P127 |
| 4.   | GA9472   | 1           | Blade Mount  |
| 5.   | G10233   | 1           | Machine Bushing, 1 1/2" x 1/32", 10 Gauge                        |
| 6.   | GA10037  | 1           | Wheel Mount, L.H. (Shown)  |
|      | GA10036  | 1           | Wheel Mount, R.H.  |
| 7.   | GD13309  | 1           | Spacer   |
| 8.   | GD11423  | 1           | Half Wheel   |
| 9.   | GD11953  | 1           | Offset Tire  |
| 10.  | GA6171   | 1           | Bearing  |
| 11.  | GD11954  | 1           | Half Wheel Cover, Nylon  |
| 12.  | G10961   | 11          | Flanged Whiz-Lock Screw, 5/16"-18 x 3/4", No Serration           |
|      | G10620   | 11          | Serrated Flange Nut, 5/16"-18                                    |
| 13.  | G10204   | -           | Special Machine Bushing, 5/8" x 1" O.D. (As Required)            |
| A.   | GA8877   | -           | Gauge Wheel Complete (Items 8-12)                                |

# FERTILIZER OPENER MOUNTS


(FWD28/FWD138/FWD29a)

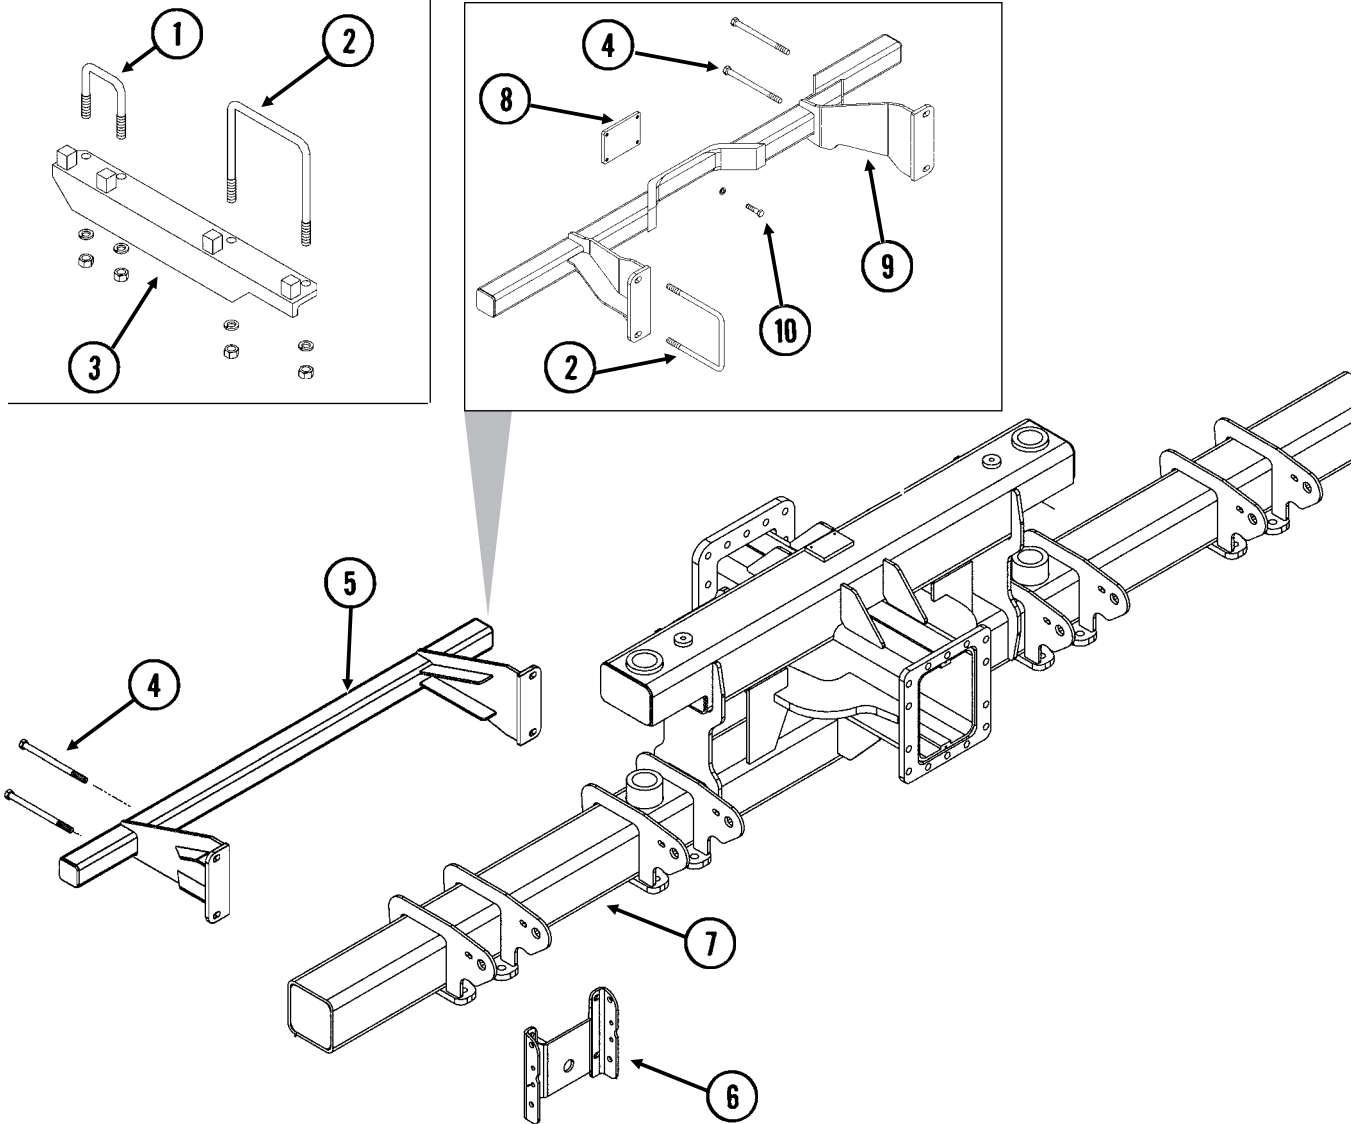

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GD14671  | -    | U-Bolt, 3" x 3" x 5/8"-11  |
|      | G10230   | -    | Lock Washer, 5/8"  |
|      | G10104   | -    | Hex Nut, 5/8"-11   |
| 2.   | GD17039  | -    | U-Bolt, 7" x 7" x 5/8"-11  |
|      | G10230   | -    | Lock Washer, 5/8"  |
|      | G10104   | -    | Hex Nut, 5/8"-11   |
| 3.   | GB0365   | -    | Brace, L.H. (Shown)  |
|      | GB0370   | -    | Brace, R.H.  |
| 4.   | G10177   | -    | Hex Head Cap Screw, 5/8"-11 x 9 1/2"   |
|      | G10230   | -    | Lock Washer, 5/8"  |
|      | G10104   | -    | Hex Nut, 5/8"-11   |
| 5.   | GA10923  | 2    | Mount  |
| 6.   |          | -    | See "Parallel Arms, Mounting Support Plate And Pheumatic Down Pressure Package", Page P4 |
| 7.   |          | -    | See "Center Toolbar/Rear H-Frame Assembly", Pages P66 And P67                            |
| 8.   | GD17973  | 2    | Tap Block  |
| 9.   | GA12487  | 1    | Opener Mount, L.H. (Shown)   |
|      | GA12488  | -    | Opener Mount, R.H.   |
| 10.  | G10016   | 8    | Hex Head Cap Screw, 1/2"-13 x 2"   |
|      | G10228   | 8    | Lock Washer, 1/2"  |

# LIQUID FERTILIZER TANKS, SADDLES, SADDLE MOUNTS AND HOSES (Conventional)

(FWD146/FRTZ265)

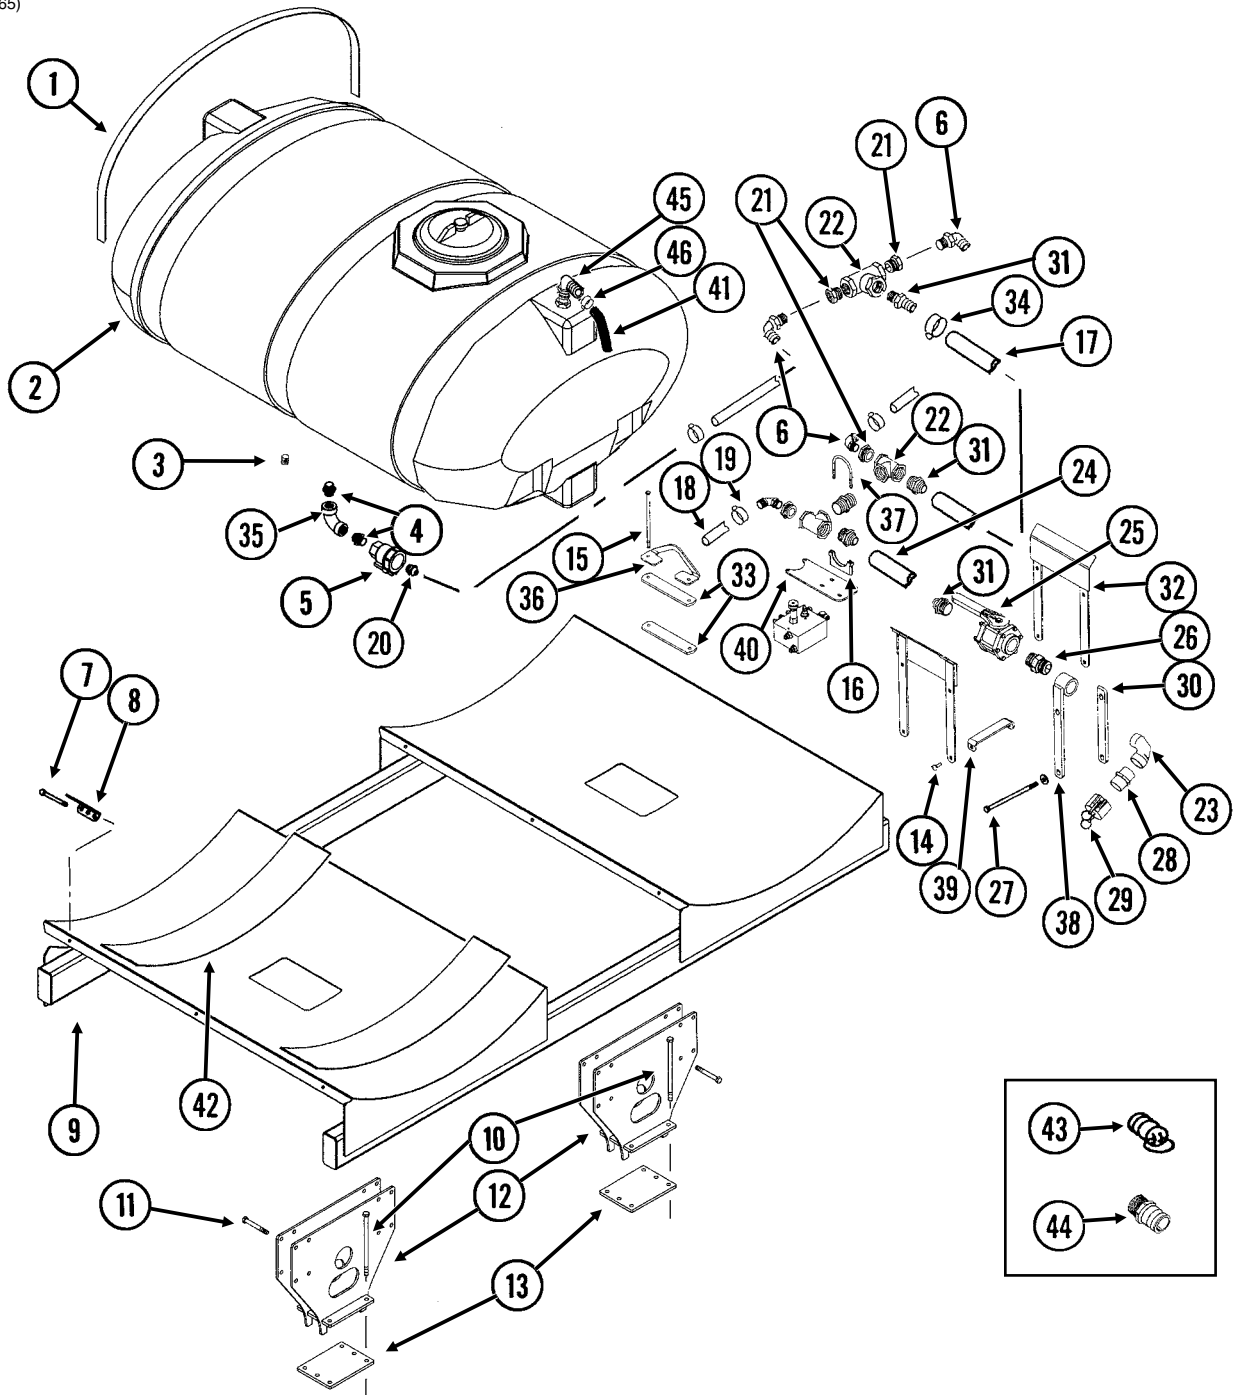

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GD15605  | 3    | Band (3 Per Tank)   |
| 2.   | GA10201  | 2    | Tank W/Lid And Fittings, 500 Gallon   |
|      | GR1702   | -    | Lid/Fillwell, 8" (Top Of Tank)  |
|      | GR1708   | -    | 3/4" Bulkhead Fitting Assembly (Overflow Fitting, Nut, Bushing And O-Ring) (Top And Bottom Of Tank) |
|      | GR1739   | -    | 2" Bulkhead Fitting Assembly (Nut, Bushing And O-Ring) (Bottom Of Tank)                             |
|      | GR1686   | -    | Lanyard, 12 1/2" (Top Of Tank)  |
| 3.   | G10096   | 2    | Pipe Plug, 3/4" NPT   |
| 4.   | G10619   | 4    | Close Nipple, 1 1/4" NPT  |




# LIQUID FERTILIZER TANKS, SADDLES, SADDLE MOUNTS AND HOSES (Conventional)

| ITEM | PART NO. | QTY. | DESCRIPTION                                    |
|------|----------|------|--|
| 5.   | GA4976   | 2    | Shutoff Valve, 1 1/4" NPT                      |
|      | GR1015   | -    | Body O-Ring                                    |
|      | GR1016   | -    | Stem O-Ring                                    |
|      | GR1017   | -    | Teflon Seat                                    |
|      | GR1018   | -    | Ball   |
|      | GR1019   | -    | Handle   |
| 6.   | G10629   | 4    | Elbow, 90°, 1 1/4" NPT To Barb                 |
| 7.   | G10485   | 6    | Hex Head Tap Bolt, 3/8"-16 x 5" (6 Per Tank)   |
|      | G10901   | 6    | Lock Nut W/ Nylon Insert, 3/8"-16 (6 Per Tank) |
| 8.   | GD11123  | 6    | Anchor <b>(Sub GA8114)</b>                     |
| 9.   | GA10356  | 1    | Tank Mount                                     |
| 10.  | G11122   | 12   | Hex Head Cap Screw, 5/8"-11 x 12"              |
|      | G10205   | 12   | Washer, 5/8" SAE                               |
|      | G10107   | 12   | Lock Nut, 5/8"-11                              |
| 11.  | G10046   | 12   | Hex Head Cap Screw, 5/8"-11 x 5"               |
|      | G10205   | 12   | Washer, 5/8" SAE                               |
|      | G10107   | 12   | Lock Nut, 5/8"-11                              |
| 12.  | GA12503  | 2    | Mounting Bracket                               |
| 13.  | GD17995  | 2    | Plate, 8 3/4" x 10 1/2"                        |
| 14.  | G10599   | 8    | Carriage Bolt, 3/8"-16 x 1 1/4"                |
|      | G10203   | 8    | Washer, 3/8" SAE                               |
|      | G10108   | 8    | Lock Nut, 3/8"-16                              |
| 15.  | G11193   | 8    | Hex Head Cap Screw, 3/8"-16 x 9 1/2"           |
|      | G10108   | 8    | Lock Nut, 3/8"-16                              |
| 16.  | GA8768   | 2    | Clamp, 3"                                      |
| 17.  | G4206-01 | 1    | Hose, 2" x 18'                                 |
| 18.  | G4200-05 | 2    | Hose, 1 1/4" x 50'                             |
| 19.  | G10674   | 48   | Hose Clamp, No. 24                             |
| 20.  | G10626   | 2    | Adapter, 1 1/4" NPT To Barb                    |
| 21.  | G10616   | 6    | Reducing Bushing, 2" Male NPT To 1 1/4" Female |
| 22.  | G10888   | 3    | Tee, 2" Female NPT                             |
| 23.  | G10287   | 1    | Elbow, 90°, 2" Male NPT To Female              |
| 24.  | G4201-02 | 1    | Hose, 2" x 12'                                 |
| 25.  | GA2660   | 1    | Shutoff Valve, 2" NPT                          |
| 26.  | G10623   | 3    | Close Nipple, 2" NPT                           |
| 27.  | G10148   | 2    | Hex Head Cap Screw, 1/2"-13 x 9 1/2"           |
|      | G10216   | 2    | Washer, 1/2" USS                               |
|      | G10228   | 2    | Lock Washer, 1/2"                              |
|      | G10102   | 2    | Hex Nut, 1/2"-13                               |
| 28.  | GD3622   | 1    | Adapter, 2" Female NPT To Cam Lock             |
| 29.  | GD3951   | 1    | Dust Cap, 2" Cam Lock                          |
| 30.  | GD15703  | 1    | Bracket, 1 1/2" x 12 1/2"                      |
| 31.  | G10628   | 4    | Adapter, 2" NPT To Barb                        |
| 32.  | GA11064  | 2    | Hose Support                                   |
| 33.  | GD16478  | 4    | Bracket  |
| 34.  | G10676   | 4    | Hose Clamp, No. 36, Stainless Steel            |
| 35.  | G10897   | 2    | Elbow, 90°, 1 1/4" Female NPT                  |
| 36.  | GD16479  | 4    | Mount  |
| 37.  | G11165   | 2    | T-Bolt Clamp, 2 1/2", Stainless Steel          |
| 38.  | GA10509  | 1    | Straight Mount, Quick Fill, 14 19/32"          |
| 39.  | GD16189  | 4    | Tie Bracket                                    |
| 40.  | GD16210  | 1    | Bracket  |
| 41.  | G4205-10 | 1    | Hose, 3/4" x 200" (100" Per Tank)              |
| 42.  | GD1862   | 2    | Pad, 8" x 14"                                  |
| 43.  | GD10777  | 2    | Dust Plug, 2" Male Cam Lock                    |
| 44.  | GD3623   | 1    | Adapter, 2" Male NPT To Cam Lock               |
| 45.  | G10917   | 2    | Elbow, 90°, 3/4" NPT To Barb                   |
| 46.  | G10278   | 10   | Hose Clamp, No. 16                             |

# LIQUID FERTILIZER TANKS, SADDLES, SADDLE MOUNTS AND HOSES (SDS)

(FWD145c/FRTZ265)

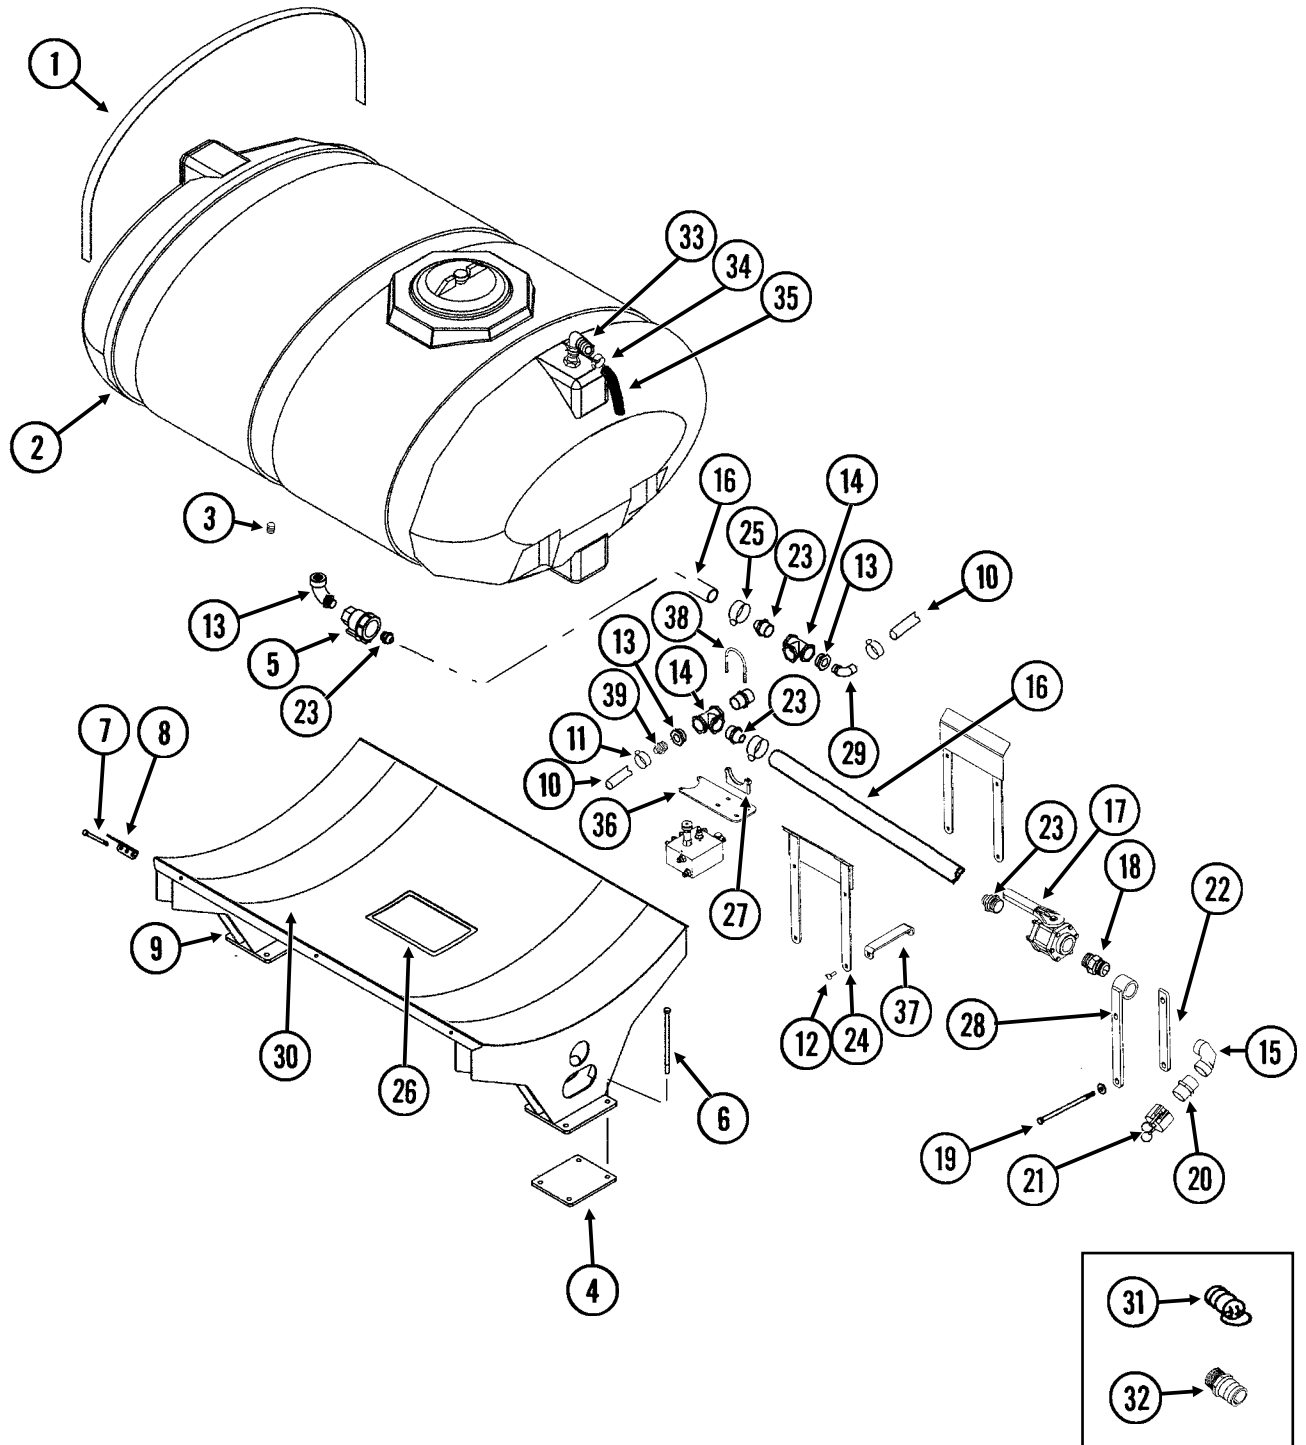


# LIQUID FERTILIZER TANKS, SADDLES, SADDLE MOUNTS AND HOSES (SDS)

---

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GD15605  | 3    | Band (3 Per Tank)   |
| 2.   | GA10201  | 1    | Tank W/Lid And Fittings, 500 Gallon   |
|      | GR1702   | -    | Lid/Fillwell, 8" (Top Of Tank)  |
|      | GR1708   | -    | 3/4" Bulkhead Fitting Assembly (Overflow Fitting, Nut, Bushing And O-Ring) (Top And Bottom Of Tank) |
|      | GR1739   | -    | 2" Bulkhead Fitting Assembly (Nut, Bushing And O-Ring) (Bottom Of Tank)                             |
|      | GR1686   | -    | Lanyard, 12 1/2" (Top Of Tank)  |
| 3.   | G10096   | 2    | Pipe Plug, 3/4" NPT   |
| 4.   | GD17992  | 2    | Plate   |
| 5.   | GA11399  | 2    | Shutoff Valve, 2" NPT   |
|      | GR1769   | -    | Handle  |
|      | GR1768   | -    | Ball  |
|      | GR1017   | -    | Teflon Seat   |
|      | GR1767   | -    | Stem O-Ring   |
|      | GR1766   | -    | Body O-Ring   |
| 6.   | G11122   | 8    | Hex Head Cap Screw, 5/8"-11 x 12"   |
|      | G10205   | 8    | Washer, 5/8" SAE  |
|      | G10107   | 8    | Lock Nut, 5/8"-11   |
| 7.   | G10485   | 6    | Hex Head Tap Bolt, 3/8"-16 x 5" (6 Per Tank)  |
|      | G10901   | 6    | Lock Nut W/Nylon Insert, 3/8"-16 (6 Per Tank)   |
| 8.   | GD11123  | 6    | Anchor (Sub GA8114)   |
| 9.   | GA12520  | 1    | Tank Mount  |
| 10.  | G4200-05 | 1    | Hose, 1 1/4" x 50'  |
| 11.  | G10674   | 46   | Hose Clamp, No. 24  |
| 12.  | G10599   | 8    | Carriage Bolt, 3/8"-16 x 1 1/4"   |
|      | G10203   | 8    | Washer, 3/8" SAE  |
|      | G10108   | 8    | Lock Nut, 3/8"-16   |
| 13.  | G10616   | 2    | Reducing Bushing, 2" Male NPT To 1 1/4" Female  |
| 14.  | G10888   | 2    | Tee, 2" Female NPT  |
| 15.  | G10287   | 2    | Elbow, 90°, 2" Male NPT To Female   |
| 16.  | G4201-03 | 1    | Hose, 2" x 18'  |
| 17.  | GA2660   | 1    | Shutoff Valve, 2" NPT   |
| 18.  | G10623   | 6    | Close Nipple, 2" NPT  |
| 19.  | G10148   | 2    | Hex Head Cap Screw, 1/2"-13 x 9 1/2"  |
|      | G10216   | 2    | Washer, 1/2" USS  |
|      | G10228   | 2    | Lock Washer, 1/2"   |
|      | G10102   | 2    | Hex Nut, 1/2"-13  |
| 20.  | GD3622   | 1    | Adapter, 2" Female NPT To Cam Lock  |
| 21.  | GD3951   | 1    | Dust Cap, 2" Cam Lock   |
| 22.  | GD15703  | 1    | Bracket, 1 1/2" x 12 1/2", 24 Row 30"   |
| 23.  | G10628   | 4    | Adapter, 2" NPT To Barb   |
| 24.  | GA11064  | 2    | Hose Support, 24 Row 30"  |
| 25.  | G10676   | 4    | Hose Clamp, No. 36, Stainless Steel   |
| 26.  | G4427-01 | -    | Edge Molding, 1/8" x 12"  |
|      | G4427-02 | -    | Edge Molding, 1/8" x 7"   |
| 27.  | GA8768   | 2    | Clamp, 3"   |
| 28.  | GA10509  | 1    | Straight Mount, Quick Fill, 14 19/32"   |
| 29.  | G10629   | 1    | Elbow, 90°, 1 1/4" NPT To Barb  |
| 30.  | GD1862   | 1    | Pad, 8" x 14"   |
| 31.  | GD10777  | 2    | Dust Plug, 2" Male Cam Lock   |
| 32.  | GD3623   | 1    | Adapter, 2" Male NPT To Cam Lock  |
| 33.  | G10917   | 2    | Elbow, 90°, 3/4" NPT To Barb  |
| 34.  | G10278   | 10   | Hose Clamp, No. 16  |
| 35.  | G4205-10 | 1    | Hose, 3/4" x 200" (100" Per Tank)   |
| 36.  | GD16210  | 1    | Bracket   |
| 37.  | GD16189  | 4    | Tie Bracket   |
| 38.  | G11165   | 2    | T-Bolt Clamp, 2 1/2", Stainless Steel   |
| 39.  | G10626   | 1    | Adapter, 1 1/4" NPT To Barb   |

# LIQUID FERTILIZER PISTON PUMP MOUNT AND GROUND DRIVE WHEEL

(TWL317a)

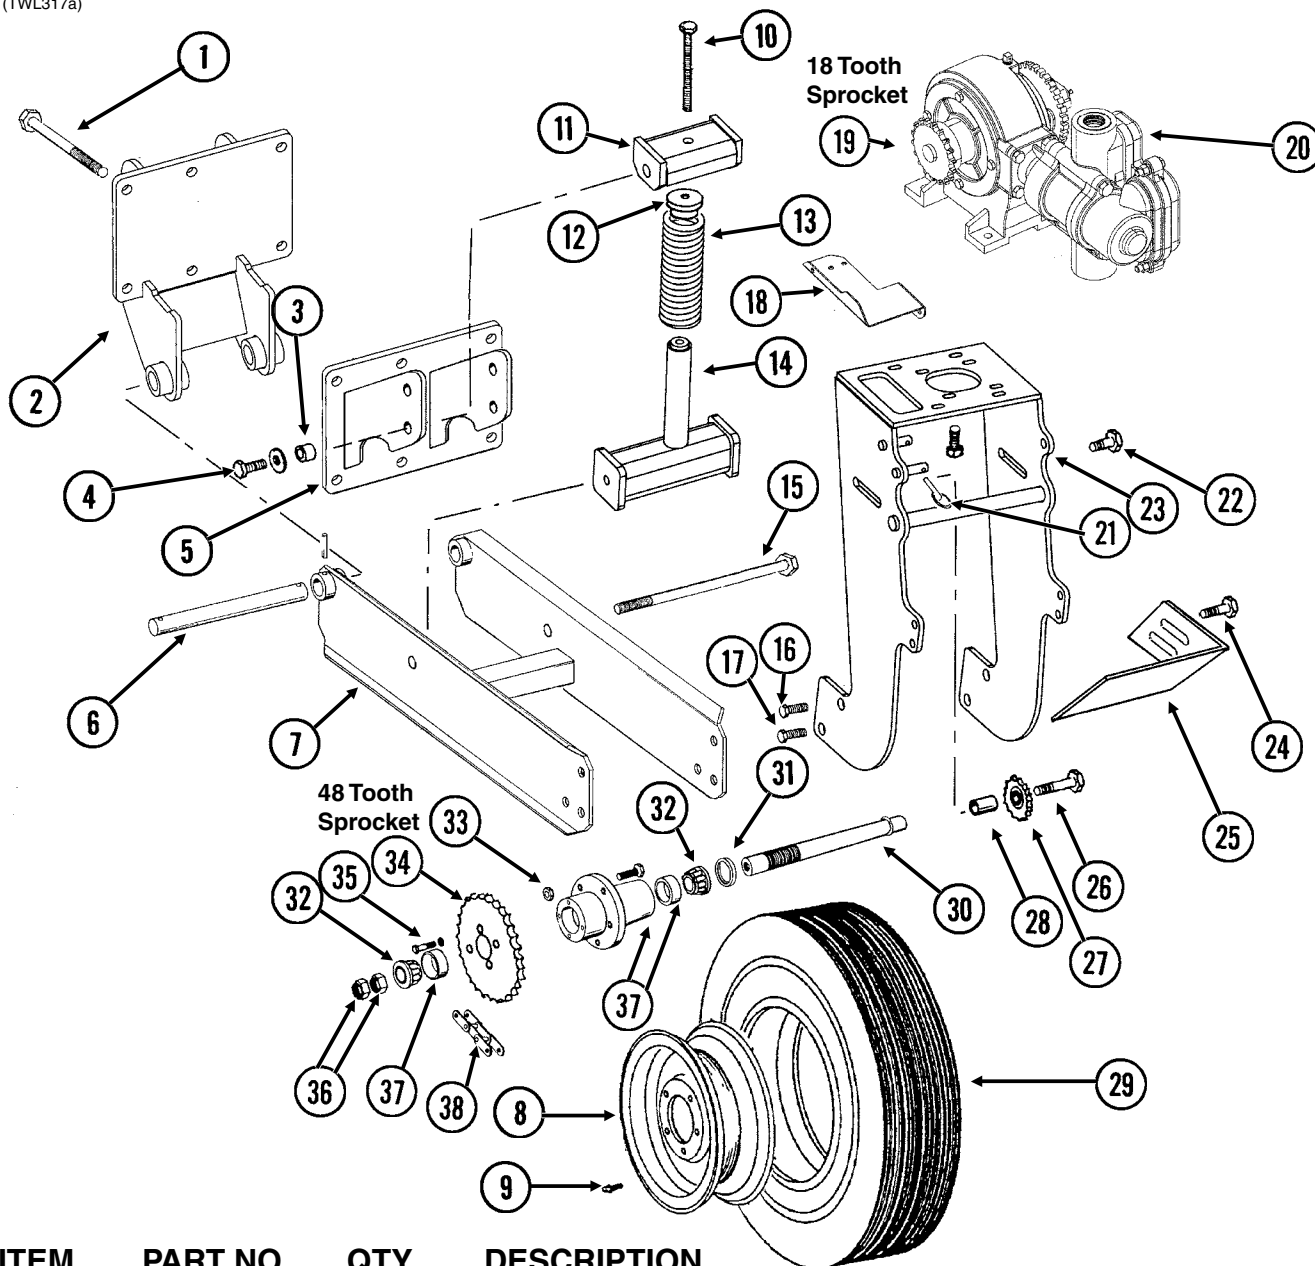

| ITEM | PART NO. | QTY. | DESCRIPTION                                       |
|------|----------|------|---|
| 1.   | G10152   | 6    | Hex Head Cap Screw, 5/8"-11 x 9"                  |
|      | G10230   | 6    | Lock Washer, 5/8"                                 |
|      | G10104   | 6    | Hex Nut, 5/8"-11                                  |
| 2.   | GA10355  | 1    | Wheel Arm Mount                                   |
| 3.   | GB0218   | 2    | Bushing, 2 1/32" I.D. x 7/8" O.D. x 1 19/32" Long |
| 4.   | G10005   | 2    | Hex Head Cap Screw, 5/8"-11 x 1 3/4"              |
|      | GD7805   | 2    | Special Washer, 5/8", Hardened                    |
|      | G10107   | 2    | Lock Nut, 5/8"-11                                 |
| 5.   | GA9712   | 1    | Spring Mount                                      |
| 6.   | GD2681   | 1    | Pin, 1 1/4" x 13 1/2"                             |
|      | G10460   | 2    | Cotter Pin, 1/4" x 2"                             |
| 7.   | GA10621  | 1    | Arm W/Grease Fittings                             |
|      | G10641   | 2    | Grease Fitting, 1/8" NPT                          |
| 8.   | GA0241   | 1    | Wheel, 5" x 15"                                   |
|      | GD1166   | 1    | Valve Stem  |


# LIQUID FERTILIZER PISTON PUMP MOUNT AND GROUND DRIVE WHEEL

| ITEM | PART NO.  | QTY. | DESCRIPTION  |
|------|-----------|------|--|
| 10.  | G10012    | 1    | Hex Head Cap Screw, 5/8"-11 x 6 1/2"                     |
|      | GD7805    | 1    | Special Washer, 5/8", Hardened                           |
| 11.  | GA10908   | 1    | Spring Mount   |
| 12.  | GB0196    | 1    | Washer   |
| 13.  | GD7831    | 1    | Compression Spring                                       |
| 14.  | GA10907   | 1    | Spring Guide   |
| 15.  | G11122    | 1    | Hex Head Cap Screw, 5/8"-11 x 12"                        |
|      | G10107    | 1    | Lock Nut, 5/8"-11  |
| 16.  | G10026    | 2    | Hex Head Cap Screw, 3/4"-10 x 2"                         |
|      | G10231    | 2    | Lock Washer, 3/4"  |
| 17.  | G11042    | 2    | Hex Head Cap Screw, 3/4"-10 x 1 3/4"                     |
|      | G10231    | 2    | Lock Washer, 3/4"  |
|      | G10105    | 2    | Hex Nut, 3/4"-10   |
| 18.  | GD13744   | 1    | Hose Holder  |
| 19.  | GR1146    | 1    | Sprocket, 18 Tooth                                       |
| 20.  |           | -    | See "Liquid Fertilizer Piston Pump", Pages P180 And P181 |
| 21.  | GD2558    | 1    | Lynch Pin, 1/4"  |
| 22.  | G10007    | 2    | Hex Head Cap Screw, 5/8"-11 x 1 1/2"                     |
|      | G10217    | 2    | Washer, 5/8" USS   |
|      | G10230    | 2    | Lock Washer, 5/8"  |
|      | G10104    | 2    | Hex Nut, 5/8"-11   |
| 23.  | GA10894   | 1    | Pump Mount   |
| 24.  | G10017    | 2    | Hex Head Cap Screw, 1/2"-13 x 1 1/2"                     |
|      | G10216    | 2    | Washer, 1/2" USS   |
|      | G10228    | 2    | Lock Washer, 1/2"  |
|      | G10102    | 2    | Hex Nut, 1/2"-13   |
| 25.  | GD13328   | 1    | Scraper  |
| 26.  | G10013    | 1    | Hex Head Cap Screw, 5/8"-11 x 3 1/2"                     |
|      | G10205    | 1    | Washer, 5/8" SAE   |
|      | G10230    | 1    | Lock Washer, 5/8"  |
|      | G10104    | 1    | Hex Nut, 5/8"-11   |
| 27.  | GA0262    | 1    | Idler Sprocket W/Bearing, 15 Tooth                       |
| 28.  | GD7817-05 | 1    | Spacer, 1 1/16" I.D. x 1 1/4" Long                       |
| 29.  | GD0844    | 1    | Tire, 7.60" x 15", 8 Ply (Specify Brand*)                |
| 30.  | GA2559    | 1    | Spindle  |
| 31.  | GA0252    | 2    | Seal   |
| 32.  | GA0251    | 2    | Bearing  |
| 33.  | GR0267    | 5    | Lug Nut, 1/2"-20   |
| 34.  | G2500-84  | 1    | Sprocket, 48 Tooth                                       |
| 35.  | G10019    | 4    | Hex Head Cap Screw, 5/16"-18 x 1"                        |
|      | G10232    | 4    | Lock Washer, 5/16"                                       |
| 36.  | GD0831    | 2    | Shoulder Nut, 1 1/4"-12 UNF-2A                           |
| 37.  | GA0547    | 1    | Hub W/Cups And Studs, 5 Bolt                             |
|      | GR0190    | 2    | Cup  |
|      | GR0204    | 5    | Stud   |
| 38.  | G3200-63  | 1    | Chain, No. 2050, 63 Pitch Including Connector Link       |
|      | GR0195    | 1    | Connector Link, No. 2050                                 |
|      | GR0200    | 1    | Offset Link, No. 2050                                    |

\* Specific brand requests will be supplied only as available from current KINZE® Repair Parts stock. If a specific brand requested is not in stock, the brand available will be supplied. Different brand tires may have different diameters. Change in tire brand may affect rates. Field checks are recommended after any change in tires.

# LIQUID FERTILIZER FLOW DIVIDER MOUNT AND HOSES

(FRTZ215j)

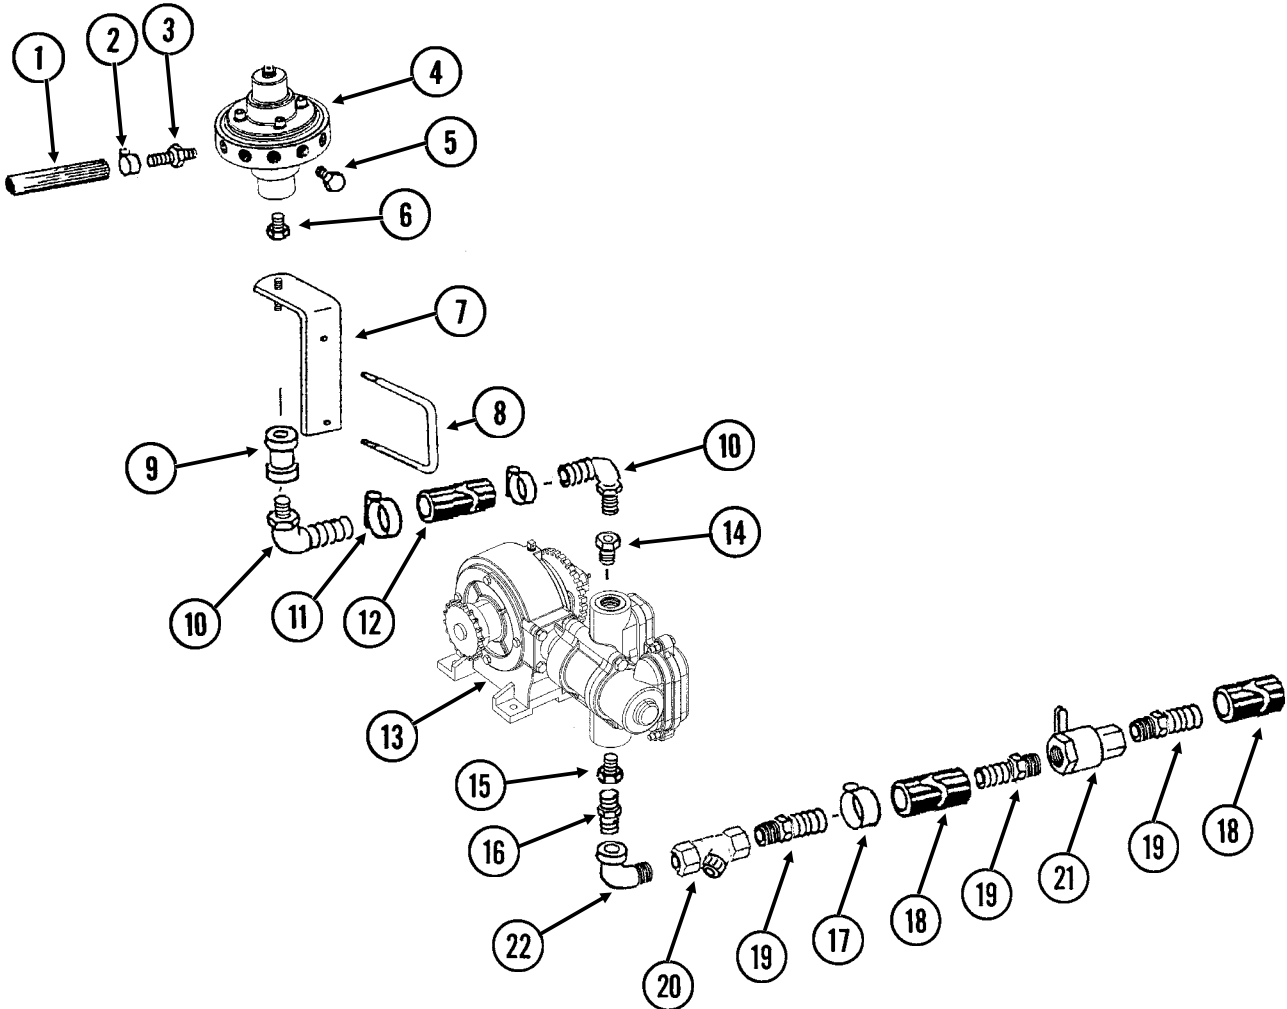


# LIQUID FERTILIZER FLOW DIVIDER MOUNT AND HOSES

| ITEM | PART NO. | QTY.<br>(Per Assy.) | DESCRIPTION  |
|------|----------|---------------------|--|
| 1.   | G4301-02 | -                   | Hose, 3/8" x 50'   |
|      | G4301-04 | -                   | Hose, 3/8" x 100'  |
|      | G4301-08 | -                   | Hose, 3/8" x 250'  |
| 2.   | G10681   | 24-32               | Hose Clamp, No. 6  |
| 3.   | GD11700  | 12-16               | Adapter, 1/4" NPT To 3/8" Barb   |
| 4.   |          | -                   | See "Liquid Fertilizer Piston Pump Flow Divider", Pages P140                                     |
| 5.   | G10292   | -                   | Pipe Plug, 1/4" NPT  |
| 6.   | G10995   | 1                   | Reducing Bushing, 1" Male NPT To 3/4" Female, Stainless Steel                                    |
| 7.   | GA6527   | 1                   | Mount, 3/4" NPT  |
| 8.   | GD1114   | 1                   | U-Bolt, 7" x 7" x 5/8"-11  |
|      | G10230   | 2                   | Lock Washer, 5/8"  |
|      | G10104   | 2                   | Hex Nut, 5/8"-11   |
| 9.   | G11083   | 1                   | Coupler, 3/4" Female NPT   |
| 10.  | G10917   | 2                   | Elbow, 90°, 3/4" NPT To Barb   |
| 11.  | G10278   | 2                   | Hose Clamp, No. 16   |
| 12.  | G4205-10 | -                   | Hose, 3/4" x 200"  |
| 13.  |          | -                   | See "Liquid Fertilizer Piston Pump, Pages P138 And P139  |
| 14.  | G11237   | 1                   | Reducing Bushing, 1 1/2" Male NPT To 3/4" Female   |
| 15.  | G10615   | 1                   | Reducing Bushing, 1 1/2" Male NPT To 1 1/4" Female   |
| 16.  | G10619   | 1                   | Close Nipple, 1 1/4" NPT   |
| 17.  | G10674   | 2                   | Hose Clamp, No. 24   |
| 18.  |          | -                   | Hose, 1 1/4", See "Liquid Fertilizer Tanks, Saddles, Saddle Mounts<br>And Hoses", Pages P130-133 |
| 19.  | G10626   | 3                   | Adapter, 1 1/4" NPT To Barb  |
| 20.  | GA3893   | 1                   | Strainer Complete  |
|      | GR0880   | -                   | Screen, No. 40 Mesh  |
|      | GR0881   | -                   | Gasket   |
|      | GR0882   | -                   | Y-Body   |
|      | GR0883   | -                   | End Cap  |
| 21.  | GA4976   | -                   | Shutoff Valve, 1 1/4" NPT  |
|      | GR1015   | -                   | Body O-Ring  |
|      | GR1016   | -                   | Stem O-Ring  |
|      | GR1017   | -                   | Teflon Seat  |
|      | GR1018   | -                   | Ball   |
|      | GR1019   | -                   | Handle   |
| 22.  | G10887   | 2                   | Elbow, 90°, 1 1/4" Male NPT To Female  |

# LIQUID FERTILIZER PISTON PUMP (Uses 18 Tooth Sprocket)

(A12335a/GR1808)

## Model NGP-7055

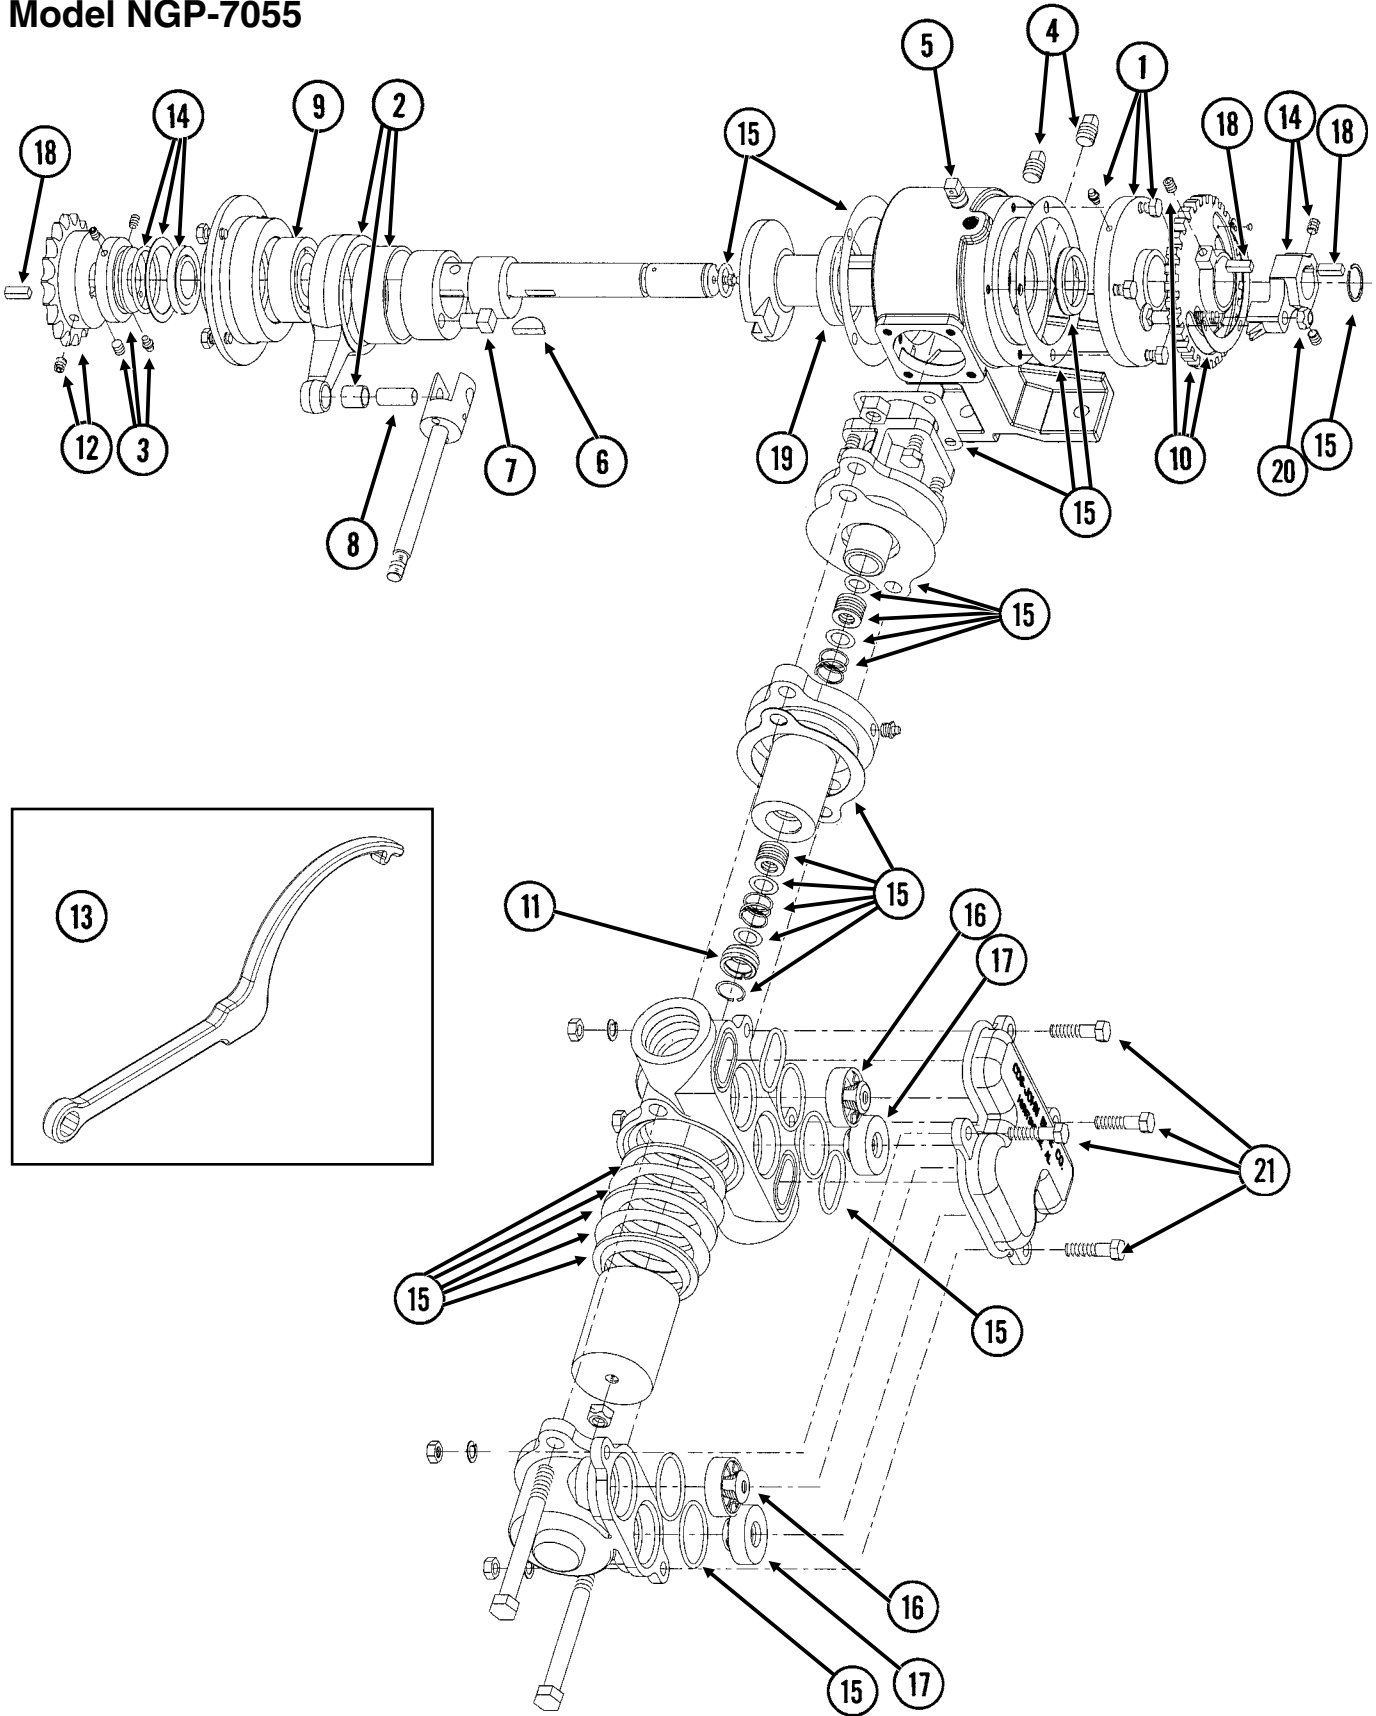




# LIQUID FERTILIZER PISTON PUMP (Uses 18 Tooth Sprocket)

---

| ITEM | PART NO. | QTY. | DESCRIPTION  |
|------|----------|------|--|
| 1.   | GR1804   | 1    | Flange Cover Assembly  |
|      | G10991   | 4    | Hex Head Cap Screw, 5/16"-18 x 7/8"  |
| 2.   | GR1803   | 1    | Connecting Rod Assembly  |
| 3.   | GR1801   | 1    | Spacer Assembly  |
|      | G10693   | 3    | Hex Socket Head Set Screw, 5/16"-18 x 3/8"   |
| 4.   | GR1123   | 2    | Plug   |
| 5.   | GR1543   | 1    | Vent Plug  |
| 6.   | GR1112   | 1    | Woodruff Key   |
| 7.   | GR1120   | 1    | Eccentric Pin  |
| 8.   | GR1124   | 1    | Pin  |
| 9.   | GR1104   | 1    | Bearing  |
| 10.  | GR1805   | 1    | Setting Hub Assembly   |
| 11.  | GR1134   | 1    | Stuffing Box Insert  |
| 12.  | GR1146   | 1    | Sprocket, 18 Tooth   |
| 13.  | GR1808   | 1    | Adjustment Wrench  |
| 14.  | GR1806   | 1    | Setting Pointer Assembly   |
| 15.  | GR1796   | 1    | Repair Kit, Includes: (6) Gaskets, (9) O-Rings, (4) Washers,<br>(1) Retaining Ring, (2) Oil Seals, (1) Snap Ring, (1) Thrust Washer,<br>(1) Rod Bushing, (2) Flange Plunger Packings, (2) Packing Springs,<br>(2) Rod Vee Packing Sets |
| 16.  | GR1800   | 2    | Discharge Valve Assembly   |
| 17.  | GR1798   | 2    | Suction Valve Assembly   |
| 18.  | GR1118   | 3    | Setting Arm Key  |
| 19.  | GR1116   | 1    | Bearing  |
| 20.  | G10306   | 1    | Carriage Bolt, 3/8"-16 x 2"  |
|      | G10108   | 1    | Lock Nut, 3/8"-16  |
| 21.  | G10003   | 4    | Hex Head Cap Screw, 3/8"-16 x 1 1/2"   |
|      | G10210   | 4    | Washer, 3/8" USS   |
|      | G10229   | 4    | Lock Washer, 3/8"  |
|      | G10101   | 4    | Hex Nut, 3/8"-16   |
| A.   | GA12335  | -    | Piston Pump Complete W/18 Tooth Sprocket (Model NGP-7055)  |

# LIQUID FERTILIZER PISTON PUMP FLOW DIVIDER

(FRTZ202c)

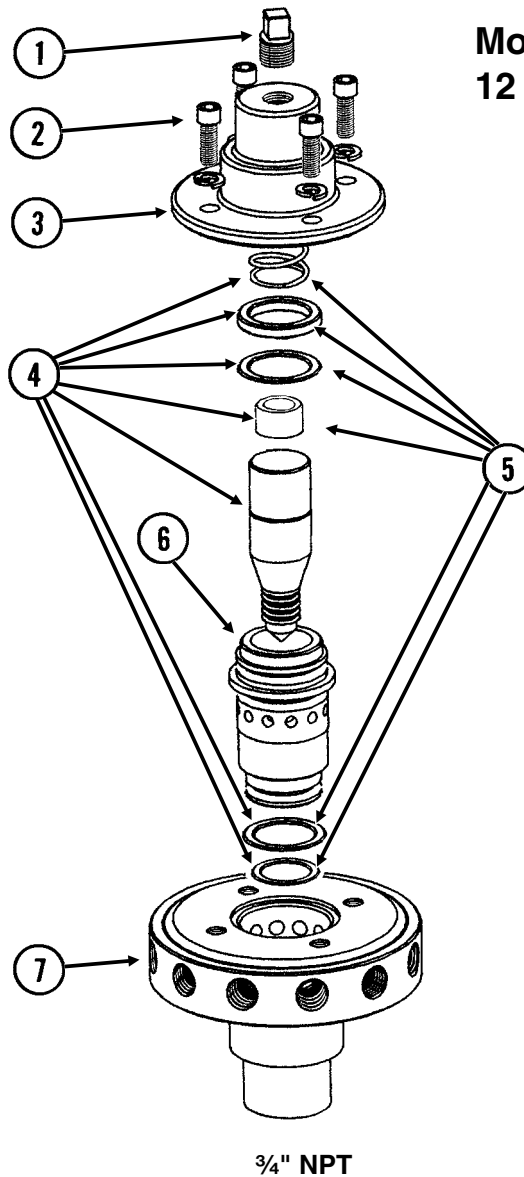


**Model FD-1200 Flow Divider,  
12 Outlet**

| ITEM | PART NO. | QTY. | DESCRIPTION   |
|------|----------|------|---|
| 1.   | GR1543   | 1    | Vent Plug   |
| 2.   | GR1542   | 4    | Hex Socket Head Screw, 1/4"-20 x 3/4", Stainless Steel                            |
|      | GR1541   | 4    | Lock Washer, 1/4", Stainless Steel  |
| 3.   | GR1540   | 1    | Cap   |
| 4.   | GR1544   | 1    | Needle Assembly W/Seal Kit (Item 5)   |
| 5.   | GR1545   | 1    | Seal Kit, Includes: (3) O-Rings, (1) Seal, (1) Spring, (1) Stainless Steel Sleeve |
| 6.   | GR1535   | 1    | Sleeve  |
| 7.   | GR1533   | 1    | Body (12 Outlets)   |
| A.   | GA8931   | 1    | Liquid Fertilizer Piston Pump Flow Divider Complete, 12 Outlet (Model FD-1200)    |

# REAR TRAILER HITCH

(FWD159)

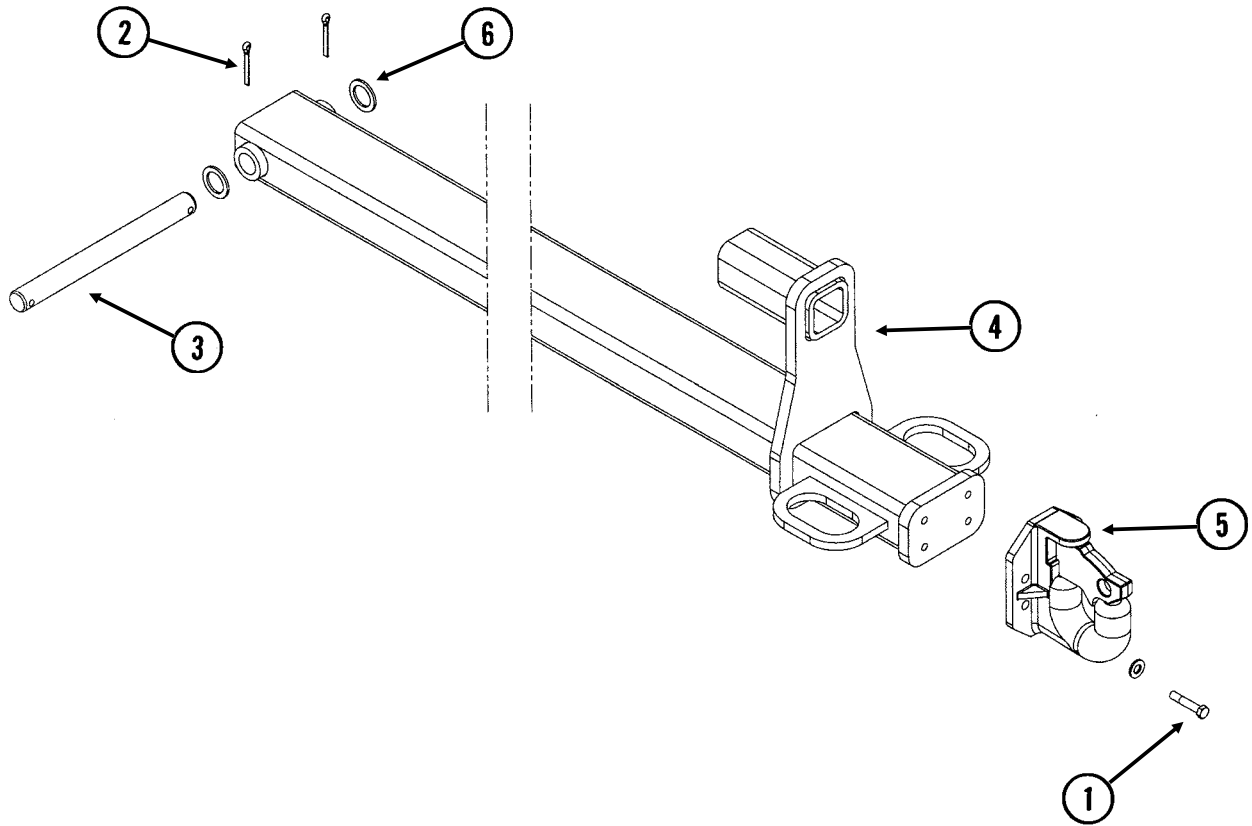


| ITEM | PART NO. | QTY. | DESCRIPTION                          |
|------|----------|------|--------------------------------------|
| 1.   | G11264   | 4    | Hex Head Cap Screw, 1/2"-13 x 1 3/4" |
|      | GD14674  | 4    | Special Washer, 1/2", Hardened       |
| 2.   | G10460   | 2    | Cotter Pin, 1/4" x 2"                |
| 3.   | GD19148  | 1    | Pin, 1 1/4" x 9 1/4"                 |
| 4.   | GA13238  | 1    | Hitch Mount                          |
| 5.   | GA10859  | 1    | Pintle Hitch                         |
| 6.   | G10159   | 2    | Machine Bushing, 1 1/4", 10 Gauge    |

# DECALS, PAINT AND MISCELLANEOUS




1

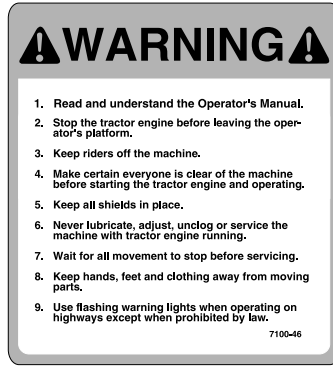

2



3

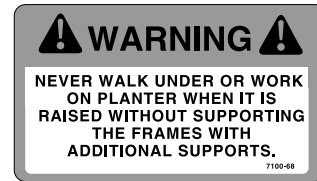

4



10



6



7




8




9




11

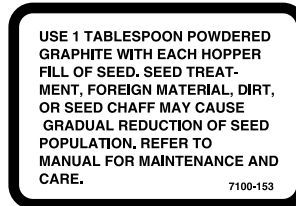

12

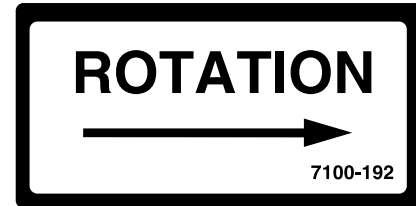


13

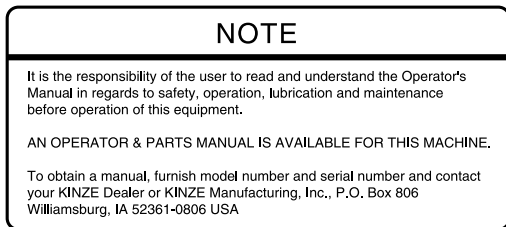

14




15

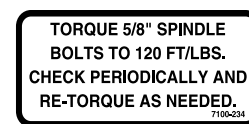

16



17

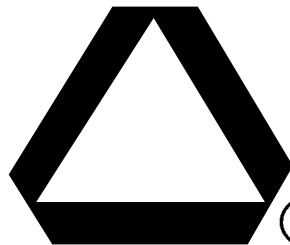

18



19



20



21



22

# DECALS, PAINT AND MISCELLANEOUS

ROTATE KNURLED COLLAR  
ON WRAP SPRING TIGHTENER  
TO RELEASE SPRING  
TENSION

7100-295

23

# KINZE

# 3800

24

A A

25

**⚠ WARNING ⚠**

STAY CLEAR  
OF DISCHARGE  
WHILE FAN  
IS RUNNING


7100-301

29


TRANSPORT

708-217

30




28

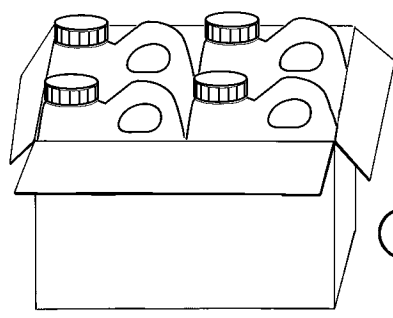

41

# KINZE


31



32



33

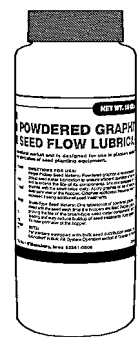

34



35



36

**⚠ WARNING**

DISCONNECT HYDRAULIC  
LINES FROM TRACTOR  
BEFORE REMOVING  
COVER.

SEE OPERATOR'S MANUAL FOR  
SERVICE INSTRUCTIONS.

7100-172

37

**⚠ DANGER ⚠**

ELECTRO-HYDRAULIC AUGER OPERATION.  
AUGER MAY AUTOMATICALLY START  
ANYTIME. DISCONNECT HYDRAULIC LINES  
FROM TRACTOR OR SHUTOFF TRACTOR  
ENGINE BEFORE SERVICING.

7100-319

38


**⚠ DANGER**

DO NOT RIDE  
ON EQUIPMENT

7100-265

39

# DECALS, PAINT AND MISCELLANEOUS

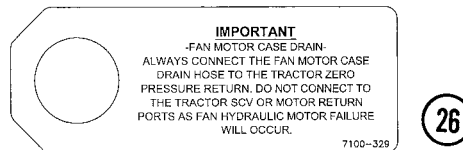

| ITEM | PART NO.   | QTY. | DESCRIPTION  |
|------|------------|------|--|
| 1.   | G7100-42   | 4    | Decal, Warning   |
| 2.   | G7100-46   | 1    | Decal, Warning   |
| 3.   | G7100-56   | 1    | Decal, Warning   |
| 4.   | G7100-68   | 3    | Decal, Warning   |
| 5.   | G7100-336  | -    | Decal, Important   |
| 6.   | G7100-90   | 1    | Decal, Warning   |
| 7.   | G7100-110  | -    | Decal, Grease Weekly   |
| 8.   | G7100-111  | -    | Decal, Oil Daily   |
| 9.   | G7100-115  | -    | Decal, Warning (1 Per Granular Chemical Hopper)                    |
| 10.  | G7100-116  | -    | Decal, Grease Daily  |
| 11.  | G7100-117  | 1    | Decal, Danger  |
| 12.  | G7100-153  | -    | Decal, Information (1 Per Seed Meter)                              |
| 13.  | G7100-192  | -    | Decal, Point Row Clutch Rotation                                   |
| 14.  | G7100-217  | -    | Decal, Note  |
| 15.  | G7100-219  | -    | Decal, Warning   |
| 16.  | G7100-234  | -    | Decal, Bolt Torque   |
| 17.  | G7100-247  | -    | Decal, Logo, 4 3/8" x 4 1/2" (2 Per Row Unit)                      |
|      | G7100-252  | -    | Decal, Logo, 3 1/2" x 3 5/8" (Hopper Panel Extension)              |
| 18.  | GD2199     | 1    | SMV Sign   |
| 19.  | G7100-249  | -    | Decal, Caution   |
| 20.  | G7100-258  | -    | Reflective Decal, Red, 1 1/2" x 9", Rectangular (If Applicable)    |
|      | G7100-259  | -    | Reflective Decal, Amber, 1 1/2" x 9", Rectangular (If Applicable)  |
|      | G7100-260  | -    | Reflective Decal, Orange, 1 1/2" x 9", Rectangular (If Applicable) |
| 21.  | G7100-261  | -    | Reflective Decal, Red, 1 3/4" x 9", Die-Cut (If Applicable)        |
|      | G7100-262  | -    | Reflective Decal, Amber, 1 3/4" x 9", Die-Cut (If Applicable)      |
|      | G7100-263  | -    | Reflective Decal, Orange, 1 3/4" x 9", Die-Cut (If Applicable)     |
| 22.  | G7100-277  | -    | Decal, Grease Annually   |
| 23.  | G7100-295  | -    | Decal, Spring Tension Release                                      |
| 24.  | G7100-300  | 2    | Decal, KINZE® 3800   |
| 25.  | GD10057-01 | -    | Hose Identification Sleeve, Red AA                                 |
|      | GD10057-02 | -    | Hose Identification Sleeve, Red BB                                 |
|      | GD10057-03 | -    | Hose Identification Sleeve, Blue AA                                |
|      | GD10057-04 | -    | Hose Identification Sleeve, Blue BB                                |
|      | GD10057-05 | -    | Hose Identification Sleeve, Green AA                               |
|      | GD10057-06 | -    | Hose Identification Sleeve, Green BB                               |
|      | GD10057-09 | -    | Hose Identification Sleeve, White AA                               |
|      | GD10057-10 | -    | Hose Identification Sleeve, White BB                               |

(Continued On Following Page)

# DECALS, PAINT AND MISCELLANEOUS

---

| ITEM | PART NO.  | QTY. | DESCRIPTION   |
|------|-----------|------|---|
| 26.  | G7100-329 | -    | Tag, Fan Motor Case Drain   |
| 27.  | G7100-344 | -    | Decal, Caution  |
| 28.  | G7100-322 | -    | Reflective Decal, Orange-Red, 1 1/2" x 4"   |
| 29.  | G7100-301 | -    | Decal, Warning  |
| 30.  | G7100-317 | -    | Decal, Transport  |
| 31.  | G7100-310 | -    | Decal, KINZE®, 6 1/16" x 28 5/16"   |
| 32.  | GD1512    | -    | Tie Strap, 7 1/2"   |
|      | GD2117    | -    | Tie Strap, 14 1/2"  |
|      | GD1162    | -    | Tie Strap, 28"  |
|      | GD2984    | -    | Tie Strap, 34"  |
| 33.  | GM0220    | -    | Operator & Parts Manual, Model 3800 And 3800 SDS (EdgeVac® Seed Metering w/Hydraulic Drive) |
| 34.  | GR0146MPP | -    | Powdered Graphite, Twenty-Four 1 Pound Containers   |
| 35.  | GR0155MPP | -    | Blue Paint, Twelve Aerosol Cans   |
| 36.  | GR1570MPP | -    | Talc Lubricant, Four 8 Pound Containers   |
|      | GR1828    | -    | Talc Lubricant, 30 Pound Container  |
| 37.  | G7100-172 | -    | Decal, Warning  |
| 38.  | G7100-319 | -    | Decal, Danger   |
| 39.  | G7100-266 | -    | Decal, Danger   |
| 40.  | G7100-311 | -    | Decal, EdgeVac®   |
| 41.  | GR1842MPP | -    | Powdered Graphite, Four-Five Pound Containers   |

# NUMERICAL INDEX

| Part No. | Page       | Part No. | Page  | Part No. | Page  |
|----------|------------|----------|---|----------|---|
| *A1020   | P106       | A13311   | P92   | G10054   | P71   |
| *A1079   | P106       | A8827    | P93   | G10055   | P30   |
| *A1086   | P106       | A8950    | P97   | G10061   | P21   |
| *A1090   | P106       | D13169   | P95   | G10062   | P51   |
| *A1132   | P107       | G10001   | P12, P17, P18, P26,<br>P27, P29, P35, P59,<br>P65, P81, P83 | G10063   | P59, P91  |
| *A1138   | P107       | G10002   | P27, P37, P63,<br>P101, P111, P127                          | G10064   | P18, P26,<br>P30, P33, P119   |
| *A1140   | P107       | G10003   | P3, P33, P39,<br>P47, P81, P83,<br>P85, P87, P139           | G10071   | P5, P60   |
| *A11409  | P53        | G10004   | P5, P75   | G10096   | P130, P133  |
| *A11410  | P53        | G10005   | P31, P49, P134  | G10101   | P12, P18, P19, P39,<br>P59, P75, P81, P83,<br>P85, P87, P91,<br>P94, P125, P139   |
| *A11424  | P106       | G10006   | P17, P45  | G10102   | P17, P30, P35, P45,<br>P49, P61, P69, P77,<br>P79, P81, P83, P85,<br>P87, P89, P90, P91,<br>P119, P125, P127,<br>P131, P133, P135 |
| *A11425  | P111       | G10007   | P12, P13, P19, P49,<br>P65, P81, P83, P135                  | G10103   | P5, P9, P39, P65,<br>P83, P88, P119   |
| *A11426  | P53        | G10008   | P31, P55,<br>P65, P67, P79                                  | G10104   | P12, P19, P29, P61,<br>P67, P79, P81, P83,<br>P85, P87, P91, P129,<br>P134, P135, P137  |
| *A1170   | P106       | G10009   | P65, P79  | G10105   | P67, P69,<br>P75, P79, P135   |
| *A11805  | P53        | G10010   | P15, P47, P49, P128   | G10106   | P9, P11,<br>P17, P43, P125  |
| *A12043  | P106       | G10011   | P49, P127   | G10107   | P17, P18, P31, P35,<br>P41, P43, P49, P55,<br>P63, P127, P131,<br>P133, P134, P135  |
| *A12046  | P106       | G10012   | P127, P135  | G10108   | P3, P5, P21, P27,<br>P33, P35, P37, P51,<br>P59, P63, P65, P77,<br>P85, P87, P90,<br>P101, P103, P127,<br>P131, P133, P139        |
| *A12048  | P53        | G10013   | P18, P135   | G10109   | P15, P17, P18, P35,<br>P45, P47, P49,<br>P59, P89, P91  |
| *A12700  | P106, P111 | G10014   | P15, P30, P49, P65,<br>P77                                  | G10110   | P25, P26, P27, P29,<br>P30, P33, P35, P39,<br>P61, P81, P83   |
| *A12701  | P106       | G10015   | P17   | G10111   | P5, P18, P27, P41,<br>P43, P45, P49, P65,<br>P67, P71, P75,<br>P77, P79, P81,<br>P83, P90, P91                                    |
| *A12702  | P106       | G10016   | P5, P67, P73, P75,<br>P85, P87, P129                        | G10112   | P35, P49, P71, P91  |
| *A12703  | P111       | G10017   | P43, P71, P73, P81,<br>P83, P119, P127, P135                | G10130   | P5, P27   |
| *A12704  | P53        | G10018   | P15, P17, P26   | G10133   | P18, P45, P47, P49  |
| *A12735  | P108       | G10019   | P9, P27, P29,<br>P59, P89, P135                             | G10139   | P67, P79  |
| *A12902  | P53        | G10020   | P5, P33, P65, P83   | G10148   | P131, P133  |
| *A12903  | P53        | G10021   | P26   | G10152   | P12, P17, P134  |
| *A13918  | P111       | G10022   | P61, P83  |          |   |
| *A1460   | P108       | G10023   | P5, P9, P37, P61, P88                                       |          |   |
| *A3136   | P106       | G10025   | P67, P71, P79   |          |   |
| *A3139   | P107       | G10026   | P67, P79, P135  |          |   |
| *A3152   | P108       | G10027   | P67, P91  |          |   |
| *A3154   | P107       | G10033   | P45, P90  |          |   |
| *A3158   | P107       | G10036   | P41   |          |   |
| *A3159   | P111       | G10037   | P5, P65, P73  |          |   |
| *A3161   | P107       | G10038   | P90   |          |   |
| *A3201   | P53        | G10039   | P43, P49, P63, P77  |          |   |
| *A3220   | P107       | G10040   | P9, P35   |          |   |
| *A3236   | P107       | G10042   | P65   |          |   |
| *A3247   | P106       | G10043   | P11, P30,<br>P63, P65, P125                                 |          |   |
| *A3249   | P106       | G10045   | P45, P91  |          |   |
| *A3271   | P108       | G10046   | P49, P131   |          |   |
| *A3283   | P53        | G10047   | P3, P23, P33, P90   |          |   |
| *A3290   | P53        | G10049   | P31   |          |   |
| *A3291   | P53        | G10053   | P81, P83  |          |   |
| *A3292   | P53        |          |   |          |   |
| *A3381   | P53        |          |   |          |   |
| *A3384   | P53        |          |   |          |   |
| *A3385   | P53        |          |   |          |   |
| *A7613   | P107       |          |   |          |   |
| *A8230   | P107       |          |   |          |   |
| *A8231   | P107       |          |   |          |   |
| *A8237   | P107       |          |   |          |   |
| A10255   | P96        |          |   |          |   |
| A10361   | P92        |          |   |          |   |
| A10365   | P93        |          |   |          |   |
| A10372   | P94        |          |   |          |   |
| A10759   | P37        |          |   |          |   |



# NUMERICAL INDEX

| Part No. | Page                     | Part No. | Page                | Part No. | Page                 |
|----------|--------------------------|----------|---------------------|----------|----------------------|
| G10157   | P65                      | G10231   | P67, P69,           | G10462   | P127                 |
| G10159   | P79, P141                |          | P71, P79, P135      | G10463   | P17                  |
| G10168   | P89                      | G10232   | P9, P11, P17, P25,  | G10464   | P27                  |
| G10171   | P9, P11, P17,            |          | P26, P30, P65, P98, | G10471   | P71                  |
|          | P25, P35, P102           |          | P99, P102, P125,    | G10477   | P91                  |
| G10177   | P129                     |          | P127, P135          | G10485   | P131, P133           |
| G10183   | P29                      | G10233   | P27, P81, P83,      | G10499   | P59                  |
| G10191   | P75                      |          | P85, P87, P128      | G10501   | P45                  |
| G10194   | P47, P69, P91            | G10239   | P65                 | G10503   | P43, P47, P49        |
| G10198   | P71                      | G10243   | P29, P125           | G10523   | P39                  |
| G10201   | P3, P37                  | G10252   | P25                 | G10529   | P40                  |
| G10203   | P3, P5, P33,             | G10257   | P38                 | G10536   | P43, P90             |
|          | P59, P85, P87,           | G10260   | P25                 | G10541   | P35                  |
|          | P101, P131, P133         | G10278   | P131, P133, P137    | G10543   | P75                  |
| G10204   | P13, P15, P128           | G10283   | P127                | G10544   | P89, P91             |
| G10205   | P31, P35, P49, P59,      | G10287   | P131, P133          | G10546   | P21, P38             |
|          | P131, P133, P135         | G10292   | P137                | G10551   | P3                   |
| G10206   | P5, P47,                 | G10301   | P33, P77            | G10567   | P21, P37, P38        |
|          | P65, P81, P83            | G10303   | P17, P31, P35       | G10570   | P38                  |
| G10207   | P3                       | G10304   | P3                  | G10572   | P43                  |
| G10209   | P9, P25,                 | G10305   | P27, P29,           | G10574   | P41, P45, P49, P60   |
|          | P38, P39, P88            |          | P40, P61, P63       | G10581   | P27, P79, P90        |
| G10210   | P3, P17, P18, P19,       | G10306   | P39, P127, P139     | G10585   | P43, P77             |
|          | P21, P27, P37, P59,      | G10308   | P18, P40            | G10597   | P43                  |
|          | P63, P65, P77,           | G10309   | P21, P29            | G10599   | P18, P19, P35,       |
|          | P91, P139                | G10310   | P39                 |          | P59, P61, P63,       |
| G10211   | P33, P113, P115          | G10312   | P3, P27, P37, P60,  |          | P77, P131, P133      |
| G10213   | P13, P47, P49            |          | P85, P87, P119      | G10602   | P21, P25, P27,       |
| G10216   | P15, P27, P43, P63,      | G10315   | P17, P18, P39       |          | P29, P37, P38        |
|          | P65, P67, P69, P73,      | G10318   | P43                 | G10603   | P25                  |
|          | P79, P131, P133, P135    | G10323   | P25                 | G10606   | P111                 |
| G10217   | P12, P67, P127, P135     | G10325   | P13, P37            | G10610   | P79                  |
| G10218   | P35                      | G10326   | P3                  | G10615   | P137                 |
| G10219   | P9, P11, P17, P35,       | G10328   | P13                 | G10616   | P131                 |
|          | P59, P63, P127           | G10330   | P69                 | G10616   | P133                 |
| G10221   | P26, P91, P102           | G10338   | P15, P21            | G10619   | P130, P137           |
| G10226   | P67                      | G10341   | P9, P11             | G10620   | P3, P15, P21, P27,   |
| G10227   | P9, P39, P61, P65,       | G10348   | P45                 |          | P29, P31, P37, P60,  |
|          | P83, P88, P104, P119     | G10371   | P45                 |          | P85, P87, P119, P128 |
| G10228   | P5, P15, P30, P35,       | G10373   | P71                 | G10621   | P21, P29, P37, P40   |
|          | P45, P61, P65, P69,      | G10397   | P81, P83            | G10622   | P13, P26, P27, P29,  |
|          | P73, P75, P77, P79,      | G10400   | P49, P71            |          | P33, P35, P40, P61,  |
|          | P81, P83, P85, P87,      | G10403   | P26, P27,           |          | P63, P77, P101       |
|          | P89, P90, P91, P119,     |          | P29, P30, P35       | G10623   | P131, P133           |
|          | P125, P127, P129,        | G10412   | P12, P21            | G10625   | P71                  |
|          | P131, P133, P135         | G10418   | P67                 | G10626   | P131, P133, P137     |
| G10229   | P12, P18, P19, P23,      | G10427   | P13, P17            | G10628   | P131, P133           |
|          | P27, P31, P37, P39,      | G10430   | P27                 | G10629   | P131, P133           |
|          | P47, P59, P65, P75,      | G10438   | P3                  | G10636   | P69, P79             |
|          | P81, P83, P85, P87,      | G10448   | P69                 | G10640   | P15, P65, P67, P69,  |
|          | P91, P111, P125, P139    | G10450   | P127                |          | P71, P73, P75, P77,  |
| G10230   | P12, P15, P18, P19,      | G10452   | P39                 |          | P79, P91, P92,       |
|          | P29, P30, P61, P65,      | G10460   | P65, P67, P71,      |          | P93, P127            |
|          | P67, P79, P81, P83, P85, |          | P73, P79, P90,      | G10641   | P134                 |
|          | P87, P91, P129,          |          | P91, P134, P141     | G10643   | P49                  |
|          | P134, P135, P137         | G10461   | P91                 | G10660   | P38                  |

# NUMERICAL INDEX

| Part No. | Page                    | Part No. | Page                       | Part No.  | Page                 |
|----------|-------------------------|----------|----------------------------|-----------|----------------------|
| G10669   | P3                      | G10995   | P137                       | G11209    | P39                  |
| G10670   | P37                     | G10996   | P101, P102, P104, P113     | G11210    | P25                  |
| G10674   | P131, P133, P137        | G10999   | P23                        | G11213    | P25                  |
| G10676   | P61, P131, P133         | G11007   | P3                         | G11220    | P5                   |
| G10681   | P57, P137               | G11008   | P3                         | G11226    | P33                  |
| G10686   | P125                    | G11009   | P25                        | G11228    | P47                  |
| G10693   | P139                    | G11010   | P49                        | G11236    | P47                  |
| G10722   | P89, P91                | G11015   | P3                         | G11237    | P137                 |
| G10724   | P89, P91                | G11016   | P95                        | G11241    | P125                 |
| G10725   | P89, P91                | G11018   | P5                         | G11242    | P81, P83             |
| G10726   | P71                     | G11042   | P135                       | G11243    | P5                   |
| G10730   | P49                     | G11048   | P65                        | G11247    | P9                   |
| G10732   | P12                     | G11065   | P125                       | G11254    | P83                  |
| G10751   | P21                     | G11066   | P9                         | G11260    | P57                  |
| G10752   | P21                     | G11067   | P101, P102, P103           | G11264    | P141                 |
| G10753   | P103                    | G11071   | P69                        | G11276    | P88                  |
| G10757   | P39                     | G11073   | P38                        | G11288    | P125                 |
| G10758   | P39, P125               | G11081   | P79                        | G11293    | P85, P87             |
| G10764   | P91                     | G11083   | P137                       | G11295    | P5                   |
| G10765   | P47, P49                | G11095   | P67                        | G11296    | P5                   |
| G10770   | P95                     | G11097   | P65                        | G11309    | P98, P99             |
| G10801   | P17, P18                | G11099   | P65, P67                   | G1K248    | P7, P113, P117, P125 |
| G10844   | P89                     | G11105   | P73                        | G1K252    | P7, P113, P117, P125 |
| G10860   | P85, P87                | G11108   | P35, P91                   | G1K267    | P7, P113             |
| G10864   | P39                     | G11112   | P115                       | G1K268    | P7, P113             |
| G10880   | P27, P29, P30, P81, P83 | G11116   | P127                       | G1K296    | P15                  |
| G10887   | P137                    | G11118   | P85, P87                   | G1K320    | P7, P59, P117        |
| G10888   | P131, P133              | G11119   | P85, P87                   | G1K321    | P7, P59, P117        |
| G10897   | P131                    | G11122   | P35, P63, P131, P133, P135 | G1K345    | P18                  |
| G10901   | P131, P133              | G11124   | P59                        | G1K362    | P125                 |
| G10912   | P13                     | G11132   | P65                        | G1K363    | P125                 |
| G10913   | P69                     | G11133   | P59                        | G1K385    | P39                  |
| G10917   | P131, P133, P137        | G11138   | P59                        | G1K395    | P113                 |
| G10921   | P38                     | G11145   | P60                        | G1K396    | P113                 |
| G10923   | P5, P27                 | G11147   | P61                        | G1K465    | P5                   |
| G10924   | P15                     | G11162   | P89                        | G1K467    | P47                  |
| G10927   | P125                    | G11165   | P131, P133                 | G1K472    | P25                  |
| G10928   | P101, P125              | G11166   | P59, P61                   | G2100-03  | P27, P30, P85, P87   |
| G10931   | P125                    | G11167   | P31, P91                   | G2500-84  | P135                 |
| G10932   | P96                     | G11172   | P25                        | G2603-08  | P53, P106            |
| G10939   | P94                     | G11173   | P25                        | G304-C-10 | P53                  |
| G10940   | P15                     | G11174   | P71                        | G3200-63  | P135                 |
| G10953   | P67                     | G11180   | P29                        | G3302-05  | P91                  |
| G10958   | P92, P93                | G11182   | P26, P29                   | G3303-104 | P3                   |
| G10960   | P88                     | G11188   | P61                        | G3303-114 | P38                  |
| G10961   | P128                    | G11192   | P26                        | G3303-16  | P3                   |
| G10969   | P93                     | G11193   | P131                       | G3305-01  | P40                  |
| G10972   | P94, P96                | G11197   | P29                        | G3310-100 | P81, P83, P85, P87   |
| G10974   | P47, P49                | G11199   | P61                        | G3310-112 | P27                  |
| G10979   | P90, P91                | G11200   | P61                        | G3317-16  | P85, P87, P111       |
| G10983   | P97                     | G11203   | P104                       | G3400-01  | P27, P30, P85, P87   |
| G10984   | P97                     | G11204   | P59                        | G4200-05  | P131, P133           |
| G10991   | P127, P139              | G11205   | P29                        | G4201-02  | P131                 |
| G10992   | P9                      | G11206   | P29                        | G4201-03  | P133                 |
|          |                         |          |                            | G4205-10  | P131, P133, P137     |
|          |                         |          |                            | G4206-01  | P131                 |

# NUMERICAL INDEX

| Part No.            | Page  | Part No.       | Page      | Part No.     | Page       |
|---------------------|---|----------------|-----------|--------------|------------|
| G4301-02.....       | P137  | G7100-249..... | P144      | GA10201..... | P130, P133 |
| G4301-04.....       | P137  | G7100-252..... | P144      | GA10206..... | P113       |
| G4301-08.....       | P137  | G7100-258..... | P144      | GA10253..... | P96        |
| G4427-01.....       | P133  | G7100-259..... | P144      | GA10256..... | P96        |
| G4427-02.....       | P133  | G7100-260..... | P144      | GA10275..... | P77        |
| G6325X.....         | P5  | G7100-261..... | P144      | GA10276..... | P77        |
| G6326X.....         | P12   | G7100-262..... | P144      | GA10277..... | P77        |
| G6400-06.....       | P56, P57, P102                                | G7100-263..... | P144      | GA10278..... | P77        |
| G6400-06-08.....    | P107  | G7100-266..... | P145      | GA10279..... | P71        |
| G6400-08.....       | P96, P101,<br>P102, P103,<br>P104, P106, P111 | G7100-277..... | P144      | GA10280..... | P65        |
| G6400-08-10.....    | P111  | G7100-295..... | P144      | GA10281..... | P65        |
| G6400-10.....       | P57, P101, P111                               | G7100-300..... | P144      | GA10282..... | P65        |
| G6400-10-08.....    | P101, P103                                    | G7100-301..... | P145      | GA10297..... | P119       |
| G6400-12.....       | P53, P56, P57, P59                            | G7100-310..... | P145      | GA10307..... | P113       |
| G6400-20.....       | P53   | G7100-311..... | P145      | GA10308..... | P113       |
| G6400-L-08.....     | P101  | G7100-317..... | P145      | GA10315..... | P117       |
| G6400-L-10.....     | P104  | G7100-319..... | P145      | GA10316..... | P117       |
| G6403-NWO-12.....   | P57   | G7100-322..... | P145      | GA10317..... | P117       |
| G6408-08.....       | P96, P101,<br>P103, P104                      | G7100-329..... | P145      | GA10318..... | P117       |
| G6408-10.....       | P57   | G7100-336..... | P144      | GA10319..... | P117       |
| G6408-H06-0.....    | P57, P98, P99,<br>P101, P102, P104            | G7100-344..... | P145      | GA10343..... | P67        |
| G6408-H10-0.....    | P98, P99                                      | G7100-42.....  | P144      | GA10355..... | P134       |
| G6500-06.....       | P56, P102                                     | G7100-46.....  | P144      | GA10356..... | P131       |
| G6500-08.....       | P101, P104, P111                              | G7100-56.....  | P144      | GA10359..... | P92        |
| G6500-10.....       | P101, P104                                    | G7100-68.....  | P144      | GA10362..... | P92        |
| G6502-08.....       | P107  | G7100-90.....  | P144      | GA10363..... | P93        |
| G6502-12.....       | P53, P59                                      | G7566X.....    | P19       | GA10366..... | P93        |
| G6701-L-12.....     | P53   | G7848X.....    | P113      | GA10373..... | P94        |
| G6801-06.....       | P53, P55,<br>P101, P102                       | G8081X.....    | P59       | GA10404..... | P75        |
| G6801-06-08.....    | P106  | GA0160L.....   | P91       | GA10409..... | P91        |
| G6801-08.....       | P98, P99, P101,<br>P103, P104, P106           | GA0160R.....   | P91       | GA10457..... | P91        |
| G6801-10.....       | P53, P98, P99                                 | GA0167.....    | P89, P91  | GA10458..... | P90        |
| G6801-10-12.....    | P56   | GA0241.....    | P134      | GA10483..... | P65        |
| G6801-12.....       | P53, P55                                      | GA0243.....    | P89, P91  | GA10509..... | P131, P133 |
| G6801-20.....       | P53, P55                                      | GA0245.....    | P89, P91  | GA10553..... | P69        |
| G6801-L-08.....     | P103  | GA0251.....    | P135      | GA10571..... | P119       |
| G6801-LL-06-08..... | P107  | GA0252.....    | P135      | GA10572..... | P119       |
| G6803-08.....       | P107  | GA0257.....    | P89, P91  | GA10576..... | P119       |
| G7100-110.....      | P144  | GA0262.....    | P135      | GA10621..... | P134       |
| G7100-111.....      | P144  | GA0378.....    | P27       | GA10623..... | P96        |
| G7100-115.....      | P144  | GA0530.....    | P71       | GA10632..... | P102       |
| G7100-116.....      | P144  | GA0531.....    | P71       | GA10634..... | P22        |
| G7100-117.....      | P144  | GA0532.....    | P71       | GA10635..... | P59        |
| G7100-153.....      | P144  | GA0547.....    | P135      | GA10646..... | P127       |
| G7100-172.....      | P145  | GA0895.....    | P79       | GA10647..... | P127       |
| G7100-192.....      | P144  | GA0899.....    | P89, P91  | GA10682..... | P113       |
| G7100-217.....      | P144  | GA10036.....   | P128      | GA10683..... | P113       |
| G7100-219.....      | P144  | GA10037.....   | P21, P128 | GA10684..... | P113       |
| G7100-234.....      | P144  | GA10139.....   | P69       | GA10685..... | P113       |
| G7100-247.....      | P144  | GA10148.....   | P59       | GA10686..... | P113       |
|                     |   | GA10149.....   | P56       | GA10704..... | P127       |
|                     |   | GA10151.....   | P21       | GA10705..... | P127       |
|                     |   | GA10155.....   | P21       | GA10714..... | P96        |
|                     |   | GA10157.....   | P3        | GA10752..... | P59        |
|                     |   | GA10194.....   | P113      | GA10755..... | P25        |
|                     |   | GA10195.....   | P115      | GA10765..... | P59        |

# NUMERICAL INDEX

| Part No. | Page               | Part No. | Page     | Part No. | Page          |
|----------|--------------------|----------|----------|----------|---------------|
| GA10799  | P59                | GA11502  | P115     | GA11667  | P77           |
| GA10859  | P141               | GA11513  | P27      | GA11676  | P55           |
| GA10894  | P135               | GA11515  | P27      | GA11677  | P55           |
| GA10907  | P135               | GA11517  | P30      | GA11678  | P55           |
| GA10908  | P135               | GA11518  | P30      | GA11679  | P57           |
| GA10917  | P59                | GA11520  | P41      | GA11680  | P57           |
| GA10923  | P129               | GA11531  | P29, P61 | GA11682  | P57           |
| GA10987  | P104               | GA11538  | P29      | GA11684  | P31           |
| GA11015  | P77                | GA11539  | P29      | GA11689  | P59           |
| GA11016  | P77                | GA11540  | P29      | GA11705  | P30           |
| GA11064  | P131, P133         | GA11541  | P29      | GA11706  | P30           |
| GA11066  | P115               | GA11548  | P29      | GA11736  | P115          |
| GA11079  | P65                | GA11549  | P30      | GA11757  | P59           |
| GA11082  | P65                | GA11550  | P30      | GA11759  | P127          |
| GA11156  | P59                | GA11551  | P30      | GA11760  | P127          |
| GA11174  | P69                | GA11552  | P30      | GA11763  | P27           |
| GA11176  | P81, P83           | GA11555  | P29      | GA11771  | P119          |
| GA11186  | P83                | GA11556  | P29      | GA11772  | P119          |
| GA11187  | P81                | GA11562  | P29      | GA11774  | P111          |
| GA11204  | P61                | GA11563  | P29      | GA11778  | P30           |
| GA11210  | P67                | GA11575  | P30      | GA11799  | P57           |
| GA11219  | P73                | GA11579  | P33      | GA11900  | P57           |
| GA11220  | P73                | GA11580  | P29      | GA11906  | P115          |
| GA11225  | P75                | GA11581  | P29      | GA11911  | P25           |
| GA11226  | P75                | GA11582  | P30      | GA11934  | P57           |
| GA11227  | P69                | GA11583  | P30      | GA11935  | P25           |
| GA11255  | P12                | GA11584  | P26      | GA11964  | P81, P83      |
| GA11265  | P71                | GA11585  | P27      | GA11982  | P5            |
| GA11266  | P71                | GA11587  | P33      | GA11987  | P59           |
| GA11276  | P79                | GA11615  | P33      | GA11988  | P9, P11       |
| GA11277  | P71                | GA11616  | P33      | GA11991  | P9, P11       |
| GA11278  | P71                | GA11617  | P33      | GA11992  | P9            |
| GA11287  | P85, P87           | GA11623  | P26      | GA11993  | P9            |
| GA11299  | P117               | GA11624  | P26      | GA11994  | P9            |
| GA11331  | P81, P83, P85, P87 | GA11625  | P26      | GA11995  | P9            |
| GA11348  | P115               | GA11626  | P27      | GA11997  | P9            |
| GA11355  | P35                | GA11627  | P27      | GA12102  | P9            |
| GA11356  | P35                | GA11630  | P30      | GA12104  | P9            |
| GA11360  | P104               | GA11631  | P30      | GA12114  | P81, P83      |
| GA11365  | P104               | GA11632  | P30      | GA12133  | P25           |
| GA11375  | P27                | GA11633  | P30      | GA12154  | P25           |
| GA11376  | P115               | GA11635  | P33      | GA12171  | P115          |
| GA11377  | P115               | GA11636  | P35      | GA12173  | P115          |
| GA11378  | P115               | GA11637  | P35      | GA12174  | P115          |
| GA11381  | P33                | GA11638  | P35      | GA12180  | P115          |
| GA11385  | P67                | GA11639  | P35      | GA12235  | P47, P49      |
| GA11387  | P115               | GA11640  | P35      | GA12236  | P45, P47, P49 |
| GA11389  | P26                | GA11651  | P59      | GA12256  | P47           |
| GA11390  | P26                | GA11653  | P61      | GA12335  | P139          |
| GA11391  | P26                | GA11654  | P61      | GA12358  | P9, P11       |
| GA11392  | P23                | GA11655  | P61      | GA12404  | P9            |
| GA11393  | P27                | GA11656  | P61      | GA12405  | P5            |
| GA11395  | P26                | GA11657  | P61      | GA12455  | P65           |
| GA11396  | P26                | GA11658  | P61      | GA12460  | P71           |
| GA11399  | P133               | GA11659  | P61      | GA12474  | P91           |
| GA11427  | P53                | GA11660  | P61      |          |               |

# NUMERICAL INDEX

| Part No. | Page                 | Part No. | Page                            | Part No. | Page                       |
|----------|----------------------|----------|---------------------------------|----------|----------------------------|
| GA12475  | P91                  | GA12868  | P121, P123                      | GA5106   | P27                        |
| GA12476  | P91                  | GA13078  | P98, P99                        | GA5108   | P27, P81,<br>P83, P85, P87 |
| GA12487  | P129                 | GA13079  | P98, P99                        | GA5116   | P81, P83                   |
| GA12488  | P129                 | GA13169  | P9                              | GA5121   | P67, P79                   |
| GA12501  | P71                  | GA13204  | P83, P121, P123                 | GA5122   | P79                        |
| GA12503  | P131                 | GA13214  | P83                             | GA5164   | P27                        |
| GA12520  | P133                 | GA13227  | P83                             | GA5165   | P27                        |
| GA12536  | P121                 | GA13234  | P83                             | GA5651   | P12                        |
| GA12537  | P121, P123           | GA13235  | P81                             | GA5654   | P43, P45, P47, P49         |
| GA12538  | P125                 | GA13238  | P141                            | GA5698   | P25                        |
| GA12539  | P121, P123           | GA13312  | P92                             | GA5715   | P43                        |
| GA12540  | P121, P123           | GA13474  | P91                             | GA5718   | P43                        |
| GA12551  | P121, P123           | GA13512  | P9                              | GA5719   | P43                        |
| GA12552  | P121                 | GA13524  | P81, P83, P85, P87              | GA5853   | P89                        |
| GA12553  | P121                 | GA13525  | P85, P87                        | GA6108   | P113                       |
| GA12555  | P123                 | GA13529  | P88                             | GA6109   | P113                       |
| GA12557  | P125                 | GA13530  | P121, P123                      | GA6171   | P15, P17, P18, P128        |
| GA12558  | P121, P123           | GA13531  | P121, P123                      | GA6189   | P71                        |
| GA12559  | P121, 1 23           | GA13532  | P121, P123                      | GA6434   | P18                        |
| GA12562  | P121, P123           | GA13533  | P121, P123                      | GA6527   | P137                       |
| GA12563  | P125                 | GA13554  | P123                            | GA6597   | P18                        |
| GA12564  | P121, P123           | GA13574  | P88                             | GA6618   | P17                        |
| GA12565  | P81, P83, P121, P123 | GA13633  | P98, P99                        | GA6619   | P17                        |
| GA12596  | P121, P123           | GA13654  | P123                            | GA6620   | P17                        |
| GA12598  | P121, P123           | GA1676   | P89                             | GA6733   | P17                        |
| GA12626  | P9                   | GA1677   | P89                             | GA6741   | P39                        |
| GA12636  | P125                 | GA1678   | P89                             | GA6761   | P67                        |
| GA12641  | P125                 | GA1679   | P89                             | GA6801   | P17                        |
| GA12650  | P125                 | GA2007   | P21                             | GA6832   | P45                        |
| GA12652  | P113                 | GA2012L  | P13                             | GA6833   | P45                        |
| GA12655  | P121, P123           | GA2012R  | P13                             | GA6834   | P45                        |
| GA12657  | P65                  | GA2014   | P13, P17, P43,<br>P45, P47, P49 | GA6838   | P45                        |
| GA12661  | P81, P83             | GA2054   | P17                             | GA6860   | P90                        |
| GA12672  | P29                  | GA2075   | P39                             | GA6870   | P90                        |
| GA12673  | P29                  | GA2094   | P40                             | GA6907   | P39                        |
| GA12679  | P65                  | GA2142   | P79                             | GA6975   | P59, P113, P115            |
| GA12681  | P65                  | GA2147   | P79                             | GA6977   | P113, P115                 |
| GA12684  | P7                   | GA2148   | P79                             | GA6978   | P7, P113, P115             |
| GA12687  | P65                  | GA2180   | P5, P12, P81, P83               | GA7154   | P27, P81, P83              |
| GA12688  | P65                  | GA2528   | P113                            | GA7376   | P79                        |
| GA12689  | P65                  | GA2558   | P79                             | GA7399   | P113                       |
| GA12812  | P7                   | GA2559   | P135                            | GA7409   | P79                        |
| GA12813  | P7                   | GA2612   | P113, P115                      | GA7412   | P47                        |
| GA12814  | P7                   | GA2660   | P131, P133                      | GA7434   | P69, P71, P79              |
| GA12815  | P7                   | GA3413   | P101                            | GA7849   | P125                       |
| GA12819  | P63                  | GA3584   | P101, P113                      | GA7851   | P125                       |
| GA12843  | P63                  | GA3893   | P137                            | GA7856   | P7, P113, P115             |
| GA12844  | P63                  | GA4031   | P91                             | GA7859   | P125                       |
| GA12845  | P53                  | GA4293   | P98, P99                        | GA7862   | P113                       |
| GA12849  | P63                  | GA4444   | P37                             | GA7863   | P113                       |
| GA12850  | P63                  | GA4722   | P69                             | GA7949   | P15                        |
| GA12851  | P63                  | GA4723   | P69                             | GA7975   | P15                        |
| GA12852  | P121, P123           | GA4729   | P69                             | GA7976   | P15                        |
| GA12853  | P121                 | GA4976   | P131, P137                      | GA8022   | P125                       |
| GA12858  | P7                   | GA5105   | P81, P83, P85, P87<br>P151      | GA8046   | P125                       |
| GA12863  | P63                  |          |                                 |          | 1/09                       |

# NUMERICAL INDEX

| Part No. | Page           | Part No.   | Page                             | Part No.   | Page                             |
|----------|----------------|------------|----------------------------------|------------|----------------------------------|
| GA8047   | P113           | GB0213     | P127                             | GD10057-01 | P144                             |
| GA8047   | P125           | GB0218     | P12, P21, P30,<br>P49, P55, P134 | GD10057-02 | P144                             |
| GA8130   | P94            | GB0239     | P17, P18                         | GD10057-03 | P144                             |
| GA8172   | P90            | GB0254     | P18                              | GD10057-04 | P144                             |
| GA8322   | P18            | GB0265     | P3                               | GD10057-05 | P144                             |
| GA8324   | P13            | GB0266     | P3                               | GD10057-06 | P144                             |
| GA8326   | P38            | GB0267     | P3                               | GD10057-09 | P144                             |
| GA8328   | P7, P59, P117  | GB0268     | P17, P18                         | GD10057-10 | P144                             |
| GA8329   | P7, P59, P117  | GB0274     | P3                               | GD10063    | P67                              |
| GA8364   | P38            | GB0276     | P15                              | GD10126    | P81, P83                         |
| GA8371   | P37            | GB0278     | P21, P38                         | GD10161    | P83                              |
| GA8603   | P41, P49, P127 | GB0282     | P18                              | GD10186    | P90                              |
| GA8641   | P41, P49       | GB0283     | P27, P30                         | GD10231    | P91                              |
| GA8731   | P113           | GB0285     | P3                               | GD10243    | P113                             |
| GA8760   | P47            | GB0301     | P13                              | GD1026     | P3, P37                          |
| GA8768   | P131, P133     | GB0314     | P21                              | GD10283    | P89                              |
| GA8828   | P93            | GB0319     | P25                              | GD1033     | P3                               |
| GA8831   | P93            | GB0322     | P127                             | GD10473    | P13, P17                         |
| GA8877   | P128           | GB0323     | P127                             | GD10519    | P47, P49                         |
| GA8931   | P140           | GB0328     | P25                              | GD1059L    | P37                              |
| GA8948   | P97            | GB0331     | P21                              | GD1059R    | P37                              |
| GA8951   | P97            | GB0332     | P67                              | GD1060     | P37                              |
| GA8983   | P127           | GB0343     | P127                             | GD1061     | P38                              |
| GA9097   | P101, P115     | GB0355     | P67                              | GD1063     | P38                              |
| GA9098   | P115           | GB0357     | P67                              | GD1065     | P3                               |
| GA9101   | P91            | GB0358     | P25                              | GD10674-01 | P91                              |
| GA9102   | P91            | GB0365     | P129                             | GD10705    | P21                              |
| GA9103   | P91            | GB0366     | P12                              | GD10777    | P131, P133                       |
| GA9131   | P49            | GB0370     | P129                             | GD1085     | P18                              |
| GA9205   | P95            | GB0371     | P23                              | GD1086     | P15                              |
| GA9306   | P71            | GB0374     | P81, P83                         | GD10867    | P3                               |
| GA9315   | P71            | GB0383     | P47                              | GD10963    | P39                              |
| GA9437   | P127           | GB0386     | P49                              | GD10984    | P39                              |
| GA9472   | P128           | GB0387     | P45, P47                         | GD10991    | P15                              |
| GA9481   | P113           | GB0393     | P5                               | GD10993    | P3                               |
| GA9510   | P102, P103     | GB0394     | P5                               | GD11001    | P3                               |
| GA9544   | P69            | GB0395     | P5                               | GD11017    | P13                              |
| GA9712   | P134           | GB0396     | P5                               | GD11045    | P5, P27                          |
| GA9843   | P27            | GB0397     | P5                               | GD11089    | P113, P117, P125                 |
| GA9844   | P49            | GB0398     | P5                               | GD1109     | P17, P18                         |
| GA9845   | P49            | GB0401     | P47                              | GD11123    | P131, P133                       |
| GA9861   | P49            | GD0453-07  | P90                              | GD1114     | P12, P81, P83,<br>P85, P87, P137 |
| GA9862   | P49            | GD0677     | P91                              | GD1115L    | P39                              |
| GA9864   | P49            | GD0692     | P91                              | GD1115R    | P39                              |
| GA9865   | P49            | GD0704     | P90                              | GD1116     | P39                              |
| GA9877   | P79            | GD0740     | P77, P81, P83                    | GD1118     | P39                              |
| GA9954   | P115           | GD0746     | P89                              | GD11219    | P37                              |
| GA9964   | P7, P59        | GD0752-53  | P71                              | GD11239    | P21, P37, P38                    |
| GA9965   | P115           | GD0831     | P135                             | GD11240    | P38                              |
| GA9978   | P125           | GD0840     | P89, P91                         | GD11259    | P3, P13                          |
| GA9979   | P125           | GD0844     | P135                             | GD11279    | P22                              |
| GB0115   | P38            | GD0914-180 | P81, P83                         | GD11297    | P38                              |
| GB0116   | P38            | GD0914-68  | P81, P83, P85, P87               | GD11305    | P37                              |
| GB0186   | P12            | GD0914-78  | P81                              | GD11306    | P13                              |
| GB0196   | P135           | GD10036    | P12                              | GD11313    | P19                              |
| GB0212   | P65            |            |                                  |            |                                  |

# NUMERICAL INDEX

| Part No.   | Page               | Part No.   | Page      | Part No.   | Page       |
|------------|--------------------|------------|-----------|------------|------------|
| GD1132     | P43, P45, P47, P49 | GD12826    | P49       | GD14925    | P103       |
| GD11394-23 | P27                | GD12827    | P49       | GD14926    | P67        |
| GD11395    | P27, P30           | GD12829    | P49       | GD14941    | P67        |
| GD11413    | P21, P38           | GD13110    | P21       | GD14987    | P119       |
| GD11422    | P12                | GD13170    | P95       | GD15041    | P71        |
| GD11423    | P15, P128          | GD13171    | P95       | GD15042    | P71        |
| GD11424    | P37                | GD13172    | P95       | GD15045    | P67        |
| GD1143     | P40                | GD13173    | P95       | GD15046    | P67        |
| GD1144     | P40                | GD13226-02 | P51       | GD15048    | P73        |
| GD1145     | P40                | GD13309    | P128      | GD15049    | P73        |
| GD11453    | P15                | GD13328    | P135      | GD15066    | P75        |
| GD11474    | P125               | GD13361    | P3        | GD15067    | P73        |
| GD11490    | P79                | GD13400    | P95       | GD15068    | P73        |
| GD11508    | P19                | GD13401    | P79       | GD15069    | P73        |
| GD11509    | P19                | GD13412    | P23       | GD15070    | P73        |
| GD11557    | P127               | GD13524-01 | P111      | GD15072    | P73        |
| GD11558    | P127               | GD13575-05 | P33       | GD15074    | P75        |
| GD1162     | P145               | GD1359     | P71       | GD15110    | P75        |
| GD11652    | P41, P49           | GD1360     | P71       | GD1512     | P145       |
| GD1166     | P134               | GD13740    | P71       | GD15169    | P67        |
| GD11677    | P41                | GD13744    | P135      | GD15170    | P67        |
| GD11695    | P79                | GD14170    | P49       | GD15172    | P67        |
| GD11700    | P57, P137          | GD14217    | P12       | GD15187-01 | P101       |
| GD11751    | P94                | GD14257    | P27       | GD15226    | P127       |
| GD11845    | P3, P13, P17       | GD14258    | P7        | GD15235    | P77        |
| GD11953    | P128               | GD14398    | P41       | GD15282    | P75        |
| GD11954    | P128               | GD14467    | P25       | GD15283    | P35, P91   |
| GD11962    | P3, P37            | GD14468    | P25       | GD15285    | P75        |
| GD11963-03 | P33                | GD14477    | P25       | GD15369    | P67        |
| GD11963-04 | P5                 | GD14541    | P25       | GD15406    | P69        |
| GD11985    | P93                | GD14559    | P30, P91  | GD15451    | P67        |
| GD11986    | P93                | GD14563    | P73, P75  | GD15489    | P91        |
| GD1199-04  | P81, P83           | GD14565    | P73       | GD15532    | P85, P87   |
| GD1199-06  | P81, P83           | GD14592    | P25       | GD15568    | P127       |
| GD11993    | P125               | GD14626    | P61       | GD15582    | P119       |
| GD12239    | P96                | GD14627    | P61       | GD15600    | P127       |
| GD12522    | P94, P96           | GD14640    | P59, P115 | GD15605    | P130, P133 |
| GD12543    | P69, P79           | GD14649    | P127      | GD15623    | P96        |
| GD12548    | P97                | GD14651    | P127      | GD15624    | P65        |
| GD1255     | P27                | GD14659    | P39       | GD15634    | P101       |
| GD12550    | P97                | GD14660    | P7        | GD15663    | P25        |
| GD1256     | P27                | GD14671    | P129      | GD15700    | P25        |
| GD12676    | P127               | GD14672    | P127      | GD15703    | P131, P133 |
| GD12677    | P127               | GD14673    | P127      | GD15747    | P21        |
| GD12679    | P127               | GD14674    | P43, P141 | GD15774    | P96        |
| GD12723    | P119               | GD14812    | P65       | GD15780    | P67        |
| GD12724    | P119               | GD14841    | P65       | GD15789    | P59        |
| GD12725    | P119               | GD14842    | P65       | GD15790    | P59        |
| GD12726    | P113               | GD14843    | P65       | GD15792-03 | P61        |
| GD12790    | P71                | GD14897    | P92       | GD15792-05 | P61        |
| GD12797-02 | P23                | GD14898    | P92       | GD15792-06 | P61        |
| GD12797-04 | P23                | GD14901    | P93       | GD15792-12 | P61        |
| GD12797-05 | P23                | GD14902    | P93       | GD15792-19 | P61        |
| GD12797-09 | P23                | GD14908    | P94       | GD15799    | P61        |
| GD12817    | P49, P127          | GD14910    | P94       | GD15803    | P59        |
|            |                    | GD14923    | P101      | GD15804    | P59        |

# NUMERICAL INDEX

| Part No.   | Page               | Part No.   | Page         | Part No. | Page       |
|------------|--------------------|------------|--------------|----------|------------|
| GD15833    | P61                | GD16691    | P33          | GD17162  | P25        |
| GD15849-02 | P59                | GD16692    | P33          | GD17186  | P25        |
| GD15850    | P60                | GD16693    | P33          | GD17187  | P25        |
| GD15854    | P60                | GD16694    | P33          | GD17215  | P55        |
| GD15856-07 | P61                | GD16701    | P31          | GD17308  | P33        |
| GD15867-02 | P61                | GD16705    | P27          | GD17309  | P33        |
| GD15867-05 | P61                | GD16706    | P27          | GD17794  | P5         |
| GD15923    | P25                | GD16707    | P27          | GD17967  | P91        |
| GD15968    | P119               | GD16766    | P26          | GD17973  | P129       |
| GD16037    | P57                | GD16778    | P35          | GD17992  | P133       |
| GD16038    | P57                | GD16779    | P35          | GD17995  | P131       |
| GD16058    | P71                | GD16786    | P65          | GD18004  | P65        |
| GD16146    | P101               | GD16788    | P30          | GD18010  | P7, P9     |
| GD16175    | P91                | GD16840    | P59          | GD18011  | P9         |
| GD16189    | P131, P133         | GD16842    | P60          | GD18013  | P125       |
| GD16210    | P131, P133         | GD16843    | P61          | GD18015  | P9         |
| GD16227    | P65                | GD16844    | P60          | GD18070  | P81, P83   |
| GD16245    | P3                 | GD16845    | P61          | GD18078  | P9         |
| GD16315    | P125               | GD16854    | P61          | GD18084  | P9         |
| GD16316    | P125               | GD16855    | P61          | GD18085  | P88        |
| GD16320    | P29, P61           | GD16862    | P61          | GD18095  | P25        |
| GD16324-01 | P59                | GD16863    | P61          | GD18096  | P101       |
| GD16355-01 | P81, P83           | GD16864    | P61          | GD18097  | P102       |
| GD16355-02 | P81, P83           | GD16873    | P57          | GD18098  | P25        |
| GD16355-03 | P81, P83           | GD16887    | P77          | GD18099  | P103       |
| GD16356    | P35, P91           | GD16890    | P77          | GD18100  | P102, P103 |
| GD16385-04 | P30                | GD16913    | P30          | GD18101  | P102, P103 |
| GD16399-01 | P23                | GD16979    | P33          | GD18112  | P9         |
| GD16400    | P26, P27, P30      | GD16982    | P29          | GD18118  | P125       |
| GD16401    | P26, P27, P29, P30 | GD16983    | P29          | GD18137  | P102       |
| GD16466    | P30                | GD16991    | P59          | GD18143  | P65        |
| GD16467    | P30                | GD16992    | P59          | GD18151  | P65        |
| GD16478    | P131               | GD16994    | P53, P55     | GD18152  | P65        |
| GD16479    | P131               | GD17002    | P27          | GD18168  | P125       |
| GD16489    | P85, P87, P111     | GD17006    | P127         | GD18170  | P65        |
| GD16490    | P85, P87, P111     | GD17014    | P3           | GD18171  | P65        |
| GD16500    | P104               | GD17021    | P25          | GD18173  | P9, P11    |
| GD16530    | P35                | GD17028    | P25          | GD18175  | P65        |
| GD16535    | P27                | GD17039    | P67, P129    | GD18176  | P121, P123 |
| GD16537    | P111               | GD17047    | P25          | GD18177  | P121, P123 |
| GD16538    | P111               | GD17048    | P25          | GD18190  | P63        |
| GD16539    | P27                | GD17049    | P25          | GD18191  | P63        |
| GD16540    | P27                | GD17050    | P25          | GD18193  | P63        |
| GD16542    | P27                | GD17094    | P83          | GD18194  | P63        |
| GD16547    | P27                | GD17095    | P81          | GD18275  | P7         |
| GD16550    | P27                | GD17099    | P25          | GD18279  | P63        |
| GD16556    | P30                | GD17104    | P25          | GD18282  | P63        |
| GD16601    | P31                | GD17141    | P9           | GD18307  | P63        |
| GD16602    | P31                | GD17143    | P9           | GD18308  | P63        |
| GD16608    | P59                | GD17148    | P11, P88     | GD18309  | P63        |
| GD16631    | P30                | GD17150-05 | P9           | GD18318  | P63        |
| GD16634    | P29                | GD17151-01 | P9           | GD18319  | P63        |
| GD16672    | P29                | GD17151-06 | P7           | GD18320  | P63        |
| GD16674    | P29                | GD17152    | P25          | GD18321  | P63        |
| GD16675    | P29                | GD17154    | P9           | GD18324  | P63        |
| GD16680    | P31                | GD17156    | P9, P11, P88 | GD18407  | P121, P123 |



# NUMERICAL INDEX

| Part No.  | Page               | Part No.  | Page   | Part No. | Page  |
|-----------|--------------------|-----------|--|----------|---|
| GD18408   | P121, P123         | GD5625    | P75  | GR0196   | P3, P38   |
| GD1862    | P131, P133         | GD5841    | P67, P79   | GR0200   | P135  |
| GD18642   | P125               | GD5857    | P45, P83, P85, P87, P91  | GR0204   | P135  |
| GD18643   | P83                | GD6279-05 | P57  | GR0267   | P135  |
| GD18646   | P83                | GD6291    | P113   | GR0270   | P79   |
| GD18676   | P83                | GD6551    | P81, P83   | GR0434   | P79   |
| GD18699   | P81, P83           | GD7079    | P69  | GR0528   | P69   |
| GD18796   | P7                 | GD7089    | P69  | GR0531   | P69   |
| GD18891   | P5                 | GD7145    | P30, P61, P125   | GR0594   | P125  |
| GD18901   | P9, P11            | GD7148    | P38  | GR0761   | P101, P102  |
| GD19079   | P11                | GD7258    | P38  | GR0763   | P101, P102  |
| GD1908    | P12                | GD7318    | P3   | GR0764   | P101  |
| GD19080   | P9                 | GD7803    | P41, P49   | GR0880   | P137  |
| GD19148   | P141               | GD7804    | P41, P49   | GR0881   | P137  |
| GD19180   | P63                | GD7805    | P5, P12, P18, P21,<br>P30, P43, P55, P63,<br>P71, P79, P81, P83,<br>P128, P134, P135 | GR0882   | P137  |
| GD19181   | P63                | GD7817-01 | P43  | GR0883   | P137  |
| GD19182   | P63                | GD7817-04 | P43  | GR0912   | P27, P81,<br>P83, P85, P87                          |
| GD19183   | P63                | GD7817-05 | P135   | GR1015   | P131, P137  |
| GD19187   | P63                | GD7823    | P43  | GR1016   | P131, P137  |
| GD19190   | P88                | GD7831    | P135   | GR1017   | P131, P133, P137                                    |
| GD19237   | P9                 | GD7864    | P69  | GR1018   | P131, P137  |
| GD19238   | P9                 | GD7889    | P43  | GR1019   | P131, P137  |
| GD19242   | P85, P87           | GD7890    | P43  | GR1037   | P96, P101, P102,<br>P103, P104, P106,<br>P107, P111 |
| GD19248   | P81, P83           | GD8188    | P77  | GR1045   | P53, P55, P56, P57,<br>P101, P102, P104             |
| GD19252   | P83                | GD8249    | P12  | GR1104   | P139  |
| GD19440   | P98, P99           | GD8307    | P43  | GR1112   | P139  |
| GD2117    | P23, P145          | GD8460    | P18  | GR1116   | P139  |
| GD2169    | P91                | GD8739    | P113   | GR1118   | P139  |
| GD2199    | P65, P144          | GD8740    | P113   | GR1120   | P139  |
| GD2423    | P39                | GD8741    | P113   | GR1123   | P139  |
| GD2460    | P40                | GD8893-07 | P61  | GR1124   | P139  |
| GD2548-16 | P81, P83           | GD9120    | P18  | GR1134   | P139  |
| GD2548-39 | P81, P83, P85, P87 | GD9254    | P41, P49   | GR1146   | P135, P139  |
| GD2558    | P65, P135          | GD9290    | P17  | GR1208   | P119  |
| GD2597    | P89, P91           | GD9305    | P17  | GR1220   | P51   |
| GD2681    | P134               | GD9529    | P113   | GR1246   | P51   |
| GD2721    | P90                | GD9530    | P113   | GR1290   | P113, P115  |
| GD2829    | P59, P113, P115    | GD9562    | P17  | GR1292   | P113, P115  |
| GD2947    | P39                | GD9715    | P45  | GR1363   | P7, P113, P115                                      |
| GD2962    | P27                | GD9720    | P45  | GR1364   | P7, P113, P115                                      |
| GD2971-03 | P85, P87           | GD9724    | P45, P47, P49  | GR1414   | P125  |
| GD2971-10 | P37                | GD9896    | P113   | GR1415   | P125  |
| GD2984    | P145               | GD9964    | P91  | GR1430   | P51   |
| GD3180-12 | P17                | GM0220    | P145   | GR1445   | P101, P102  |
| GD3180-29 | P31                | GR0146MPP | P145   | GR1466   | P53, P57, P98, P99,<br>P101, P104, P111             |
| GD3180-30 | P5                 | GR0150    | P89, P91   | GR1467   | P53, P55,<br>P56, P57, P59                          |
| GD3180-33 | P9, P11            | GR0151    | P89, P91   | GR1517   | P96, P102   |
| GD3612    | P3                 | GR0155MPP | P145   | GR1522   | P93   |
| GD3622    | P131, P133         | GR0190    | P135   | GR1532   | P97   |
| GD3623    | P131, P133         | GR0191    | P71  | GR1533   | P140  |
| GD3737    | P65                | GR0192    | P71  |          |   |
| GD3860    | P113, P115         | GR0195    | P135   |          |   |
| GD3951    | P131, P133         |           |  |          |   |
| GD4086    | P107               |           |  |          |   |
| GD4743    | P61                |           |  |          |   |
| GD4887-10 | P27                |           |  |          |   |

# NUMERICAL INDEX

| Part No.  | Page                      | Part No.  | Page       | Part No. | Page |
|-----------|---------------------------|-----------|------------|----------|------|
| GR1535    | P140                      | GR1839    | P121, P123 |          |      |
| GR1540    | P140                      | GR1842MPP | P145       |          |      |
| GR1541    | P140                      | GR1843    | P9         |          |      |
| GR1542    | P140                      | GR1846    | P98, P99   |          |      |
| GR1543    | P139, P140                | GR1850    | P51        |          |      |
| GR1544    | P140                      | GR1851    | P51        |          |      |
| GR1545    | P140                      | GR1852    | P51        |          |      |
| GR1570MPP | P145                      | GR1853    | P51        |          |      |
| GR1598    | P95                       | GR1854    | P51        |          |      |
| GR1635    | P101, P102,<br>P103, P115 | GR1855    | P51        |          |      |
| GR1681    | P71                       | GR1856    | P51        |          |      |
| GR1686    | P130, P133                | GR1857    | P51        |          |      |
| GR1688    | P92                       | GR1858    | P51        |          |      |
| GR1689    | P93                       | GR1859    | P51        |          |      |
| GR1691    | P94, P96                  | GR1861    | P51        |          |      |
| GR1702    | P130, P133                | GR1862    | P51        |          |      |
| GR1707    | P119                      | GR1863    | P51        |          |      |
| GR1708    | P130, P133                | GR1864    | P51        |          |      |
| GR1731    | P119                      | GR1865    | P51        |          |      |
| GR1732    | P119                      | GR1866    | P51        |          |      |
| GR1733    | P119                      | GR1867    | P51        |          |      |
| GR1734    | P56                       | GR1868    | P51        |          |      |
| GR1736    | P59                       | GR1869    | P51        |          |      |
| GR1737    | P125                      | GR1870    | P51        |          |      |
| GR1739    | P130, P133                | GR1871    | P51        |          |      |
| GR1748    | P104                      | GR1872    | P51        |          |      |
| GR1756    | P104                      | GR1874    | P51        |          |      |
| GR1766    | P133                      | GR1875    | P51        |          |      |
| GR1767    | P133                      | GR1894    | P5         |          |      |
| GR1768    | P133                      | GR1895    | P5         |          |      |
| GR1769    | P133                      | GR1896    | P5         |          |      |
| GR1777    | P59                       | GR1898    | P5         |          |      |
| GR1778    | P9                        | GR1916    | P121, P123 |          |      |
| GR1787    | P53                       | GR1960    | P51        |          |      |
| GR1790    | P85, P87, P111            |           |            |          |      |
| GR1796    | P139                      |           |            |          |      |
| GR1798    | P139                      |           |            |          |      |
| GR1800    | P139                      |           |            |          |      |
| GR1801    | P139                      |           |            |          |      |
| GR1803    | P139                      |           |            |          |      |
| GR1804    | P139                      |           |            |          |      |
| GR1805    | P139                      |           |            |          |      |
| GR1806    | P139                      |           |            |          |      |
| GR1808    | P139                      |           |            |          |      |
| GR1809    | P9                        |           |            |          |      |
| GR1812    | P5                        |           |            |          |      |
| GR1813    | P5                        |           |            |          |      |
| GR1815    | P5                        |           |            |          |      |
| GR1818    | P5                        |           |            |          |      |
| GR1819    | P5                        |           |            |          |      |
| GR1828    | P145                      |           |            |          |      |
| GR1830    | P5                        |           |            |          |      |
| GR1835    | P121, P123                |           |            |          |      |
| GR1836    | P121, P123                |           |            |          |      |
| GR1838    | P121, P123                |           |            |          |      |